Pressure & Level Transmitter



- This Version Matrix document helps you to find out what kind of software is available for the Industrial IT field device and which software version you have to use with which kind of Hardware and Firmware Revision.
- To download the software, documentations or this newest Version Matrix (recommended) please use following ways: http://www.abb.com/Fieldbus
 - ->[select Fieldbus protocol] ->[select xxxx field device]->[select device name] use link >>read more
 - 1.) -> go to flag "Fieldbus & HART Files"
- or 2.) The Aspect Object (*.afw) online file contains all information (documents, software, ...) incl. this newest Version Matrix as Aspects. For the *.afw file...
 - -> go to the flag "Downloads".

364xS, 364xR, 364xD

| HART | | Revision |
|---|----------|----------------------|
| | Hardware | 01.00 |
| | Software | 01.00 |
| Title | Device | 01 |
| [DocNo.] | | |
| DTM (FDT 1.2) | | 01.00.02 |
| [3KIT158000S0002] | | |
| EDD (General for all tools) | | 01 02 |
| [3KIT158000S0003] When integrated in tools, | | (Dev. / EDD) |
| this separate driver not needed! | | |
| Supplem. InfoDriver (DTM) | | √ |
| [3KIT158001R39xx] | | • |