

TECHNICAL CATALOGUE

## **SACE Emax 2**

# Low voltage air circuit-breakers



### **SACE Emax 2**

# Consultation guide



Chapter 1

#### Main characteristics

Overview of the SACE Emax 2 family, distinctive features of the series, product conformity and service.



Chapter 6

#### Accessories

Accessories for SACE Emax 2 circuit breakers (signaling, control, interlocks, etc..) and for Ekip protection trip units (connectivity, measurements, protection, etc).



Chapter 2

Chapter 3



#### The ranges

Electrical characteristics of automatic circuit breakers, switch disconnectors and derived versions.



Chapter 7

#### Installation

Installation and circuit breaker performance in switchgear, installation environment, degree of protection and limiting curves.



Chapter 8

#### **Protection trip units**

Latest generation Ekip protection trip units for power distribution and generation.



#### **Overall dimensions**

Overall dimensions for fixed circuit breakers, withdrawable circuit breakers and accessories.



Chapter 4

#### Software functions

New generation of functionalities ready for every type of system and simple to use.



Chapter 9

#### Wiring diagrams

Circuit-breaker and accessories wiring diagrams.



Chapter 5

#### Supervision and connectivity

Supervision, Energy Management and complete integration in the systems with the possibility of communicating with several protocols and energy management via cloud.



Chapter 10

#### **Ordering codes**

Ordering codes with configuration examples.



MAIN CHARACTERISTICS

CHAPTER 1

# **Main characteristics**

<b>02</b> -02	Overview of the SACE Emax 2 family
<b>03</b> -07	Distinctive features
<b>03</b> -03	Efficiency
<b>03</b> -03	Control
<b>04</b> -04	Connectivity
<b>04</b> -04	Performance
<b>06</b> -07	Ease of use
<b>08</b> -09	Product conformity
<b>08</b> -08	Approvals and certifications
<b>09</b> -09	Quality and Sustainability
<b>10</b> -10	ABB Low Voltage Product Service

# Overview of the SACE Emax 2 family

# Emax 2, a further leap forward

The world of electrical power distribution changes fast and major new trends such as renewables, energy storage and microgrids are now crowding onto the stage. These trends lead to new customer and application demands. To meet these demands, ABB has now unveiled the innovative Emax 2 all-in-one, the evolution of the Emax 2 into a multifunctional platform that is able to manage the next generation of electrical plants such as microgrids.

Emax 2 all-in-one is the first circuit breaker that matches new grid requirements. It enables a direct communication to the new energy management cloud-computing platform ABB Ability™ Electrical Distribution Control System.

Smart and plug and play architecture makes Emax 2 all-in-one easy to use. Leveraging also unmatched electrical performances, Emax 2 sets a new circuit breaker benchmark for the needs of today and tomorrow.



MAIN CHARACTERISTICS

#### 3

### **Distinctive features**

SACE Emax 2 evolution from circuit breaker to Power Manager continues, embedding more and more functionalities to become the all-in-one solution to manage "low-voltage distribution systems".

#### **Efficiency**

Achieving maximum efficiency of an electrical installation requires intelligent management of power supplies and energy use. For this reason, the new technologies used in the SACE Emax 2 circuit breakers allow the productivity and reliability of installations to be optimized, and at the same time, power consumption to be reduced while fully respecting the environment.

New advanced functionalities, together with Protection trip units and Communication and system devices contribute to make SACE Emax 2 the circuit breaker that maximizes efficiency in all low-voltage electrical installation.

#### Control

SACE Emax 2 circuit breaker is the first single device ready to manage all the dynamics of a low-voltage electrical installation.

Managing loads in any condition is now possible.

Managing loads in any condition is now possible thanks to Advanced Functionalities such as:

- Adaptive load shedding: fast load shedding to guarantee continuity for critical loads during black-outs. Typical scenario is when LV distribution is disconnected from the grid (MV).
- Predictive load shedding: slow load shedding to avoid overloads, giving the possibility to modulate loads consumption.
- Power controller: patented algorithm to reduce the peak of power consumed, allowing savings on electricity bills.
  - Managing different power sources and connecting them to main grid is also crucial, so that service continuity is maaximized.
- Embedded ATS functions: an automatic transfer switch system used in all application where continuity is essential and where there are multi source supplies.

- Synchro-reclosing: Sinchronization and automatic reconnection of the Microgrid to the main grid when the power is back.
- Emax 2 is able to act as a controller of Main grid condition, disconnecting a plant when necessary and also to adapt protection to on-grid or off-grid conditions.
- Interface protection system and Interface Device: Check of Main grid conditions and plant disconnection whenever grid voltage and frequency are out of the ranges.
- Adaptive protection: Network changes recognition and automatic set of thresholds to guarantee protection and coordination in on-grid and off-grid conditions.

### **Distinctive features**

#### Connectivity

SACE Emax 2 series circuit breakers can be integrated perfectly into all automation and energy management systems to improve productivity and energy consumption and to carry out remote service.

All circuit breakers can be equipped with communication units for use with Modbus, Profibus, and DeviceNet™ protocols as well as the modern Modbus TCP, Profinet, EtherNet/IP™ and Open ADR. The cartridge-type modules can be easily installed directly on the terminal box, even at a later date. Furthermore, the integrated IEC61850 communication module enables connection to automation systems widely used in medium voltage power distribution to create intelligent networks (Smart Grids).

All circuit breaker functions are also accessible via the Internet, in complete safety, through the Ekip Link switchgear supervision system and the Ekip Control Panel.

Furthermore with an easy connection thanks to Ekip Com Hub module, SACE Emax 2 can be integrated in an energy management system, ABB Ability™ Electrical Distribution Control System. The power and auxiliary connections are optimized to simplify connection to the switchgear. The power terminals, which can be oriented horizontally or vertically, have been designed for the most common busbars, while the push-in connections of the auxiliaries ensure immediate and safe wiring.

#### **Performance**

The SACE Emax 2 range is made up of 4 sizes: E1.2, E2.2, E4.2 and E6.2 up to 6300A, which enable switchgear of compact dimensions and high ratings to be built with busbars of reduced length and cross-section.

The protection trip units, auxiliary connections and main accessories are the same throughout the range to simplify design and installation. Furthermore, the sizes from E2.2 to E6.2 have the same height and depth.

The rating levels are updated and standardized throughout the sizes to meet the demands and needs of today's installations, from 42kA to 150kA, and to standardize switchgear projects. High short-time currents, together with the efficiency of the protection functions, guarantee complete selectivity in all situations.

Accurate design and choice of materials enable optimization of the overall dimensions of the circuit breaker. In this way switchgear of compact dimensions can be built and outstanding savings at the same performance can be obtained. The SACE Emax 2 range is extended also to the UL market, up to 5000A. Furthermore it can be ordered with a triple marking label, IEC, UL and CCC.

MAIN CHARACTERISTICS



### **Distinctive features**

#### Ease of use

The entire range is available in fixed and withdrawable versions, with double insulation between the front of the switchgear and the live parts to ensure operation in complete safety. The circuit breakers can be powered indifferently from above or below.

All essential information is available in the central area of the front shield and enables immediate identification of the status of the circuit breaker: open, closed, ready to close, charged and discharged springs.

Maintenance is simple and safe. Thanks to the new front shield design, the main accessories can be installed without completely removing it. The withdrawable circuit breaker is inserted and removed via dedicated guide rails that simplify movement. The correct movement from racked-in, test isolated, to racked-out position is guaranteed by a lock in each position.

As a further guarantee of safety, the shutters of the fixed part can be locked from the front when the circuit breaker is removed. The shutters of the upper terminals are independent of those of the lower terminals to facilitate checking and maintenance operations.

The Ekip Touch protection trip units are equipped with a large colour touch-screen display which enables safe and intuitive operation. Furthermore the Ekip units can be programmed and consulted from a tablet, smart phone or portable PC via the Ekip Connect application and all the advanced functionalities can be easily programmed thanks to predefined logic templates.

The trip units are easily interchangeable from the front of the circuit breaker, and all communication units can be installed directly on the terminal box with a few simple operations, making the complex system ready for a new digital experience.



MAIN CHARACTERISTICS

- Key
  Trademark and size of circuit- breaker
- 2 SACE Ekip protection trip unit
- 3 Pushbutton for
- manual opening
  4 Pushbutton for
  manual closing
  5 Lever to manually
- charge closing springs
- 6 Electrical rating plate
- Mechanical device to signal circuit breaker open "O" and closed "I" 8 Signal for springs charged or discharged
- 9 Mechanical signalling of overcurrent release tripped

  10 Size and serial number



# **Product conformity**

SACE Emax 2 circuit breakers and their accessories conform to IEC 60947, EN 60947 international Standard

#### Approvals and certifications

SACE Emax 2 circuit breakers and their accessories conform to the international IEC 60947, EN 60947 (harmonized in 30 CENELEC countries), CEI EN 60947 and IEC 61000 Standards and comply with the following EC directives:

- "Low-Voltage Directives" (LVD) no. 2014/35/EU
- "Electromagnetic Compatibility Directive" (EMC) no. 2014/30/EU.

The ABB air circuit breakers include a range that has been certified according to American UL 1066 Standards; it is also certified by the Russian certification body GOST (Russia Certificate of Conformity) and has achieved China CCC Certification (China Compulsory Certification).

Certification of conformity with the above-mentioned product Standards is carried out in compliance with the European EN 45011 Standard by the Italian certification body ACAE (Association for the Certification of Electrical Equipment), which is recognized by the European organization LOVAG (Low-Voltage Agreement Group), and by the Swedish Intertek SEMKO certification organization Intertek Semko which is recognized by the international organization IECEE.

The main versions of the devices are about to be approved by the following shipping registers.



Registro Italiano Navale (RINA):



Det Norske Veritas (DNV): Norway



Lloyd's Register of Shipping (LR):



Russian Maritime Regiser of Shipping (RMRS):



American Bureau Shipping (ABS): American



Nippon Kaiji Kyokai (NKK): Japan



Germanischer Lloyd (GL):



Gost - Ead

For the types of certified circuit breakers, certified ratings and corresponding validity, please contact ABB SACE.



Bureau Veritas (BV): French



Low-Voltage Agreement Group



Quality and Sustainability: company efficiency and integrated management systems. Quality, Sustainability and Customer Satisfaction have always been ABB SACE's major commitment.

The involvement of all company departments and organization of processes have led the company to develop, implement and certify management systems in compliance with international Standards:

- ISO 9001 for quality management
- IRIS for the quality of supplies in the railway sector (International Railway Industry Standards)
- ISO 14001 for environmental management
- OHSAS 18001 for the management of the health and safety of employees in the workplace
- SA 8000 for the management of social responsibility.

The ABB SACE testing laboratory, accredited by ACCREDIA in compliance with ISO/IEC 17025 Standard, provides both ABB and external customers with a qualified service for performing certification tests on devices and electric equipment of low and medium voltage in accordance with the relevant product Standards.

Thanks to the implementation of systems and their integration (Integrated Management System), ABB SACE, with a view to continuous improvement, has implemented processes with a focus on:

- quality, preventing defects and faults along the entire supply chain
- environment, reviewing production processes in terms of ecology and waste reduction, rationalizing the consumption of raw materials and energy, preventing pollution, containing noise emissions and reducing the quantity of rejects in the production processes
- health and safety of employees, offering a healthy and safe workplace in all of the various stages of work with a "zero accident objective"
- social responsibility, guaranteeing the respect of human rights and the absence of any discrimination throughout the supply chain, and offering a favourable and transparent working atmosphere.

A further commitment aimed at safeguarding the environment has been achieved by assessing products' life cycles (LCA, Life Cycle Assessment): this includes the assessment and improvement of the environmental performance of products from the engineering stage throughout their entire life cycle.

The materials, processes and packaging used are chosen with a view to optimising the actual environmental impact of each product, including its energy efficiency and recyclability.









# **ABB Low Voltage Product Service**

ABB's technical assistance service offers solutions aimed at supporting the customer in all stages of the lifespan of the circuit breaker in service and covering the entire chain of value; ABB is present from the moment of selection to the end of the life of the product, thereby guaranteeing the investments of its customers.



ABB supplies annual updates regarding the evolution of the circuit breaker ranges (Life Cycle Management) and for each product it provides details of associated services and the level of support available, so that customers can chose the products and spare parts best suited to their needs.

ABB's organisation offers services that include installation and commissioning, technical training on the use and maintenance of products, the supply of original spare parts, corrective and preventive maintenance, equipment diagnostics, modernisation of systems with upgrades and retrofitting kits, consultancy services and personalised maintenance and service contracts.

All this is supported by one of the most extensive global sales and service networks.

#### **Retrofitting kit**

Through continuous research targeted at the needs of the customer, ABB SACE Service has developed innovative retrofitting kits in order to simplify and speed up installation of a new circuit breaker, updating the customer's investment with the latest technology available and with very limited down times.

The retrofitting kit between Emax2 and Emax is a retrofill solution: it is therefore possible to replace the withdrawable version of Emax with an equivalent Emax2 model without changing the switchboard busbars, by simply removing the fixed part of Emax replacing it with a fixed part of Emax2 which has been suitably modified with dedicated terminals.



THE RANGES 11

CHAPTER 2

# The ranges

<b>12</b> -13	SACE Emax 2 automatic circuit breakers
<b>14</b> -15	SACE Emax 2 switch disconnectors
<b>16</b> -16	SACE Emax 2/E9 circuit breakers up to 900V
<b>17</b> -18	SACE Emax 2 derived versions

# **SACE Emax 2 automatic circuit breakers**

Common data		
Rated service voltage Ue	[V]	690
Rated insulation voltage Ui	[V]	1000
Rated impulse withstand voltage Uimp	[kV]	12
Frequency	[Hz]	50 - 60
Number of poles		3-4
Version		Fixed - Withdrawable
Suitable for isolation according to		IEC 60947-2



SACE Emax 2			E1.2		
Performance levels			В	С	N
Rated uninterrupted current lu	@ 40°C	[A]	630	630	250
		[A]	800	800	630
		[A]	1000	1000	800
		[A]	1250	1250	1000
		[A]	1600	1600	1250
		[A]			1600
		[A]			
Neutral pole current-carrying ca	apacity for 4-pole CBs	[%lu]	100	100	100
Rated ultimate short-circuit	400-415 V	[kA]	42	50	66
breaking capacity Icu	440 V	[kA]	42	50	66
	500-525 V	[kA]	42	42	50
	690 V	[kA]	42	42	50
Rated service short-circuit brea	king capacity Ics	[%lcu]	100	100	100 1)
Rated short-time withstand	(1s)	[kA]	42	42	50
current Icw	(3s)	[kA]	24	24	30
Rated short-circuit making	400-415 V	[kA]	88	105	145
capacity (peak value) Icm	440 V	[kA]	88	105	145
	500-525 V	[kA]	88	88	105
	690 V	[kA]	88	88	105
Utilization category (according	to IEC 60947-2)		В	В	В
Breaking	Breaking time for I <icw< td=""><td>[ms]</td><td>40</td><td>40</td><td>40</td></icw<>	[ms]	40	40	40
	Breaking time for I>Icw	[ms]	25	25	25
Dimensions	H - Fixed/Withdrawable	[mm]	296/363.5	296/363.5	296/363.5
	D - Fixed/Withdrawable	[mm]	183/271	183/271	183/271
	W - Fixed 3p/4p/4p FS	[mm]	210/280		
	W - Withdrawable 3p/4p/4p FS	[mm]	278/348		
Weights (CB with trip unit and	Fixed 3p/4p	kg	14/16		
current sensor)	Withdrawable 3p/4p/4p FS including fixed part	kg	38/43		

1) lcs: 50kA for 400V...440V voltage; 2) lcs: 125kA for 400V...440V voltage; 3) E4.2H 3200A: 66 lcw (3s)

SACE Emax 2			E1.2	'		'
Mechanical life with regular ordina	-	[lu]	≤ 1000	1250	1600	
maintenance prescribed by the manufacturer		[No. cycles x 1000]	20	20	20	20
	Frequency	[Oper./Hour]	60	60	60	
Electrical life with regular	440 V	[No. cycles x 1000]	8	8	8	
ordinary maintenance prescribed by the manufacturer	690 V	[No. cycles x 1000]	8	6,5	6,5	
	Frequency	[Oper./Hour]	30	30	30	

THE RANGES 13







E2.2				E4.2				E6.2		
В	N	S	Н	N	S	Н	v	н	V	х
1600	800	250	800	3200	3200	3200	2000	4000	4000	4000
2000	1000	800	1000	4000	4000	4000	2500	5000	5000	5000
	1250	1000	1250				3200	6300	6300	6300
	1600	1250	1600				4000			
	2000	1600	2000							
	2500	2000	2500							
		2500								
100	100	100	100	100	100	100	100	50-100	50-100	50-100
42	66	85	100	66	85	100	150	100	150	150
42	66	85	100	66	85	100	150	100	150	150
42	66	66	85	66	66	85	100	100	130	130
42	66	66	85	66	66	85	100	100	100	100
100	100	100	100	100	100	100	100 <sup>2)</sup>	100	100	100
42	66	66	85	66	66	85	100	100	100	120
42	50	50	66	50	66	75 <sup>3)</sup>	75	100	100	100
88	145	187	220	145	187	220	330	220	330	440
88	145	187	220	145	187	220	330	220	330	440
88	145	145	187	145	145	187	220	220	286	286
88	145	145	187	145	145	187	220	220	220	264
В	В	В	В	В	В	В	В	В	В	В
40	40	40	40	40	40	40	40	40	40	40
25	25	25	25	25	25	25	25	25	25	25
371/425	371/425	371/425	371/425	371/425	371/425	371/425	371/425	371/425	371/425	371/425
270/383	270/383	270/383	270/383	270/383	270/383	270/383	270/383	270/383	270/383	270/383
276/366				384/510				762/888/1014		
317/407				425/551				803/929/1069		
41/53 84/99				56/70 110/136				109/125/140 207/234/260		

E2.2				E4.2	·			E6.2		
< 1600	1600	2000	2500	< 2500	2500	3200	4000	4000	5000	6300
25	25	25	20	20	20	20	15	12	12	12
60	60	60	60	60	60	60	60	60	60	60
15	12	10	8	10	8	7	5	4	3	2
15	10	8	7	10	8	7	4	4	2	2
30	30	30	30	20	20	20	20	10	10	10

### **SACE Emax 2 switch disconnectors**

Switch disconnectors, identified with the abbreviation "/MS", are devices that satisfy the isolating specifications provided by the IEC 60947-3 Standard. The switch disconnectors are derived from the corresponding automatic circuit breakers, and they have the same dimensions and accessory options.

This version differs from the automatic circuitbreakers only because of the absence of protection trip units. The device, when in the open position, guarantees an isolating distance between the main contacts of the circuit breaker that is sufficient to ensure that the installation downstream is not live. Furthermore the switch disconnectors, if used with an external protection relay with maximum delay of 500ms, enable a breaking capacity at a maximum rated operating voltage (Ue) equal to the value of rated short-time withstand current (Icw) for one second.

Common data		,
Rated service voltage Ue	[V]	690
Rated insulation voltage Ui	[V]	1000
Rated impulse withstand voltage Uimp	[kV]	12
Frequency	[Hz]	50 - 60
Number of poles		3-4
Version		Fixed - Withdrawable
Suitable for isolation according to		IEC 60947-3



SACE Emax 2			E1.2		
Performance levels			B/MS	N/MS	
Rated uninterrupted current	lu @ 40°C	[A]	630	250	
		[A]	800	630	
		[A]	1000	800	
		[A]	1250	1000	
		[A]	1600	1250	
		[A]		1600	
Neutral pole current-carrying	capacity for 4-pole CBs	[%lu]	100	100	
Rated short-time withstand	(1s)	[kA]	42	50	
current Icw	(3s)	[kA]	24	30	
Rated short-circuit making	400-415 V	[kA]	88	105	
capacity (peak value) Icm	440 V	[kA]	88	105	
	500-525 V	[kA]	88	105	
	690 V	[kA]	88	105	
Utilization category (according	g to IEC 60947-3)		AC-23A	AC-23A	
Dimensions	H - Fixed / Withdrawable	[mm]	296 / 363.5	296 / 363.5	
	D - Fixed / Withdrawable	[mm]	183 / 271	183 / 271	
	W - Fixed 3p/4p/4p FS	[mm]	210 / 280		
	W - Withdrawable 3p/4p/4p FS	[mm]	278 / 348		

1) E4.2H/MS 3200A: 66KA Icw (3s)

SACE Emax 2			E1.2		1	1
Mechanical life with regular ord	-	[lu]	< 1000	1000	1600	
maintenance prescribed by the manufacturer		[No. cycles x 1000]	20	20	20	,
	Frequency	[Oper./Hour]	60	60	60	
Electrical life with regular	440 V	[No. cycles x 1000]	8	8	8	
ordinary maintenance prescribed by the manufacturer	690 V	[No. cycles x 1000]	8	6.5	6.5	
prescribed by the manufacturer	Frequency	[Oper./Hour]	30	30	30	

THE RANGES 15







E2.2			E4.2	'	'	E6.2	
B/MS	N/MS	H/MS	N/MS	H/MS	V/MS	H/MS	X/MS
1600	800	800	3200	3200	2000	4000	4000
2000	1000	1000	4000	4000	2500	5000	5000
	1250	1250			3200	6300	6300
	1600	1600			4000		
	2000	2000					
	2500	2500					
100	100	100	100	100	100	50-100	50-100
42	66	85	66	85	100	100	120
42	50	66	50	75 <sup>1)</sup>	75	100	100
88	145	187	145	187	220	220	264
88	145	187	145	187	220	220	264
88	145	187	145	187	220	220	264
88	145	187	145	187	220	220	264
AC-23A	AC-23A	AC-23A	AC-23A	AC-23A	AC-23A	AC-23A	AC-23A
371 / 425	371 / 425	371 / 425	371 / 425	371 / 425	371 / 425	371 / 425	371 / 425
270 / 383	270 / 383	270 / 383	270 / 383	270 / 383	270 / 383	270 / 383	270 / 383
276 / 366			384 / 510			762 / 888 / 1014	
317 / 407			425 / 551			803 / 929 / 1069	

E2.2				E4.2				E6.2		
< 1600	1600	2000	2500	< 2500	2500	3200	4000	4000	5000	6300
25	25	25	20	20	20	20	15	12	12	12
60	60	60	60	60	60	60	60	60	60	60
15	12	10	8	10	8	7	5	4	3	2
15	10	8	7	10	8	7	4	4	2	2
30	30	30	30	20	20	20	20	10	10	10

# SACE Emax 2/E9 circuit breakers up to 900V

ABB SACE Emax 2/E9 circuit breakers can effectively and simply control all wind and solar applications - with the highest availability and continuity of service.

The world of renewable energy is evolving rapidly causing major changes in electrical power distribution trends. This causes an increased focus on:

- Power continuity for critical loads and the best performance, even at high altitudes
- · Optimized, fast maintenance
- · Minimized device footprint

These trends lead to new customer and application demands. To meet these demands, ABB has now unveiled the innovative Emax 2/E9 all-in-one, the evolution of the Emax 2 into a multifunctional platform that is able to manage the next generation of electrical plants such as microgrids.

Emax 2/E9 all-in-one is the first smart circuit breaker that enables direct communication with the new energy management cloud-computing platform ABB Ability™ Electrical Distribution Control System. Smart and plug-and-play architecture makes Emax 2/E9 all-in-one easy to use. With the best performance up to 900 V of any device on the market, Emax 2/E9 is ready to control and protect all applications with voltages over 690 V.

Emax 2/E9 sets a new circuit-breaker benchmark for the electrical power distribution systems of today and tomorrow.

[V]	900
[V]	1000
[kV]	12
[Hz]	50 - 60
	3-4
	Fixed - Withdrawable
,	IEC 60947-2
	[V] [kV]



SACE Emax 2/E9			E2.2		E4.2		E6.2	
Performance levels			S/E9	H/E9	S/E9	H/E9	H/E9	X/E9
Rated uninterrupted current Iu @ 40°C		[A]	1250	1250	3200	3200	5000	5000
		[A]	2000	2000	4000	4000	6300	6300
		[A]	2500	2500				
Neutral pole current-carrying capacity for 4-pole CBs		[%lu]	100	100	100	100	50-100	50-100
Rated ultimate short-circuit breaking capacity Icu	800V	[kA]	50	65	65	90	90	100
	900V	[kA]	50	65	65	75	75	90
Rated service short-circuit breaking capacity Ics		[%lcu]	100	100	100	100	100	100
Rated short-time withstand current Icw	(1s) 800V	[kA]	50	65	65	75	75	90
	(3s) 800V	[kA]	50	65	65	75*	75	90
	(1s) 900V	[kA]	50	65	65	75	75	90
	(3s) 900V	[kA]	50	65	65	75*	75	90
Rated short-circuit making capacity (peak value) Icm	800V	[kA]	105	143	143	200	200	220
	900V	[kA]	105	143	143	165	165	198
Utilization category (according to IEC 60947-2)			В	В	В	В	В	В

SACE Emax 2/E9			E2.2			E4.2			E6.2		
		[lu]	<2000	2000	< 2500	<3200	3200	4000	4000	5000	6300
Mechanical life*		[No. cycles x 1000]	25	25	20	20	20	15	12	12	12
	Frequency	[Oper./Hour]	60	60	60	60	60	60	60	60	60
Electrical life	900 V	[No. cycles x 1000]	2	2	2	1	1	1	1	1	1
	Frequency	[Oper./Hour]	30	30	30	10	10	10	10	10	10


<sup>\*</sup>with regular ordinary maintenance prescribed by the manufacturer.

THE RANGES 1

### **SACE Emax 2 derived versions**


Safety is an indispensable requirement that must always be guaranteed in electrical installations. In this regard, ABB SACE offers devices developed to further increase safety standards during inspection and maintenance activities on electrical installations. In particular, in a withdrawable version, ABB SACE Emax 2 offers:

The earthing circuit is dimensioned for a short-time current equal to 60% of the maximum lcw of the circuit breaker from which it is derived (IEC 60439-1)

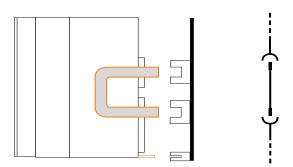

• Sectionalizing truck CS: in normal operating conditions of the electrical circuit, this device is inserted in the part. It short-circuits the upper and lower terminals of the power circuit. When maintenance activities need to be carried out, the sectionalizing truck is removed and the part of the system involved is isolated. The device can be accessorized with a keylock and padlocks for locking in the withdrawn position.


The standard fixed parts can not accept MT/MTP device. In order to allow the utilization of MT/MTP mobile parts is mandatory to install the grounding clamps on fixed parts. Accessorizing only in the factory.

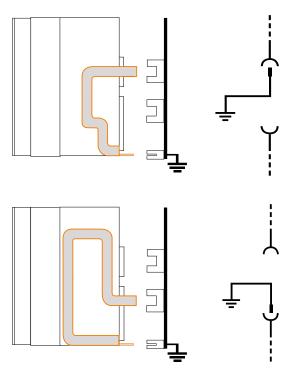

• Earthing truck MT: this device enables all phases of the electrical circuit on which maintenance needs to be performed to be earthed <sup>1)</sup>.

The earthing truck is available in two versions: for earth connection from the upper or lower terminals.

## **SACE Emax 2 derived versions**

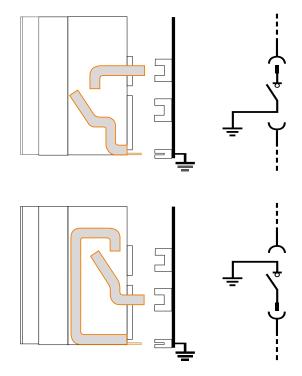

- Earthing switch with making capacity MTP: similar to the MT device, this differs due to the presence of a mechanical stored energy control which allows the circuit to be opened and closed. Two versions of this earthing switch are also available: for earth connection from the upper or lower terminals. It can also be accessorized
- with a keylock or padlocks for locking in the open position.

Common data		
Rated service voltage Ue	[V]	690
Rated insulation voltage Ui	[V]	1000
Rated impulse withstand voltage Uimp	[kV]	12
Frequency	[Hz]	50 - 60
Number of poles		3 - 4
Version		Withdrawable

SACE Emax 2	E2.2			E4.2			E6.2		
Performance levels	CS	МТ	MTP	CS	MT	MTP	CS	МТ	MTP
Rated uninterrupted current Iu @ 40°C	2500	2500	2500	4000	4000	4000	6300	6300	6300
Neutral pole current-carrying capacity for 4-pole CBs	100	100	100	100	100	100	50-100	50-100	50-100
Rated short-time withstand current lcw (1s) [kA]	-	30	30	-	50	50	-	50	50

CHAPTER 3

# **Protection trip units**

<b>20</b> -21	Introduction
<b>22</b> -23	Architecture
<b>24</b> -35	Protection trip units for power distribution
<b>24</b> -26	Ekip Dip
<b>27</b> -32	Ekip Touch
<b>33</b> -35	Ekip Hi-Touch
<b>36</b> -39	Protection trip units for generators
<b>36</b> -37	Ekip G Touch
<b>38</b> -39	Ekip G Hi-Touch
<b>40</b> -54	Technical characteristics for protection trip units
<b>40</b> -47	Protection functions
<b>48</b> -53	Measurement functions
<b>54</b> -62	Description of protection functions

### Introduction

SACE Emax 2 Ekip protection trip units are the new benchmark for the protection, measurement and control of low-voltage electrical systems.

Ekip Power Controller function monitors installation loads and generators, permitting the power consumed to be limited and allowing savings on electricity bills.

The result of ABB SACE's experience and research, they embed advanced functionality in the Emax 2 circuit breaker to make it an all-in-one solution for distribution systems and microgrids.

The protection units are divided into two families: Ekip for distribution protection and Ekip G for generator protection.

The range of trip units is available with three levels of performance, Dip, Touch and Hi-Touch, to satisfy simple to advanced applications.

The complete, flexible Ekip protection trip unit offering, which can be adapted to the actual level of protection required, is shown below:

	Fields of applications	Measurement and Protection of Current	Measurement of Voltage, Power, Energy	Measurement and Protection of Voltage, Power, Energy	Network Analyzer
Ekip Dip		with Ekip Multimeter	=	-	-
Ekip Touch	 Distribution	•	with Ekip Measuring	with Ekip Measuring Pro	-
Ekip Hi-Touch	_	•	•	•	•
Ekip G Touch	6	•	•	•	-
Ekip G Hi-Touch	– Generators	•	•	•	•



Ekip G enables the protection of generators without the use of external devices that require dedicated relays and wiring.

The protection units for power distribution, available in the LI, LSI and LSIG versions, are suited to all distribution systems.

The Ekip trip units are designed to protect a vast range of applications, such as use with transformers, motors and drives. Depending on the complexity of the system, the need to take voltage or energy measurements or to include control systems in switchgear. Ekip Dip, Ekip Touch or Ekip Hi-Touch can be selected.

Ekip G enables the **protection of generators** without the use of external devices that require dedicated relays and wiring.

Ekip G increases efficiency from the design stage to installation, minimizing the time needed for realization and commissioning of the system, and ensuring high levels of accuracy and reliability of all protection devices required for running generators in applications such as naval, GenSet or cogeneration.

Thanks to the **Network Analyzer** function integrated in all Hi-Touch versions, the quality of energy in terms of harmonics, micro-interruptions or voltage dips is monitored without the need for dedicated instrumentation. This allows effective preventive and corrective action to be implemented through accurate analysis of the faults, thereby improving the efficiency of the system.



### **Architecture**

All SACE Emax 2 circuit breakers are equipped with protection trip units that are interchangeable from the front with just a few, simple operations by the customer.

There is no need to dismantle the circuit breaker or access any internal or sensitive parts.

This enables personalization of the functions available, even during commissioning or when the circuit breaker has already been installed. In particular, SACE Ekip consists of:

- Protection trip unit, available with different interfaces and versions that range from basic to more complete; it contains a latest generation microprocessor that performs all the functions of protection and control.
- Ekip Measuring Module, connected internally to Emax 2, performs voltage, power and energy measurements with high accuracy without requiring any external connection or voltage transformer. The Ekip Measuring Pro version also performs all protection functions based on voltage and power without the need for external units, thereby simplifying design and construction of the system.
- Interchangeable rating plug enables all protection thresholds to be adjusted according to the rated current, increasing flexibility for the customer. It is useful in installations that are prepared for future development or in cases in which the power supplied may be limited temporarily.
- Main board is the mechanical housing of the trip unit, which includes a micro-controller for measuring currents and the self-protection functions. The separation of trip units ensures excellent reliability and immunity to conducted and radiated emissions. Integrated new generation Rogowski sensors, which are sensitive to the true r.m.s. value of the current, guarantee high accuracy of both measurements and protection.





All protection trip units in the SACE Emax 2 family are self-powered by current that crosses the circuit breaker. They guarantee excellent reliability due to a system of self-control of internal connections.

The setting, testing and downloading of reports can be carried out directly from a Smartphone, Tablet or PC. In addition, the commissioning stage can be further accelerated, minimizing the possibility of errors, by directly configuring the protection trip unit with the DOC design software settings. Cartridge-type modules that are easily installed on-board enable the units to be integrated into the most complex systems. Additional functions can be created, such as:

• **Synchrocheck**, to check the synchronization of the two half-busbars before enabling circuit-breaker closing;

- Communication with all supervision systems available in the Modbus, Profibus and DeviceNet<sup>™</sup> protocols as well as the modern Modbus TCP, Profinet, EtherNet/IP<sup>™</sup> and open ADR protocols;
- Integration into Smart Grids thanks to the possibility of communicating without the assistance of any external converter, according to standards (IEC 61850) already in use in the automation systems of high and medium voltage substations;
- Multi-voltage supply module, which enables the protection trip unit and modules present to be supplied with any auxiliary voltage available in direct or alternating current;
- Programmable logic management with Ekip Signalling modules that provide a high number of electrical input and output contacts;
- Logical interlocks between circuit breakers, which can be made with the Ekip Link proprietary communication protocol, avoiding complex wiring thanks to the transmission of all signals via a bus..

# **Protection trip units for power distribution**Ekip Dip

#### Key:

- Power-on LED for signalling correct operation (watchdog)
- LEDs for alarm signalling of L, S, I and G protection functions and diagnostics
- 3. Dip switches for setting the protection functions
- Dip switches for setting the network frequency and neutral protection device
- 5. Pushbutton for test and for indicating the cause of tripping
- 6. Test and programming connector

Ekip Dip is the new protection trip unit for all applications in which high accuracy and reliable protection against overcurrent are required.


#### Characteristics

Ekip Dip offers a complete set of standard protection functions.

Dedicated LEDs allow the fault that caused tripping to be determined.

The unit is available in the following versions:

- Ekip Dip LI
- · Ekip Dip LSI
- Ekip Dip LSIG

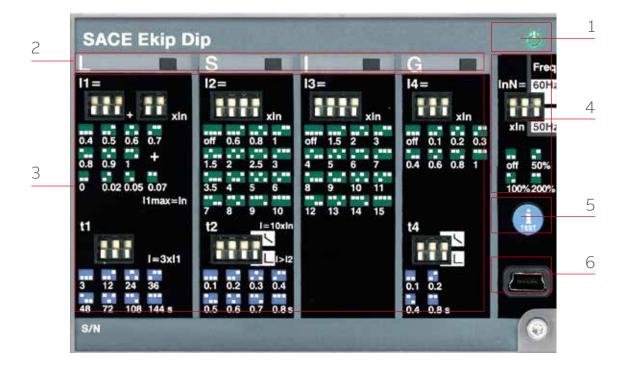

#### **Protection functions**

Ekip Dip offers overcurrent protection functions and, in the event of tripping, controls the opening of the circuit breaker, preventing it from closing again unless it has been reset by the operator (lockout device – code ANSI 86).

- Overload (L ANSI 49)
- Time-delayed overcurrent (S ANSI 51 & 50TD)
- · Thermal memory
- Instantaneous overcurrent (I ANSI 50)
- Earth Fault (G)
- Neutral protection

#### Measurements

The Ekip Dip unit measures phase and neutral current with great accuracy: 1% including the current transformers in the 0.2 ... 1.2 In range (class 1 in accordance with IEC 61557-12). Using the current sensors in the circuit breaker and without the need to install an external measuring system, it is possible to view the measurements by the display on the front of the Ekip Multimeter and Ekip Control Panel.

Ekip Dip also records the characteristics of the circuit breaker, to enable a rapid analysis in the event of maintenance:

- · Maximum and average current values per phase;
- Date, time, fault current per phase and type of protection tripped over the last 30 trips;
- Date, time and type of operation of the last 200 events (for example: opening/closing of circuit breaker, pre-alarms, editing settings);
- Number of mechanical and electric operations of the circuit breaker;
- · Total operating time;
- Contact wear;
- Date and time of the last maintenance carried out, in addition to the estimate of the next maintenance required;
- Circuit-breaker identifying data: type, serial number, firmware version, name of the device as assigned by the user.

The values can be displayed on the front of the Ekip Multimeter or Ekip Control Panel or by Ekip Connect software on a Smartphone, Tablet or PC by using the communication units Ekip T&P or Ekip Bluetooth.

#### Watchdog

All the protection trip units of the SACE Emax 2 family ensure high reliability owing to an electronic circuit that periodically checks the continuity of the internal connections, such as trip coil, rating plug and each current sensor (Ansi 74). In the event of a malfunction, the LEDs indicate the corresponding alarm to enable the fault to be identified rapidly. Furthermore, Ekip Dip detects and indicates that the circuit breaker has been opened because one of the protection functions has been tripped (Ansi BF code).

In order to ensure the correct operation of the unit, Ekip Dip is also provided with self-protection against abnormal temperature (OT) inside the protection trip unit. The user can set it to open the circuit breaker or to merely indicate an alarm.

#### User interface

Ekip offers a great variety of thresholds and trip times, which can be set by dip-switches. Up to 5 LEDs are also available (depending on the version) to indicate correct operation or alarms. The interface always enables the status of the installation to be identified clearly and quickly:

- correct operation (green LED)
- overcurrent pre-alarms or alarms
- · presence of self-check functions alarms
- · maintenance interval expired
- indication of tripped protection after a fault

The protection tripped indication is activated by pressing the iTest key, and operates without the need for an external power supply because a battery is installed inside the unit.

# Protection trip units for power distribution

# Ekip Dip

#### Communication

The Ekip Bluetooth wireless communication unit enables the operator to interact with the protection trip unit by computer, Smartphone or Tablet. In fact, the free Ekip Connect software for smartphones, tablets and PC, enables measurements and fault data to be read and alarm status and information on the circuit breaker or maintenance to be displayed. It is also possible to set parameters such as date, time and thermal memory and for the records to be reset.

#### **Test function**

The test port on the front of the protection trip unit can be used to run the circuit breaker tests by connecting one of the following devices:

- Ekip TT, which allows trip test, LED test and a check for the absence of alarms detected by the watchdog function;
- Ekip T&P permits not only the trip test and LEDs test but also testing of the individual protection functions and the saving of the relative report;
- iTest key, pressed to run the battery test when the circuit breaker is disconnected.

#### Supply

The Ekip Dip protection trip unit does not require an external supply for the protection functions or for the alarm indication functions because it is self-supplied by the current sensors installed on the circuit breaker. A three-phase 100A current suffices to activate the LED indications.

The Ekip Supply module enables an auxiliary supply to be easily connected and is able to receive both a direct current supply (24-48V DC or 110-240V DC) and an alternating current (110-240V AC) to activate additional functions such as:

- G protection at values below 100A or below 0.2 In;
- connecting to external devices such as Ekip Multimeter and Ekip Control Panel;
- · recording the number of operations.

The Ekip Dip protection trip unit also has a battery that enables the indication of the cause of the fault to be viewed for an unlimited time after tripping. In addition to that, the battery enables date and time to be maintained and updated, thus ensuring the chronology of the events. On the other hand, when the unit is switched off, the battery test can be run by simply pressing the iTest key.

Supply	Ekip Supply	
Nominal voltage	24-48V DC	110-240V AC/DC
Voltage range	21.5 - 53V DC	105-265V AC/DC
Rated power (including modules)	10W max.	10W max.
Inrush current	~2 A for 20 ms	~2 A for 20 ms

Whenever cartridge modules are not used in the terminal box area, the trip unit can be supplied by means of a galvanically isolated 24V DC auxiliary voltage.

# **Protection trip units for power distribution**Ekip Touch

#### Key:

- Wide high-resolution colour touchscreen display
- Power-on LED to indicate correct operation (watchdog)
- 3. Pre-alarm LED
- 4. Alarm LED
- 5. Home pushbutton to return to home page
- 6. Pushbutton for test and indicating cause of trip
- 7. Test and programming connector

Ekip Touch provides a complete series of protections and high accuracy measurements of all electrical parameters and can be integrated perfectly with the most common automation and supervision systems.

#### Characteristics

The simple and intuitive interface enables the operator to access all the information and settings rapidly and easily by minimizing installation and commissioning time.

The unit is available in the versions:

- Ekip Touch LI
- Ekip Touch LSI
- Ekip Touch LSIG



# Protection trip units for power distribution

# Ekip Touch

#### **Protection functions**

Ekip Touch enables all the protection functions to be set with a few simple steps directly from the wide touchscreen display. If the circuit breaker is tripped it must be reset manually or electrically by the operator (lockout relay – code ANSI 86).

- Overload (L ANSI 49)
- Time-delayed overcurrent (S ANSI 51 & 50TD)
- · Thermal memory
- Instantaneous overcurrent (I ANSI 50)
- Earth fault (G ANSI 51N & 50NTD)
- Instantaneous Earth Fault (G-ANSI 50N)
- Earth fault on toroid (G ext ANSI 51G & 50GTD)
- · Neutral protection
- · Start-up function
- Current unbalance (IU ANSI 46)
- Zone selectivity for S and G protection (ANSI 68)
- Current thresholds
- · Power Controller

In addition, the following protection functions are available with Ekip Measuring Pro:

- Undervoltage (UV ANSI 27)
- Overvoltage (OV ANSI 59)
- Underfrequency (UF ANSI 81L)
- Overfrequency (OF ANSI 81H)
- Voltage unbalance (VU ANSI 47)
- Residual current (Rc ANSI 64 & 50NDT)
- Reverse active power (RP ANSI 32R)
- Synchrocheck (SC ANSI 25)
- · Cyclical direction of the phases (ANSI 47)
- Power factor (ANSI 78).

#### Measurements and meters

All versions of the Ekip Touch unit measure the RMS value of the currents of the three phases (L1, L2, L3) and of neutral (Ne) with 1% accuracy in the 0.2 to 1.2 In range (class 1 in accordance with IEC 61557-12). The complete range of measurement is from 0.03 to 16x In, where In is the value of the rating plug.

The display shows the current of the most loaded phase both in numeric and analogue format on an ammeter with a 0-125% In scale for rapid identification of the load of the circuit breaker.

Alternatively, bar graphs that show the currents of the three phases and of neutral on a 0-125% In scale in addition to the numeric value of the most loaded phase can be selected as the default page. The bar graphs are yellow in the event of a prealarm and red in the event of an overload to enable an irregular condition to be identified immediately. Where applicable, the measurement of the earth fault current is shown on a dedicated page. The ammeter can operate both in self-supplied mode and with auxiliary voltage. In the latter case, the display always has back lighting and the ammeter is also active at currents below 100A.

Adding the Ekip Measuring or Ekip Measuring Pro module to Ekip Touch enables Ekip Touch to be used as a multimeter to measure the values of:

- Voltage: phase-phase, phase-neutral (accuracy 0.5%);
- Power: active, reactive, apparent (accuracy 2%);
- Energy: active, reactive, apparent (accuracy 2%);
- Frequency (accuracy 0.2%);
- Power factor by phase and total;
- Peak factor.

Measurements and meters





#### Maximum values and values register

The Ekip Touch unit is able to supply the measurement trend of certain parameters over a settable period of time such as: average power, maximum power, maximum and minimum current, maximum and minimum voltage. The values of the last 24 time intervals are recorded in the unit with a relative timestamp and can be consulted directly from the display or remotely using one of the available communication protocols. The communication can also be used to synchronize the recording time interval.

#### **Data logger**

Ekip Touch is always supplied with the exclusive Data Logger (register) function that stores with high sampling frequency the instantaneous values of all the measurements in two memory buffer registers. The data can be easily downloaded by the Ekip Connect unit and transferred to any personal computer. This enables the current and voltage waveforms to be analyzed for rapid fault analysis. The function continuously stores and stops recording, with a selectable delay, whenever the event set by the user occurs (e.g. trip or alarm). In this manner, it is possible to analyze the complete evolution of the fault: from the start to its complete elimination.

#### Information on trip and opening data

If a trip occurs, Ekip Touch stores all the information that is required for rapid identification and elimination of the causes:

- · Protection tripped
- Opening data (current, voltage or frequency)
- Time-stamping (data, time and consecutive opening number)

If the iTest key is pressed, the trip unit displays all these data directly on the display. No auxiliary supply is required. The information is also available to the user with the circuit breaker open or without current flow, due to the battery installed inside the unit.

#### Maintenance indicators

A complete set of information about the circuitbreaker and its operation is available for effective fault analysis and preventive scheduling of maintenance. All the information can be seen from the display or from a PC using a communication unit. In particular:

- Date, time, fault current by phase and type of protection tripped over the last 30 trips;
- Date, time and type of operation of the last 200 events (example: opening/closing of circuitbreaker, pre-alarms, editing of settings, ect.);
- Number of operations of the circuit breaker: divided into mechanical operations (no current), electrical operations (with current) and protection function (trip);
- Contact wear estimated as a function of the number and type of openings;
- Total operating time of the circuit breaker with circulating current;
- Date and time of the last maintenance session, scheduling of the next maintenance session;
- Circuit-breaker identifying data: type, serial number, firmware version, device name assigned by the user.

All the information can be viewed directly from the display and from a Smartphone, Tablet (with Ekip Bluetooth) or PC using the front port of the trip unit or the system communication.

Maintenance indicators



# Protection trip units for power distribution

# Ekip Touch

#### Watchdog

All of the trip units in the SACE Emax 2 family ensure high reliability because of an electronic circuit that periodically checks continuity of the internal connections, such as the trip coil, rating plug and each current sensor (Ansi 74). In the event of an alarm, a message is shown on the display, and if it is set during the installation phase, the trip unit can command the opening of the circuit breaker. If a protection function intervenes, Ekip Touch always checks that the circuit breaker has been opened by auxiliary contacts that indicate the position of the main contacts. Otherwise, Ekip Touch indicates an alarm (ANSI BF code - Breaker Failure) to be used to command the opening of the circuit breaker located upstream. Ekip also contains self-protection that ensures the correct operation of the unit under abnormal temperatures (OT) inside the protection trip unit. The user has the following indications or controls:

- "Warning" LED for temperature below -20 °C or above +70 °C, at which the trip unit operates correctly with the display switched off
- "Alarm" LED for temperature outside the operating range, at which the trip unit commands
  the opening of the circuit breaker (if set during
  the configuration phase).

#### User interface

All Ekip Touch operations are simple and intuitive due to the wide graphic colour touchscreen display. For example, all the main information is listed on one page (settable by default), thus enabling the state of the installation to be identified rapidly: maximum current, maximum voltage and active, reactive, apparent power and energy.

In addition, the use of Ekip Touch is further simplified by the possibility of scrolling through the menu and reading the alarms in one of the languages that can be set directly from the display: Italian, English, German, French, Spanish, Portuguese, Chinese, Russian, Turkish and Thai. The home pushbutton enables the user to return, at any moment, to the main page and the iTest key enables the information to be viewed after a circuit breaker trip and test.

As in the previous generation of trip units, a password system is used to manage "Read" or "Edit" modes. The default password, 00001, can be edited by the user. The protection parameters (curve and trip thresholds) are settable in "Edit" mode whereas it is always possible to consult the information in "Read" mode.

On the front of the trip unit there are also two LEDs: a pre-alarm LED (square yellow LED) and an alarm LED (red triangular LED); a message on the display always accompanies the flashing of the LEDs for clear identification of the type of event. The list of all the alarms active at that moment can be viewed by simply touching the display on the white strip in the bottom left of the alarms zone.

Ekip Touch is also supplied with a front port that permits a temporary connection to devices for test, supply or communication (for example Ekip T&P).

— User interface





#### Communication

Communication modules that can be installed inside the circuit breaker enable Ekip Touch to be integrated into the most modern supervision systems with protocols:

- IEC 61850
- Modbus TCP
- Modbus RS-485
- Profibus
- Profinet
- DeviceNet™
- EtherNet/IP™
- Open ADR
- Hub

The integration into communication systems enables measurements, statuses and alarms to be programmed and viewed by remote functions. If the circuit breaker has to be opened and closed remotely, the Ekip Com Actuator module can be installed in the circuit breaker front, in the right-hand accessories chamber.

For each circuit breaker, several communication modules with different protocols can be used simultaneously; for example, this enables the circuit breaker to be connected to the Ekip link system to obtain local supervision from the front of the switchgear and to simultaneously integrate it into a communication network. In addition, for applications requiring very high reliability, up to two modules using the same protocol can be inserted and two different addresses used to provide a level of redundancy.

#### **Test function**

For circuit breaker testing it is possible to use the test port and the iTest key positioned on the front of the protection trip unit.

The available functions are:

- trip test, test of the display and of the LEDs and check of absence of alarms detected by the watchdog function using Ekip TT;
- test of the single protection functions and saving of the report, in addition to the trip test and test of the display, using Ekip T&P;
- test of the battery with the circuit breaker switched off by pressing the iTest key.

# Protection trip units for power distribution

# Ekip Touch

#### Supply

The Ekip Touch protection trip unit is self-supplied by the current sensors and does not require an external supply for the basic protection functions or for the alarm indication functions. All protection settings are stored in a non-volatile memory that maintains the information, even without a power supply. To activate the indication functions the ammeter and the display, a 100A three-phase current suffices.

An auxiliary supply can easily be connected. The Ekip Supply module can be connected to supplies of both direct current and alternating current to activate additional functions such as:

- · using the unit with circuit breaker open;
- using additional modules such as Ekip Signalling and Ekip Com;
- connection to external devices such as Ekip Multimeter and Ekip Control Panel;
- recording the number of operations;
- G protection with values below 100A or below 0.2 In;
- zone selectivity;
- Gext and MCR protection functions.

Supply	Ekip Supply	
Nominal voltage	24-48V DC	110-240V AC/DC
Voltage range	21.5-53V DC	105-265V AC/DC
Rated power (including modules)	10W max.	10W max.
Inrush current	~10 A for 5 ms	~10 A for 5 ms

The Ekip Supply module allows the cartridge modules to be used in the terminal box area. Otherwise, the trip unit can be supplied by means of a galvanically isolated 24V DC auxiliary voltage. The Ekip Measuring Pro module can supply the Ekip Touch trip unit with line voltage above 85V. In addition, if the module is installed with voltage pick-ups on the supply side, the trip unit can be used even if the circuit breaker is open. The Ekip Touch protection trip unit is also supplied with a battery that enables the cause of the fault to be indicated after a trip, without a time limit. In addition, the battery enables date and time to be updated, thus ensuring the chronology of the events. When Ekip Touch is operating, it uses an internal control circuit to indicate automatically that the battery is flat. On the other hand, when the unit is switched off the battery test can be run by simply pressing the iTest key.

# Protection trip units for power distribution

# Ekip Hi-Touch

#### Key:

- Wide high-resolution colour touchscreen display
- 2. Power-on LED indicating correct operation
- 3. Pre-alarm LED
- 4. Alarm LED
- 5. Home pushbutton to return to home page
- 6. Pushbutton for test and for indicating cause of the trip
- 7. Test and programming connector
- 8. Ekip Measuring Pro module, with relative LED power on

The Ekip Hi-Touch is a highperformance multifunction unit that is extraordinarily versatile and can be used in even the most complex installations.

#### Characteristics

Ekip Hi-Touch, in fact, features exclusive functions such as: directional protection, restricted earth fault and dual setting of the protections. In addition, Ekip Hi-Touch is supplied with the exclusive Network Analyzer function that can monitor the quality of the power absorbed by the installation in accordance with existing standards.

Ekip Hi-Touch boasts all the features of Ekip Touch; as standard, it features the measuring and protection module Ekip Measuring Pro and can also be fitted, like Ekip Touch, with the additional features provided by the internal modules and by the external accessories. The front interface of the unit, which is common to Ekip Touch, is extremely simply because of the touchscreen colour display; it is able to show measurements, bar graphs and sine curves of the different electrical values.

The unit is available in the versions:

- Ekip Hi-Touch LSI
- · Ekip Hi-Touch LSIG



# Protection trip units for power distribution

# Ekip Hi-Touch

#### **Protection functions**

The Ekip Hi-Touch trip unit has the following protection functions, which it shares with Ekip Touch:

- Overload (L ANSI 49);
- Time-delayed overcurrent (S ANSI 51 & 50TD);
- Thermal memory;
- Instantaneous overcurrent (I ANSI 50);
- · Closing on short-circuit (MCR);
- Earth fault (G ANSI 51N & 50NTD);
- Instantaneous Earth Fault (G ANSI 50N); Earth fault on toroid (G ext – ANSI 51G & 50GTD);
- · Neutral protection;
- Start-up function;
- · Zone selectivity for functions S and G (ANSI 68);
- · Current unbalance (IU ANSI 46);
- Undervoltage (UV ANSI 27);
- Overvoltage (OV ANSI 59);
- Underfrequency (UF ANSI 81L);
- Overfrequency (OF ANSI 81H);
- Voltage unbalance (VU ANSI 47);
- Residual current (Rc ANSI 64 & 50NTD);
- Reverse active power (RP ANSI 32R);
- Synchrocheck (SC ANSI 25, optional);
- Cyclical direction of the phases (ANSI 47);
- · Power factor (ANSI 78);
- Current thresholds;
- Power Controller function (optional)
- Second time-delayed overcurrent protection (S2 – ANSI 50TD)
- Second protection against earth fault (ANSI 50GTD/51G & 64REF
- Directional overcurrent (D ANSI 67)
- Zone selectivity for protection D (ANSI 68)
- · Start-up function for protection D
- Second protection against undervoltage and overvoltage (UV2 and OV2 – ANSI 27 and 59)
- Second protection against underfrequency and overfrequency (UF2 and OF2 – ANSI 81L and 87H)
- Dual setting of protections.

#### Measurements

The Ekip Hi-Touch trip unit offers a complete series of measurements, common to Ekip Touch:

- Measurements and counters: currents, voltage, power, energy;
- · Maximum values and value log;
- · Data logger;
- · Information on the trip and opening data;
- · Maintenance indicators.

Ekip Hi-Touch integrates the exclusive Network Analyzer function, which analyzes the quality of energy consumed by the installation, in accordance with the provisions of international standards EN50160 and IEC 61000-4-30, in terms of harmonic content, average value and long or short term changes in voltage. Changes in the energy quality can cause malfunctions in the switchgear and a reduction in their lifespan, as well as increased losses and reduced energy efficiency of the installation. It is therefore increasingly important to assess the quality of the energy and the economic impact it has on the productive process, so that the appropriate preventive and corrective actions can be taken. With Ekip Hi-Touch, the causes of an increase in power lost in transformers or motors, or a reduction in the lifespan of cables and capacitors, can be identified without the need to install any external instrumentation.

The Network Analyzer function performs continuous monitoring of the energy quality, and shows all results via a display or communication module. In particular:

· Hourly average voltage value: in accordance with international standards, this must remain within 10% of the rated value, but different limits can be defined according to the needs of the installation. The positive sequence voltage is obtained from the three line voltages and compared with the limits. If the limits are exceeded, Ekip Hi-Touch generates a signalling event. The quantity of these events is stored in a suitable counter. The counter values are available for each of the last 7 days, as is the total. The measurements available are the positive and negative sequence voltages and positive and negative sequence currents of the last interval monitored. The time of the calculation of the average values can be set between 5 minutes and 2 hours.

- Interruptions / short dips in voltage (voltage interruptions / voltage dip): if the voltage remains below the threshold for more than 40ms, Ekip Hi-Touch generates an event that is counted in a dedicated log. The voltage is monitored on all lines.
- Short voltage spikes (voltage transients, spikes): if the voltage exceeds the threshold for 40ms, for a pre-determined time, Ekip Hi-Touch generates an event that is counted.
- Slow-voltage sags and swells (voltage sag / voltage swell): when the voltage goes outside the range of acceptable limit values for a time greater than the one set, Ekip Hi-Touch generates an event that is counted. Three values can be configured for voltage sags and two for voltage swells, each of which associated with a time limit: this enables us to verify whether the voltage remains within a curve of values that are acceptable by equipment such as computers. The voltage is monitored on all lines.
- Voltage unbalances: if the voltages are not equal or the phase displacements between them are not exactly 120°, an unbalance occurs, which is manifested by a negative sequence voltage value. If this limit exceeds the threshold value set, an event is stored which is counted.
- Harmonic analysis: the harmonic content of voltages and currents, measured to the 50th harmonic, as well as the value of total harmonic distortion (THD), is available in real time on the display or through the communication modules. Ekip Hi-Touch also generates an alarm if the THD value or the magnitude of at least one of the harmonics exceeds the values set. The voltage is monitored on all lines and currents on all phases.

All information can be displayed directly on the screen or on a smartphone, tablet or PC using the front port of the trip unit (with Ekip Bluetooth) or installation communication.

### Other functions

Ekip Hi-Touch integrates all the features in terms of user interface, communication, test and supply described for Ekip Touch equipped with Ekip Measuring Pro.

## Protection trip units for generators

## Ekip G Touch

### Key:

- Wide, high resolution touchscreen display
- Power-on LED indicating correct operation
- 3. Pre-alarm LED
- 4. Alarm LED
- 5. Home pushbutton to return to home page
- 6. Pushbutton for test and for indicating cause of the trip
- 7. Test and programming connector
- Ekip Measuring Pro module with relative poweron LED

Ekip G Touch is designed for use in applications with generators, such as Genset, cogeneration and marine applications, in conformity with international standards IEC 60034-1 and IEEE C37.102.

### Characteristics

Ekip G Touch has been approved by the main shipping registers and enables the number of components installed, such as external protection devices, current sensors, voltage transformers and the relative cabling, to be reduced.

The reductions allow the installation to be significantly simplified. In addition, all the protection functions can be tested individually, using the Ekip T&P device that enables the function to be tested before commissioning.

The unit is available in the Ekip G Touch LSIG version and features all the characteristics provided by Ekip Touch. The Ekip Measuring Pro measuring and protection module is supplied as standard and, like Ekip Touch; the functions can be increased further using the internal modules and the external accessories.

The front interface of the unit, which is common to the Ekip Touch family, is characterized by a wide, high resolution touchscreen display that is simple to use and displays measurements and alarms clearly and accurately.



### **Protection functions**

The Ekip G Touch trip unit provides all the protection functions of Ekip Touch and, in addition, provides a series of dedicated generator protections. If Ekip is tripped, it opens the circuit breaker and prevents it from closing again until it has been reset manually or electrically by the operator (lockout relay – code ANSI 86).

The trip unit is provided with the following protection functions:

- Overload (L ANSI 49);
- Time-delayed overcurrent (S ANSI 51 & 50TD);
- Thermal memory;
- Instantaneous overcurrent (I ANSI 50);
- · Closing on short circuit (MCR);
- Earth fault (G ANSI 51N & 50NTD);
- Instantaneous Earth Fault (G ANSI 50N);
- Earth fault on toroid (G ext ANSI 51G & 50GTD)
- · Neutral protection;
- Start-up function;
- · Zone selectivity for functions S and G (ANSI 68);
- Current unbalance (IU ANSI 46);
- Undervoltage (UV ANSI 27);
- Overvoltage (OV ANSI 59);
- Underfrequency (UF ANSI 81L);
- Overfrequency (OF ANSI 81H);
- · Voltage unbalance (VU ANSI 47);
- Differential ground fault (Rc ANSI 87N);
- Reverse active power (RP ANSI 32R);
- · Synchrocheck (SC ANSI 25, optional);
- Cyclical direction of phases (ANSI 47);
- Power factor (ANSI 78);
- · Current thresholds;
- Power Controller function (optional)
- Differential ground fault (Rc ANSI 87N)
- Voltage controlled overcurrent protection (S(V) -ANSI 51V)
- Residual overvoltage (RV ANSI 59N)
- Loss of field or reverse reactive power (RQ ANSI 40 or 32RQ)
- Loss of field or reverse reactive power (RQ ANSI 40 or 32RQ)
- Reactive overpower (OQ ANSI 32OF)
- Active overpower (OP ANSI 32OF)
- Active underpower (UP ANSI 32LF).

### Measurements

The Ekip G Touch trip unit provides a complete series of measurements, which are common to Ekip Touch

- Measurements and meters: currents, voltage, power, energy, frequency;
- Maximum values and values register;
- Data logger;
- · Information on trip and opening data;
- Maintenance indicators.

All the information can be viewed directly on the display of the trip-unit, by means of the external Ekip Multimeter display or by Smartphone, Tablet or PC using the front port of the trip unit (with Ekip Bluetooth) or the system communications.

### Other functions

Ekip G Touch provides the same characteristics in terms of user interface, communication, test and power supply described for Ekip Touch equipped with Ekip Measuring Pro.

## Protection trip units for generators

## Ekip G Hi-Touch

### Key:

- Wide, high resolution touchscreen display
- 2. Power-on LED indicating correct operation
- 3. Pre-alarm LED
- 4. Alarm LED
- 5. Home pushbutton to return to home page
- 6. Pushbutton for test and for indicating cause of the trip
- Test and programming connector
- Ekip Measuring Pro module with relative poweron LED

Ekip G Hi-Touch is the new benchmark for the protection of low-voltage electric generators. It provides optimum protection, even in complex installations, due to exclusive functions such as protection against frequency creep and maximum directional current.

### Characteristics

Ekip G Hi-Touch, like all Hi-Touch trip units, is supplied as standard with the Ekip Measuring Promeasurement and protection module and enables an independent second set of protections to be set. In addition, the Network Analyzer function enables it to monitor the quality of the power delivered by the generator.

Ekip G Hi-Touch is available in the LSIG version and ensures all the protection and control functions of Ekip Hi- Touch and the specific protections for for generators protected by Ekip G Touch. The user interface and the accessories are common to the rest of the family.



### **Protection functions**

The Ekip G Hi-Touch trip unit is provided with the following protection functions, common to Ekip Hi-Touch:

- Overload (L ANSI 49);
- Time-delayed overcurrent (S ANSI 51 & 50TD);
- Time-delayed overcurrent, second threshold (S2 – ANSI 50TD);
- · Thermal memory;
- Instantaneous overcurrent (I ANSI 50);
- Directional overcurrent (D ANSI 67);
- Voltage controlled overcurrent protection (S(V) – ANSI 51V);
- · Closing on short circuit (MCR);
- Earth fault (G ANSI 51N & 50NTD);
- Second protection against earth fault (ANSI 50GTD/51G & 64REF);
- Earth fault on toroid (Gext ANSI 51G & 50GTD);
- · Neutral protection;
- Start-up function;
- · Zone selectivity for functions S and G (ANSI 68);
- Zone selectivity for directional protection D (ANSI 68)
- Start-up function for protection D;
- Current unbalance (IU ANSI 46);
- Undervoltage (UV ANSI 27);
- Undervoltage, second threshold (UV2 ANSI 27);
- Overvoltage (OV ANSI 59);
- Overvoltage, second threshold (OV2 ANSI 59);
- Underfrequency (UF ANSI 81L);
- Underfrequency, second threshold (UF2 – ANSI 81L);
- Overfrequency (OF ANSI 81H);
- Overfrequency, second threshold (OF2 – ANSI 81H);
- Voltage unbalance (VU ANSI 47);
- Residual overvoltage (RV ANSI 59N);
- Differential ground fault (Rc ANSI 87N);
- Loss of field or reverse reactive power (RQ – ANSI 40 or 32R);
- Reverse active power (RP ANSI 32R);
- Reactive overpower (OQ ANSI 32OF);
- Active overpower (OP ANSI 32OF);
- · Active underpower (UP ANSI 32LF);
- Synchrocheck (SC ANSI 25, optional);
- Cyclical direction of phases (ANSI 47);
- · Power factor (ANSI 78);
- · Current thresholds;
- Dual setting of protections;
- Power Controller function (optional)

- Rate of change of frequency (ROCOF ANSI 81R)
- Second protection against voltage controlled overcurrent protection (S2(V) - ANSI 51V)
- Second protection against loss of field or reverse reactive power (RQ ANSI 40 or 32R).

### Measurements

The Ekip G Hi-Touch trip unit provides all the measurements available with Ekip Hi-Touch:

- Network Analyzer, in conformity with EN50160 and IEC 61000-4-30;
- Measurements and meters: currents, voltage, power, energy, frequency;
- Maximum values and values register;
- · Data logger;
- · Information on trip and opening data;
- Maintenance indicators.

### Other functions

Ekip G Hi-Touch has all the features of Ekip Touch equipped with Ekip Measuring Pro in terms of user interface, communication, test and power supply.

# Technical characteristics for protection trip units

## Protection functions

ABB Code	ANSI/IEEE C37.2 Code	Function	Threshold
L	49	Overload protection	I1 = 0.4 - 0.42 - 0.45 - 0.47 - 0.5 - 0.52 - 0.55 - 0.57 - 0.6 - 0.62 - 0.65 - 0.67 - 0.7 - 0.72 - 0.75 - 0.77 - 0.8 - 0.82 - 0.85 - 0.87 - 0.9 - 0.92 - 0.95 - 0.97 - 1 x In
		Thermal memory	
		Tolerance	trip between 1.05 and 1.2 x I1
S	50TD	Time-delayed overcurrent protection	12 = 0.6 - 0.8 - 1 - 1.5 - 2 - 2.5 - 3 - 3.5 - 4 - 5 - 6 - 7 - 8 - 9 - 10 x In
		Tolerance	± 7% If ≤ 6 x In ± 10% If > 6 x In
	51	Time-delayed overcurrent protection	I2 = 0.6 - 0.8 - 1 - 1.5 - 2 - 2.5 - 3 - 3.5 - 4 - 5 - 6 - 7 - 8 - 9 - 10 x In
		Thermal memory	
		Tolerance	± 7% If ≤ 6 x In ± 10% If > 6 x In
ı	50	Instantaneous overcurrent protection	I3= 1.5 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 9 - 10 - 11 - 12 - 13 - 14 - 15 x In
		Tolerance	± 10%
G	50N TD	Earth fault protection	I4 <sup>(1)</sup> = 0.1 - 0.2 - 0.3 - 0.4 - 0.6 - 0.8 - 1 x In
		Tolerance	± 7%
	51N	Earth fault protection	I4 <sup>(1)</sup> = 0.1 - 0.2 - 0.3 - 0.4 - 0.6 - 0.8 - 1 x In
		Tolerance	± 7%

<sup>(1)</sup> With Vaux all thresholds are available. Without Vaux minimum threshold is limited to: 0.3ln (with In = 100A), 0.25ln (with In = 400A) or 0.2ln (for all other ratings)

The tollerances above apply to trip units already powered by the main circuit with current flowing in at least two phases or an auxiliary power supply. In all other cases the following tollerance values apply

ABB Code	Trip threshold	Trip time
L	Trip between 1.05 and 1.2 x I1	± 20%
S	± 10%	± 20%
ı	± 15%	≤ 60ms
G	± 15%	± 20%

<sup>(2)</sup> The minimum trip time is 1s, regardless of the type of curve set (self-protection)



Trip time	Excludibility	Pre Alarm	Trip curve	Ekip Dip
with If = 3 I1, t1 = 3 - 12 - 24 - 36 - 48 - 72 - 108 - 144s (2)	no	50 90% I1 Step 1%	t = k / I <sup>2</sup>	•
	no			•
± 10% If ≤ 6 x In ± 20% If > 6 x In				
with If > I2, t2 = 0.1 - 0.2 - 0.3 - 0.4 - 0.5 - 0.6 - 0.7 - 0.8s	yes	=	t = k	•
The better of the two data: ± 10% t2 or ± 40 ms				
with If = 10 In, t2 = 0.1 - 0.2 - 0.3 - 0.4 - 0.5 - 0.6 - 0.7 - 0.8s	yes	=	t = k / I <sup>2</sup>	•
	yes	=		
± 15%  f ≤ 6 x  n ± 20%  f > 6 x  n				
Instantaneous	yes	-	t = k	•
≤ 30 ms				
with If > I4, t4 = 0.1 - 0.2 - 0.4 - 0.8s	yes	50 90% I4 Step 1%	t = k	•
The better of the two data: ± 10% t4 or ± 40 ms				
with If = 3In, t4 = 0.1 - 0.2 - 0.4 - 0.8s	yes	50 90% I4 Step 1%	t = k / I <sup>2</sup>	•
± 15%				

# Technical characteristics for protection trip units

## Protection functions

ABB Code	ANSI Code	Function	Threshold	Threshold step	Trip time	Time Step
L	49	Overload Protection	I1 = 0.41 x In	0.001 x In	with I = 3 I1, t1 = 3144 s	1s
		Thermal Memory				
		Tolerance	± 10% l ≤ 6 x ln / ± 20% l > 6 x ln			
	49	Overload Protection	I1 = 0.41 x In	0.001 x In	with I = 3 I1, t1 = 3144 s	1s
					Standard inverse SI: k=0.14 α=0,02	
					Very Inverse VI: $k=13.5 \alpha=1$ Extremely Inverse EI: $k=80 \alpha=2$	
		Tolerance	trip between 1.05 and 1.2 x I1		± 10%   ≤ 6 x ln / ± 20%   > 6 x ln	
<b>S</b>	50TD	Time-delayed overcurrent protection	-	0.1 x ln	With I > I2, t2 = 0.050.8s	0.01s
	68	Zone selectivity			t2sel = 0.040.2s	0.01s
		Start up	Activation: 0.610 x In	0.1 x ln	Range: 0.130s	0.01s
		Tolerance	± 7% I ≤ 6 x In		The better of the two data:	,
			± 10% I > 6 x In		+-10% or +-40ms	
	51	Time-delayed overcurrent protection	I2 = 0.610 x In	0.1 x ln	with I = 10 In, t2 = 0.050.8s	0.01s
		Thermal Memory				
		Tolerance	± 7% I ≤ 6 x In		± 15% l ≤ 6 x ln	
l	50	Istantaneous overcurrent protection	± 10%   > 6 x  n	0.1 x ln	± 20% I > 6 x In With I > I3, instantaneous	
•	30	· · · · · · · · · · · · · · · · · · ·			<u> </u>	0.01s
		Start up	Activation: 1.515 x In	0.1 x ln	Range: 0.130s	0.015
G	50N TD	Tolerance Earth fault protection	± 10% I4 <sup>(1)</sup> = 0.11 x ln	0.001 x In	≤ 30 ms with I > I4, t4 = Instantaneous	0.05s
J	SONTD	Earth fault protection	14.7 - 0.11 X III	0.001 X III	(with Vaux) + 0,11 s	0.035
	68	Zone selectivity			t4sel = 0.040,2s	0.01s
		Start up	Activation: 0.21 x In	0.02 x In	range: 0.130s	0.01s
		Tolerance	± 7%		The better of the two data: ± 10% or ± 40 ms or 50ms with t4 = instantaneous	
	51N	Earth fault protection	I4 <sup>(1)</sup> = 0.11 x ln	0.001 x In	with I = 4 In, t4 = 0.11s	0.05s
		Tolerance	± 7%		± 15%	
IU	46	Current unbalance protection	I6 = 290% In unbalance	1%In	with unbalance > 16, t6 = 0.560s	0.5s
		Tolerance	± 10%		The better of the two data: ± 10% or ±	
					40 ms (for t<5s) / +-100ms (for t≥5s)	
21	50	Programmable instantaneous overcurrent protection	I31 = 1.515 x In	0.1xln	with I>I31, instantaneous	
		Tolerance	± 10%		≤ 30 ms	
MCR		Closing on short-circuit protection	I3= 1.515 x In	0.1 x ln	With I > I3, instantaneous Monitor time range: 40500ms	0.01s
		Tolerance	± 10%		≤ 30 ms	
Gext	50G TD	Earth fault protection	I41 <sup>(1)</sup> = 0.11 x In Toroid	0.001 x In Toroid	with I > I41, t41 = 0.11s	0.05s
	68	Zone selectivity			t41sel = 0.040,2s	0.01s
		Start up	Activation: 0.11 x In	0.02 x In	range: 0.130s	0.01s
		Tolerance	± 7%		The better of the two data: ± 10% or ± 40 ms	
	51G	Earth fault protection	I41 <sup>(1)</sup> = 0.11 x In	0.001 x In	with I = 4 In, t41 = 0.11s	0.05s
	,	Tolerance	± 7%		± 15%	
Rc	64 50N TD 87N	Residual current protection Differential ground fault protection	IΔn = 3 - 5 - 7 - 10 - 20 - 30A		with I > IΔn, tΔn = 0.06 - 0.1 - 0.2 - 0.3 - 0.4 - 0.5 - 0.8s	
		Tolerance	- 20% ÷ 0%		140ms @ 0.06s (max trip time) 950ms @ 0.80s (max trip time)	
UV	27	Undervoltage Protection	U8 = 0.50.98 x Un	0.001 x Un	with U < U8, t8 = 0.05120s	0.01s
		Tolerance	± 2%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) / $\pm 100$ ms (for t≥5s)	
ov	59	Overvoltage protection	U9 = 1.021.5 x Un	0.001 x Un	with U > U9, t9 = 0.05120s	0.01s
		Tolerance	± 2%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t≥5s)	:









Excludibility	Excludibility trip	Pre-alarm	Trip curve	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch
yes, with rating plug L=off		5090% I1 step 1%	t = k / I <sup>2</sup>	•	•	•	•
yes				•	•	•	•
yes, with rating plug L=off	no	5090% l1 step 1%	$t = \frac{t1xaxb}{\left(\frac{ f }{ 1 }\right)^k - 1}$	•	•	•	•
yes	yes	no	t = k	•	•	•	•
yes				•	•	•	•
yes				•	•	•	•
yes	yes	no	t = k / I <sup>2</sup>	•	•	•	•
yes	yes		с кут	•	•	•	•
yes	no	no	t = k	•	•	•	•
yes		,		•	•	•	•
yes	yes	5090% I4 step 1%	t = k	•	•	•	•
yes				•	•	•	•
yes				•	•	•	•
yes	yes	5090% I4 step 1%	t = k / I <sup>2</sup>	•	•	•	•
yes	vos	no	t = k	•	•	•	•
yes	yes	110	t - K		•		
			4 = 1:				
yes	no	no	t = k	•	•	•	•
yes	no	no	t = k	•	•	•	•
yes	yes	5090% I41 step	t = k	•	•	•	•
yes		1%		•	•	•	•
yes				•	•	•	•
<i>y</i> -							
yes	yes	5090% I41 step 1%	t = k / I <sup>2</sup>	•	•	•	•
_ <del>-</del>	-		•				
Available with	no	no	t = k	0	•	•	•
rating plug Rc							
 yes	yes	no	t = k	0	•	•	•
yes	yes	no	t = k	0	•	•	•

# Technical characteristics for protection trip units

## Protection functions

ABB Code	ANSI Code	Function	Threshold	Threshold step	Trip time	Time Step
vu	47	Voltage unbalance protection	U14 = 290% Un unbalance	1%Un	with unbalance > U14, t14 = 0.560s	0.5s
		Tolerance	± 5%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t≥5s)	
UF	81L	Underfrequency protection	f12 = 0.90.999 x fn	0.001 x fn	with f < f12, t12 = 0.15300s	0.01s
		Tolerance	± 1% (with fn ±2%)		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t≥5s)	
OF	81H	Overfrequency protection	f13 = 1.0011.1 x fn	0.001 x fn	with f > f13, t13 = 0.15300s	0.01s
		Tolerance	± 1% (with fn ±2%)		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t $\geq 5$ s)	
RP	32R	Reverse active power protection	P11 = -10.05 Sn	0.001 Sn	with P > P11, t11 = 0.5100s	0.1s
		Tolerance	± 10%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) / $\pm 100$ ms (for t $\geq 5s$ )	
ABB: Cyclical direction	47	Cyclical direction of the phases	1-2-3 or 3-2-1		10 113 (101 € 33)) = 100 113 (101 € 233)	
ABB: Power factor	78	3phase Power factor	PF3 = 0.50,95	0.01		
LC1/2 lw1/2		Current threshold	LC1 =50%100%   1 LC2 =50%100%   1 Iw1 = 0.110   n Iw2 = 0.110   n Activation: up/down	1% 1% 0.01 x In		
		Tolerance	± 10%			
52	50TD	Time-delayed overcurrent protection	I5 = 0.610 x In	0.1 x In	With I > I5, t5 = 0.050.8s	0.01s
	68	Zone selectivity			t5sel = 0.040.2s	0.01s
		Start up	Activation: 0.610 x In	0.1 x ln	Range: 0.130s	0.01s
		Tolerance	± 7% l ≤ 6 x ln		The better of the two data:	
D	67	Directional overcurrent protection (forward &/or backward)	± 10% l > 6 x ln l7 = 0.610 x ln	0.1 x ln	± 10% or ± 40 ms with I > I7, t7 = 0.10.8s	0.01s
	68	Zone selectivity			t7sel = 0.10.8s	0.01s
		Start up (forward &/or backward)	Activation: 0.610 x In	0.1 x ln	Range: 0.130s	0.01s
		Trip direction	forward &/or backward			
		Minimum angle direction (°)	3.6, 7.2, 10.8, 14.5, 18.2, 22, 25.9, 30, 34.2, 38.7, 43.4, 48.6, 54.3, 61, 69.6			
		Tolerance	± 7%   ≤ 6 x ln ± 10%   > 6 x ln		The better of the two data: ± 10% or ± 40 ms	
UV2	27	Undervoltage Protection Tolerance	U15 = 0.50.98 x Un ± 2%	0.001 x Un	with U < U15, t15 = 0.05120s The better of the two data: ± 10% or ± 40 ms (for t<5s) / ± 100 ms (for t≥5s)	0.01s
OV2	59	Overvoltage protection	U16 = 1.021.5 x Un	0.001 x Un	with U > U16, t16 = 0.05120s	0.01s
		Tolerance	± 2%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t $\geq 5$ s)	
UF2	81L	Underfrequency protection	f17 = 0.90.999 x fn	0.001 x fn	with f < f17, t17 = 0.15300s	0.01s
		Tolerance	± 1% (with fn ±2%)		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t≥5s)	
OF2	81H	Overfrequency protection	f18 = 1.0011.1 x fn	0.001 x fn	with f > f18, t18 = 0.15300s	0.01s
		Tolerance	± 1% (with fn ±2%)		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) $/ \pm 100$ ms (for t≥5s)	
S(V)	51V	Voltage controlled overcurrent protection	I20 = 0.610 x In	0.1 x ln	With I > I20, t20 = 0.0530s	0.01s
		Step mode	Ul= 0.21 x Un	0.01 x Un		
			Ks= 0.11	0.01		
		Linear mode	UI= 0.21 x Un	0.01 x Un		,
			Uh= 0.21 x Un	0.01 x Un		
			Ks= 0.11	0.01		
		Tolerance	± 10%		The better of the two data: $\pm 10\%$ or $\pm 40$ ms (for t<5s) / $\pm 100$ ms (for t>5s)	









				-	X X	- 1	- 1
Excludibility	Excludibility trip	Pre-allarm	Trip curve	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch
yes	yes	no	t = k	0	•	•	•
yes	yes	no	t = k	0	•	•	•
yes	yes	no	t = k	0	•	•	•
yes	yes	no	t = k	0	•	•	•
yes	only	no	-	0	•	•	•
	signalling						
yes	only	no	-	0	•	•	•
	signalling						
yes	only signalling	no	-	•	•	•	•
	Signalling						
	,						
yes	yes	no	t = k		•		•
yes	yes				•		•
yes					•		•
yes	yes	no	t = k		•		•
yes					•		•
yes					•		•
			4 – 1.				
yes	yes	no	t = k		•		•
yes	yes	no	t = k		•		•
yes	yes	no	t = k		•		•
yes	yes	no	t = k		•		•
yes	yes	no	t = k	<u> </u>		•	•
						•	•
						•	•

# Technical characteristics for protection trip units

## Protection functions

ABB Code	ANSI Code	Function	Threshold	Threshold step	Tripping time	Time Step
RV	59N	Residual overvoltage protection	U22 = 0.050.5 x Un	0.001 x Un	with U > U22, t22 = 0.5120s	0.01s
		Tolerance	± 5%		The better of the two data: ± 10% or	
			,		± 40 ms (for t<5s) / ± 100 ms (for t≥5s)	
OP	320F	Active overpower protection	P26 = 0.42 Sn	0.001 Sn	with P > P26, t26 = 0.5100s	0.5s
		Tolerance	± 10%		The better of the two data: ± 10% or	
	2205		007 04 00	0.001.5	± 40 ms (for t<5s) / ± 100 ms (for t≥5s)	
OQ	320F	Reactive overpower protection		0.001 Sn	with Q > Q27, t27 = 0.5100s	0.5s
		Tolerance	± 10%		The better of the two data: ± 10% or	
UP	32LF	Active underpower protection	P23 = 0.11 x Sn	0.001 x Sn	$\pm 40 \text{ ms (for t<5s)} / \pm 100 \text{ ms (for t} \ge 5s)$ with P < P23, t23 = 0.5100s	0.5s
•.	52 <b>2</b> .	Start up		0.001 X 0.1	range: 0.130s	0.01s
		Tolerance	± 10%		The better of the two data: ± 10% or	0.013
		rolerunce	_ 10 /0		± 40 ms (for t<5s) / ± 100 ms (for t≥5s)	
RQ	40/32R	Loss of field or reverse reactive	Q24 = -10.1 Sn	0.001 Sn	with Q > Q24, t24 = 0.5100s	0.1s
		power protection	Kq = -22	0.01		
		Loss of field or reverse reactive	Q25 = -10.1 Sn	0.001 Sn	with Q > Q25, t25 = 0.5100s	0.5s
		power protection	Kq2 = -22	0.01		
		Voltage minimum threshold	Vmin. = 0.51.2	0.01		,
		Tolerance	± 10%		The better of the two data: ± 10% or	
					± 40 ms (for t<5s) / ± 100 ms (for t≥5s)	
S2(V)	51V	Voltage controlled overcurrent protection	I21 = 0.610 x In	0.1 x ln	With I > I21, t21 = 0.0530s	0.01s
		Step mode	Ul2= 0.21 x Un	0.01 x Un		
			Ks2= 0.11	0.01		
		Linear mode	Ul2= 0.21 x Un	0.01 x Un		
			Uh2= 0.21 x Un	0.01 x Un		
			Ks2= 0.11	0.01		
		Tolerance	± 10%		The better of the two data:	
					± 10% or ± 40 ms (for t<5s) /	
					± 100 ms (for t≥5s)	
ROCOF	81R	Rate of change of frequency protection	f28 = 0.410 Hz/s	0.2 Hz/s	with f > f28, t28 = 0.510s	0.01s
		Trip direction	up &/or down			
		Tolerance	± 5%		The better of the two data:	
C h	25	Considerable and (150 a level and)	1115	0.001 11-	± 20% or ± 200 ms	0.001-
Synchro- check SC		Synchrocheck (Live busbars)	Ulive = 0.51.1 Un ΔU = 0.020.12 Un	0.001 Un 0.001 Un	Stability voltage time for live state = 10030000ms	0.001s 0.01 s
CHECK 3C			$\Delta f = 0.11Hz$	0.001 011 0.1Hz	Minimum matching Time =	0.015
			$\Delta \Phi = 550^{\circ} \text{ elt}$	5° elt	1003000ms	
		Tolerance	± 10%	<u> </u>	2001100001110	
		Synchrocheck	Ulive = 0.51.1 Un	0.001 Un	tref = 0.130s	0.1s
		(Live, Dead busbars)	Udead = 0.020.2 Un	0.001 Un		
		Frequency check off				
		Phase check off	'			
		Dead bar configuration	Reverse/standard			
		Primary voltage	1001150	100, 115, 120, 190, 208,		
				220, 230, 240, 277, 347,		
				380, 400, 415, 440, 480,		
				500, 550, 600, 660, 690,		
			100 100	910, 950, 1000, 1150		
		Secondary voltage	100120	100, 110, 115, 120		
		Tolerance	± 10%			

(1) With Vaux all thresholds are available. Without Vaux minimum threshold is limited to: 0.3In (with In = 100A), 0.25In (with In = 400A) or 0.2In (for all other ratings) The tolerances above apply to trip units already powered by the main circuit with current flowing in at least two-phases or an auxiliary power supply. In all other cases the following tollerance values apply:

ABB Code	Trip threshold	Trip time
L	Trip between 1.05 and 1.2 x I1	± 20%
S	± 10%	± 20%
I	± 15%	≤ 60ms
G	± 15%	± 20%
Other protection	± 15%	± 20%









				-	- 1	·	*
Excludibility	Excludibility trip	Pre-allarm	Trip curve	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch
yes	yes	no	t = k			•	•
yes	yes	no	t = k			•	•
yes	yes	no	t = k			•	•
yes	yes	no	t = k	,		•	•
yes							
yes	yes	no	t = k			•	•
yes	yes	no	t = k				•
yes							
yes	yes	no	t = k				•
							•
							•
yes	yes	no	t = k				•
yes	only signalling	no	-	0 ∞	∞	00	00
yes	only signalling	no	-				
yes							
yes							
yes							

### Key:

not available

available

• available with Ekip Measuring and Ekip Measuring Pro. For RC protection Measuring Pro is needed. available with Ekip Synchrocheck

# Technical characteristics for protection trip units

## Measurement functions

Instantaneous measurements	Displayed with Ekip Multimeter	Parameters
Currents (RMS) [A]	•	L1, L2, L3, Ne
Earth fault current (RMS) [A]	•	lg
Record of values: of the parameter for each interval with time-stamp	oing	Parameters
Current: minimum and maximum [A]	•	l Min, l Max
Information on trip and opening data: after a fault with or without a	uxiliary supply	Parameters
Type of protection tripped	•	eg. L, S, I, G
Fault values per phase [A]	•	eg. I1, I2, I3, neutral for S protection
Time-stamping	•	Date, time and progressive number
Maintenance indicators		Parameters
Information on last 30 trips	•	Type of protection, fault values and time-stamping
Information on last 200 events	•	Type of event, time-stamping
Number of mechanical operations (1) [no]	•	Can be associated to alarm
Total number of trips [no]	•	
Total operating time [h]	•	
Wear of contacts [%]	•	Prealarm >80%, Alarm = 100%
Date of maintenance operations performed	•	Last
Indication of maintenance operation needed	•	
Circuit-breaker I.D.	•	Type of circuit breaker, assigned device name, serial number
Self-diagnosis		Parameters
Check of continuity of internal connections	•	Alarm due to disconnection: rating plug, sensors, trip coil
Failure of circuit breaker to open (ANSI 50BF)	•	Alarm following non-tripping of protection functions
Temperature (T)	•	Pre-alarm and alarm for abnormal temperature

(1) with auxiliary supply present



Precision	Standard	Ekip Dip	
1%	Class 1 IEC 61557-12	•	
2%		•	
Window	Intervals		
Fixed, synchronizable by remote	Duration: 5120min Number of intervals: 24	•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
		•	
Note: Opening of circuit breaker can be set in the event of the control	of alarm	•	
		•	
 	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	

# Technical characteristics for protection trip units

## Measurement functions

Instantaneous measurements		Parameters	
Currents (RMS)	[A]	L1, L2, L3, Ne	
Earth fault current (RMS)	[A]	lg	
Phase-phase voltage (RMS)	[V]	U12, U23, U31	
Phase-neutral voltage (RMS)	[V]	U1, U2, U3	
Phase sequence			
Frequency	[Hz]	f	
Active power	[kW]	P1, P2, P3, Ptot	
Reactive power	[kVAR]	Q1, Q2, Q3, Qtot	
Apparent power	[KVA]	S1, S2, S3, Stot	
Power factor		total	
Peak factor		L1, L2, L3, Ne	
Counters recorded from installation or from	m the last reset	Parameters	
Active energy	[kWh]	Ep total, Ep positive, Ep negative	
Reactive energy	[kVARh]	Eq total, Ep positive, Ep negative	
Apparent energy	[KVAh]	Es total	
Network Analyzer		Parameters	
Hourly average voltage value	[V] [no]	- Umin= 0.750.95 x Un - Umax= 1.051.25 x Un	
	[110]	- Events counter (nr. of events day by day in the last year plus the	
		total events in the breaker's lifetime)	
Short voltage interruptions	[no]	<ul> <li>- Umin= 0.750.95 x Un</li> <li>- Events counter (nr. of events day by day in the last year plus the</li> </ul>	
Short voltage spikes	[no]	total events in the breaker's lifetime) - Umax= 1,051,25 x Un	
Short voltage spikes	[no]	total events in the breaker's lifetime) - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the	
		total events in the breaker's lifetime)  - Umax= 1,051,25 x Un  - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)	
Short voltage spikes Slow-voltage sags and swells	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un  - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un	
		total events in the breaker's lifetime)  - Umax= 1,051,25 x Un  - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)	
		total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un	
		total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un	
		total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the	
Slow-voltage sags and swells	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)	
	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un	
Slow-voltage sags and swells	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un - Events counter (nr. of events day by day in the last year plus the	
Slow-voltage sags and swells	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un	
Slow-voltage sags and swells  Voltage unbalance	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)	
Slow-voltage sags and swells  Voltage unbalance	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  Current and Voltage	
Slow-voltage sags and swells  Voltage unbalance	[no]	total events in the breaker's lifetime)  - Umax= 1,051,25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - Umin1= 0.750.95 x Un - Umin2= 0.750.95 x Un - Umin3= 0.750.95 x Un - Umax1= 1.051.25 x Un - Umax2= 1.051.25 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  - U neg. seq.= 0.020.10 x Un - Events counter (nr. of events day by day in the last year plus the total events in the breaker's lifetime)  Current and Voltage - up to 50°	









	Precision	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch
	1%	•	•	•	•
	2%	•	•	•	•
	0.5%	0	•	•	•
	0.5%	0	•	•	•
		0	•	•	•
	0.2%	0	•	•	•
-	2%	0	•	•	•
	2%	0	•	•	•
	2%	0	•	•	•
	2%	0	•	•	•
		0	•	•	•
			1		
	Precision				
	2%	0	•	•	•
	2%	0	•	•	•
	2%	0	•	•	•
	Intervals				
	t = 5120min	=	•	=	•
	t <40ms	=	•	=	•
	t <40ms		•		•
			-		<del>.</del>
	t = 0.02s60s	-	•	-	•
	t = 0.02s60s	<u>-</u>	•	-	•
	t = 0.02s60s		•	-	•
	t = 0.02s60s	<u>-</u>	•	-	•
			•		·
	t = 0.02s60s t = 5120min	<u>.</u>	•	-	•
			•		·
			•		·

# Technical characteristics for protection trip units

## Measurement functions

Record of values: of the parameter for each interval with time-stamping		Parameters		
Current: minimum and maximum	[A]	I Min, I Max		
Phase-phase voltage: minimum and maximum	[V]	U Min, U max		
Active power: average and maximum	[kW]	P Avg, P Max		
Reactive power: average and maximum	[kVAR]	Q Avg, Q Max		
Apparent power: average and maximum	[KVA]	S Avg, S Max		
Data logger: record of high sampling rate parame	ters	Parameters		
Currents	[A]	L1, L2, L3, Ne, Ig		
Voltages	[V]	U12, U23, U31		
Sampling rate	[Hz]	1200-2400-4800-9600		
Maximum recording duration	[s]	16		
Recording stop delay	[s]	0-10s		
Number of registers	[no]	2 independent		
Information on trip and opening data: after a faul	t without auxiliary supply	Parameters		
Type of protection tripped		eg. L, S, I, G, UV, OV		
Fault values per phase	[A/V/Hz W/var]	eg. I1, I2, I3, neutral for S protection V12, V23, V32 for UV protection		
Time-stamping		Date, time and progressive number		
Maintenance indicators		Parameters		
Information on last 30 trips		Type of protection, fault values and time-stamping		
Information on last 200 events		Type of event, time-stamping		
Number of mechanical operations (1)	[no]	Can be associated to alarm		
Total number of trips	[no]			
Total operating time	[h]			
Wear of contacts	[%]	Prealarm >80% Alarm = 100%		
Date of maintenance operations performed		Last		
Indication of maintenance operation needed				
Circuit-breaker I.D.		Type of circuit breaker, assigned device name, serial number		
Self-diagnosis		Parameters		
Check of continuity of internal connections		Alarm due to disconnection: rating plug, sensors, trip coil		
Failure of circuit breaker to open (ANSI 50BF)		Alarm following non-tripping of protection functions		
Temperature (OT)		Prealarm and alarm for abnormal temperature		









Window	Intervals	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch
Fixed synchronizable	by Duration: 5120min	•	•	•	•
remote	Number of intervals: 24	•	•	•	•
		0	•	•	•
		0	•	•	•
		0	•	•	•
'					
	-				
'		•	•	•	•
		0	•	•	•
		•	•	•	•
		•	•	•	•
		•	•	•	•
		•	•	•	•
	·				
		•	•	•	•
		•	•	•	•
		•		•	_
			•		•
		•			
		•	•	•	•
		•	•	•	•
			•	•	•
		•	•	•	•
		•	•	•	•
		•	•	•	•
	,	•	•	•	•
		•	•	•	•
		•	•	•	•
	'				
Note: Opening of circ	cuit	•	•	•	•
breaker can be set in	the				_
event of alarm		•	•	•	•

### Key:


- not available
- available with Ekip Measuring and Ekip Measuring Pro

## **Description of protection functions**




Overload (L - ANSI 49): available with three different types of trip curve:


- 1.  $t = k/l^2$  with inverse long time;
- 2. IDMT in accordance with 60255-151 for coordination with medium voltage protections, that are available according to the Standard Inverse (SI), Very Inverse (VI) and Extremely Inverse (EI) curves;
- 3. with  $t = k/l^4$  curve for better coordination with upstream circuit-breakers or with fuses. The thresholds can be fine tuned (for example 1A for circuit-breaker E1.2 1000A) and the timings to the second can be set directly from the display. The settable pre-alarm indicates the set threshold is reached before the protection is tripped. The protection can be disabled by rating plug L=off.

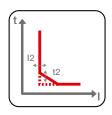

**Time-delayed overcurrent (S - ANSI 51 & 50TD)**: with constant tripping time (t = k), or with constant specific let-through energy (t =  $k/l^2$ ), this provides 15 current thresholds and 8 curves, for fine adjustment. The function can be excluded by setting the dip switch combination to "OFF".

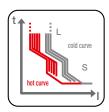


**Thermal memory**: for L and S protection functions, this is used to protect components, such as transformers, from overheating following an overload. The function, which can be enabled by the Ekip Connect software, adjusts the protection tripping time according to the length of time that has elapsed since the first overload, taking into account the amount of heat generated.

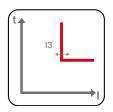

**Instantaneous overcurrent (I - ANSI 50)**: with tripping curve without intentional delay, it offers 15 tripping thresholds and can be excluded by setting the dip switch combination to "OFF".


**Closing on short-circuit (MCR):** the protection uses the same algorithm of the protection I, limiting operation to a settable time window from the closing of the circuit-breaker. The protection can be disabled, also alternatively to protection I. The function is active with an auxiliary supply.

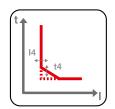


Earth fault (G - ANSI 51N & 50NTD): with tripping time independent of current (t = k) or constant specific let-through energy (t =  $k/l^2$ ). The function can be excluded by setting the dip switch combination to "OFF".




**Neutral protection**: available at 50%, 100% or 200% of the phase currents, or disabled, it is applied to the overcurrent protections L, S and I.

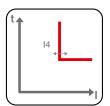

Instantaneous Earth Fault (G-ANSI 50N): with trip curve without instantaneous delay.

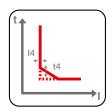


Earth fault on toroid (G ext - ANSI 51G & 50GTD): with trip time independent of the current (t = k) or with constant specific let-through energy (t =  $k/l^2$ ). Pre-alarm that 90% threshold has been reached permits the fault to be reported to supervision systems without interruption of continuity. The protection uses the external toroid installed, for example, on the star centre of the transformer, and is an alternative to the G and Rc functions. The function is active with an auxiliary supply.

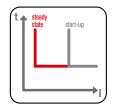


**Start-up function**: enables protections S, I and G to operate with higher trip thresholds during the starting phase, avoiding untimely trips due to high inrush currents of certain loads (motors, transformers, lamps). The starting phase lasts 100 ms to 30 s and is recognized automatically by the trip unit:

- at the closing of the circuit breaker with a self-supplied trip unit;
- when the peak value of the maximum current exceeds the set threshold (0.1...10 x ln) with an externally supplied trip unit; a new start-up is possible after the current falls below the threshold.

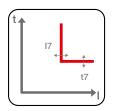

**Current unbalance (IU – ANSI 46)**: with constant trip time (t = k), protects from an unbalance between the currents of the single phases protected by the circuit breaker.

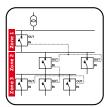

Zone selectivity for S and G protection (ANSI 68): can be used to minimize circuit- breaker trip times closer to the fault. The protection is provided by connecting all the zone selectivity outputs of the trip units belonging to the same zone and taking this signal to the trip unit input that is immediately upstream. Each circuit breaker that detects a fault reports it to the circuit breaker upstream; the circuit- breaker thus detects the fault but does not receive any communication from those downstream and opens without waiting for the set delay to elapse. It is possible to enable zone selectivity if the fixed-time curve has been selected and the auxiliary supply is present.

## **Description of protection functions**

**Current thresholds**: this function enables four independent thresholds to be indicated in order to enable corrective action implementation before the overload L protection trips the circuit breaker. For example, by disconnecting loads located downstream of the circuit breaker that are controlled by Ekip Signalling.

Power Controller: Power controller function (optional) with Ekip Measuring module.


### Protection functions with Ekip Measuring Pro

The Ekip Touch protection functions can be further increased by using the Ekip Measuring Pro measuring and protection module. With this module, all the protection functions linked to voltage, frequency and power can be enabled, thus making Ekip Touch a multifunction unit that can measure, control and protect even the most complex installation.


A different operating mode can be chosen for each protection function:

- 1. Active: protection enabled by opening of the circuit- breaker when the threshold is reached;
- 2. Only alarm: protection active, with only alarm indication when the threshold is reached;
- 3. Deactivated: protection disabled.


Furthermore, when the voltage and frequency protections are activated, they indicate an alarm status even when the circuit breaker is open so that a fault can be identified before the circuit breaker closes.

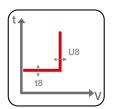


**Undervoltage (UV - ANSI 27)**: with constant trip time (t = k), function is tripped when phase voltage falls below set threshold.

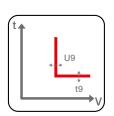


**Overvoltage (OV - ANSI 59)**: with constant trip time (t = k), function is tripped when phase voltage exceeds the set threshold.

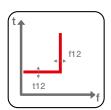

**Underfrequency (UF - ANSI 81L)**: with constant trip time (t = k), function is tripped when network frequency falls below set threshold.

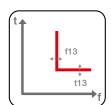


**Overfrequency (OF - ANSI 81H)**: with constant trip time (t = k), function is tripped when network frequency exceeds the set threshold.

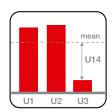

**Voltage unbalance (VU – ANSI 47)**: with constant trip time (t = k), protects against an unbalance between the voltages of the individual phases that are protected by the circuit- breaker.




**Residual current (Rc – ANSI 64 & 50NDT)**: with constant temperature (t=k) protects against indirect contacts and is integrated into Ekip Touch LSIG with Ekip Measuring Pro by a dedicated residual current rating plug and external toroid. The protection is an alternative to the functions G and Gext.

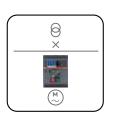

**Reverse active power (RP - ANSI 32R)**: with constant trip time (t = k), function is tripped when total active power – in the opposite direction of the current - exceeds the set threshold.

## **Description of protection functions**

In addition to the protection functions, the following indication and control functions are available to warn the user that a given condition has been reached. The active indications are always shown on the display and are also available by communication on the system bus (with Ekip Com modules) or electrical indication (with Ekip Signalling modules).

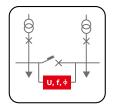


**Synchrocheck (SC - ANSI 25)**: the synchronism control function compares the voltages in the modules as well as the frequencies and phases of two circuit breakers to which the circuit breaker is connected. Ekip Touch indicates that conditions have been reached that enable the two lines to be made parallel. The function is available with two work modes:

- In systems with both busbars supplied, where synchronism is determined by:
  - 1. voltage of the two half-busbars above the Ulive threshold for the set time
  - 2. difference of the module of the two voltages below the threshold  $\Delta U$
- 3. difference in the frequency of the two voltages below the threshold  $\Delta f$
- 4. difference in the phase of the two voltages below the threshold  $\Delta$
- 5. desirable time for synchronism condition tsyn
- 6. circuit breaker open
- In systems with an out-of-service line (dead busbar), where the synchronism condition is determined by the concurrence of the following conditions for the tref set time:
- 1. voltage of the active half-busbar above threshold Ulive
- 2. voltage of the dead half-busbar below threshold Udead
- 3. circuit breaker open

In both cases, synchronism consent is withdrawn when one of the above conditions is missing and it has not been less than 200ms from the change of the circuit- breaker condition (when the relationship has been set).

The indication of reached synchronism is available directly as an electrical indication via a contact that is always supplied with the module. The function can be activated simply by connecting the Ekip Synchrocheck module to any Ekip Touch provided with an Ekip Measuring Pro module.

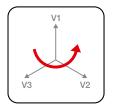

Cyclical direction of the phases (ANSI 47): indicates an alarm through inversion of the phases sequence.

**Power factor (ANSI 78):** available with a three-phase threshold, warns when the system operates with a power factor that is less than the set power factor.

The following protections are also available:


**Second time-delayed overcurrent protection (S2 – ANSI 50TD):** in addition to the standard protection S, a second (excludable) time-constant protection is available that enables two independent thresholds to be set in order to ensure precise selectivity, especially in highly critical conditions.



Second protection against earth fault (ANSI 50GTD/51G & 64REF): whereas with Ekip Touch the user has to choose between implementation of the protection G by internal current sensors (calculating the vector sum of the currents) or G ext external toroids (direct measurement of the earth fault current), Ekip Hi-Touch offers the exclusive feature of simultaneous management of both configurations by two independent earth fault protection curves. Owing to this characteristic, the trip unit is able to distinguish a non-restricted earth fault and then activate the opening of Emax 2, from a restricted earth fault, and to thus command the opening of the medium voltage circuit breaker.


Another possible configuration is with the residual current protection replacing the Gext protection, whilst the G protection remains active. The residual current protection is activated in the presence of the residual current rating-plug and of the toroid.

**Directional overcurrent (D – ANSI 67)**: the protection is able to recognize the direction of the current during the fault period and thus detect if the fault is upstream or downstream of the circuit-breaker. The protection, with fixed time trip curve (t=k), intervenes with two different time delays (t7bw and t7fw), according to the current direction. In ring distribution systems, this enables the distribution portion to be identified in which the fault occurred and to disconnect it while maintaining the operation of the rest of the installation.

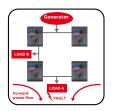


Zone selectivity for protection D (ANSI 68): enables the possibility to interconnect circuit breakers so that, in the event of a fault, the fault area can be rapidly isolated. Disconnection only occurs at the level close to the fault and operation to the rest of the operation continues uninterrupted. The function is particularly useful in ring and grid installations where, in addition to the zone, it is also essential to define the flow direction of the power that supplies the fault. It is possible to enable directional zone selectivity alternatively to the zone selectivity of the protections S and G, and in the presence of an auxiliary supply.

**Start-up function** for protection D: enables higher trip thresholds to be set at the outgoing point, as available for protections S, I and G.

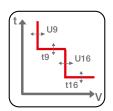

Second protection against undervoltage and overvoltage (UV2 and OV2 – ANSI 27 and 59): enables two minimum and maximum voltage thresholds to be set with different delays in order to be able to discriminate, for example, between voltage dip transients due to the start-up of a motor and an actual fault.

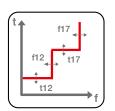


Second protection against underfrequency and overfrequency (UF2 and OF2 – ANSI 81L and 87H): enables two minimum and maximum frequency thresholds to be set simultaneously. For example, only an alarm can be set to be tripped when the first threshold is reached, and the circuit breaker can be set to be opened when the second threshold is reached.

## **Description of protection functions**


**Dual setting of protections**: Ekip Hi-Touch can store a set of alternative parameters for all protections. This second series (set B) can replace, if necessary, the default series (set A) by an external command. The command can be given when the network configuration is edited, for example when an emergency source is activated in the system, changing the load capacity and the short-circuit levels. Another typical application is protecting the operator opposite the switchgear against the electric arc. In this case, protection delays are minimized to safeguard the operator (Set A), whereas in the absence of an operator the protections are set to ensure selectivity with the circuit breakers downstream (Set B). It is possible to activate series B by:

- Digital input available with an Ekip Signalling module;
- · Communication network, by means of one of the Ekip Com communication modules;
- Directly from the Ekip Hi-Touch display;
- By a settable internal time, after the circuit-breaker has closed.

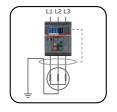


**Differential ground fault (Rc - ANSI 87N)**: protects against internal earth fault on generator winding. It is required that the toroid hugs the active conductors and the ground conductor. Rc protection is integrated by a dedicated residual current rating plug and the external toroid.


The specific functions for generator protections are described below. For each of these it is possible to choose the operating mode: active, only alarm or deactivated. All the voltage and frequency protections also operate when the circuit- breaker is open, enabling the fault to be identified before the closing of the circuit breaker.

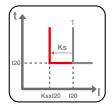

**Voltage controlled overcurrent protection (S(V) - ANSI 51V)**: protection from maximum current with a constant trip time (t = k) that is sensitive to the voltage value. The set current threshold, following a voltage drop, decreases by steps or linearly.

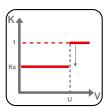


In step mode (controlled mode) the protection is tripped at the set threshold (I20) if the voltage is above U, whereas it is tripped at the lower threshold of the factor Ks (I20 \* Ks) if the voltage is below U.

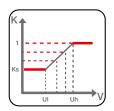


On the other hand, in linear mode (restrained mode) two voltage limits are selected within which the protection is tripped at the set threshold (I20) reduced by the factor K corresponding to the measured voltage. The variation of the factor K is proportional to the voltage, and for voltages greater than the upper threshold (Uh) the threshold I20 works, whereas for voltages below the lower threshold (II) the minimum threshold (I20 \* Ks) applies.




**Residual overvoltage (RV – ANSI 59N)**: with constant trip time (t = k), protects against insulation loss in systems with insulated neutral or with neutral earthed with impedance.

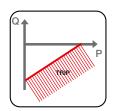


Loss of field or reverse reactive power (RQ – ANSI 40 or 32RQ): with constant trip time (t = k), the circuit breaker tripped when the total reactive power absorbed by the generator exceeds the set threshold. It is possible to select the constant threshold (k=0) or a function of the delivered active power of the generator ( $k\neq0$ ).

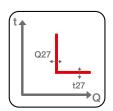

**Reactive overpower (OQ – ANSI 320F)**: with constant trip time (t = k), the function is tripped when reactive power exceeds the set threshold in the generator to network direction.

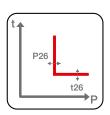


Active overpower (OP – ANSI 32OF): with constant trip time (t = k), the function is tripped when the active power exceeds the threshold set in the delivering direction of the generator.

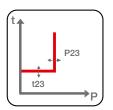


Active underpower (UP – ANSI 32LF): with constant trip time (t = k), the function is tripped when the active power delivered by the generator is lower than the set threshold. It is possible to disable the protection temporarily, to manage the start-up phase, by setting a time window from the closing of the circuit breaker, by using an electrical signal or via incoming communication to a relay.


## **Description of protection functions**

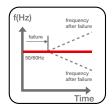

Rate of change of frequency (ROCOF – ANSI 81R): enables both positive and negative frequency variations to be rapidly detected. The protection is constant and is tripped when the frequency variation in Hz/s is greater than the set threshold.

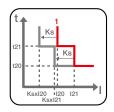

Second protection against voltage controlled overcurrent protection (S2(V) - ANSI 51V): available in addition to the protection S(V), enables total selectivity to be achieved in all installations.

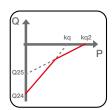

Second protection against loss of field or reverse reactive power (RQ – ANSI 40 or 32R): enables the generator's de-energization curve to be followed very accurately, thereby avoiding any unnecessary disconnection.

SOFTWARE FUNCTIONS 63

CHAPTER 4

## **Software functions**


<b>64</b> -65	Introduction
<b>66</b> -67	Interface Protection System and Interface Device
<b>68</b> -69	Adaptive protections
<b>70</b> -71	Load shedding
<b>72</b> -73	ATS function
<b>74</b> -75	Synchro reclosing
<b>76</b> -78	Power Controller

## Introduction

Renewables have been growing during the last 10 years reducing the polluting emission for a greenest world. Due to environmental changes, people has started to think about ecology and sustainability, increasing their awareness of energy self-consumption in a perspective of energy efficiency.

Emax 2 is the first smart circuit breaker enabling all-in-one solutions that combine advanced protection, programmable logic, full connectivity, easy integration and comprehensive energy management in a single revolutionary device or at the local generation side.

Installed downstream the MV/LV transformer, Emax 2 works like a certified Interface Protection System in order to check the Main Grid conditions and disconnect the User's plant whenever grid voltage and frequency are out of the ranges prescribed by the connection local standard. Emax 2 and its Adaptive Protections recognize the network change and automatically set new thresholds to guarantee protection and coordination in on-grid and off-grid conditions.

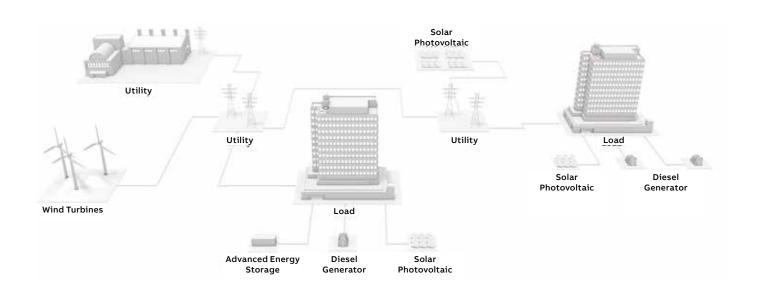

SOFTWARE FUNCTIONS 65

In order to maximize the service continuity, local generation starts to supply the islanded User's plant. Emax 2 is the first circuit breaker able to integrate in one device protection features and Automatic Transfer Switching (ATS) programmable logics. This unique integrated solution avoids the usage of other external control unit, guaranteeing switchgear footprint and commissioning time saving.

Strong reduction of wiring connection simplify the installation and commissioning phase.
The Load Shedding embedded algorithm is able to manage power system for the comprehensive microgrid energy management.

Before the transfer from the main grid to local line, selected loads are shed to support power balance. Emax 2 using slope of frequency disconnects loads only in case of emergency unbalance condition.

When the main grid comes back stable, thanks to Synchro Reclosing (in grassetto "Synchro Reclosing" - ndr) logics, synchronizes the plant voltage and frequency to reconnect it. in grid-connected operation, Emax 2 manages the Power Controller (in grassetto "Power Controller" - ndr) algorithm to shave peaks and shift loads in order to optimize system performance and productivity. Emax 2 advanced features are easily customized thanks to commissioning software tools which do not require high level engineering competencies. Ready to use templates enable the download of all the logics directly into the trip unit. The solutions become plug & play, increasing modularization and standardization for design and installation. Here following the description of the several Adanced functionalities wich have been developed and integrated in Emax 2 follows the below compatibility table.

	Interface Protection	Load Shedding	Automatic Transfer Switch	Synchro Reclosing	Power Controller
Interface Protection	•	•		,	•
Load Shedding	•		•	•	•
Automatic Transfer Switch		•	•	•	•
Synchro Reclosing		•	•	•	•
Power Controller	•	•	•	•	•

## **Interface Protection System**

Emax 2 embeds in a single device both the functions of Interface Protection System and Interface Device.

### **Purpose**

The connection of Active Users to the Utility is subject to the satisfaction of the Standard requirements. The Interface Protection System is a relay with dedicated protections able to satisfy such requirements. In particular, the generating units installed in the User's plant shall be disconnected from the grid whenever voltage and frequency values of the grid itself are out of the ranges prescribed by the standard. Such a disconnection is usually carried out by means of an Interface Device that trips after receiving an opening command provided by an external Interface Protection System.

ABB has developed an integrated solution which embeds in a single device both the functions of Interface Protection System and Interface Device. This advanced feature is possible thanks to the integration of the several interface protections into the Ekip Hi-Touch trip unit installed on board Emax 2. Today Emax 2 is suitable for Standard CEI 0-16, the most important Standard for the connection of Active Users. A lot of local Standards take CEI 0-16 as reference.

### **Application examples**

ABB has been able to integrate in a single device the following functions to be used in the scenarios described below. Thanks to these embedded functions, the number of devices to be installed is reduced, with consequent space saving inside the switchboard. Emax 2 with embedded Interface Protection System have been tested and certified in compliance with the Standard CEI 0-16 and are suitable for the following scenarios.

### Emax 2 as Microgrid Main protection unit

In such scenario, Emax 2 with embedded Interface Protection System can fulfill the function of Interface Protection System (IPS). In case of IPS tripping, microgrid, downstream Emax 2 main unit, remains active thanks to both the local generation and the load shedding feature also embedded in the main unit.

### Emax 2 as local generation protection unit

In such scenario, there are loads non-operating in islanding condition, so, when there is an Utility outage, Emax 2 detects that voltage and frequency values are out of the range prescribed. According to the standard the local generation must be disconnected from the Utility, so Emax 2 opens, acting as interface device, thanks to the IPS embedded. In this condition loads are not operating as there is no voltage on the secondary of the MV/LV transformer and no local generation connected.

### **Benefits**

Thanks to Emax 2 with embedded Interface Protection System, the following benefits are guaranteed:


- Emax 2 performs interface protections with every possible switching device, ensuring also reclosing operation.
- If the Emax 2 is installed on the generator feeder, the unit will be able to perform the triple function of Interface Protection System and Generator Device thanks to the Interface Protection System integrated also in the Ekip G Hi-Touch trip unit.
- Ease of use, thanks to Ekip Connect software which allows an immediate and intuitive commissioning phase.

For further information, please refer to the White Paper "Emax 2, all-in-one innovation – Interface Protection System and Interface Device" (1SDC007117G0201).




SOFTWARE FUNCTIONS 67

Emax 2 as Microgrid Main protection unit

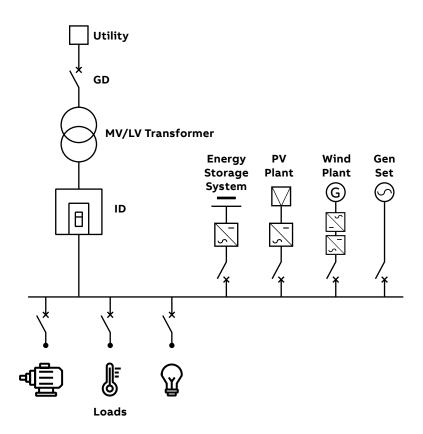

Emax 2 as local generation protection unit

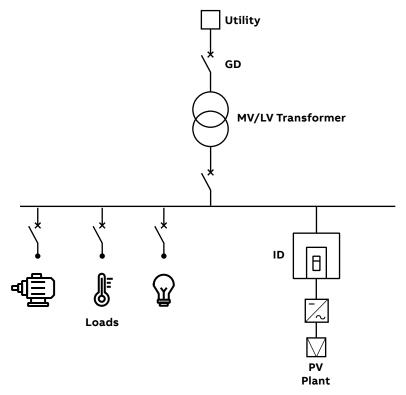

## **Adaptive Protections**

Emax 2 adds dual setting capability to switching device to ensure continuous coordination

### **Purpose**

User's plants can work as a LV Microgrid thanks to the energy produced by renewable and local power sources, in particular as a consequence of lacking of the Utility power supply, e.g. due to a fault on the MV voltage side. In order to still guarantee a high level of selectivity and continuity of service, it is important to take into account the variation of the short circuit power when moving from. Indeed, during grid connected condition the fault current on a microgrid feeder is supplied by the Utility, so it is higher than the one supplied only by the local generation during islanded condition.

As a result, it is desirable that the several protection thresholds of the units can be automatically changed during the transition to the islanding condition.


### **Application example**

We have a plant connected to the MV Utility by means of a MV/LV transformer. If the Utility shuts down, the plant will become a Microgrid supplied by the local generator G, which will feed the priority loads by using the loads shedding feature of Emax 2.

In grid-connected condition, the generator G is disconnected. With reference to fig.1:

- · Circuit breaker A is closed
- · Circuit breaker B is open
- Circuit breakers C are closed. The protections of the one that supplies loads D are upgraded using "Set A" of Emax 2 unit.
- Circuit breakers D are closed
- Circuit breaker E is closed
- · Circuit breaker QS1 is closed
- · All loads supplied.

The circuit breakers C are selectively coordinated with the upstream main circuit breaker A, supplied by the Utility, and the downstream load circuit breakers D (fig. 2).

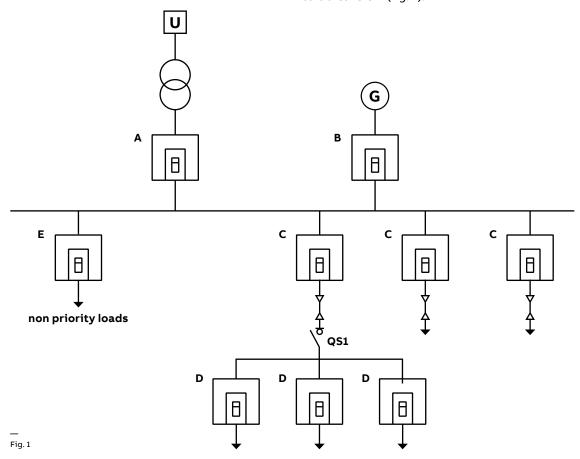

SOFTWARE FUNCTIONS 69

With Adaptive protections when there is a Utility outage, circuit breaker A opens and B closes in order to have operation in islanded condition. In order to still guarantee selectivity, an alternate set of protection settings is required. Adding Emax 2 adaptive protections to circuit breaker C ensure this behaviour. The second protection setting is optimized for the characteristics of the local generator ensuring the incoming supply and load side switching devices will remain selectively coordinated. With reference to Figure 1:

- Circuit breaker A is open
- · Circuit breaker B is closed
- Circuit breakers C are closed and the protection thresholds move automatically to "Set B"
- · Circuit breakers D are closed
- · Circuit breaker E is open
- · Circuit breaker QS1 is closed
- No priority loads can be disconnected using another functionality of Emax 2 units (see next paragraph).

The following Figure shows how it is possible to switch to a set of parameters which guarantees selective coordination between circuit breakers C and B by means of the "Adaptive protections" function embedded in the trip unit of the circuit-breaker C.


### **Benefits**

Thanks to Emax 2 it is possible to have two sets of settings implemented in a single device. As a result, the following benefits are guaranteed:

- Overcurrent protection and selectivity 100% guaranteed both in grid-connected and islanded condition
- The service continuity is is granted just adding a single unit in the switchboard in every plant condition
- Ease of use, thanks to the Ekip Connect software which allows an immediate and intuitive commissioning phase.

For further information, please refer to the White Paper "Emax 2, all-in-one innovation – Adaptive protections" (ISDC007116G0201).



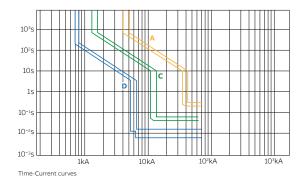

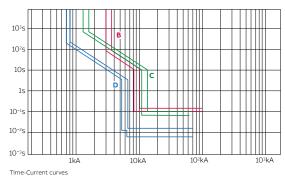


Fig. 2 Fig. 3

## **Load Shedding**

Emax 2 has many load shedding algorithms to avoid power unbalance in the low voltage plant and stress for all the components.

### **Purpose**

ABB Emax 2 embeds patented functions based on load shedding which reduces the Microgrid stress in all situations. Typically it is the main protection relay of the low voltage Microgrid located at the interface point with the medium voltage grid, able to control the plant in every circumstances.

### Microgrid in islanding operation

After the Emax 2 circuit breaker opens, because of interface protection systems intervention or external command, the Microgrid should transit from on-grid to off-grid state with bumpless transition. When it is standalone, the power absorption from the main grid ceases, so that the Microgrid loads remains supplied by the local generation, like diesel GenSet or energy storage systems. This Microgrid generation can be always active or started up by an automatic transfer switching (ATS) logic after the disconnection from the main grid, depending on the plant configuration. During the islanding transition, it is very important to avoid the frequency drop, otherwise the generation protections could trip jeopardizing the Microgrid stability with consequently a long downtime. Emax 2, employing the current and voltage measurements, integrates two different fast load shedding logics to reduce this blackout risk, protecting the Microgrid during the intentional or unintentional islanding operation:

- Basic Load Shedding, simple logic able to recognize the Microgrid disconnection event and shed a group of not priority loads thus ensuring a fast time response and power balance.
- Adaptive Load Shedding, the advanced algorithm available with Emax 2 as an enhancement of the basic version. The intelligent software embedded in the unit sheds very quickly the not priority loads according to the Microgrid power consumption and frequency measurements. Moreover, such software has a dedicated configuration for backup generation related to ATS and the software itself is even able to estimate the energy produced by a solar plant based on plant geography settings.

### Microgrid in grid-connected operation

Under normal circumstances, the microgrid point is generally connected to the Utility in order to inject/adsorb the surplus or the lacking energy. In this situation, with Emax 2 as main circuit breaker installed immediately downstream the MV/LV transformer in closed status, power overload should be avoided so as not to excessively stress plant elements. In order to do this, the circuit-breaker embeds a patented load shedding algorithm:

 Predictive Load Shedding, slow disconnection of loads based on the limit of the average power flow towards the Microgrid according to the transformer size designed for the power peak profile.

All the versions are available on Emax 2 platform for both the Microgrid situations, sharing some information about the loads under control in the plant.

### **Application examples**

- Grid-connected plants with running GenSets, which contribute to the self-consumption together with potential renewable sources and support the load power supply in emergency conditions. It is the case of hybrid PV-diesel remote communities connected to weak distribution-grids where there are a lot of daily faults, or of facilities located in geographical areas where there are frequent environmental events, for example hurricanes or earthquakes.
- Grid-connected plants with back-up GenSets started up after main - gen transfer switching logics that require high reliability. For example, hospitals, banks or data centers.

### Benefits

Thanks to Emax 2 with embedded Load Shedding innovation, the following benefits are guaranteed: Service continuity

 When a plant remain disconnected from the main grid, even if local production is present, there is a significant stress that turns off all the generators with consequent blackout. Load Shedding logics embedded in Emax 2 reduce the frequency drop that usually makes the local generation protection trip, maintaining the plant live. SOFTWARE FUNCTIONS 71

#### Space saving

- No other Programmable Logic Controllers (PLC) are needed as Emax 2 has embedded the intelligence to realize the load shedding logics, taking advantage of the current and voltage sensors for electrical parameter measurements.
- In addition, static converters for low voltage photovoltaic production have typically anti-islanding protections: this implies another power deficit to be added to the main grid contribution during the Microgrid islanding. Emax 2 is the first circuit breaker that estimates solar production without additional sensors.
- Load Shedding is suitable with ATS architectures like Main-BusTie-Gen used to distinguish priority/not priority loads.
  - Where feasible, BusTie switching device is not required anymore and this means:
- Significant space and material saving up to 50% in the power distribution switchgear for panel builders.
- Load Shedding is self-tuned with the specific power unbalance identification and dynamically choses the controllable loads to be shed, reducing constraints for consultants during plant design.

 ATS unit manages only two sources, without interlock, logic programming and wiring connections for the third circuitbreaker with less time required for installation.


#### Ease of use

- Load shedding logics are generally set with high engineering skills and customization effort with devices as programmable logic controllers.
- Emax 2 guarantees easy installation thanks to predefined templates and the user-friendly graphic interface in the SW commissioning tool.

For further information, please refer to the White Paper "Emax 2, all-in-one innovation – Load Shedding" (ISDC007119G0201).



Typical load shedding application

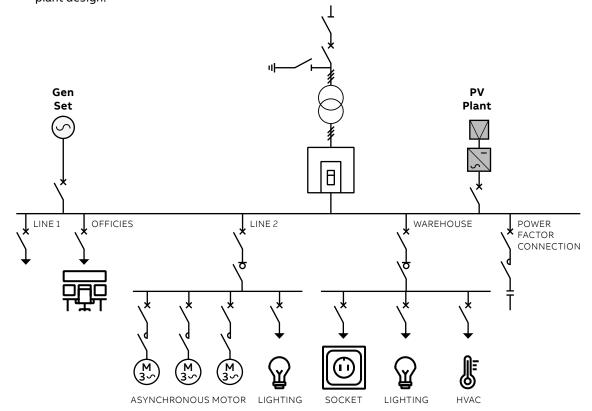

# **Automatic Transfer Switch**

Emax 2 is ready for transfer switching applications reducing time for logics programming and commissioning.

#### The ATS solution

ABB's Automatic Switching (ATS) system takes advantage of the new capabilities provided by the new Ekip Connect 3 Software and the intelligent digital unit such as Emax 2 to deliver versatile and reliable solution.


#### **Application example**

Automatic Transfer Switch systems is common in all application where service continuity is essential and where there are multi source supplies.

The main applications are:

- Power supplies of UPS groups in general
- · Oil & Gas
- Operating theatres and primary hospital services
- Emergency power supplies for civil building, hotels and airports
- Data banks and telecommunication systems
- Power supply of industrial line for continuous processes.

Another case of use of ATS is in all cases where a portion of grid with local generation, called microgrid, can be disconnected from main grid.

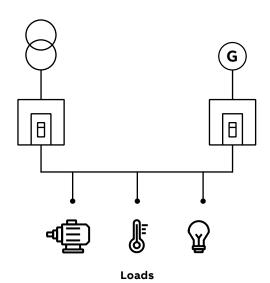

SOFTWARE FUNCTIONS 73

The ATS is a high-performances energy automation system, easy to install and program.



#### **Benefits**

## Ready-to-go Programming

Estimated time and cost savings on the ATS Engineering on the low voltage project 95%.



#### Emax 2 compactness

Space saving on the power switchboard: up to 30%.



#### Simplify the connections

Estimated time and cost savings on cabling and commissioning of the power switchboard: 50%.



#### Top rate reliability

With watchdog functions and fewer installed components.



For more info check out the white paper "Emax 2, all in one innovation: Embedded ATS system" (1SDC007115G0201).

# **Synchro Reclosing**

Emax 2 is able to synchronize voltage waveforms from different power sources.

#### **Purpose**

Thanks to its advanced electronics, Emax 2 is the first smart unit able to island the Microgrid from disturbances such as in the presence of faults or power quality events and reconnect it to the distribution network, when there are the right conditions.

This last feature mentioned is the Synchro Reclosing function. It consists in synchronization support of the Microgrid reconnection operation or generator paralleling procedure as prescribed by Std. ANSI 25A, with additional automatic re-closing capabilities based on the synchronism status detection.


Using the Ekip Synchrocheck cartridge module, Emax 2 monitors the voltage amplitude, the frequencies and the phase displacement and realizes simple logics to adapt the Microgrid voltage and frequency to the main grid ones. This regulation based on up and down signals sent to the local generator controllers is realized by Ekip Signalling contacts in order to reach synchronization. The circuit breaker automatically recloses when it understands that the synchronism is achieved using Ekip Synchrocheck and the integrated closing coil.

Sometimes this operation can be very critical, because the current following during the transient of the reconnection must not reach values that can potentially cause the Microgrid shut down. With the aim to avoid complex analysis and customizations, Ekip Connect 3.0 commissioning tool completes the Synchro Reclosing functionality, recommending the right settings according to the plant configuration.


#### **Application examples**

Synchro Reclosing function is useful in the following plant-engineering situations:

- During the Microgrid reconnection to the main grid, speeding up the paralleling procedure between two systems with different steady states. This scenario comes after the islanding Microgrid operation.
- When there is the closed transition of an automatic transfer switch, the main grid should be connected to the same busbar with the backup Microgrid generation in order to guarantee continuos load operation, with or without a bus-tie switching device.
- Besides Microgrid cases, it is possible to adopt this solution also for single GenSet paralleling operation.

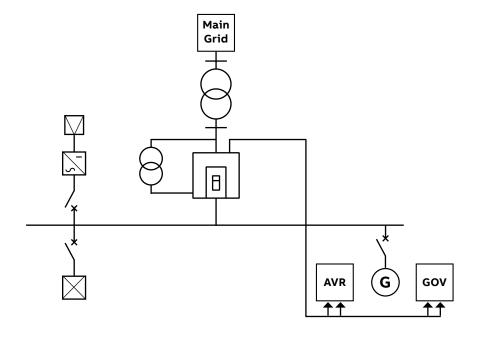

SOFTWARE FUNCTIONS 75

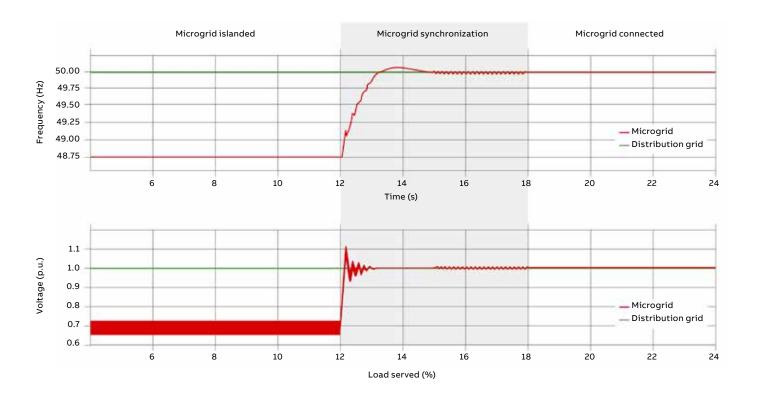

#### **Benefits**

Thanks to Emax 2 with embedded Synchro Reclosing, the following benefits are guaranteed:

- Space Savings
  - Components reduction with no external synchronizer and less voltage transformers required if compared with traditional approaches.
  - Increased reliability & time saving during the installation having less cabling and related installation complexity.

#### Ease of use

- The logics are embedded in the trip unit so there is no need of programming and engineering skills.
- Simplified configuration with Ekip Connect software that offers predefined configuration templates with suggested values and a clear user interface for customizations.

For further information, please refer to the White Paper "Emax 2, all-in-one innovation – Synchro Reclosing" (1SDC007118G0201).

# **Power Controller**

Emax 2 is able to control loads and generator to ensure bill savings and enable demand response applications according to power management strategies.


#### **Purpose**

Thanks to Power Controller software, Emax 2 manages the power to shave the peaks and shift the loads. In this way, it possible to cut electricity bills, increase energy efficiency up to 20% and be ready for demand response programs. Power Controller function is based on a patented calculation algorithm that allows a load list to be controlled through the remote command of relevant switching device (like switching device, switching device, contactor, drive) or control circuit according to a priority defined locally by the user ore remotely by a load aggregator or utility, based on his own requirements and types of load.

The algorithm is designed on a foreseen average power absorption which can be set by the user over a determined time interval. Whenever this value exceeds the fixed power, Power Controller function intervenes to bring it back within the limits.

This system can be realized with a single Emax 2 Control or Emax 2 Control+ standard equipped with this function and installed as the low voltage plant controller.

Furthermore, the control unit, shall not only command the passive loads, but it can also manage a reserve generator.

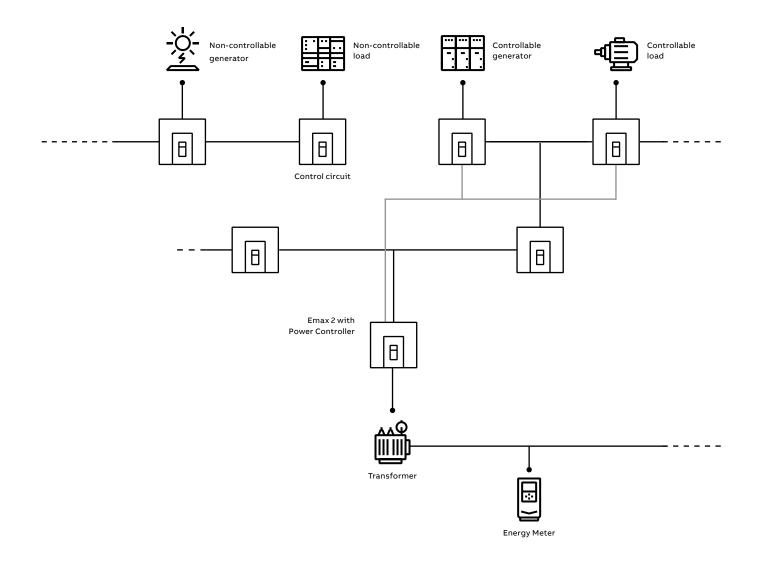

SOFTWARE FUNCTIONS 77

Ekip Power Controller, which can be used with all Ekip Touch trip units of the Emax 2 series, effectively helps to improve energy efficiency by managing the entire low-voltage electrical system. It is, in fact, able to adapt the demand for power according to the availability of the energy source, the time of day and the costs indicated in the current pricing plan.

In this way Ekip Power Controller is able to maintain power consumption within the limits defined, thereby optimizing the costs of managing the installation and reducing emissions.

The command sent to the downstream devices can be performed in two different ways:

- through the wired solution, by commanding the shunt opening/closing releases or acting on the motor operators of the loads to be managed;
- through a dedicated communication system.

The ability to control the loads according to a list of priorities already defined provides significant advantages from both economic as well as technical points of view:

- economical: energy consumption optimization is focused on the control of the costs linked in particular to the penalties that are levied when the contractual power is exceeded or when the contractual power is increased by the Distribution System Operator (DSO) as a consequence of exceeding the limit repeatedly.
- technical: the possibility of power absorption over the contractual limits for shorter periods and, as well as, the management and the control of the power consumption over long periods of time. Thus it is possible to reduce the likelihood of malfunctioning due to overloads, or worse, complete inefficiency of the entire plant due to tripping of the LV main switching device.

The exclusive Power Controller function available on the new Emax 2 units monitors the power, keeping it below the limit set by the user. As a result of this more effective use, the peak of power consumed can be limited allowing savings on electricity bills.

The Power Controller, patented by ABB, disconnects non-priority utilities, such as electric car charging stations, lighting or refrigeration units, during the times when consumption limits need to be respected, and connects them again as soon as it is appropriate. When required, it automatically activates auxiliary power supplies such as generator sets. No other supervision and control system is required: it is sufficient to set the required load limit on Emax 2, which can control any switching device located downstream, even if it is not equipped with a measurement function.

#### **Application examples**

Electricity bill savings, demand response, avoiding power overload are the typical scenarios where Power Controller is adopted.

As it operates on not critical loads, it is common of office building, shopping malls, hotels, campuses, waste and water industries or every plant that works like a low voltage microgrid.

# **Power Controller**

#### **Benefits**

Thanks to Emax 2 with embedded Power Controller, the following benefits are guaranteed:

- Reduction of energy costs with minimum impact.
- The loads are disconnected from the power supply for short periods, in the minimum number necessary and in a fixed order of priority, enabling power consumption peaks to be limited. This allows the contract drawn up with the energy provider to be renegotiated, reducing the power allocated, with a consequent reduction in total energy costs.
- Power limited only when necessary.
   Power Controller function manages up to four different time bands, it is therefore possible to respect a particular power limit according to whether it is during the day (peak) or night (off peak). In this way, consumption during the day when rates are at their highest can be limited.

### • Easy of use

Power Controller function allows the installation to be managed efficiently with a simple architecture. Thanks to a patented design, it is sufficient to measure the total power of the installation without having to measure the power consumed by each load. Installation costs and times are thereby reduced to a minimum. Power Controller function does not require the writing, implementation and testing of complicated programmes for PLC or computer because the logic has already been implemented in the protection unit and is ready to use; it is sufficient to set the installation parameters from a smartphone or directly from the switching device display.

Power Controller significantly helps to flatten the load curve, limiting the use of peaking power plants in favour of base load power plants with greater efficiency.

- Thanks to integrated communication modules, Power Controller can receive the maximum absorbable power directly from the medium voltage control system, determining consumption for the next 15 minutes. Ekip Power Controller, according to the information received, manages the switching off of non-priority loads or the switching on of reserve generators. The software gives maximum priority to non-programmable preferred energy sources, such as wind and solar, and they are therefore considered uninterruptable. In the event the production of internal power to the controlled network is reduced, due, for example, to decreased production of solar power, Power Controller will disconnect the necessary loads to respect the consumption limit set.
- This benefit is used, for example, in installations with a system of cogeneration. Indeed Power Controller controls the total consumption drawn from the electrical network, interrupting non-indispensable loads when production is reduced and reconnecting them when generator power is sufficient to not exceed limits. There are multiple advantages: reduction in energy costs, maximum use of local production and greater overall energy efficiency.

For further information, please refer to the White Paper "Load management with Ekip Power Controller for SACE Emax 2" (1SDC007410G0202).

CHAPTER 5

# **Supervision and connectivity**

<b>80</b> -81	Introduction
<b>82</b> -87	Supervision and control
<b>82</b> -83	Supervision of the switchgear compartment
<b>84</b> -85	Switchgear supervision
<b>86</b> -87	Supervision of the electrical installation
<b>88</b> -95	Software and web application
<b>88</b> -91	Ekip Connect
<b>92</b> -93	Ekip View
<b>94</b> -95	ABB Ability Electrical Distribution Control System

# Introduction

SACE Emax 2 circuit breakers provide a complete and flexible offering that can be adapted to the actual level of supervision and control required.

According to their complexity, the supervision of low-voltage systems may involve different levels:

- switchgear compartment: for control of the main electrical values of the circuit breaker, thanks to Ekip Touch trip units with high resolution display and the Ekip Multimeter display.
- electrical switchgear: to display the data of all circuit breakers installed in the switchgear from a single point: in local mode via control panel on the front of the switchgear, or remotely via several communication protocol.
- electrical system: to manage complex systems in which devices must be integrated with automated industrial processes or in intelligent electrical networks, better known as smart grids.
   The system can be supervised by the Ekip View software or via Internet with the ABB Ability™ Electrical Distribution Control System webapp.



# Supervision and control

# Supervision of the switchgear compartment

For the list of information available for each trip unit, consult chapter 3.

The SACE Emax 2 circuit breakers equipped with Ekip electronic trip units enable electrical measurements and diagnostic data to be displayed on the front of the switchgear.

#### Solution with Ekip Touch trip units

The Ekip Touch electronic trip units are the ideal solution for supervision and control of the compartments in switchgear. In particular:

- their use is simple and intuitive thanks to a large, high resolution, colour touch screen;
- they do not require an auxiliary power supply for safety; the Ekip Touch trip units are directly supplied by the current sensors integrated in the circuit breaker, thereby avoiding the use of external power supplies.

The Ekip Multimeter is a display unit to be installed on the front of the switchgear for SACE Emax 2 air circuit breakers equipped with Ekip electronic trip units.

# Solution with Ekip Multimeter Display on the front of the switchgear

This device remotely displays the information about the system that is available in the trip unit to which it is connected.

The main characteristics of the Ekip Multimeter unit are:

- Graphical and functional uniformity with the Ekip Touch trip units; Ekip Multimeter uses the same display as the trip unit to which it is connected, ensuring perfect continuity between the graphic display and the menu items.
- Reduced dimensions; the Ekip Multimeter guarantees the precision of the trip unit to which it is
  connected and performs the function of a measuring instrument without requiring the installation of external current and voltage transformers.
- Flexible installation; the Ekip Multimeter can be installed at a distance from the trip unit, enabling access to information from the most convenient point.
- Simultaneous reading of the various electrical values; the advanced connection system used allows several Ekip Multimeter devices to be connected to the same protection trip unit.

Furthermore, if connected to trip units equipped with display, the Ekip Multimeter enables adjustment of the parameters and protection thresholds.





01 Ekip Touch

— 02 Ekip Multimeter

> \_ 01

Electronic trip unit	Ekip Dip	Ekip Touch	Ekip Touch + Ekip measuring module	Ekip Hi Touch
			Ekip G Touch	Ekip Hi-G Touch
Solution	Ekip trip units +	Ekip Multimeter		
Type of trip units connectable to Ekip Multimeter	Ekip trip units			
Number of trip units connectable to Ekip Multimeter	1			
Measurement functions				
Currents	•	•	•	•
Voltages	=	-	•	•
Powers	=	-	•	•
Energies	=	-	•	•
Harmonics	-	-	-	•
Network analyzer	-	-	=	•
Adjustment functions				
Setting of thresholds	=	•	•	•
Setting of thresholds second set	=	-	-	•
Resetting of alarms	•	•	•	•
Diagnostics				
Protection function alarms	•	•	•	•
Device alarms	•	•	•	•
Protection unit tripping details	•	•	•	•
Events log	•	•	•	•
Protection unit tripping log	•	•	•	•
Maintenance				
Number of operations	•	•	•	•
Number of trips	•	•	•	•
Wear of contacts	•	•	•	•
Other data				
Status of circuit breaker	•	•	•	•
Circuit-breaker position 1)	•	•	•	•
Local/remote mode	•	•	•	•

# **Supervision and control**

# Switchgear supervision

Ekip Link is a flexible and efficient solution for controlling and supervising low-voltage electrical switchgear.

It is a system that enables SACE Emax 2 circuitbreakers to be connected to the Ekip Control Panel operator panel by means of Ekip Link interface modules.

#### **Ekip Link system**

The main characteristics of the Ekip Link System are:

- centralized control; from the Ekip Control Panel operator panel, all the main values of the installation (electrical measurements, system diagnostics, trends...) can be monitored and controlled.
- adaptation to real requirements; when the electrical values to be monitored are limited to currents only, the Ekip Dip trip unit can be connected to the Ekip Link without having to use circuit breakers equipped with communication modules.

- access via the Internet with any Internet browser using the web server function performed by the Ekip Control Panel.
- rapid installation, through the use of standardized EtherNet<sup>™</sup> components such as STP cables and RJ45 type connectors.
- ease of use; due to the Ekip Control Panel operator panel in front of the switchgear with colour touch screen, the system mimic panel can be displayed so that the entire installation can be controlled rapidly and intuitively.
- ready to use; Ekip Control Panel is supplied with pre-configured software that requires no programming. It is only necessary to start scanning the Ekip Link system from the operator panel and in a few seconds communication with the connected devices is active.

Ekip Link enables supervision of electrical switchgear on which up to 30 ABB SACE circuit breakers have been installed. Tmax T and Tmax XT series circuit breakers equipped with Modbus RTU communication can also be easily integrated into the Ekip Link system using the multi-serial port fitted on the Ekip Control Panel.



Electronic trip unit	Ekip Dip Ekip Touch		Ekip Touch + Ekip measuring module	Ekip Hi Touch		
			Ekip G Touch	Ekip Hi-G Touch		
Solution	Ekip protection trip units equipped with Ekip link module + Ekip Control Panel operator panel + standard EtherNet™ components					
Type of trip units connectable	Ekip protection	trip units				
Number of trip units connectable to the Ekip link system	up to 30 1)					
Data exchange rate of Ekip link system	100 Mbit/sec					
Supervision and control functions						
Opening and Closing of circuit breakers 2)	•	•	•	•		
Electrical value trends	I	I	I,V,P	I,V,P		
Log of electrical value trends	I	1	I,V,P	I,V,P		
Dynamic installation mimic panel	•	•	•	•		
Automatic scanning of the Ekip link system	•	•	•	•		
Centralized synchronizing of time	•	•	•	•		
Web server function	<b>●</b> 3)	● <sup>3)</sup>	● <sup>3)</sup>	<b>●</b> 3)		
Measurement functions		,				
Currents	•	•	•	•		
Voltages	-	-	•	•		
Powers	-	-	•	•		
Energies	-	-	•	•		
Harmonics	=	=	=	•		
Network analyzer	=	-	-	•		
Data logger	=	•	•	•		
Adjustment functions						
Setting of thresholds	=	•	•	•		
Resetting of alarms	•	•	•	•		
Diagnostics						
Protection function alarms	•	•	•	•		
Device alarms	•	•	•	•		
Protection unit tripping details	•	•	•	•		
Events log	•	•	•	•		
Protection unit tripping log	•	•	•	•		
Transmission of alarms via text message	optional	optional	optional	optional		
Transmission of alarms via e-mail	optional	optional	optional	optional		
Maintenance						
Number of operations	•	•	•	•		
Number of trips	•	•	•	•		
Wear of contacts	•	•	•	•		
Other data						
Status of circuit breaker	•	•	•	•		
Circuit-breaker position 4)	•	•	•	•		
Local/remote mode	•	•	•	•		

<sup>1)</sup> Ekip Control Panel is available in two versions that can manage a maximum of 10 or 30 circuit breakers. The number of circuit breakers may vary depending on their type. For details, ask ABB SACE

 <sup>2)</sup> Circuit-breakers equipped with actuation module, electric accessories, opening and closing releases and spring charging motor
 3) Two client web accesses included in the licence
 4) Circuit-breakers equipped with auxiliary contacts to indicate position

# **Supervision and control**

# Supervision of the elettrical installation


The integration of low-voltage devices in communication networks is required in particular for: automated industrial processes, industrial and petrochemical sites, modern data centres and intelligent electricity networks, better known as smart grids.

#### **Ekip Com Modules**

Thanks to the wide range of communication protocols supported, SACE Emax 2 circuit breakers equipped with Ekip Touch electronic trip units can be integrated into communication networks without the need for external interface devices. The distinctive characteristics of the SACE Emax 2 circuit breakers offering for industrial communication are:

 Wide range of protocols supported; the Ekip Com communication modules enable integration with the most common communication protocols based on RS485 serial lines and the most modern communication systems based on EtherNet™ infrastructures, which guarantee an exchange of data in the order of 100 Mbit/s.

- Installation times reduced to a minimum due to the plug & play technology of the communication modules, which are connected directly to the circuit breaker terminal box without having to remove the electronic trip unit.
- Repetition of communication for greater reliability of the system; the circuit breaker can be equipped with two communication modules at the same time, allowing the information on two buses to be exchanged simultaneously.
- Ready to smart grid; the Ekip Com 61850 module is the solution for integrating SACE Emax 2 circuit breakers into the automated systems of electrical substations based on the IEC 61850 standard without the need for complex external devices.
- Complete supervision of Modbus RTU or Modbus TCP/IP networks via the software for PC Ekip View.

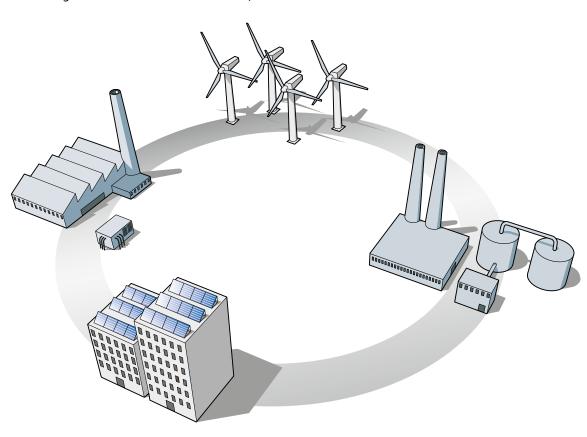

	Supervision of the electrical installation				
Electronic trip unit	trip unit Ekip Touch		Ekip Hi Touch		
		Ekip G Touch	Ekip Hi-G Touch		
Solution	Ekip Touch trip units + Ekip com modules				
Protocols supported:					
Modbus RTU	Ekip com Modbus RTU				
Profibus-DP	Ekip com Profibus				
DeviceNet™	Ekip com DeviceNet™				
Modbus TCP/IP	Ekip com Modbus TCP				
Profinet	Ekip com Profinet				
EtherNet/IP™	Ekip com EtherNet™				
IEC61850	Ekip com IEC61850				
Open ADR	Ekip com OpenADR				
Hub	Ekip com Hub				
Control functions					
Circuit-breakers opening and closing 1)	•	•	•		
Measurement functions					
Currents	•	•	•		
Voltages	- -	•	•		
Powers	- -	•	•		
Energies	-	•	•		
Harmonics	-	-	•		
Network analyzer	-	-	•		
Data logger	•	•	•		
Adjustment functions					
Setting of thresholds	•	•	•		
Resetting of alarms	•	•	•		
Diagnostic					
Protection function alarms	•	•	•		
Device alarms	•	•	•		
Protection unit tripping details	•	•	•		
Events log	•	•	•		
Protection unit tripping log	•	•	•		
Maintenance					
Number of operations	•	•	•		
Number of trips	•	•	•		
Wear of contacts	•	•	•		
Other data					
Status of circuit breaker	•	•	•		
Circuit-breaker position <sup>2)</sup>	•	•	•		
Local/remote mode	•	•	•		

<sup>1)</sup> Circuit-breakers equipped with Ekip Com Actuator module, electrical accessories, opening and closing releases and spring charging motor 2) Circuit-breakers equipped with auxiliary contacts to indicate position

## Ekip E-Hub

This is a DIN-rail mounted communication module for cloud-connectivity. Ekip E-Hub can collect data throughout the system from ACBs to MCCBs, multimeter, miniature CBs. Moreover, it is possi-

ble to connect sensors for environmental parameters (temperature, water, gas) via both analog and digital I/O. Modules for Wi-Fi or GPRS connection are provided as optional features.

# Software and web application

# Ekip connect

ABB SACE offers software applications that allow the potential of the Ekip electronic trip units to be utilized in the best possible way in terms of the management of power, acquisition and analysis of the electrical values, and testing of the protection, maintenance and diagnostic functions.

#### Overview of the software

An overview of the software available and their main characteristics are given below:

Software	Functions	Distinctive characteristics
Ekip Connect	- commissioning of circuit breakers	- simple and intuitive use
	- analysis of faults	- integrated with DOC electrical design software
	- testing of communication bus	- useable via EtherNet™
		- automatic updating from Internet
		- off-line mode
		- multi-media (smart phone, tablet or PC)
Ekip View	- supervision and control of communication networks	- engineering free
	- analysis of electrical value trends	- analysis of past trends
	- condition monitoring	- customizable reports
		- access via Internet to the installation
		- possibility of integrating third party devices
ABB Ability™	- monitoring of plants	- alerts notification via mail
Electrical Distribution Control System	- optimization of the plant	- automatic report for energy efficiency
Control system	- control center	- asset management


#### **Ekip Connect**

The ABB programming and commissioning software tool that allows the user to unlock the full potential of circuit breakers, improving the efficiency of the electrical plant.

A circuit breaker is an essential part of any electrical system that guarantees that the day-by-day processes can be performed safely and continuously. For this reason, it is vital that the installation and use of the circuit breaker is made as error-free and simple as possible.

From commissioning to implementation, through monitoring, testing and analysis, Ekip Connect is the perfect tool for guiding the user in the management of ABB circuit breakers throughout the whole product life cycle.

Ekip Connect is the ABB commissioning and programming software that allows the potential of Ekip electronic trip units to be fully realized. Using Ekip Connect, the user can manage power, acquire and analyze electrical values, and test protection, maintenance and diagnostic functions. Just as Emax 2 has evolved into a true power manager that has simplified the electrical plant, so too has Ekip Connect software become the user's key to access the full capability of the breaker.

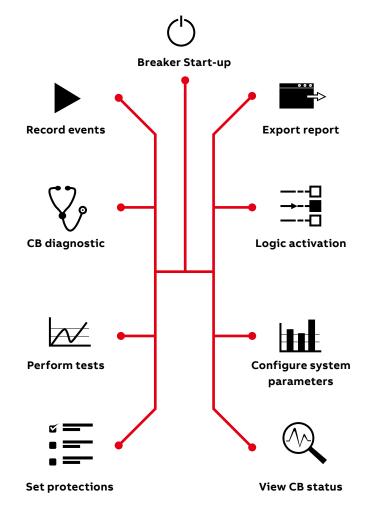

# Software and web application

# Ekip connect

Panel builders
- 50% commissioning time



#### Ease of use

Imagine you are a panel builder. You have to commission a circuit breaker and you need to save time. You can! Using Ekip Connect it is possible to cut commissioning time by up to 50%. Providing a stress-free interaction with the device complexity, Ekip Connect 's easy-to-use software has all the answers.

Ekip Connect's simple and intuitive interface means that, from the very start, it is possible to easily navigate through the tool and access every circuit breaker operation. At a glance, the user can see all the information he needs, giving him the possibility to quickly and effectively assess any situation.

Facility manager 100% full exploitation of your device



#### **Full exploitation**

Imagine you are a facility manager. You need to perform fast and precise diagnosis in order to have everything under control and avoid failures. You can! Using Ekip Connect you can exploit the full capabilities of your device and thanks to the customizable dashboard you can organize the functions displayed, just the way you want it. It is possible to manage all the CB settings and specifications directly with Ekip Connect, making it the perfect instrument for exploring and using the breaker.

Diagnostics are easy too: It is possible to consult and download the log of events, alarms and unit trips, thereby facilitating the identification and understanding of any anomalies.

This software able to manage all ABB low-voltage circuit breakers equipped with an electronic trip unit, giving a full integration of air and molded case circuit breakers.

Consultant/system integrator Complex logic at your fingertips



## **Product enhancement**

Imagine you are a consultant or a system integrator and you want to implement advanced features while avoiding the risk of errors. You can! Using Ekip Connect it's possible to implement complex logic with a few clicks of your mouse.

To add, set and manage advanced functions has never been so easy. Automatic transfer switch logic, load shedding, advanced protection and demand management can be managed and

easily set through the Ekip Connect software.

Expand software features by purchasing and downloading software packages for advanced functions directly using Ekip Connect.

Accessing the full potential of the circuit breaker is finally possible. Thanks to Ekip Connect software, you can achieve complete utilization of the breaker and more with a few clicks of your mouse.



#### Configuration

- · Set protections
- Configure system and communication parameters
- · Breaker start-up



#### Monitoring & analysis

- · View CB status and measure
- · Read events list
- · CB diagnostic



#### **Product implementation**

- Set advanced protections
- Logic activation
- Enable advanced functions



Testing & reporting
Check correct functionality
Perform tests

Export report

Ekip Connect is available for free download at http://www.abb.com/ abblibrary/Download-Center/



# Software and web application

# Ekip View

Ekip View is the software for supervising devices connected to a communication network that uses the Modbus RTU or Modbus TCP protocol.


It is the ideal tool for all applications that require:

- · remote control of the system,
- · monitoring of power consumption,
- · fault detection of the system,
- allocation of energy consumption to the different processes and departments,
- preventative planning of maintenance.

The main characteristics of Ekip View are:

 Engineering free and ready to use software which guides the user in the recognition and configuration of the protection units without the need for any supervision system engineering activities.

- Dynamic mimic panel; after automatic scanning of the network, for each of the devices found, Ekip View proposes a dynamic symbol that summarizes the most important information (status, electrical measurements, alarms). The extensive library of electrical symbols enables the entire electrical system to be depicted in detail.
- Analysis of trends; the instantaneous and past trends of currents, powers and power factors are represented graphically and can be exported into Microsoft Excel for detailed analysis.
- Reports; advanced reports can be created regarding system and communication network diagnostics. Using the Alarm Dispatcher option, the user can receive the most important notifications via text message.
- Access via web to the installation, thanks to Ekip View's Web Server function.

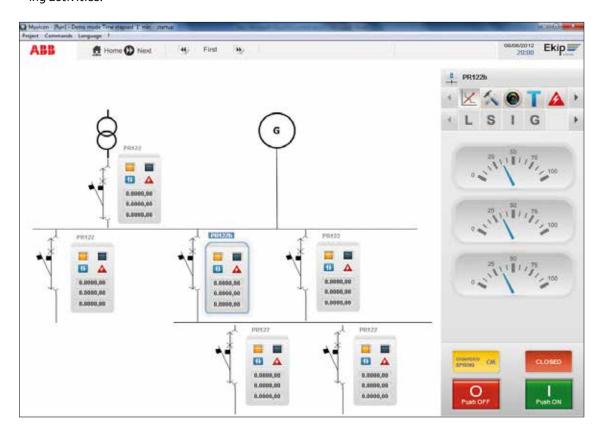

	Ekip View Software	
Communication characteristics	·	
Protocol Supported	Modbus RTU	Modbus TCP
Physical layer	RS 485	EtherNet™
Maximum data exchange rate	19200 bps	100 Mbps
Operating system	Windows XP, Windows 7, Windows Vista	
Devices supported		
SACE Emax 2 trip units	Ekip com Modbus RS485	Ekip com Modbus TCP
SACE Emax,T7,X1,T8 trip units	PR120/D-M, PR330/D-M	-
ACE Tmax T trip units	PR222DS/PD, PR223DS	-
SACE Tmax XT trip units	Ekip com	-
hird party devices	optional 1)	optional 1)
icences available	- up to 30 <sup>2)</sup> controllable devices	- up to 30 <sup>2)</sup> controllable devices
	- up to 60 <sup>2)</sup> controllable devices	- up to 60 <sup>2)</sup> controllable devices
	- unlimited number 3) controllable devices	- unlimited number 3) controllable devices
Supervision and control functions		
Opening and Closing of circuit breakers 4)	•	•
Electrical value trends	•	•
og of electrical value trends	•	•
Dynamic installation mimic panel	•	•
automatic scanning	•	•
Centralized synchronizing of time	•	•
Veb server function <sup>6)</sup>	<b>●</b> <sup>5)</sup>	● <sup>5)</sup>
leasurement functions		
Currents	•	•
/oltages	•	•
owers	•	•
nergies	•	•
larmonics	•	•
letwork analyzer	•	•
Pata logger	•	•
Adjustment functions		
Setting of thresholds	•	•
Resetting of alarms	•	•
Diagnostics	<del>`</del>	<del>_</del>
Protection function alarms	•	•
Device alarms	<del>_</del>	•
Communication system alarms	<del>`</del>	•
Protection unit tripping details		<del>`</del>
events log	•	•
Protection unit tripping log	•	•
Generation of Reports	•	•
faintenance		
lumber of operations	•	•
lumber of trips	•	•
Vear of contacts	•	•
Other data		
itatus of circuit breaker	•	•
Circuit-breaker position 7)	•	•
ocal/remote mode	<u> </u>	

<sup>1)</sup> Contact ABB SACE to integrate other devices in the Ekip View software
2) can be increased
3) within the physical limit of the protocol used
4) circuit breakers equipped with Ekip com Actuator module and electrical accessories

<sup>5)</sup> two client web accesses included in the licence 6) according to the values supported by the trip units 7) circuit breakers equipped with auxiliary contacts for position indication

# Software and web application

# ABB Ability Electrical Distribution Control System

ABB Ability™ Electrical Distribution Control System is the innovative cloudcomputing platform designed to monitor, optimize and control the electrical system.

Part of the ABB Ability™ offering, ABB Ability™ Electrical Distribution Control System is built on a state-of-the-art cloud architecture for data collection, processing and storage. This cloud architecture has been developed together with Microsoft in order to enhance performance and guarantee the highest reliability and security Through a compelling web app interface, ABB Ability™ Electrical Distribution Control System assists anytime and anywhere via smartphone, tablet or personal computer so the user can:

#### • Monitor

Discover plant performance, supervise the electrical system and allocate costs.

#### Optimize

Schedule and analyze automatic reports, improve the use of assets and take the right business decision.

#### Control


Set up alerts and notify key personnel, and remotely implement an effective power management strategy to achieve energy savings in a simple way.

ABB Ability™ Electrical Distribution Control System also provides access on a multi-site level - monitoring and comparing the performances of different facilities at the same time. In addition, it allows profiling of the users' experience according to the level of access they require. According to the customer needs and application, the user can choose between two configurations to connect the system to ABB Ability™ Electrical Distribution Control System: embedded or external. The first, just a cartridge-type module, the innovative Ekip Com Hub, has to be provided to Emax 2 circuit breaker.

The second, the Ekip E-Hub module has to be mounted on DIN-rail.

#### **Embedded solution with Ekip Com Hub**

Emax 2 equipped with the new Ekip Com Hub establishes the cloud connection for the whole switchboard. This dedicated cartridge type communication module just needs to be inserted into the terminal box and connected to the internet.

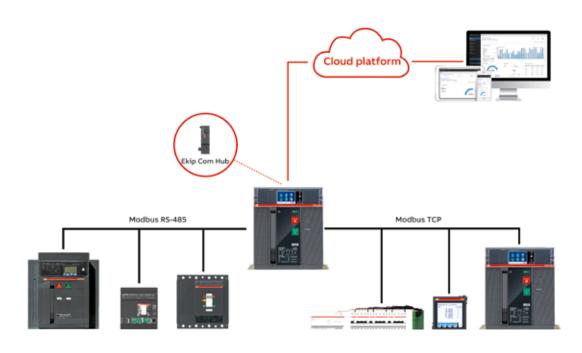




#### External solution with Ekip E-Hub

The Ekip E-Hub module can be mounted on DIN rail to collect data throughout the system.

Moreover, it is possible to connect sensors for environmental parameters (temperature, water, gas) via both analog and digital I/O.

Modules for Wi-Fi or GPRS connection are provided as optional features.

For any further information please visit our website: http://new.abb.com/low-voltage/launches/abb-ability-edcs.

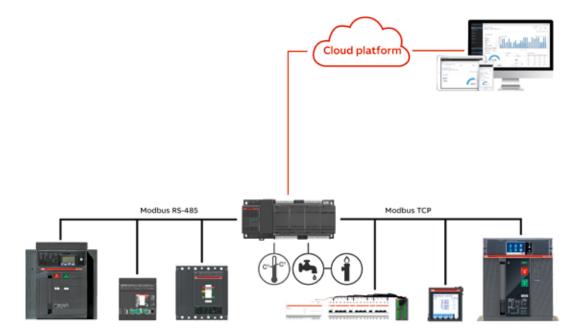

ACCESSORIES 97

CHAPTER 6

# Accessories

<b>98</b> -98	Functional areas
<b>99</b> -99	Standard supply
<b>100</b> -114	Accessories for circuit-breakers
<b>101</b> -103	Signalling
<b>104</b> -106	Control
<b>107</b> -107	Safety
<b>108</b> -109	Protection devices
<b>110</b> -111	Connections
<b>112</b> -114	Interlocks and switching devices
<b>115</b> -125	Accessories for Ekip trip units
<b>117</b> -117	Power supply
<b>117</b> -118	Connectivity
<b>119</b> -120	Signalling
<b>120</b> -123	Measurements and protection
<b>124</b> -124	Displaying and supervision
<b>125</b> -125	Testing and programming
<b>126</b> -127	Service

# **Functional** areas

The new SACE Emax 2 circuit-breakers have been designed to optimize the installation and commissioning of accessories.

The front of the circuit-breaker features two functional areas, which are protected by separate covers:

Accessories area for the installation of accessories inside the circuit-breaker and Ekip trip unit. The areas dedicated to accessories can be accessed by removing the flange and the accessories covers. On removal, the operating mechanism area remains segregated and protected, providing safety for operators.

 Safety area, which delimits the housing of the stored energy operating mechanism of the circuit-breaker. To carry out maintenance on the operating mechanism, the covers of the accessories and safety area must be removed. The auxiliary connection terminal box also features two areas:

- Terminal area for housing and inserting the terminals for wiring the auxiliary connections. The terminals can be wired first and then installed on the circuit-breaker terminal box, thereby facilitating cable connection for the operator.
- Cartridge module area, housing for the Ekip modules. These are installed directly on the upper part of the circuit-breaker or of the fixed part without having to remove the Ekip electronic trip unit, thereby minimizing the time required for the installation and commissioning of accessories.



ACCESSORIES 99

# Standard supply

The fixed versions of SACE Emax 2 automatic circuit-breakers and switch-disconnectors are always supplied as standard with the following accessories:

- IP30 protection for switchgear door
- lifting plates for E2.2 ... E6.2 circuit-breaker
- · front terminals for E1.2 circuit-breaker
- adjustable rear terminals for E2.2 ... E6.2 circuit-breaker, mounted in HR HR configuration.

# In addition, for **fixed automatic circuit-breakers** only:

- four standard open/closed auxiliary contacts -AUX 4Q 400V
- four terminals for auxiliary connections
- mechanical signalling of the tripping of the protection trip unit - TU Reset
- contact signalling tripping of Ekip protection trip unit \$51 250V.

The withdrawable versions of automatic circuitbreakers and switch-disconnectors are always supplied as standard with the following accessories:


- closed circuit-breaker racked-out mechanism lock
- lifting plates for E2.2 ... E2.6 circuit-breakers
- · lever for racking in and racking out
- anti-insertion lock.

# In addition, for **withdrawable automatic circuit-breakers** only:

- four standard open/closed auxiliary contacts -AUX 4Q 400V
- four terminals for auxiliary connections
- mechanical signalling of the tripping of the protection trip unit - TU Reset
- contact signalling tripping of Ekip protection trip unit S51 250V.

#### The fixed parts feature:

- IP30 protection for switchgear door
- anti-insertion lock
- standard shutter lock SL
- adjustable rear terminals, mounted in HR HR configuration.

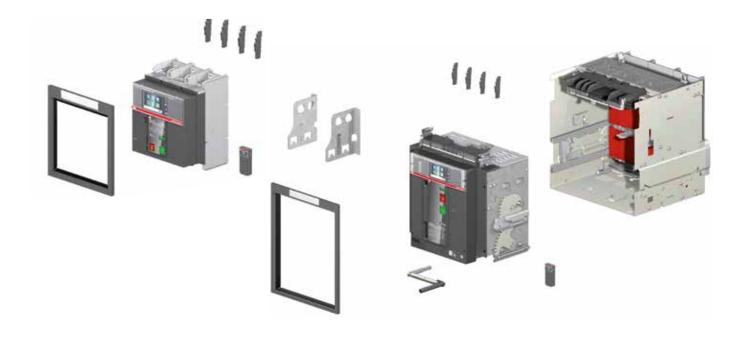

# **Accessories for circuit-breakers**

SACE Emax 2 circuit-breakers offer a wide range of accessories developed to satisfy the application and installation requirements of every cus-

	Automatic circuit-breaker		Switch- disconn	ector	Derived version		ons
	E1.2	E2.2 - E4.2 -	E1.2	E2.2 - E4.2 -	CS	MT	MTP
		E6.2		E6.2	E	2.2 - E4.2	? - E6.2
Signalling							
Standard open/closed auxiliary contacts - AUX 4Q	•/••	• / ••	0/00	0/00	-	-	••
Open/closed auxiliary contacts - AUX 6Q	-	0/00	-	0/00	-	-	00
Open/closed auxiliary contacts- AUX 15Q	0/Δ	0/△	0/Δ	0/Δ	-	-	00
Auxiliary position contacts - AUP	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Ready to close signalling contact - RTC	0/00	0/00	0/00	0/00	-	-	-
TU Reset mechanical signalling of the tripping of protection trip unit - TU Reset	• / ••	• / ••	-	-	-	-	-
Contact signalling tripping of Ekip protection trip unit - S51	•/••	• / ••	-	-	-	-	-
Second contact signalling tripping of Ekip protection trip unit - S51/2	-	0/00	-	-	-	-	-
Contact signalling loaded springs – S33 M/2 (supplied with Motor)	0/00	0/00	0/00	0/00	-	-	00
Control							
Opening and closing release - YO/YC	0/00	0/00	0/00	0/00	-	-	∞,
Second opening and closing release - YO2/YC2	0/00	0/00	0/00	0/00	-	-	-
Undervoltage release - YU	0/00	0/00	0/00	0/00	-	-	-
Electronic time-delay device for undervoltage release - UVD	0/00	0/00	0/00	0/00	-	-	-
Motor - M	0/00	0/00	0/00	0/00	-	-	00
Remote reset - YR	0/00	0/00	-	-	-	-	-
Opening and closing release test unit - YO/YC Test Unit	0/Δ	0/Δ	0/Δ	0/Δ	-	-	<u>\( \times \)</u>
Safety							
Key lock and padlock in open position - KLC and PLC	0/00	0/00	0/00	0/00	-	-	00
Key lock and padlock in racked-in / test / racked-out position - KLP and PLP	Δ	00	Δ	00	00	00	00
Shutter lock - SL	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Lock for racking-out mechanism with circuit-breaker in closed position	<b>A</b>	••	<b>A</b>	••	••	••	••
Lock for racking in / racking out the mobile part when the door is open - DLR	-	Δ	-	$\triangle$	-	-	00
Lock to prevent door opening when circuit-breaker is in racked-in / test position - DLP	-	Δ	-	Δ	Δ	Δ	Δ
Lock to prevent door opening when circuit-breaker is in closed position - DLC	0/00	0/00	0/00	0/00	-	-	00
Anti-insertion lock	•/••	•/••	•/••	• / ••	••	••	••
Mechanical operation counter - MOC	0/00	0/00	0/00	0/00	-	-	00
Protection devices							
Protection device for opening and closing pushbuttons - PBC	0/00	0/00	0/00	0/00	-	-	00
IP30 Protection	●/▲	●/▲	●/▲	●/▲	-	_	
IP54 Protection	0/Δ	0/Δ	0/Δ	0/Δ	-	_	Δ
Terminal covers - HTC / LTC	0/00	-	-	-	-	-	-
Separators - PB	0/Δ	0/△	0/Δ	0/Δ	-	-	-
Connections							
Orientable rear terminal - HR/VR	0/▲	●/▲	0/▲	●/▲	-	-	•
Front terminal - F	•	0/Δ	•	0/Δ	-	-	Δ
Other configurations	0/Δ	0/Δ	0/Δ	0/Δ	-	-	Δ
nterlocks and switching devices							
Mechanical interlock - MI	0/00/ A	0/00/ Δ	0/∞/ ∆	0/∞/ ∆	-	-	-
Automatic transfer switches - ATS	0/00	0/00	0/00	0/00	_	-	

Standard accessory for fixed circuit-breaker

O Accessory on request for fixed circuit-breaker

Standard accessory for mobile partAccessory on request for mobile part

 <sup>▲</sup> Standard accessory for fixed part
 △ Accessory on request for fixed part
 \* Only closing release YC

ACCESSORIES 101





Fig. 01-A



Fig. 01-B



Fig. 01-C

## Signalling

## Open / closed auxiliary contacts - AUX (Fig. 01A/B/C)

SACE Emax 2 circuit-breakers can be equipped with auxiliary contacts that signal the open or closed status of the circuit-breaker. The first block of four standard contacts is always provided with the automatic circuit-breakers. The switching contacts are available in the following configurations:

Open / close	d auxiliary contacts (AUX 4Q)	E1.2	E2.2 E6.2	
4 auxiliary	standard	•	•	
contacts	digital signals	•	•	
	mixed	•	•	
Open / close	d supplementary auxiliary con	tacts (AUX 6Q)		
6 auxiliary	standard	=	•	
contacts	digital signals	=	•	
	mixed	-	•	
Open / close	d external supplementary auxi	liary contacts (AUX 15Q)		
15 auxiliary	standard	•	•	
contacts	digital signals	•	•	
	mber of open / closed tacts that can be installed	19	25	

		Standard contact	Contact for digital signals
Туре		changeover contacts	changeover contacts
Minimum	load	100mA @ 24V	1mA @ 5V
Breaking	capacity		
DC	24V	-	0.1A
	125V	0.3A @ 10ms	-
	250V	0.15A @ 10ms	-
AC	250V	5A @ cosφ 1	-
		5A @ cosφ 0.7	-
		5A @ cosφ 0.3	-
	400V	3A @ cosφ 1	-
		2A @ cosφ 0.7	-
		1A @ cosφ 0.3	-

Electrical diagram reference: figures 1, 81, 91

Aux 6Q is an alternative to the Ekip Signalling 4K module. AUX 15Q is an alternative to the mechanical interlock (MI), the DLC for E1.2 lock or the DLP lock if mounted on the right side.

# **Accessories for circuit-breakers**





Fig. 02-A



Fig. 02-B

## Auxiliary position contacts - AUP (Fig. 02A/B)

When the circuit-breaker is a withdrawable version, the position of the mobile part can be signalled electrically by accessorizing the fixed part with one of the following signalling contact units:

Auxiliary position contacts (AUP)		E1.2	E2.2 E6.2
6 auxiliary	standard	•	-
contacts	digital signals	•	-
5 auxiliary	standard	=	•
contacts	digital signals	-	•
5	standard	-	•
supplementa auxiliary contacts	ry digital signals	-	
Maximum number of auxiliary position contacts that can be installed		6	10

		Standard contact	Contact for digital signals
Туре		changeover contacts	changeover contacts
Minimum	load	100mA @ 24V	1mA @ 5V
Breaking	capacity		
DC	24V	-	0.1A
	125V	0.3A @ 0ms	-
	250V	0.15A @ 0ms	-
AC	250V	5A @ cosφ 1	-
		5A @ cosφ 0.7	-
		5A @ cosφ 0.3	-
	400V	3A @ cosφ 1	-
		2A @ cosφ 0.7	-
		1A @ cosφ 0.3	-

Electrical diagram reference: figures 95, 96, 97





— Fig. 03

#### Ready to close signalling contact - RTC (Fig. 03)

The ready to close signalling contact – RTC – indicates that the circuit-breaker is ready to receive the closing command. The circuit-breaker is ready to close when the following conditions have been met:

- · circuit-breaker open
- · springs loaded
- no opening command or locks on the opening command
- · circuit-breaker reset following tripping of Ekip protection trip unit
- YU energized.

		Standard contact	Contact for digital signals
Туре		Switching	
Minimum I	oad	100mA @ 24V	1mA @ 5V
Breaking o	apacity		
	24V	-	0.1
DC	250V	0.5A @ 0ms / 0.2A 10ms	-
AC	250V	3A @ cosφ 0.7	-

Electrical diagram reference: figure 71

ACCESSORIES 103



Fig. 04



Fia. 05

#### Mechanical signalling of the tripping of protection trip unit - TU Reset (Fig. 04)

The automatic circuit-breakers are always equipped with a mechanical device that signals the tripping status of the protection trip units. After the Ekip trip unit has tripped due to an electrical fault, the signalling device clearly indicates the tripping status on the front of the circuit-breaker. The circuit-breaker can be reset only after the signalling pushbutton has been restored to its normal operating position. The device conforms to the Ansi 86T standard.

Emax 2 is fitted with the anti-pumping function. With the anti-pumping function the opening order always takes priority over a closing order. Moreover, when the Circuit Breaker is in open position due to a trip, the anti-pumping function allows the reclosing of the operating mechanism only after a reset of the trip, avoiding improper or accidental closing.

#### Contact signalling tripping of protection trip unit Ekip - S51 (Fig. 05)

The contact signals the opening of the circuit- breaker after the Ekip protection trip unit has tripped. The circuit-breaker can only be closed after the "TU Reset" tripped trip unit mechanical signalling push-button has been restored to its normal operating position.

The switching contact, which is always supplied with the standard version of the automatic circuit-breakers, is also available on request in a version for digital signals (for electrical characteristics, please refer to the RTC contact). It can also be associated with an optional accessory for resetting by remote control - YR. For electromechanical characteristics, please refer to the RTC contact.

For E2.2, E4.2 and E6.2 it is possible to double the signal for the tripping of the Ekip Trip Unit specifying the dedicated code for the S51/2. The S51/2 is an alternative of the YR contact.

Electrical diagram reference: figure 11

#### Contact signalling loaded springs - S33 M/2

This contact is always supplied with a geared motor; it remotely signals the spring status of the circuit-breaker operating mechanism. It is available in both standard version and version for digital signals.

		Standard contact	Contact for digital signals
Туре		changeover contacts	changeover contacts
Minimum	load	100mA @ 24V	1mA @ 5V
Breaking	capacity		
DC	24V	-	0.1A
	125V	0.3A @ 0ms	-
	250V	0.15A @ 0ms	-
AC	250V	5A @ cosφ 1	-
		5A @ cosφ 0.7	-
		5A @ cosφ 0.3	-
	400V	3A @ cosφ 1	-
		2A @ cosφ 0.7	-
		1A @ cosφ 0.3	-

Electrical diagram reference: figure 12

# **Accessories for circuit-breakers**







Fig. 06

#### Control

#### Opening and closing release- YO/YC (Fig. 06)

The opening and closing releases enable the circuit-breaker to be controlled remotely. Opening is always possible, while closing is available only when the closing springs of the operating mechanism are loaded and the circuit-breakers is ready to close. The releases operate by means of minimum impulse current duration time of 100 ms.

Furthermore, they can operate in permanent service. In this case, if opening command is given by means of the opening release, the circuit-breaker can be closed by de-energizing the opening release and, after a time of at least 30 ms, by controlling the closing.

The circuit breaker operating mechanism has an anti-pumping function that ensures safety and reliability.

Electrical diagram reference: figures 75, 77





#### Second opening and closing release - YO2/YC2

For certain installations the redundancy of mechanisms and circuit-breaker operating circuits is often requested. To answer these needs, the SACE Emax 2 circuit-breakers can be equipped with double opening release and double closing release. The technical characteristics of the second opening release remain the same as those of the first opening and closing release. A double closing release can be used for E2.2, E4.2 and E6.2 circuit-breakers; a second open release in an alternative to undervoltage release.

Electrical diagram reference: figures 72, 79

General c	haracteristics	_	_	
Power su	pply (Un)	AC	DC	
	24V	•	•	
	30V	•	•	
	48V	•	•	
	60V	•	•	
	110V120V	•	•	
	120V127V	•	•	
	220V240V	•	•	
	240V250V	•	•	
	380V400V	•	-	
	415V440V	•	-	
	480V500V	•	-	
Operatin	g limits (IEC60947-2 standards)	YO/YO2: 70%110% Un YC/YC2: 85%110% Un		
Inrush po	ower (Ps)	300VA	300W	
Continuo	us power (Pc)	3.5VA	3.5W	
Opening	time (YO/YO2)			
	E1.2	35 ms		
	E2.2 E6.2	35 ms		
Closing ti	ime (YC/YC2)			
	E1.2	50 ms		
	E2.2 E6.2	70 ms		

ACCESSORIES 105

#### Opening and closing release test unit - YO/YC Test Unit

The opening and closing releases test unit helps ensure that the various version of releases are running smoothly, to guarantee a high level of reliability in controlling circuit-breaker opening.

The test unit ensures the continuity of the opening and closing releases with a rated operating voltage between 24V and 250V (AC and DC), as well as verifies the functions of the opening and closing coil electronic circuit. Continuity is checked cyclically with an interval of 30s between tests. The unit has optic signals via LEDs on the front, which provide the following information:

POWER ON: correct power supply of the YO/YC Test Unit

OPEN ON: coil switch absent, power supply absent or insufficient, interrupted cables

SHORT ON: coil switch failure, short-circuited cables

OPEN and SHORT FLASHING: faulty coil switch or incorrect supply

OPEN and SHORT OFF: correct operation of the coil switch.

Two relays with one change-over area also available on board the unit, to allow remote signalling of the following events:

Failure of a test - resetting takes place automatically when the alarm stops

Failure of three tests - resetting occurs only by pressing the manual RESET on the unit.

Characte	ristics of device		
Auxiliary	power supply	24V250V AC/DC	
Specifica	tion of the signalling relays		
	Maximum interruped current	6A	
	Maximum interrupted voltage	250V AC	





Fig. 07

#### Undervoltage release - YU (Fig. 07)

The undervoltage release opens the circuit- breaker when there is a significant voltage drop or power failure. It can be used for safe remote tripping, for blocking closing or to control the voltage in the primary and secondary circuits. The power supply for the release is therefore obtained on the supply side of the circuit-breaker or from an independent source. Circuit-breaker closing is permitted only when the release is powered. The undervoltage release is an alternative to as second shunt trip or the anti-racking out device. The circuit-breaker is opened with trip unit power supply voltages of 35-70% Un. The circuit-breaker can be closed with a trip unit power supply voltage of 85-110% Un.

Power supp	oly (Un)	AC	DC	
	24V	•	•	
	30V	•	•	
	48V	•	•	
	60V	•	•	
	110V120V	•	•	
	120V127V	•	•	
	220V240V	•	•	
	240V250V	•	-	
	380V400V	•	-	
	415V440V	•	-	
	480V500V	•	-	
Inrush pow	er (Ps)	300VA	300W	
Continuous	s power (Pc)	3.5VA	3.5W	
Opening ti	me (YU)			
	E1.2	30 ms		
	E2.2 E6.2	50 ms		

Electrical diagram reference: figure 73

# **Accessories for circuit-breakers**



Fig. 08

#### Time-delay device for undervoltage release (UVD) (Fig. 08)

The undervoltage release can be combined with an electronic time-delay device for the circuitbreaker, allowing for delayed external tripping with adjustable preset times. Use of the delayed undervoltage trip unit is recommended to prevent tripping when the power supply network for the trip unit is subject to brief voltage drops or power supply failures. Circuit-breaker closing is inhibited when it is not powered. The time-delay device must be used with an undervoltage release with the same voltage.

General c	eral characteristics			
Power sup	oply (UVD)	IVD) AC DC		
	24-30V	-	•	
	48V	•	•	
	60V	•	•	
	110-127V	•	•	
	220-250V	•	•	
Adjustabl	e opening time (YU + D):	0.5-1-1.5-2-3 s		



#### Resetting remotely- YR

The reset coil YR permits remote resetting of the circuit-breaker after a release has tripped due to an overcurrent condition. It is available for all automatic circuit-breakers, in different voltage supply:

General characteristics	'		
Power supply (Un)	AC	DC	
24V	•	•	
110V	•	•	
220V	•	•	
Operating limits	90%110% Un		

\_

Electrical diagram reference: figure 4





— Fig 094



Fig. 09B

## Motor – M (Fig. 09A/B)

The motor automatically loads the closing springs of the circuit-breaker. The device, which can be installed from the front, automatically reloads the springs of the operating device when they are unloaded and power is present. In the event no power is present, the springs can be manually loaded by a dedicated lever on the operating device. The motor is always supplied with the limit switch contact S33 M/2 which signals the status of the springs.

Power supply (Un)	AC	DC
24V-30V	•	•
48V-60V	•	•
100V130V	•	•
220V250V	•	•
380V415V	•	-
440V480V (E2.2 E6.2)	•	-
Operating limits (IEC60947-2 standards)	85%110% Un	
Inrush power (Ps)	300VA E1.2 500VA E2.2 E6.2	300W E1.2 500W E2.2 E6.2
Inrush time	200ms	
Continuous power (Pc)	100VA E1.2 150VA E2.2 E6.2	100W E1.2 150W E2.2 E6.2
Charging time		
E1.2	8 sec	
E2.2 E6.2	7 sec	

Electrical diagram reference: figure 13





Fig. 10

# Safety

### Key lock in open position - KLC (Fig. 10)

Due to these safety devices, the SACE Emax 2 circuit-breaker can be locked in the open position. The lock can also be used during maintenance activities when the shield of the accessories area is removed. The device is available with lock with different keys - KLC-D (for only one circuit- breaker) or with the same keys - KLC-S (for several circuit-breakers). Four different key numbers are available for the KLC-S. SACE Emax 2 also allows alternative key lock to be installed. The following key lock set-ups are also available:

- Ronis
- STI
- Kirk
- Castell

In this case, the key locks must be supplied by the customer.







Fig. 11

# Padlocks - PLC (Fig. 11)

These padlock options allow the circuit-breaker to be kept open by acting directly on the mechanical operating device (opening pushbutton). Three different padlock versions are available:

- · Locking device with plastic structure for up to a maximum of three padlocks of 4 mm
- · Locking device with metal structure for up to a maximum of two padlocks of 8 mm
- · Locking device with metal structure for one padlock of 7 mm or for padlock holders The padlocks must be supplied by the customer. This device is an alternative to the PBC.

## Key lock in racked-in / test / racked-out position - KLP (Fig. 12)

This device enables the mobile part to be locked in one of the three positions: racked-in, test and racked-out. This device can be supplied with locks with different keys - KLP-D or with the same keys - KLP-S.

A second key lock option can be added for a maximum of two key locks per breaker. Locking in the racked-in, test and racked-out positions can be achieved by using other key locks - KLP-A. Adapters are offered for acceptance of Ronis, STI, Kirk and Castell locks, which are to be provided by the customer. With the exception of the Castell version, every circuit-breaker can accept up to two key locks. Moreover, it is possible to allow locking only when in the racked-out position with a supplementary accessory.





## Padlock in racked-in / test / racked-out position - PLP (Fig. 13)

This device can hold up to three padlocks of 8 mm in diameter. The structure housing the padlocks can also be used in combination with the 2 lock KLP keylock option. Furthermore, it enables the lock of the moving part in the racked-out position only by means of the supplementary lock in racked-out position.

### Shutter lock - SL

When the mobile part is in the test position, the shutters of the fixed part close, maintaining the insulation distance and physically segregating the live parts of the of the cradle from the internal breaker compartment of the cradle. Using two dedicated mechanisms, the upper and lower shutters can be locked independently of one another. The shutter lock is always supplied with the fixed part of the SACE Emax 2 circuit-breakers and locks the shutters, using a maximum of three padlocks of 4 mm, 6 mm or 8 mm.





Fig. 13

# **Accessories for circuit-breakers**



Eig 14

# Protection devices

### Lock for racking-out mechanism with circuit- breaker in closed position (Fig. 14)

All SACE Emax 2 withdrawable circuit-breakers are always supplied with a lock that prevents the mobile part from being racked in and racked out when the circuit- breaker is in the closed position. To rack in the mobile part, the circuit-breaker must be in the open position.

## Lock for racking in / racking out the mobile part when the door is open - DLR

This accessory, which is mounted on the fixed part, prevents the mobile part from being racked in or out when the switchgear door is open.



Fig. 15

Lock to prevent door opening when the circuit- breaker is in racked-in / test position - DLP (Fig. 15)

This safety device prevents the switchgear door from being opened when the mobile part of the with-drawable version of the circuit-breaker is in the racked-in or test position. This accessory can be installed on either the right-hand or left-hand side of the fixed part. It is available for circuit- breakers E2.2, E4.2 and E6.2. If mounted on the right side, it is an alternative to the mechanical interlock, the AUX 15Q or the DLC.



— Fig. 16

## Lock to prevent door opening when the circuit- breaker is in the closed position - DLC (Fig. 16)

This prevents the compartment door from being opened when the circuit-breaker is in the closed position (and with the circuit-breaker racked in for withdrawable circuit-breakers).

It also blocks the circuit breaker from closing when the compartment door is open. DLC for E1.2 is an alternative to the mechanical interlock and the AUX 15Q. DLC direct door for E2.2...E6.2 is compatible with mechanical interlocks type A-B-D and the AUX 15Q. DLC cable door for E2.2...E6.2 is not compatible with mechanical interlock. DLC cable door for E2.2... E6.2 is compatible with the AUX 15Q.

# Anti-insertion lock

The withdrawable circuit-breakers are equipped with special locks that allow the mobile part to be inserted only into the corresponding fixed part.



## Mechanical operation counter - MOC (Fig. 17)

The number of mechanical operations is often one of the elements that determines the frequency of ordinary maintenance operations on circuit-breakers. With this mechanical operation counter, which is always visible on the front of the circuit-breaker, the user knows how many mechanical operations the device has performed.



— Eig. 17





Fig. 18

# Protection device for opening and closing pushbuttons - PBC (Fig. 18)

This accessory is applied to the safety cover of the circuit-breaker and is available in two versions:

- Pushbutton protection device, which blocks operations on both the opening and closing pushbuttons unless the special key is used.
- Padlockable pushbutton protection device, which makes it possible to block either or both pushbuttons and lock the covers in place. It does not trip the breaker as a standard "Padlock device" would.
- PBC is an alternative to PLC padlocks.

# IP30 Protection (Fig. 19)

Supplied with every circuit-breaker, the cover frame is installed on the door of the switchgear to achieve IP30 degree of protection on the front part of the circuit-breaker.

## IP54 Protection (Fig. 20)

This transparent cover completely protects the front of the circuit-breaker, enabling an IP54 degree of protection to be achieved. This accessory is provided with double key lock (same or different keys).

## Terminal covers - HTC / LTC (Fig. 21)

These accessories are installed over in the terminal area, thereby reducing the risk of direct contact with the live parts of the circuit-breaker. Two versions are available for E1.2: HTC high terminal covers and LTC low terminal covers.

### Separators - PB (Fig. 22)

These protection devices increase the insulation distance between adjacent phases. They are available for all the frames.

# 0-ARC Distance top cover

This accessory allows the circuit-breakers to reach the 0-arc distance performance. Installable on the fixed part of E2.2, E4.2 and E6.2 gives the possibility to dimension the cubicle at the same height of the fixed part. The 0-arc distance top cover is not compatible with the AUP auxiliary contacts IEC version, but alternatively it is possible to install the AUP auxiliary contacts UL version.



Fig. 19



— Fig. 20



Fig. 21



Fig. 22

# **Accessories for circuit-breakers**

# Connections

The SACE Emax 2 circuit-breakers offer a wide variety of terminals, thereby always guaranteeing an optimal solution for connection to the power

## Solution for fixed circuit-breakers

Туре	Abbreviation	E1.2	E2.2	E4.2	E6.2
		Single stab	design		
	HR	0	● Iu = 2000A	● Iu = 3200A	■ lu = 5000A  ■ lu = 6300A
Rear adjustable terminal *	VR	Multiple sta	ab design		
			● Iu = 2500A	● Iu = 4000A	● Iu = 6300A
		Single stab	design		
Horizontal rear spread terminal	SHR		○ Iu = 2000A	○ Iu = 3200A	
Horizontarreal spread terminal	SHK	Multiple sta	ab design		
			○ Iu = 2500A	● Iu = 3200A	
		Single stab	design		
Vertical rear spread terminal	SVR		○ Iu = 2000A	O Iu = 3200A	
verticarrear spread terminar	JVK	Multiple sta	ab design		
			○ Iu = 2500A	○ Iu = 4000A	
Extended front terminal	EF	0			
Front terminal	F	•	0	0	0
Front spread terminal	ES	0			
Terminal for cable FcCuAl 4x240mm²	FcCuAl	0			

Standard configuration

Configuration on request

(\*) The adjustable terminals are supplied as standard in the HR – HR configuration.

# Solutions for fixed parts, withdrawable circuit-breakers

Туре	Abbreviation		E1.2	E2.2	E4.2	E6.2		
			Single stab	design				
	HR		•	● Iu = 2000A	● Iu = 3200A	● Iu = 5000A		
Rear adjustable terminal *	VR		Multiple sta	b design				
				● lu = 2500A	● Iu = 4000A ○ Iu = 3200A**	● Iu = 6300A or X performance		
			Single stab	design				
Horizontal rear terminal	SHR			○ Iu = 2000A	○ Iu = 3200A			
Horizontairear terminai	SHK		Multiple sta	b design				
				○ Iu = 2500A	● Iu = 4000A ○ Iu = 3200A**			
			Single stab	design				
Vantical constant	CVD			O Iu = 2000A	○ Iu = 3200A			
Vertical rear spread terminal	SVR		Multiple sta	b design				
				○ Iu = 2500A	○ Iu = 4000A			
		$\rightarrow$						
Front terminal	F			0	0	0		
Extended front terminal	EF		0					
Front spread terminal	ES		0					
Terminal for cable FcCuAl 4x240mm <sup>2</sup>	Fc CuAl		0					
Flat terminal	FL			0	0	0		

- Standard configuration
  Configuration on request
  (\*) The adjustable terminals are supplied as standard in the HR HR configuration.
  (\*\*) Fixed parts with Iu 3200A accessorized with rear orientable terminals with multiple stabs guarantee higher performances in switchboard installations.

# **Accessories for circuit-breakers**

# Interlocks and switching devices

### Mechanical interlocks


These interlock systems enable various opening and closing configurations to be obtained between two or three circuit-breakers. Four types of interlock configuration are available:

Types of interlock	Possible application	Logic	Circuit-breakers
Туре А			
Excludes the possibility of having two circuit-breakers in the closed position at the same time.	Main line power supply and emergency power supply.	1 2 0 0 0 I 0 I	Available between circuit-breakers of different sizes and with any fixed / withdrawable version

## Type B

Permits a pair of circuit-breakers to be closed if the third is open. The latter can only be closed when the pair is open.

Two power supplies from transformers and one emergency power supply.

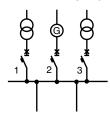


1	2	3
0	0	0
I	0	0
0	0	I
1	0	I
0	I	0

Available between E2.2, E4.2 and E6.2 circuit-breakers and with any fixed / withdrawable version

# Type C

Permits two out of three circuit-breakers to be closed at the same time.

Two half-busbars can be powered by a single transformer (bus-tie closed) or by both at the same time (bus-tie open).

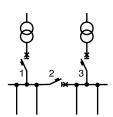


1	2	3
0	0	0
I	0	0
0	I	0
0	0	I
0	I	I
1	I	0
I	0	I

Available between E2.2, E4.2 and E6.2 circuit-breakers and with any fixed / withdrawable version

# Type D

Permits one out of three interlocked circuit-breakers to be closed.

Three power supplies on the same busbar that must not operate in parallel.

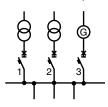

1	2	3
0	0	0
I	0	0
0	I	0
0	0	1

Available between E2.2, E4.2 and E6.2 circuit-breakers and with any fixed / withdrawable version

The mechanical interlocks offer multiple solutions for installation that simplify their integration into the switchgear. The interlocks can be mounted:

- · vertically VR
- · horizontally HR
- mixed L

Different types of interlocks can be supplied according to the maximum distance between two interlocked breakers:

Configuration		Type A	Type B, C, D
Horizontal		2750mm	1600mm
Vertical		1000mm	1000mm
Breakers	E1.2	•	=
	E2.2	•	•
	E4.2	•	•
	E6.2	•	•

For B, C and D types, the maximum distance between the two furthest breakers is 3200mm for horizontal configurations and 2000mm for vertical configurations. It is possible to make the mechanical interlock among three circuit-breakers disposed in 'L position' by using the cables of three horizontal circuit-breakers interlock. Make sure the distance between the horizontal and vertical circuit-breakers respects the minimum and maximum distance. All cables can be cut to guarantee easy installation in switchboards.

Mechanical interlocks are not compatible with AUX 15Q, the lock for preventing door opening when the circuit breaker is in the closed position (DLC) or when the circuit breaker is in the racked in or

### **External Automatic Transfer Switches ATS**

test position (DLP). if mounted on the right side.

The ATS (Automatic Transfer Switch) is a network-unit transfer device used in installations where switching from the main power line to an emergency line is required in order to ensure that power is supplied to the loads in the case of power loss or abnormalities from the main line. These devices are able to control the entire transfer procedure automatically, but also offer commands for performing the procedure manually. The new generation of ATSs (ATS021 and ATS022) offers the most advanced and complete solution for ensuring service continuity. The ATS021 and ATS022 devices can also be used with all automatic circuit-breakers and switch-disconnectors of the Tmax XT family. The ATS021 and ATS022 devices have been designed to be self-powered.

ATS022 is also designed for the connection of an auxiliary supply, which enables the use of further functions.

The ATS021 and ATS022 devices carry out control of both power supply lines and also analyze:

- phase imbalance;
- frequency imbalance;
- · phase loss.

In addition to the standard control functions, the ATS022 unit also permits:

- the priority line to be selected;
- a third circuit-breaker to be controlled;
- the device to be integrated into a supervision system with Modbus communication (auxiliary supply needed);
- parameters to be read and set, and measurements and alarms to be displayed by means of a graphical display.

Typical applications are: supply of UPS (Uninterrupted Power Supply) units, operating rooms and primary hospital services, emergency power for civil buildings, airports, hotels, databases and telecommunication systems and power supply of industrial lines in continuous processes.

For correct configuration, each circuit-breaker connected to the ATSO21 or ATSO22 device must be fitted with the following accessories:

- · mechanical interlock;
- · motorized control of opening and closing;
- contact for signalling status (open / closed) and contact for signalling tripping;
- contact for signalling circuit-breaker racked in (for withdrawable circuit-breaker).

# **Accessories for circuit-breakers**





## **Technical characteristics**

				ATS021	ATS022	
General	Auxiliary supply voltage			Not required	Not required (24-110V DC is required only for Modbus communication and systems of 16 2/3 Hz)	
	Supply voltage, Un			Max 480V AC	Max 480V AC	
	Frequency, fn			50, 60 Hz	16 2/3, 50, 60, 400 Hz	
	Dimensions		H mm	96	96	
		⊬   W n		144	144	
		-W D	D mm	170	170	
	Type of installation			Installation on front of switchgear Installation on DIN rail	r Installation on front of switchgear Installation on DIN rail	
	Operating mode			Automatic/Manual	Automatic/Manual	
Characteristics	Monitoring of normal and emerg	gency line		•	•	
	Control of circuit-breakers on normal and emergency line			•	•	
	Setting start-up of generator			•	•	
	Setting switch-off of generator with settable time delay			•	•	
	Third circuit-breaker			-	•	
	Selection priority line			-	•	
	Modbus Rs485 communication			-	•	
	Display			-	•	
Environmental	Protection degree			IP20*	IP20*	
conditions	Operating temperature			-20 +60 °C	-20 +60 °C	
	Humidity			5% - 90% without condensation	5% - 90% without condensation	
Operating	Undervoltage			-30%5% Un	-30%5% Un	
thresholds	Overvoltage			+5%+30% Un	+5%+30% Un	
	Frequency thresholds			-10% / +10% fn	-10% +10% fn	
Tests	Test Mode			•	•	
	Mode Test Gen set			•	•	
Standards	Electronic devices for use in elec	trical installation	ıS	EN-IEC 50178	EN-IEC 50178	
	Electromagnetic compatibility			EN 50081-2	EN 50081-2	
				EN 50082-2	EN 50082-2	
	Environmental conditions			IEC 68-2-1	IEC 68-2-1	
				IEC 68-2-2	IEC 68-2-2	
				IEC 68-2-3	IEC 68-2-3	

Electrical diagram reference: figures 100,101 and 102.

<sup>\*</sup> IP54 available with 1SCA101001R1001 accessory

# **Accessories for Ekip trip units**

The electronic trip unit accessories enable utilization of all the potential of Ekip protection trip units in terms of signalling, connectivity, protection functions and testing.

	Electronic trip	Electronic trip unit				
	Ekip DIP	Ekip Touch	Ekip Hi-Touch	Ekip G Touch	Ekip G Hi-Touch	
Power supply						
Ekip Supply	0	0	0	0	0	
Battery for Ekip trip units	0	0	0	0	0	
Connectivity						
Ekip Com		0	0	0	0	
Ekip Com Redundant		0	0	0	0	
Ekip Com Actuator	0	0	0	0	0	
Ekip Link	0	0	0	0	0	
Ekip Bluetooth	0	0	0	0	0	
Signalling						
Ekip Signalling 2K		0	0	0	0	
Ekip Signalling 4K <sup>(1)</sup>		0	0	0	0	
Ekip Signalling 10K	0	0	0	0	0	
Ekip Power Controller		0	0	0	0	
Measurement and Protection						
Ekip Measuring Pro		0	•	•	•	
Ekip Measuring		0				
Ekip AUP	0	0	0	0	0	
Ekip RTC	0	0	0	0	0	
Ekip Synchrocheck		0	0	0	0	
Ekip LCD		0	0	0	0	
Rating Plug	0	0	0	0	0	
Homopolar toroid		0	0	0	0	
Toroid for differential protection		0	0	0	0	
Current sensor for neutral conductor outside the circuit-breaker	0	0	0	0	0	
Displaying and Supervision						
Ekip Multimeter	0	0	0	0	0	
Ekip Control Panel	0	0	0	0	0	
Testing and Programming						
Ekip TT	0	0	0	0	0	
Ekip T&P	0	0	0	0	0	
Ekip T&P: Ekip Programming	0	0	0	0	0	

Standard accessory

O Accessory on request

not available for E1.2

# **Accessories for Ekip trip units**

All accessories are automatically recognized by the Ekip units without the need for any specific configuration. Based on the installation method and connection of the trip units, the electronic accessories can be divided into:

Installation	Modules	Highlights
Terminal box	Cartridge modules:	- The Ekip Supply module enables the trip units to be supplied with a wide range of control voltages
	- Ekip Com - Ekip Link	- The Ekip supply module must be present for the other modules to be used
	- Ekip Ellik - Ekip 2K - Ekip Supply	- The Ekip Supply module has a dedicated position in the installation area in the terminal box; the other modules can be installed as desired in the positions available
	- Ekip Synchrocheck	- When fitted with the Ekip Supply module, up to 2 additional modules can be installed on E1.2, and up to 3 on E2.2, E4.2 and E6.2
Accessorizing Ekip LCD		- These are installed in specific housings from the front of the circuit-breaker
EI EI EI Ra	Ekip Com Actuator Ekip RTC	- For all the trip units with a touch screen interface, an LCD version is available with any adjustment in the protection and measurements functions
	Ekip AUP Ekip Measuring Ekip Signalling 4K Rating Plug Battery for Ekip	<ul> <li>Thanks to the optional modules Ekip RTC and Ekip AUP, all the Ekip trip units can acquire and monitor the ready to close state and the racked-in/test isolated/racked-out position of the circuit- breaker. The module to acquire the open/closed position is supplied as standard for all Ekip trip units.</li> </ul>
	Battery for Exip	- The Ekip Signalling 4k module increases the remote signalling possibilities for E2.2, E4.2 and E6.2 and can be installed if the Ekip Supply module or another 24V auxiliary power supply is present
Ekip trip unit	Ekip T&P	- These can be connected to the front test port of the trip units even with the device in operation
test port	Ekip TT Ekip Bluetooth	- Compatible also with the SACE Tmax XT range
External	Ekip Multimeter	- Ekip Multimeter can supply a 24V DC output to the trip unit it is connected to
	Ekip Control Panel Ekip 10K	- Several Ekip units and / or Ekip Signalling 10K can be connected at the same time to the same Ekip trip unit
	External neutral senso Homopolar toroid Differential toroid	or - These are connected to the trip unit by the terminal box of the circuit-breaker





Fig. 23





— Fia. 24

# Power supply

## **Ekip Supply Power Supply module (Fig. 23)**

The Ekip Supply module supplies all Ekip trip units and modules present on the terminal box and of the circuit-breaker with several auxiliary power (in AC or DC) available in the switchgear. The module is mounted in the terminal box and permits the installation of the other advanced modules. It can be field installed at any time.

Two versions are available according to the control voltage available:

- Ekip Supply 110-240V AC/DC
- Ekip Supply 24-48V DC

# Connectivity (Fig. 24)

The Ekip Com modules enable all SACE Emax 2 circuit-breakers to be integrated in an industrial communication network for remote supervision and control of the circuit-breaker. They are suitable for all distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units. Since they are mounted in the terminal box, communication can be maintained with

withdrawable circuit-breakers, even while in the racked-out position. Several Ekip Com modules can be installed at the same time, thereby enabling connection to communication systems that use different protocols.

The Ekip Com modules for Modbus RTU, Profibus-DP and DeviceNet™ contain a terminating resistor and dip switch for optional activation to terminate the serial network or bus.

The Profibus-DP module also contains a polarization resistor and dip switch for its activation. The Ekip Com modules are supplied complete with auxiliary position contacts Ekip AUP and ready to close circuit-breaker contacts Ekip RTC.

For industrial applications where superior reliability of the communication network is required, the Ekip Com R communication modules, installed together with the corresponding Ekip Com modules, guarantee redundant connection to the network.

The Ekip Com modules enable Ekip trip units to be connected to networks that use the following protocols:

Protocol	Ekip Com Module	Ekip Com Redundant Module
Modbus RTU	Ekip Com Modbus RS-485	Ekip Com R Modbus RS-485
Modbus TCP	Ekip Com Modbus TCP	Ekip com R Modbus TCP
Profibus-DP	Ekip Com Profibus	Ekip Com R Profibus
Profinet	Ekip Com Profinet	Ekip Com R Profinet
EtherNet/IP™	Ekip Com EtherNet/IP™	Ekip Com R EtherNet/IP™
DeviceNet™	Ekip Com DeviceNet™	Ekip Com R DeviceNet™
IEC61850	Ekip Com IEC61850	Ekip Com R IEC61850
Open ADR	Ekip Com Open ADR	-
Cloud connectivity	Ekip Com Hub	-

\_

Electrical diagram reference: figures from 51 to 57. Redundant version from 61 to 66.

# **Accessories for Ekip trip units**







Fig 25



Fig. 26





Fig. 2



Fig. 28

## Ekip Link Module (Fig. 25)

The Ekip Link module enables the SACE Emax 2 circuit-breaker to be connected to ABB communication system for locally supervising switchgear by means of the Ekip Control Panel and to act as Power Controller. It is suitable for all Ekip trip units and can be factory or field installed in time to the circuit-breaker terminal box, even when Ekip Com communication modules are present. In this way, it is possible to have both local supervision of the control panel by means of the Ekip Control Panel and supervision of the system by means of the Ekip Com modules connected to the communication network. The Ekip Link modules are supplied complete with auxiliary position contacts Ekip AUP and ready to close circuit-breaker contacts Ekip RTC.

Electrical diagram reference: figure 58


# Ekip Com Hub (Fig. 26)

Ekip Com Hub is the new communication module for Emax 2 cloud-connectivity.

Emax 2 equipped with Ekip Com Hub can establish the connection to ABB Ability EDCS for the whole low-voltage power distribution panel. This dedicated cartridge-type communication module just needs to be inserted into the terminal box and connected to the internet.

For further information related to Ekip SmartVision, please visit the dedicated website <a href="https://new.abb.com/low-voltage/launches/abb-ability-edcs">https://new.abb.com/low-voltage/launches/abb-ability-edcs</a>.

### Ekip Com Actuator module (Fig. 27)

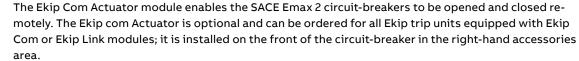

Electrical diagram reference: figures 76, 78

## Ekip Bluetooth wireless communication unit (Fig. 28)

Ekip Bluetooth permits remote connection with the trip unit by portable PC, tablet or smart phone on which Ekip Connect software has been installed. The device is connected to the front test connector found on all Ekip trip units in SACE Emax 2 and SACE Tmax XT circuitbreakers and supplies power by means of a rechargeable Li-ion battery.





Fig. 29

# Signalling

# Ekip 2K Signalling modules (Fig. 29)

The Ekip 2K Signalling modules supply two input and two output contacts for control and remote signalling of alarms and circuit-breaker trips. They can be programmed from the trip unit's display or through the Ekip Connect software. Furthermore, when using Ekip Connect, combinations of events can be freely configured. They are suitable for all distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units. Three versions of the Ekip 2K Signalling modules are available: Ekip 2K-1, Ekip 2K-2, Ekip 2K-3. In this way, a maximum of three modules for E2.2, E4.2, E6.2, and two for E1.2 can be installed at the same time.

Electrical diagram reference: figures 41, 42, 43



### Ekip 3T Signalling modules (Fig. 29A)

The Ekip 3T Signalling modules supply three analog inputs for thermo-resistances PT1000 and one analog input 4-20mA for external sensors. Through the Ekip Connect software is possible to set different thresholds and link them to a digital signal. The Ekip 3T Signalling modules are suitable for all distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units. Two versions of the Ekip 3T Signalling modules are available: Ekip 3T-1, Ekip 3T-2.



# Ekip 4K signalling module (Fig.30)

The Ekip 4K Signalling module, available for E2.2 – E4.2 – E6.2, supplies four input contacts and four output contacts for control and remote signalling. It can be programmed from the trip unit's display or through the Ekip Connect software. Furthermore, when using Ekip Connect, combinations of events can be freely configured.

It is installed in the housing provided in the front left of distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units, without having to remove the trip unit itself and is an alternative to the AUX 6Q auxiliary contacts unit.

Electrical diagram reference: figure 2



— Fig. 30

— Fia. 31

## Ekip 10K signalling unit (Fig. 31)

Ekip 10K Signalling is an external signalling unit designed for DIN rail installation for SACE Emax 2 automatic circuit-breakers. The unit provides ten contacts for electrical signalling of timing and tripping of protection devices.

If connected via the Ekip Connect software, the contacts can be freely configured in association with any event and alarm or combination of both.

Several Ekip 10K Signalling (max 4) can be installed at the same time on the same Ekip trip unit. The Ekip 10K Signalling module can be powered either by direct or alternating current and can be connected to all the trip units via internal bus or Ekip Link modules.

Electrical diagram reference: figure 103

# **Accessories for Ekip trip units**




## **Ekip Signalling Modbus TCP (Fig. 32)**

It is an external signalling unit designed for DIN rail installation. Function of the signalling module is to share, via an Ethernet network with Modbus TCP communication protocol, information about the state of circuit-breakers that might not have the ability to provide such information via Ethernet, and also to allow these circuit-breakers to be operated via remote control.



— Fig. 32

Characteristics of output contacts		Number of contacts			
Туре		Monostable	Ekip 2K	Ekip 4K	Ekip 10K
Maximum switch	ing voltage	150V DC / 250V AC			
Maximum switch	ing current				
	30V DC	2A	2	4	10
	50V DC	0.8A	output + 2	output + 4	output + 11
	150V DC	0.2A	input	input	input
	250V AC	4A			
Contact/coil insu	ılation	1000 Vrms (1min @50Hz)			

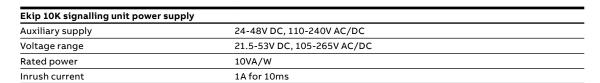



— Fig. 33

Signalling contacts for Ekip trip units (Ekip RTC and Ekip AUP) Ekip trip units can acquire the status of circuit-breaker ready to close (RTC) and the racked-in, test, or racked-out position though the optional signalling contacts Ekip RTC and Ekip AUP. These contacts, housed in the accessories area of the circuit-breakers, are available with Ekip Dip, Ekip Touch and Ekip Hi-Touch.

Ekip COM communication modules and Ekip Link modules are always supplied with Ekip AUP and Ekip RTC contacts. (Fig. 33)





— Fig. 34

# Measurement and protection

# Ekip Measuring module (Fig. 34)

The Ekip Measuring module enables the trip unit to measure the phase and neutral voltages, powers and energy.

The Ekip Measuring module is installed on the front, right housing of the distribution protection versions of the Ekip Touch trip units, without having to remove the trip unit itself. The voltage connections are installed by default on the lower terminals, but can be altered to the upper terminals on request. The measuring module requires no external connection since it is connected internally to the lower or upper terminals of Emax 2. If necessary, the voltage outlet connection can be moved outside the circuit-breaker by using voltmetric transformers and the alternative connection positioned in the terminal box. The use of external connections is obligatory for rated voltages that are higher than 690V. The module must be disconnected for dielectric strength tests on the main busbars.

Electrical diagram reference: figures 20, 21, 22, 23





Fig. 35

# Ekip Measuring Pro module (Fig. 35)

The module has the same connection and installation characteristics as the Ekip Measuring module. In addition, the Ekip Measuring Pro version offers:

- Protection features voltage and power values
- Ekip trip unit power supply from busbar voltage (for line voltages greater than 85V)
- LED signalling when voltage is detected on the main busbars.

The Ekip Measurement Pro module comes standard with the Ekip Hi-Touch, Ekip G Touch and Ekip G-Hi Touch trip units.





— Fig. 36


## Ekip Synchrocheck (Fig. 36)

This module enables the control of the synchronism condition when placing two lines in parallel. The module can be used with distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units equipped with the Ekip Measuring Pro module.

Ekip Synchrochek measures the voltages from two phases of one line through an external transformer and, compares them to the measured voltages at the breaker utilizing the Ekip Measuring Pro Module. An output contact is available, which is activated upon reaching synchronism, and enables the circuit-breaker to be closed by means of wiring with the closing coil.

Characteristi	cs of output contacts	Number of contacts	
Туре		Monostable	Ekip Synchrocheck
Maximum swi	tching voltage	150V DC / 250V AC	
Maximum swi	tching current		<del></del>
	30V DC	2A	1
	50V DC	0.8A	output output
	150V DC	0.2A	
	250V AC	4A	<del></del>
Contact/coil i	nsulation	1000 Vrms (1min @50Hz)	

Electrical diagram reference: figure 48

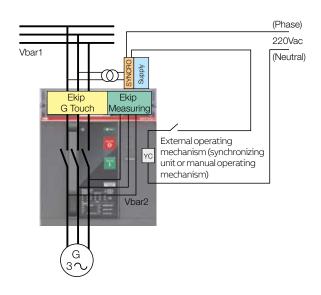

# **Accessories for Ekip trip units**



— Fig. 27

## Ekip LCD display interface (Fig. 37)

For installations in particularly aggressive environments, as low temperatures, high humidity or presence of dust or chemical agents, the Ekip protection trip units can be requested with an LCD black and white display interface with pushbuttons for navigation. This version guarantees excellent immunity by integrating all functions, with regard to protection devices, measuring devices and the possibility of introducing accessories, available on the colour touch screen.



Fia. 38

### Rating Plug (Fig. 38)

The rating plugs are field interchangeable from the front on all trip units and enable the protection thresholds to be adjusted according to the actual rated current of the system.

This function is particularly advantageous in installations that may require future expansion or in cases in which the power supplied needs to be limited temporarily (e.g. mobile Gen Set). The Overload (L) protection function can be disabled at any time by using an L OFF version of the rating plug. There is a matching L OFF version for each standard version of rating plug.

Circuit-breaker	Rating plugs available (both in standard and L OFF versions)					
E1.2	400-630-800-1000-1250-1600					
E1.2 250	100-200-250					
E2.2	400-630-800-1000-1250-1600-2000-2500					
E2.2 250	100-200-250					
E4.2	400-630-800-1000-1250-1600-2000-2500-3200-4000					
E6.2	400-630-800-1000-1250-1600-2000-2500-3200-4000-5000-6300					

Special rating plugs are also available for differential protection against earthing faults in combination with a suitable toroid to be installed externally.

Circuit-breaker	Rating plug available for Rc protection				
E1.2	400-630-800-1250				
E1.2 250	100-200-250				
E2.2	400-630-800-1250-2000				
E2.2 250	100-200-250				
E4.2 / E6.2	400-630-800-1250-2000-3200-3600-4000				



— Fig. 39

# Current sensor for neutral conductor outside the circuit-breaker (Fig. 39)

This is only for three-pole circuit-breakers; it enables protection of the neutral conductor to be achieved through connection to the Ekip trip unit. It is supplied on request.

Electrical diagram reference: figure 27



— Fig. 40

# Homopolar toroid for the earthing conductor of main power supply (Fig.40)

The distribution and generator protection versions of the Ekip Touch and Hi-Touch trip units can be used with an external toroid positioned, for example, on the conductor that connects the star centre of the MV/LV transformer to earth (homopolar transformer): in this case, the earth protection is called Source Ground Return. There are four sizes of the toroid: 100A, 250A, 400A, 800A. The homopolar toroid is an alternative to the toroid for differential protection.

Electrical diagram reference: figure 25



— Fig. 41

## Toroid for differential protection (Fig. 41)

Connected to the Ekip Touch and Hi-Touch LSIG trip units equipped with a rating plug for differential protection, this toroid enables earth fault currents of 3...30A to be monitored. To be installed on the busbar system, it is an alternative to the homopolar toroid.


Electrical diagram reference: figure 24

# **Accessories for Ekip trip units**

# Displaying and supervision

## Ekip Multimeter Display on front of switchgear (Fig. 42)

Ekip Multimeter is a display unit to be installed on the front of the switchgear for SACE Emax 2 circuit-breakers equipped with Ekip electronic trip units. The device, 96mmx96mm sized, is equipped with a large touch screen display and enables measurements to be displayed with the same levels of precision. If connected to trip units with a display, Ekip Multimeter enables the adjustment of parameters and protection thresholds. Up to 4 Ekip Multimeter devices can be connected at the same time to the same Ekip protection trip unit to display currents, voltage, powers and energy.

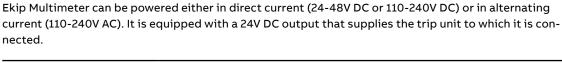

Power supply	24-48V DC, 110-240V AC/DC
Tolerance	21.5-53V DC, 105-265V AC/DC
Rated Power	10VA/W
Inrush current	2A for 20ms



Fig. 42

# Ekip Control Panel on front of switchgear (Fig. 43)

The Ekip Control Panel enables the SACE Emax 2 circuit-breakers connected to the Ekip Link system to be controlled and monitored.

The panel is supplied already equipped with supervision software and requires no programming. Ekip Control Panel requires a 24V DC power supply and is equipped with:

- 2 RJ45 EtherNet ports for connection to the Ekip Link system and to the local network for remote control via web server option
- 1 RS485 serial port for integration of the Modbus network if it is to be used with circuitbreakers of the Tmax series
- 4 USB ports for downloading data.



Fig. 43



Fig. 44

# Testing and programming

## Ekip TT testing and power supply unit (Fig. 44)

It also allows a trip unit not provided with auxiliary power supply to be supplied with power so that the last protection device tripped can be displayed directly on the screen or by the lighting up of corresponding LEDs. Ekip TT is a device that allows you to verify that the circuit-breaker trip mechanism is functioning correctly (trip test).

The device can be connected to the front test connector of any Ekip trip unit of SACE Emax 2 to set protection functions setting.



Fig. 45

### Ekip T&P testing kit (Fig. 45)

Ekip T&P is a kit that includes different components for programming and testing the electronic protection trip units.

The kit includes:

- Ekip T&P unit;
- · Ekip TT unit;
- · adaptors for Emax and Tmax trip units;
- USB cable to connect the T&P unit to the Ekip trip units;
- installation CD for Ekip Connect and Ekip T&P interface software.

The Ekip T&P unit is easily connects from your PC (via USB) to the trip unit (via mini USB) with the cable provided.

The Ekip T&P unit can perform simple manual or automatic tests on the trip unit functions. The Ekip T&P will also provide the ability to conduct more advanced function testing that allows the addition of harmonics and the shifting of phases to more accurately represent the real conditions of an application. Thus, leading to more concise protection function parameters that may be required for critical applications. It can also generate a test report as well as help you to monitor maintenance schedules.



Fig. 46

## Ekip Programming Module (Fig. 46)

The Ekip Programming module is used for programming Ekip trip units via USB to a PC using the Ekip Connect software that can be downloaded on-line. This can be useful for uploading/downloading entire sets of parameters for multiple breakers both for set-up as well as for maintenance (for periodic cataloging breaker parameters in case of a catastrophic situation).

# **Service**



# Extended warranty

For ABB Low Voltage circuit breakers, extending the 1-year standard factory warranty to up to 5 years has never been so simple.

Extended warranty activation can be requested after the online registration in the Extended Warranty tool. This web-tool verifies that the application of the circuit breaker is within the recommended guidelines, and grant the registration of the circuit breaker.

When end users details are registered, one year of extra warranty is offered free-of-charge.


Extended Warranty can be ordered by following the steps:

- 1) Registration in the online tool (Extended Warranty Tool) to verify the application.
- 2) Extended Warranty part number(s) and registration code received by email
- 3) Place the order of the circuit breaker(s) together with:
  - Extended warranty part number(s)
  - Unique registration code

### Warranty coverage:

- Any possible issues related to circuit breaker quality for the complete extra warranty time
- Accessories mounted by the factory only.



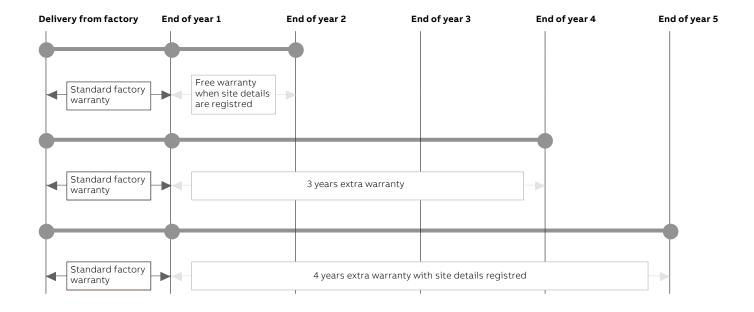




# Spare parts

The following original and guaranteed spare parts are available:

- · Accessories and Safety Covers
- Closed Door lock lever
- Closing Spring
- Conversion kit from Fixed to Moving part
- Conversion kit from Moving Part into Fixed version
- Conversion kit into Switch Disconnector MS
- Earth sliding contacts
- Fixing screws kit
- · Arching chambers
- · Jaw contacts
- Moving part Terminals
- Poles
- Kit front cover plugs
- · Lateral guides for Fixed and Moving part
- Left and Right plates for accessories (Left MID, Right MID)

- · Main board
- · Lifting plates
- Main board + Sensors + cables
- Operating mechanism
- Racked in and out device
- Racking in and out lever
- Safety shutters for fixed part
- Side walls
- Sliding contacts/ Terminal Box
- Transparent cover
- Trip coil
- Trip Unit Battery
- Tripping mechanism
- Spring charging device
- Spring Charging lever.

For further details, please refer pag 296-301 or to ABB SACE Spare Parts Catalogue (1SDC001007D0203).

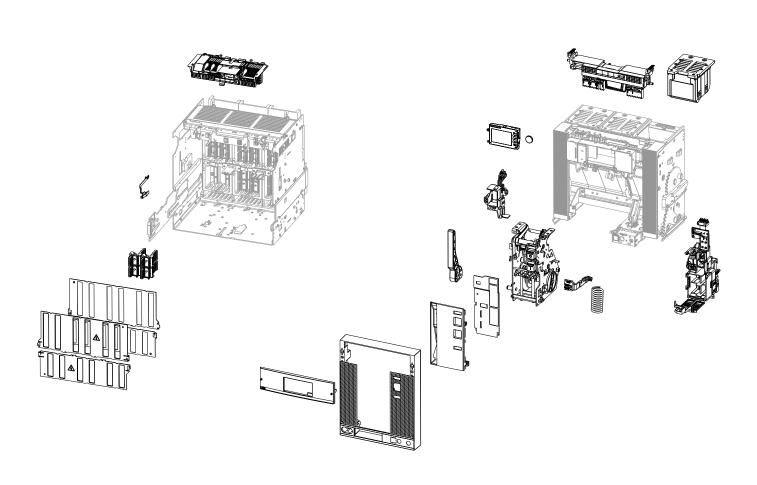

# CHAPTER 7

# Installation

<b>130</b> -137	Circuit-breaker
<b>131</b> -131	Sizes
<b>132</b> -132	Versions
<b>133</b> -133	Poles
<b>134</b> -134	Terminals
<b>135</b> -135	Degree of protection
<b>135</b> -135	Power losses
<b>136</b> -136	Temperature derating
<b>137</b> -137	Current-limiting curves
<b>138</b> -141	Installation environment
<b>138</b> -138	Temperature
<b>138</b> -138	Environmental conditions
<b>139</b> -139	Vibration
<b>139</b> -139	Electromagnetic compatibility
<b>142</b> -144	Installation in switchgear
<b>142</b> -142	Position
<b>142</b> -142	Power supply
<b>142</b> -142	Insulation distances and connection
<b>143</b> -143	Earthing connection
<b>144</b> -144	Busbar types
<b>144</b> -144	Accessories
<b>145</b> -152	Performance in switchgear

# Circuit-breaker

The new SACE Emax 2 family maintains the characteristics of strength and reliability that have always distinguished the tradition of ABB SACE air circuit breakers.

The new SACE Emax 2 circuit breakers, available in four sizes, are extremely compact due to their new dimensions: with reduced depths and heights, combined with standarized widths, they provide the answer to the most stringent installation requirements.


Safety is guaranteed thanks to the double insulation of the live parts and total segregation of the phases. Furthermore, the new functional design of the SACE Emax 2 circuit breakers has been developed with the purpose of improving installation operations and use of the devices and accessories; making them simple, intuitive and safe.

Distinctive cha	racteristics	Benefits
	- Ekip protection trip units are interchangeable from front of circuit breaker	Reduced times during the stages of:
	- Rapid configuration of the Ekip trip units	- installation wiring
	<ul> <li>Electronic modules can be installed on terminal box without removing the electronic trip units and protection shield</li> </ul>	- configuration - commissioning
	- Electrical plug-in accessories can be installed from the front of circuit breaker	- maintenance
Simplicity of	- New push-in terminal box allows rapid auxiliary connections	- - Increased level of safety
use and safety	- Horizontal or vertical rear connections can be modified on-site by turning 90°	- increased level of safety
	- Accessorizing logic common to the entire family of circuit breakers	-
	- Accessory cabinet and terminal box are stamped with accessory codes for easy identification	-
	- Accessories area is separated functionally from the safety area	-
	- Mechanical safety locks in open position are active when the shield is removed	-
	- Guided racking in and out of the mobile part	-

# Sizes

The SACE Emax 2 circuit breakers, available in 4 sizes up to 6300A, provide:

- Versatility, where installation space is a critical and influential factor, such as naval applications, wind turbine towers or switchgear
- Opportunities, optimization of the dimensions of the electrical switchgear results in a potential reduction in the consumption of the materials used.

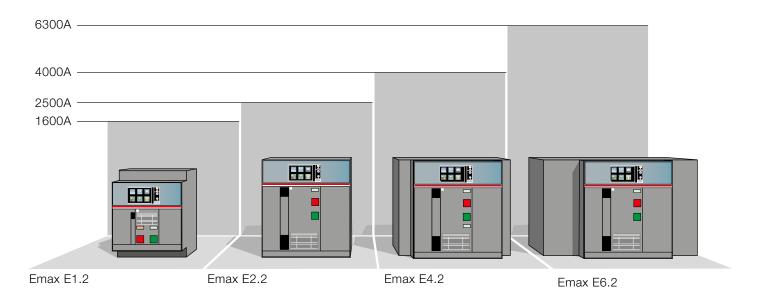

# Circuit-breaker

# Versions

The SACE Emax 2 circuit breakers are available in both fixed and withdrawable versions. The withdrawable version is recommended in applications in which service continuity is a fundamental requirement.

Replacement of the moving part with a new device does not require any intervention on power connections or on auxiliary connections, thus permitting reset in the shortest time possible.

The fixed version, which is connected directly to power system through the circuit breaker terminals, is recommended in applications in which the need for space means that compact products are required without compromising the performance and possibility of fitting accessories.

- 1. Moving part
- 2. Sliding contacts
- Fixed part
   Terminal box
- 5. Racking-out mechanism
- 6. Racking-out guide rails
- 7. Pushbuttons
- 8. Data label and accessories

## **Fixed**



## Withdrawable



# Poles

SACE Emax 2 circuit breakers are available in three-pole and four-pole versions and can be used in all types of distribution systems. Furthermore, with the possibility of connecting the external current sensor, three-pole circuit breakers can be used efficiently even in systems in which the neutral conductor cannot be isolated.

The four-pole circuit breakers E1.2, E2.2 and E4.2 are always provided with full-size neutral pole with rated uninterrupted current-carrying capacity identical to the phase poles. The E6.2 circuit-breakers, thanks to their construction modularity,

are available with neutral set at 50 percent of normal supply and with full-sized neutral, so that the customer does not need to oversize the neutral unless strictly necessary.

The standard supplied circuit breakers are suitable for connection of phases in the sequence L1, L2, L3 for three-pole circuitbreakers, or N, L1, L2 and L3 for four-pole circuit breakers with neutral on the left; a special optional kit enables the position of the circuit breaker neutral to be changed to the right, making the sequence L1, L2, L3, N available (refer to page 9/53 for the commercial codes).

Circuit-breaker	Standard version		Optional version with neutral on the righ		
	Three-pole	Four-pole	Four-pole		
Emax E1.2	L1 L2 L3	N L1 L2 L3	L1 L2 L3 N		
Emax E2.2	* * *	* * * *	$\star$ $\star$ $\star$ $\star$		
Emax E4.2					
Emax E6.2					

# Circuit-breaker

# **Terminals**

The integration of the circuit breaker in the electrical system is simplified because of the connection terminals of the circuit breakers.

The silver-plated copper terminals are designed to assist installation of connecting bars according to the change in the rated capacity of the circuit- breaker. Each terminal has been created to

the standard width of busbar for that amperage and is equipped with one, two or three terminal stabs for easy connection to multiple bus runs that may be required for the application. For particular installation requirements, the circuit breakers can be equipped with different combinations of terminals for the upper and lower part.

Туре	Abbreviation	E1.2	E2.2	E4.2	E6.2
Rear adjustable terminal <sup>(1)</sup>	HR VR	F, W	F, W	F, W	F, W
Horizontal rear spread terminal	SHR	W	F, W	F, W	
Vertical rear spread terminal	SVR		F, W	F, W	
Front terminal	F	F	F, W	F, W	F, W
Extended front terminal	EF	F, W			
Front spread terminal	ES	F, W			
Terminal for cable FcCuAl 4x240mm²	Fc CuAl	F, W			
Flat terminal	FL		W	W	w

# Degree of protection

The SACE Emax 2 circuit breakers guarantee the following degrees of protection:

- IP20 for circuit breakers in fixed or withdrawable versions, excluding the terminals.
- IP30 for the front parts of the circuit breaker when installed in switchgear with IP30 flange mounted on the door.
- IP54 for circuit breakers equipped with optional IP54 transparent flange fixed on the door in front of the switchgear.

# Power losses

To guarantee the performance of the electrical switchgear in terms of rated uninterrupted current-carrying capacity, the design of the electrical switchgear must take into consideration the power losses of the apparatus and by live parts installed.

These power losses are measured according to IEC60947 product standard. The values given in the table below refer to total power for three and four pole circuit breakers with balanced loads with a current flow equal to rated uninterrupted current "Iu" at 50/60Hz.

Circuit-breake	r type	lu	630A	800A	1000A	1250A	1600A	2000A	2500A	3200A	4000A	5000A	6300A
	E1.2 B/C/N	[W]	31	50	78	122	201	-	=	-	-	=	-
etd	E2.2 B/N/S/H	[W]	-	34	53	83	136	212	267	-	-	-	-
Fixed	E4.2 N/S/H/V	[W]	-	-	-	-	-	-	-	425	465	-	-
	E6.2 H/V/X	[W]	-	-	-	-	-	-	-	-	309	483	767
	E1.2 B/C/N	[W]	62	100	156	244	400	-	_	-	-	-	-
Nettedo al consecue de la c	E2.2 B/N/S/H	[W]	-	72	113	176	288	450	550	-	-	-	-
Withdrawable	E4.2 N/S/H/V	[W]	-	-	-	-	-	-	-	743	900	-	-
	E6.2 H/V/X	[W]	-	-	-	_	-	-	_	_	544	850	1550

# Circuit-breaker

# Temperature derating

Under certain installation conditions, the circuitbreakers can operate at higher temperatures than the reference temperature of 40 °C. In this case the current-carrying capacity of the circuitbreaker may be lower than the rated currentcarrying capacity at the reference temperature: therefore the derating coefficients shown in the table must be applied. Percentage values refer to withdrawable and fixed circuit breaker. If not specified, all data refer to a copper according to IEC60947.

Emax 2 E1.2		Cross section	section Temperature [°C]										
			<40	45	50	55	60	65	70				
E1.2	250		100%	100%	100%	100%	100%	100%	100%				
E1.2	630		100%	100%	100%	100%	100%	100%	100%				
E1.2	800		100%	100%	100%	100%	100%	100%	100%				
E1.2	1000		100%	100%	100%	100%	100%	100%	100%				
E1.2	1250		100%	100%	100%	100%	100%	100%	100%				
E1.2	1600		100%	100%	100%	98%	95%	93%	90%				
E1.2	1600	1200 mm <sup>2</sup>	100%	100%	100%	100%	97%	95%	92%				
Emax	2 E2.2	Cross section	n Temperatu	re [°C]	1	1							
			<40	45	50	55	60	65	70				
E2.2	250		100%	100%	100%	100%	100%	100%	100%				

Emax 2 E2.2		Cross section Te	emperatu	ıre [°C]					
		<4	40	45	50	55	60	65	70
E2.2	250	10	00%	100%	100%	100%	100%	100%	100%
E2.2	800	10	00%	100%	100%	100%	100%	100%	100%
E2.2	1000	10	00%	100%	100%	100%	100%	100%	100%
E2.2	1250	10	00%	100%	100%	100%	100%	100%	100%
E2.2	1600	10	00%	100%	100%	100%	100%	100%	98%
E2.2	2000	10	00%	100%	100%	100%	95%	91%	87%
E2.2	2500	10	00%	100%	100%	100%	98%	94%	90%

Emax 2 E4.2		Cross section	n Temperatu	Temperature [°C]							
			<40	45	50	55	60	65	70		
E4.2	2000		100%	100%	100%	100%	100%	100%	100%		
E4.2	2500		100%	100%	100%	100%	100%	100%	100%		
E4.2	3200	3000 mm²	100%	100%	97%	93%	89%	86%	82%		
E4.2 (*)	3200	3000 mm <sup>2</sup>	100%	100%	100%	100%	95%	93%	89%		
E4.2	4000	4000 mm <sup>2</sup>	100%	100%	97%	93%	89%	86%	83%		

<sup>(\*)</sup> Three stabs terminal kit only for withdrawable version

Emax 2 E6.2		Cross section Temperature [°C]								
			<40	45	50	55	60	65	70	
E6.2	4000	4000 mm <sup>2</sup>	100%	100%	100%	100%	100%	100%	100%	
E6.2	5000	5000 mm <sup>2</sup>	100%	100%	100%	100%	100%	98%	95%	
E6.2	6300	6000 mm <sup>2</sup>	100%	100%	95%	91%	87%	84%	81%	

# Current-limiting curves

The SACE Emax 2 series features a series of current-limiting circuit breakers in sizes E1.2 up to 1600A. These circuit breakers are distinguished constructively by:

- Dedicated stored energy operating mechanism, which reduces opening times.
- Specific main contacts that, utilizing the electrodynamic forces generated by the short-circuit current, accelerate opening of the main contacts.

These features ensure rapid interruption which consequently reduces electromechanical and thermal stress on the system during a short-circuit.

The current-limiting circuit breakers are distinguished by short-time withstand currents Icw that are not particularly high and therefore not indicated for applications in which chronoamperometric selectivity is required with several downstream devices or in which devices are present with high inrush current in the start-up stage.

# Installation environment

SACE Emax 2 circuit breakers have been designed and tested in accordance with major international Standards to manage the electrical plant.

The installation requirements prescribed by the international Standards are listed below.

In addition, ABB provides instructions for the use of circuit breakers in nonstandard environments, as for example personalized maintenance program or installation solutions aimed at increasing performances and extending the lifecycle of the circuit breaker.

# Temperature

SACE Emax 2 circuit breakers can operate in the following environmental conditions:

	Temperature (°C)		
	Operating	Active Display	Storage
Emax 2 with Ekip DIP	-25°C +70°C	-	-40°C +70°C
Emax 2 with Ekip Touch	-25°C +70°C	-20°C +70°C	-30°C +70°C
Emax 2 with LCD	-25°C +70°C	-25°C +70°C	-40°C +70°C
Emax 2 swith-disconnectors	-25°C +70°C	-	-40°C +70°C

# Environmental conditions

The devices can be installed in industrial environments with pollution level 3, IEC60947. SACE Emax 2 circuit breakers also comply with:

- IEC60721-3-6 class 6C3
- IEC60721-3-3 class 3C2

### **Altitude**

SACE Emax 2 air circuit breakers do not undergo changes in rated performance up to 2000 metres. Beyond this altitude, the properties of the atmosphere in terms of composition, dielectric capacitance, cooling power and pressure can vary and, therefore, the performance of the circuit breakers is subject to derating, which can be measured by means of the variation in maximum rated service voltage and rated uninterrupted current.

Altitude		[m]	2000	3000	4000	5000
Rated service voltage - Ue	Versions 690V	[V]	690	607	538	470
Rated current		[% In]	100	98	93	90

An installation at 3000 m of a 690V AC rated service voltage can be an explicative example. The altitude, as shown in the table, may cause a derating which precludes the use of a standard automatic circuit breaker. To use a circuit breaker at a 690 V AC service voltage, a 1,150 V AC version has to be used. This version, even after derating, fulfils the service voltage required. In addition, the selection of the circuit breakers has to be based on the short -circuit performance required by the application.

# Electromagnetic compatibility

The use of specific devices in industrial installations may cause electromagnetic interference in the electrical system. SACE Emax 2 circuit breakers have been developed and tested for electromagnetic compatibility in accordance with IEC 60947-2, Appendices J and F.

# Vibration


The circuit breakers have been tested according to:

- IEC60068-2-6
- From 1 to 13 Hz with amplitude 1mm
- From 13 to 100 Hz with constant acceleration 0.7g
- IEC60721-3-1
- Storage: 1M3
- IEC60721-3-2
- Transport: 2M2
- IEC60721-3-3
- Operational conditions: 3M2
- Shipping registers or certifications

# Installation environment

Due to the four construction sizes and the reduced insulation distances required, SACE Emax 2 circuit breakers optimize the installation spaces


of the compartments of electrical switchgear, thereby providing a rational solution to the customers' application needs.

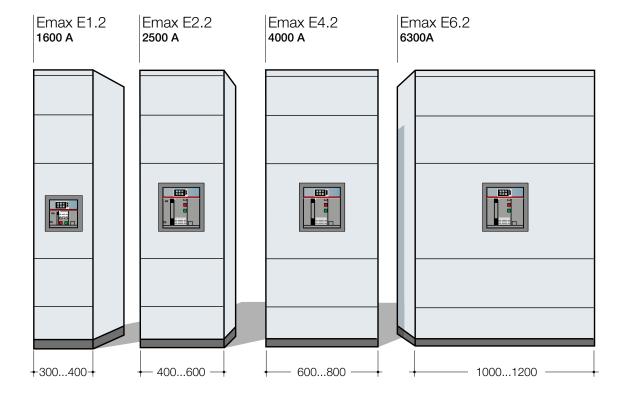


SACE Emax 2 circuit breakers enable the design of electrical switchgear to be improved, optimization in terms of performance and also in the use of the main materials:

- Copper: thanks to the possibility of developing compact units, the length of the distribution system / busbar can be minimized.
- Metal frame and structure: reduced volumes also mean less surface space is used for panels and internal structures.
- Space: the optimization of the individual units benefits the entire switchgear, which is more compact and can therefore be installed taking up less surface space.

# Traditional circuit breaker 3p lu 2500A

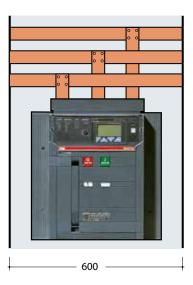

# Emax E2.2 3p Iu 2500A

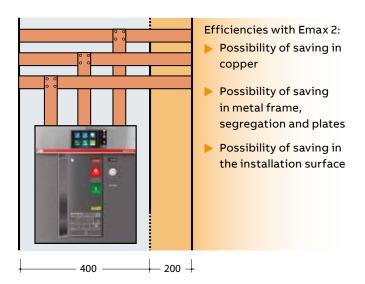

# Installation in switchgear

# Position

All SACE Emax 2 circuit breakers can be floor mounted in a vertical position inside the switch-gear compartment.

The E1.2 circuit breaker can also be installed in a horizontal position and wall mounted. Conveniently, the screens of the Ekip Touch and Hi-Touch versions rotate to a horizontal view for key data when the E1.2 is installed horizontally.

# Power supply

The Emax 2 circuit breakers can be supplied, from either the upper or lower terminals. In the event a measurement module is present, in order to make use of all information when the circuit breaker is in the open position, the voltage sockets must be installed on the power supply side.

# Insulation distances and

# connection

The circuit breakers can be connected to the main power system using the most common configurations and dimensions of copper bars. Installation of live parts must ensure:

 Minimum insulation distances between the phases

Rated insulation voltage Ui	Minimum distance [mm]
1000V	for voltages upper to 440V in fixed circuit breakers,
	please use phase separators

· Insulation distance of installation cubicle

# Fixed circuit breakers


Α	В	C	D	
3р	4P			
250	322	382.5*	130	
400	490	500	221	
500	600	500	221	
900	1000	500	221	
-	1200	500	221	
	3p 250 400 500 900	3p         4P           250         322           400         490           500         600           900         1000	3p         4P           250         322         382.5*           400         490         500           500         600         500           900         1000         500	3p         4P           250         322         382.5*         130           400         490         500         221           500         600         500         221           900         1000         500         221


<sup>\* 332.5</sup>mm for voltage less  $\leq$  440V AC

# Withdrawable circuit breakers

	Α	В	С	D	
[mm]	3р	4P			
E1.2	280	350	440*	252	
E2.2	400	490	500	355	
E4.2	500	600	500	355	
E6.2	900	1000	500	355	
E6.2/f	-	1200	500	355	

<sup>\* 390</sup>mm for voltage less  $\leq$  440V AC

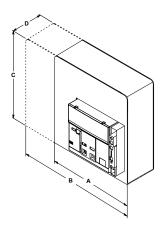

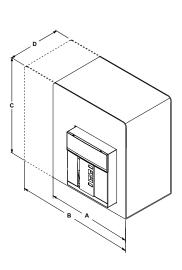


INSTALLATION 143

### Anchorage plates

The electrodynamic force released during a short-circuit can cause high levels of mechanical stress on the devices and structures of the

switchgear. To minimize this, fastening plates must be positioned near the circuit breaker terminals.

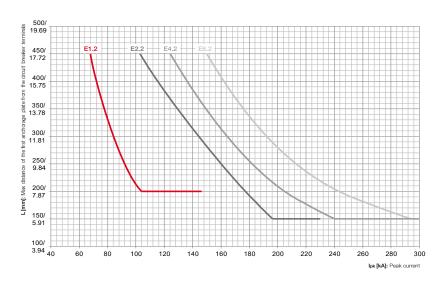

### Tightening torques

The following table indicates the values required for connecting the circuit breaker terminal and the connecting bars.

Terminals	E1.2	E2.2 / E4.2 / E6.2
Modifiable HR/VR rear	40 Nm	70 Nm
Spread rear	40 Nm	70 Nm
Front	40 Nm	70 Nm
Extended front	40 Nm	70 Nm
Spread front	70 Nm	70 Nm
Front for cables	43 Nm	70 Nm

### Segregation plates and separator plates

The rear part of the circuit breaker has been designed with specific slots in which insulating walls can be housed to facilitate segregation of live parts. In addition, phase separators are available as optional accessories.

### Earthing connection

To achieve continuity and equal potential of earthing between the Emax 2 circuitbreaker and the protection circuit of the switchboard, customers can do either of the options below:

- Connect the Emax 2 fixed circuit breaker or the fixed part of the withdrawable circuit breaker to the protective circuit by means of a cable with suitable crosssectional area to fulfil the requirements of clause 10.5.2 of the Standard IEC 61439-1.
- If the continuity of the circuit breaker frame
  with the switchboard earthing is guaranteed by
  the metal contact (support) between the circuit
  breaker and the metal structure of the switchboard (which is a part of the protective circuit)
  no connection is necessary (provided that no
  panels of insulating material are interposed between the circuit breaker and the metal frame
  of the switchboard).

Emax E1.2, fixed version, does not require any earthing connection.

# Installation in switchgear

### Busbar types


The circuit breakers, via the terminals, can be connected to the main distribution system by busbars of different types: copper, silver-plated copper and tinned aluminium when the main distribution system is made of aluminium.

The circuit breakers can be connected directly with copper or aluminium cables in the case of E1.2 circuit breakers, or indirectly by cable-carrying bars in the case of E2.2, E4.2 and E6.2.

### Accessories

The SACE Emax 2 circuit breakers offer a wide range of accessories that improve safety levels for technicians working on the switchgear and circuit breakers. Furthermore, thanks to the different types of mechanical interlock available, pre-determined coordination strategies can be achieved between the circuit breakers. In detail:

- · Horizontal and vertical interlocks between circuit breakers
- · Door lock with circuit breaker in closed position
- Switchgear door lock in racked-in/out position
- · Lock of racked-out mechanism with door open
- · External lock of shutters
- Flange for switchgear door IP30 and IP54 sories, see chapter 5.

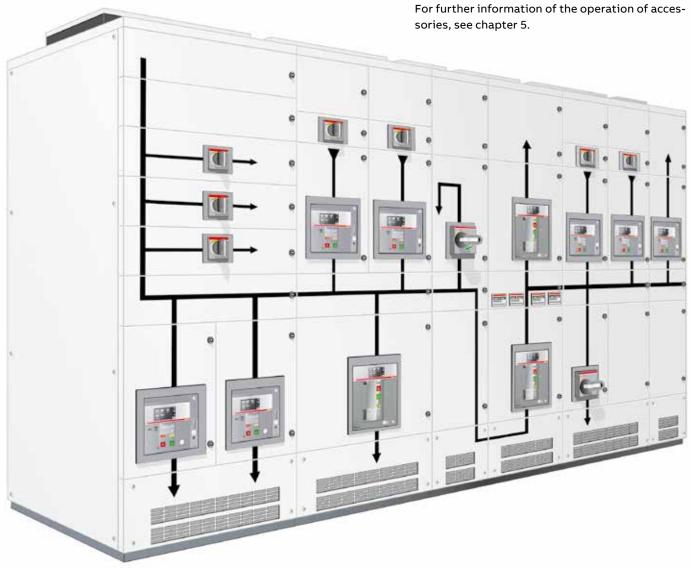

INSTALLATION 145

# Performance in switchgear

The many types of switchgear that can be created and the installation and environmental conditions can considerably influence the performance of the circuit breaker. In this regard, SACE Emax 2 circuit breakers offer the best solution for improving the capacity in switchgear.

The following application situations have been assessed by taking into consideration the main factors that can influence the performance of the circuit breaker in switchgear:


- · Type of switchgear
- Switchgear degree of protection
- Segregation form 3
- · Size of circuit breaker
- Number of devices connected at the same time in the unit
- Type of terminal and connection
- Ambient temperature Ta (IEC61439-1)
- · Withdrawable circuit breakers
- Maximum with stand temperature for the terminal 120° C

# Performance in switchgear

The following tables provide an indication of the performance of the apparatus inside the switch-gear. The data shown are a summary of software model simulations and real tests.

SACE Emax 2 E1.2 B C N Circuit-breaker Switchgear dimensions 2200x400x600 (HxWxD)

HR Terminal
One circuit breaker in the column

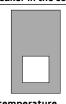

Connection [mm] 35 °C 55 °C lu Compartment 45 °C IP31 630 2x40x5 1 630 630 630 2 800 2x50x5 1 800 800 800 2 2x50x10 1 1000 1000 1000 1000 2 2x50x8 1 Compartment 2 2 2x50x10 1 1250 1250 1200 1250 Compartment 1 2 2x50x8 1 2 3x50x8 1 1360 1290 1440 1600 2 2x50x10 1

Performances with EF, SHR and F terminals can be compared, with the same connection sections, to the performances of circuit breaker with HR terminal. Performances with ES terminals can be compared to the VR terminals.

 $Performances\ with\ FC\ CuAl\ terminals,\ with\ cables\ in\ the\ prescribed\ sections,\ can\ be\ compared\ to\ HR\ performances.$ 

Performances depend on switchboard design and testing condition. ABB is not responsible for the overall performances result.

INSTALLATION 147

HR Tern Two cire	ninal cuit breakers in the	column	VR Termina One circuit	al t breaker in the c	olumn	VR Termina Two circui	al t breakers in the	column
	ment temperature			nt temperature			nt temperature	
35 °C	45 °C	55 °C	35 °C	45 °C	55 °C	35 °C	45 °C	55 °C
630	630	630				630	630	630
630	630	630	630	630	630	630	630	630
800	800	800				800	800	800
800	800	800	800	800	800	800	800	800
970	930	900						
1000	960	920						
						1000	1000	950
			1000	1000	1000	1000	1000	970
1200	1150	1100						
1250	1200	1140	,					,
		,				1250	1250	1150
			1250	1250	1250	1250	1250	1200
1330	1260	1220						
1370	1315	1262						
						1430	1355	1265
			1520	1440	1330	1475	1415	1310


# Performance in switchgear

The following tables provide an indication of the performance of the apparatus inside the switchgear. The data shown are a summary of software model simulations and real tests.

SACE Emax 2 E2.2 B N S H Circuit-breaker Switchgear dimensions 2200x600x900 (HxWxD)

lu

**HR Terminal** One circuit breaker in the column

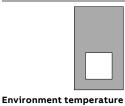

55 °C

35 °C Connection [mm] Compartment

	connection [mm]	compartment	55 C	45 C	55 C
000	16010	2			
800	1x60x10	1	800	800	800
1000	1,,00,,10	2			
1000	1x60x10	1	1000	1000	1000
1250	2x60x10	2			
1250 2860810	2X60X10	1	1250	1250	1250
2::00::10	2x60x10	2			
1600	2x60x10	1	1600	1540	1480
1600	1x100x10	2			
1x100>	1x100x10	1			
25010	3v60v10	2			
	3x60x10	1	2000	1940	1850
	2x80x10	2			
2000		1			
2000	3x60x10 *	2			
	3x00x10	1	2000	2000	1940
	2x80x10 *	2			
	2300310	1			
	3x60x10	2			
	3x60x10	1	2500	2350	2200
	4x100x5	2			
2500	4X100X5	1			
2500	2,,60,,10 *	2			
	3x60x10 *	1	2500	2460	2320
	4v100v5 *	2			
4x100x5 *	4X1UUX5 ^	•			

<sup>\*</sup> Performances refer to SHR and SVR terminals.

Performances with F and FL terminals can be compared to the performance of circuit breakers with HR terminals.

 $Performances \ depend \ on \ switchboard \ design \ and \ testing \ condition. \ ABB \ is \ not \ responsible for \ the \ overall \ performances \ result.$ 

INSTALLATION 149

HR Termir	ial it breakers in the	column	VR Termina	l breaker in the c	olumn	VR Termina		column
TWO CITCU	The breakers in the	Column	One circuit	Dreaker in the C	ounin	Two circuit breakers in the col		Column
Environm	ent temperature		Environme	nt temperature		Environme	nt temperature	
35 °C	45 °C	55 °C	35 °C	45 °C	55 °C	35 °C	45 °C	55 °C
800	800	800				800	800	800
800	800	800	800	800	800	800	800	800
1000	1000	1000				1000	1000	1000
1000	1000	1000	1000	1000	1000	1000	1000	1000
1250	1250	1250				1250	1250	1250
1250	1250	1250	1250	1250	1250	1250	1250	1250
1470	1410	1360						
1550	1490	1430						
						1500	1470	1400
			1600	1600	1520	1580	1550	1475
1920	1810	1720						
1950	1850	1760						
						1950	1860	1760
			2000	2000	1920	2000	1920	1810
2000	1900	1810						-
2000	1945	1850						
						2000	1950	1850
			2000	2000	2000	2000	2000	1900
2280	2200	2100						
2400	2310	2170						
						2400	2270	2160
			2500	2450	2350	2500	2380	2270
2394	2310	2205						
2500	2430	2280						
						2500	2390	2270
			2500	2500	2460	2500	2500	2380

# Performance in switchgear

The following tables provide an indication of the performance of the apparatus inside the switch-gear. The data shown are a summary of software model simulations and real tests.

SACE Emax 2 E4.2 N S H V Circuit-breaker Switchgear dimensions 2200x800x900 (HxWxD)

				HR Term One circ		n the column	VR Term One circ		n the column
					ment temper			ment temper	
P	lu		Compartment		45 °C	55 °C	35 °C	45 °C	55 °C
P31	2000	[mm] 2x80x10	1	2000	2000	2000	2000	2000	2000
Compart- ment 2	2500	2x100x10	1	2500	2450	2400	2500	2500	2500
Compart- ment 1	3200	3x100x10	1	3050	2900	2755	3200	3080	2920
	3200	3x100x10*	1	3200	3050	2850	3200	3200	3020
	4000	4x100x10	1	3450	3200	2970	3650	3400	3200

<sup>\*</sup> Performances refer to withdrawable circuit breakers with a fixed part accessorized with three stab rear terminals for 4000A (Example: 1SDA074021R1 - KIT VR 4000A) Performances with F and FL terminals can be compared to the performances of circuit breaker with HR terminal.

Performances depend on switchboard design and testing condition. ABB is not responsible for the overall performances result.

INSTALLATION 151

The following tables provide an indication of the performance of the apparatus inside the switch-gear. The data shown are a summary of software model simulations and real tests.

### SACE Emax 2 E6.2 H V X Circuit-breaker Switchgear dimensions 2200x1200x900 (HxLxD)

				HR Term One circ		n the column	VR Term One circ		n the column
				Envison	ment temper		Envison	ment temper	
IP	lu	Connection [mm]	Compartment		45 °C	55 °C	35 °C	45 °C	55 °C
IP31	4000	4x100x10	1	4000	4000	4000	4000	4000	4000
Compart- ment 2	5000	5x100x10	1	5000	5000	4900	5000	5000	5000
ment 1	6300	6x100x10	1	5650	5350	5100	6000	5700	5250

 $Performances\ with\ F\ and\ FL\ \ terminals\ can\ be\ compared\ to\ the\ performances\ of\ circuit\ breaker\ with\ HR\ terminal.$ 


CHAPTER 8

# **Dimensions**


<b>154</b> -171	Fixed circuit-breaker
<b>156</b> -159	E1.2
<b>160</b> -163	E2.2
<b>164</b> -167	E4.2
<b>168</b> -171	E6.2
<b>172</b> -194	Installation environment
<b>174</b> -177	E1.2
<b>174</b> -177 <b>178</b> -183	E1.2 E2.2

# Fixed circuit-breaker

E1.2

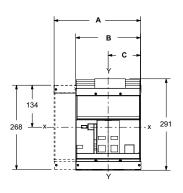


E2.2 - E4.2 - E6.2

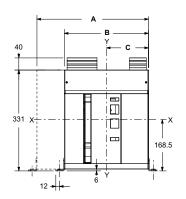


	Α	В	С	
[mm]	4p	3р	3р	4p
E1.2	284	214	107	107
E2.2	366	276	138	138
E4.2	510	384	192	192
E6.2	888	762	318	444
E6.2/f	1014	-	-	444

### Compartment door drilling

E1.2

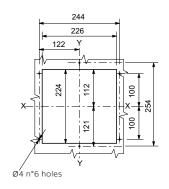


E2.2 - E4.2 - E6.2

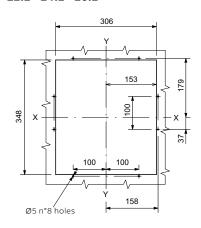


E1.2		Standard	Ronis/STI	Kirk	Castell
A MIN	[mm]	49.5	63.5	63.5	83.5
A MAX	[mm]	83.5	97.5	97.5	117.5

E1.2

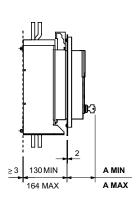


E2.2 - E4.2 - E6.2

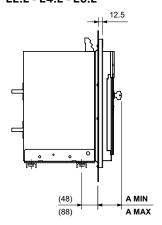

E2.2-E4.	.2-E6.2	Standard	Ronis/STI	Kirk	Castell
A MIN	[mm]	29.5	41.5	46.5	65
A MAX	[mm]	69.5	81.5	86.5	105


### Dimensions of the compartment

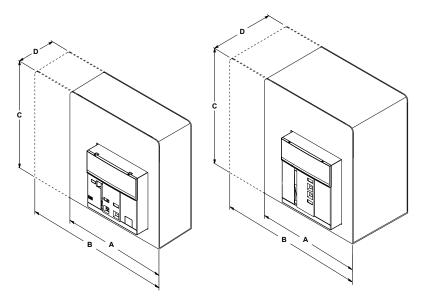

	Α	В	С	D
[mm]	3р	4p		
E1.2	250	322	382.5*	130
E2.2	400	490	500	221
E4.2	500	600	500	221
E6.2	900	1000	500	221
E6.2/f	-	1200	500	221

<sup>\* 332.5</sup> for voltages ≤ 440V AC


## Floor fixing

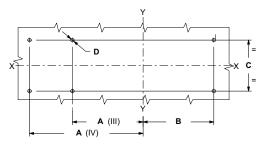

	Α		В		С	D
[mm]	3р	4p	3р	4p		
E1.2	117	187	117	117	80	5.5
E2.2	154	244	154	154	150	10.5
E4.2	208	334	208	208	150	10.5
E6.2	460	460	334	460	150	10.5
E6.2/f	-	586	-	460	150	10.5


### Wall fixing (only for E1.2)

1) for fixing with rear terminals

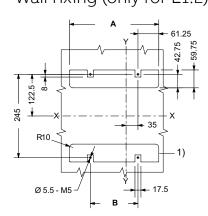


[mm]	3 p	4 p	
A	192.5	262.5	
В	70	140	


## Earthing device E2.2 - E4.2 - E6.2

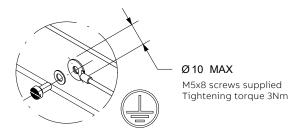


# Fixed circuit-breaker - E1.2


### Front terminals - F

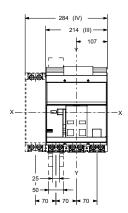


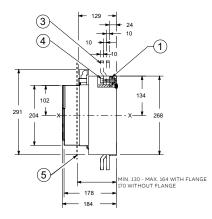

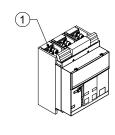


### Extended front terminals – EF

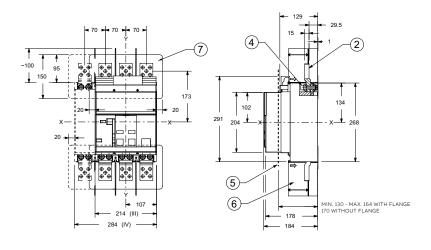

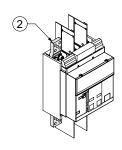





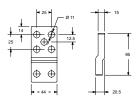


- 1 Front terminals for flat connection
- 2 Extended front terminals
- To be supplied by the customer
- 4 Tightening torque 18Nm
- 5 Door position -
- Ref. page 7/2
- 6 Obligatory phase separators 100mm
- 7 Obligatory insulating plate to be supplied by the customer


### Orientable rear terminals - HR/VR

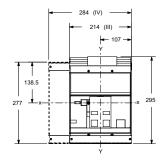


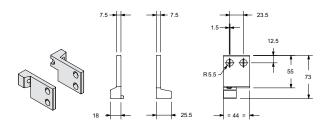


### **Terminals HR**

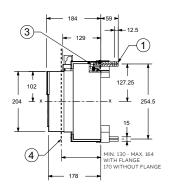


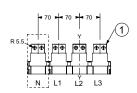


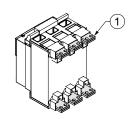

### Terminals VR

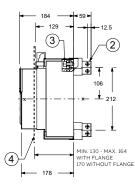

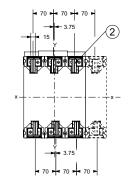

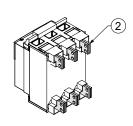



- 1 Horizontal orientable
- terminals HR
  Vertical orientable terminals VR
  Tightening torque 20Nm
- 4 Door position -Ref. page 7/2

# Fixed circuit-breaker - E1.2


Splayed extended front terminals - ES

### 3-pole version

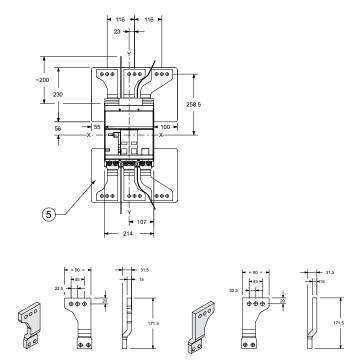

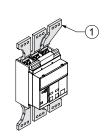


### 4-pole version

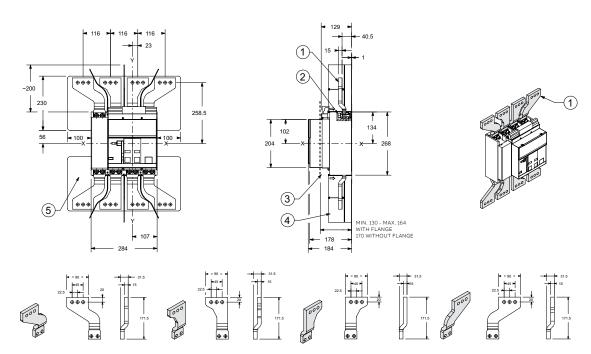

### — Key

- 1 Splayed extended front terminals
- 2 Tightening torque 18Nm
- 3 Door position -
- Ref. page 7/2
- 4 Obligatory phase separators 200mm
- 5 Obligatory insulating plate to be supplied by the customer

### Front terminals for cables – FcCuAl

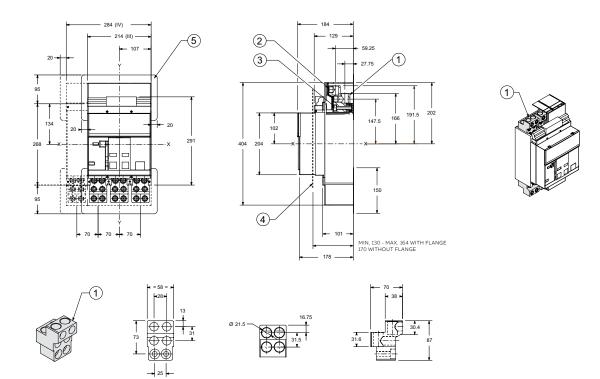

- Key 1 Front terminals for cables FC CU AL
- 2 Tightening torque 43Nm
- 3 Tightening
- torque 18Nm 4 Door position -Ref. page 7/2
- 5 Obligatory insulating plate to be supplied by the customer


# Fixed circuit-breaker - E2.2

### Orientable rear terminals - HR/VR


### E2.2 B/N/S/H 2000A

# 


### E2.2 N/S/H 2500A

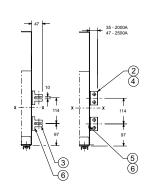

### E2.2 B/N/S/H 2000A

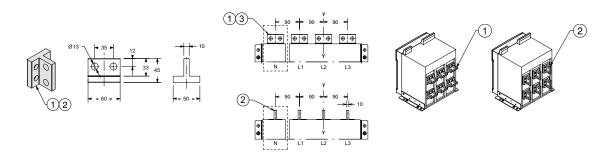


### E2.2 N/S/H 2500A

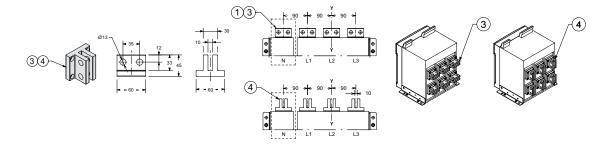



### — Key


- 1 Horizontal terminals 2000A
- 2 Vertical terminals 2000A
- 3 Horizontal terminals2500A4 Vertical terminals
- 2500A 5 Tightening torque 2000A 8.6Nm
- 6 Tightening torque 2500A 8.6Nm
- 7 Door position -Ref. page 7/2
- 8 Earthing device -Ref. page 7/3
- 9 Metallic sheet
- 10 Insulating sheet or insulated metallic

### Front terminals – F

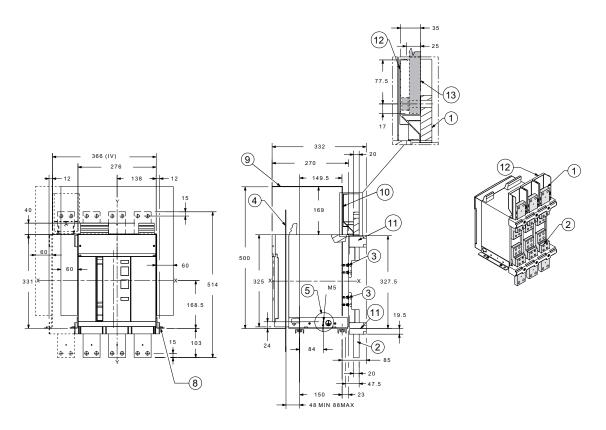

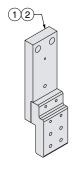

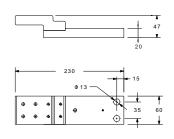

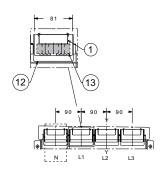

- 1 Upper front terminals
- 2 Lower front terminals3 Tightening torque 8.6Nm
- 4 Door position -Ref. page 7/2
- 5 Earthing device -Ref. page 7/3
- 8 External fixing point. Reccomended screws M10x25 high class

  9 Metallic sheet
- 10 Insulating sheet or insulated metallic
- sheet 11 Crossbeam front terminals
- 12 Plastic protection
- 13 Customer bus bar and screws (not provided)


# Fixed circuit-breaker - E2.2

Horizontal spread terminals – SHR


# (10) 331 168.5

### E2.2 B/N/S/H 2000A

### E2.2 N/S/H 2500A

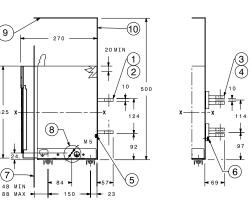


### E2.2 B/N/S/H 2000A

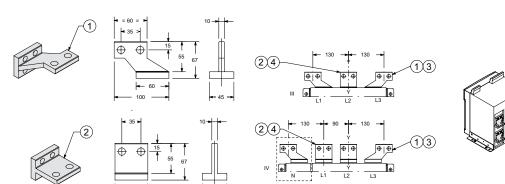



### E2.2 N/S/H 2500A


- Key 1 Side horizontal splayed terminals 2000A
- 2 Central horizontal splayed terminals 2000A
- Side horizontal splayed terminals 2500A
- Central horizontal splayed terminals 2500A
- 5 Tightening torque 2000A 8.6Nm
- 6 Tightening torque 2500A 8.6Nm
- Door position -Ref. page 7/2
- 8 Earthing device -
- Ref. page 7/3 9 Metallic sheet
- 10 Insulating sheet or insulated metallic sheet




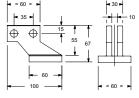

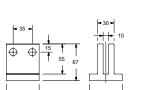


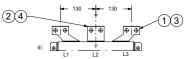


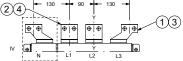


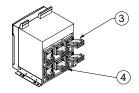

### Vertical spread terminals – SVR

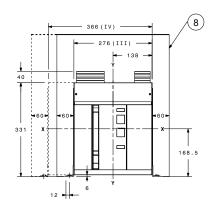


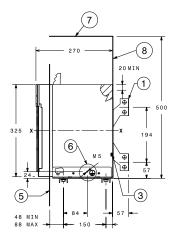


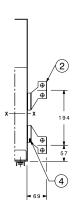


### E2.2 B/N/S/H 2000A



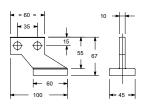


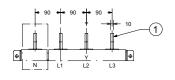


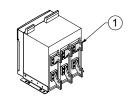


### E2.2 N/S/H 2500A

- Key
  1 Vertical splayed terminals 2000A
- Vertical splayed terminals 2500A
- 3 Tightening torque 2000A 8.6Nm 4 Tightening torque 2500A 8.6Nm
- 5 Door position -Ref. page 7/2 6 Earthing device -
- Ref. page 7/3 Metallic sheet
- 8 Insulating sheet or insulated metallic

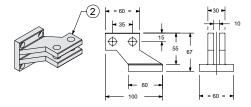

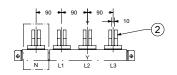

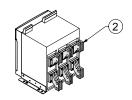


# Fixed circuit-breaker - E4.2


Orientable rear terminals - HR/VR

### E4.2 N/S/H/V 3200A


### E4.2 N/S/H/V 4000A

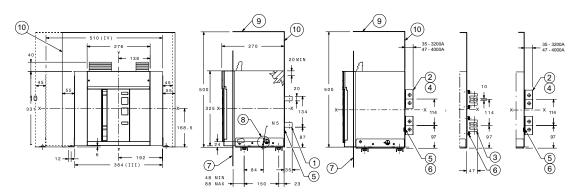

### E4.2 N/S/H/V 3200A

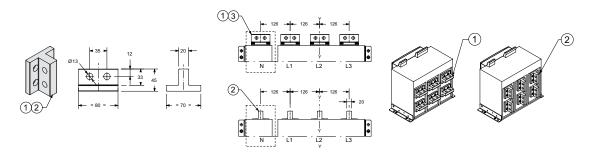



### E4.2 N/S/H/V 4000A

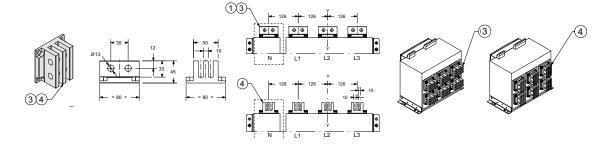



- 1 Horizontal terminals 3200A
- 2 Vertical terminals 3200A
- 3 Horizontal terminals 4000A
- 4 Vertical terminals 4000A
- 5 Tightening torque 3200A 20Nm
- 6 Tightening torque 4000A 20Nm
- 7 Door position -Ref. page 7/2
- 8 Earthing device -Ref. page 7/3
- Ref. page 7/3 9 Metallic sheet
- 10 Insulating sheet or insulated metallic sheet

### Front terminals – F

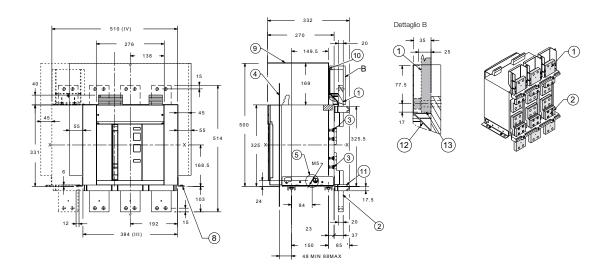

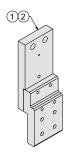

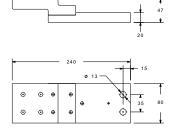

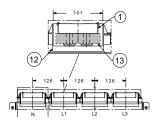

- 1 Upper front terminals
- Lower front terminals
   Tightening
   torque 8.6Nm
   Door position -
- Ref. page 7/2
- 5 Earthing device -
- Ref. page 7/3

  8 External fixing point.
  Reccomended screws M10x25 high class


  9 Metallic sheet
- 10 Insulating sheet or insulated metallic
- sheet
  11 Crossbeam front
  terminals
  12 Plastic protection
- 13 Customer busbar and screws (not provided)


## Fixed circuit-breaker - E4.2


Horizontal spread terminals - SHR

### E4.2 N/S/H 3200A


### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

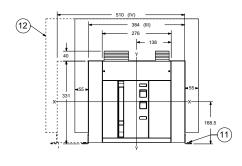


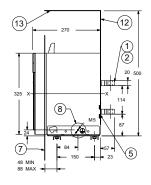


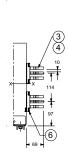


### E4.2 N/S/H 3200A

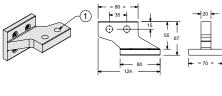

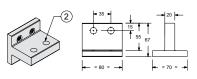

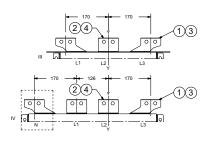


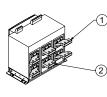



### — Key


- 1 Side horizontal divaricate terminals 3200A
- 2 Central horizontal divaricate terminals 3200A
- 3 Side horizontal divaricate terminals 4000A
- 4 Central horizontal divaricate terminals 4000A
- 5 Tightening torque 3200A 8.6Nm
- 6 Tightening torque 4000A 8.6Nm
- 7 Door position -Ref. page 7/2
- 8 Grounding
- 11 Mounting outside feet - screws recommend M10x25 high class 8.8 or couple superior Tightening tourque 40Nm compulsory fixing screws from high
- 12 Insulating sheet or insulated metallic
- 13 Metallic sheet

### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

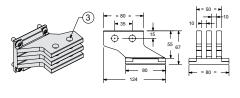


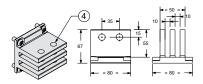


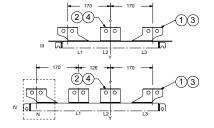


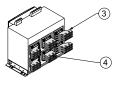


### Vertical spread terminals – SVR

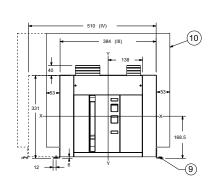


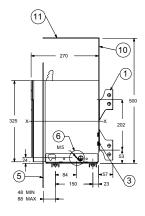

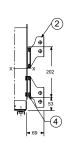

### E4.2 N/S/H 3200A

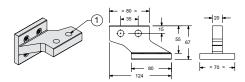

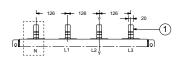





### Key


### 1 Vertical divaricate terminals 3200A

- 2 Vertical divaricate terminals 4000A
- 3 Tightening torque 3200A 8.6Nm
- 4 Tightening torque 4000A 8.6Nm 5 Door position -
- Ref. page 7/2
- 6 Grounding
- 9 Mounting outside feet - screws recommend M10x25 high class 8.8 or couple superior Tightening tourque 40Nm compulsory fixing screws from high
- high
  10 Insulating sheet or insulated metallic sheet
- 11 Metallic sheet

### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

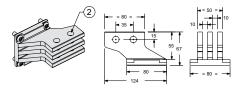

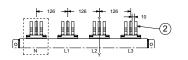

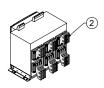



# Fixed circuit-breaker - E6.2

### Horizontal rear terminals - HR


# - 318 (III) Y + 138 •


### E6.2 H/V/X 4000-5000A

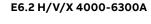


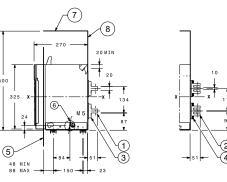


### E6.2 H/V/X 4000-5000A

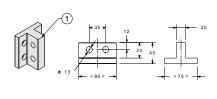


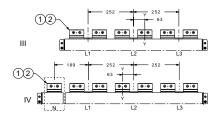


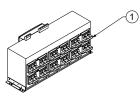

### E6.2 H/V/X 4000-6300A

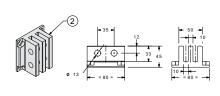


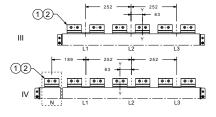

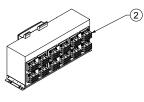


- 1 Horizontal terminals 5000A
- Horizontal terminals 6300A
- Tightening torque 5000A 20Nm
- Tightening torque 6300A 20Nm
- Door position -Ref. page 7/2
- 6 Earthing device -Ref. page 7/3 Metallic sheet
- 8 Insulating sheet or insulated metallic


### Vertical rear terminals – VR

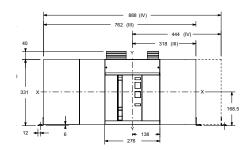



### E6.2 H/V/X 4000...6300A

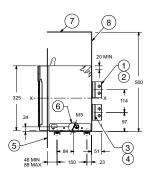


### E6.2 H/V/X 4000-5000A

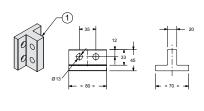


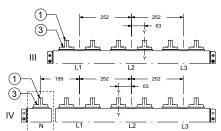


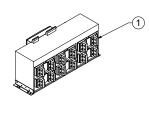

### E6.2 H/V/X 4000-6300A

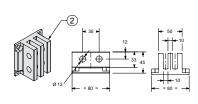

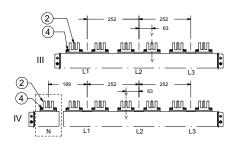

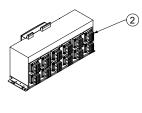


- nals 5000A
- Vertical terminals 6300A Tightening torque
- 5000A 20Nm
- Tightening torque 6300A 20Nm
- Door position -Ref. page 7/2
- 6 Earthing device -Ref. page 7/37 Metallic sheet
- 8 Insulating sheet or insulated metallic sheet


# Fixed circuit-breaker - E6.2

Orientable rear terminals - HR/VR full size


# E6.2 H/V/X 4000-5000A E6.2 H/V/X 4000-6300A 9 138


### E6.2 H/V/X 4000-5000A

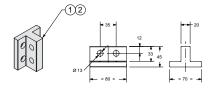

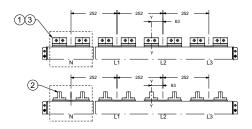


### E6.2 H/V/X 4000-6300A

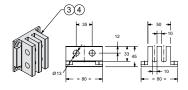


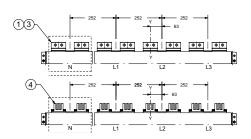


- 1 Horizontal terminals 5000A
- Vertical terminals 5000A
- Horizontal terminals 6300A
- Vertical terminals 6300A
- Tightening torque 5000A 20Nm
- Tightening torque 6300A 20Nm
- Door position -Ref. page 7/2
- 8 Earthing device -
- Ref. page 7/3 9 Metallic sheet
- 10 Insulating sheet or insulated metallic

### Front terminals – F

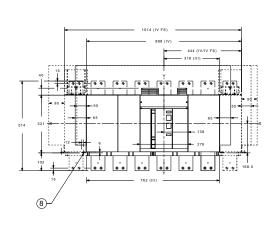


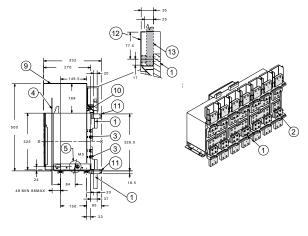



### **Upper front terminals**

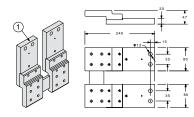


### Lower front terminal

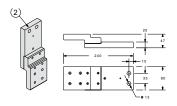

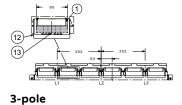

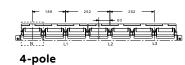

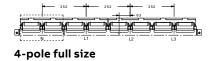


- 1 Upper front terminals
- Lower front terminals
   Tightening
   torque 8.6Nm
   Door position -
- Ref. page 7/2 5 Earthing device -
- Ref. page 7/3


  8 External fixing point.
  Reccomended screws M10x25 high class
- 9 Metallic sheet
- 10 Insulating sheet or insulated metallic
- sheet 11 Crossbeam front terminals
- 12 Plastic protection
- 13 Customer busbar and screws (not provided)

# Withdrawable circuit-breaker

E1.2

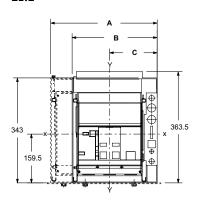


E2.2 - E4.2 - E6.2

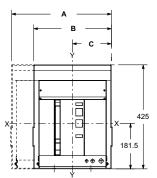


	Α	В	С	
[mm]	4p	3р	3р	4p
E1.2	348	278	155.5	155.5
E2.2	407	317	158.5	158.5
E4.2	551	425	212.5	212.5
E6.2	929	803	338.5	464.5
E6.2/f	1055	_	_	464.5

Compartment door drilling

E1.2

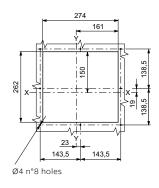


E2.2 - E4.2 - E6.2

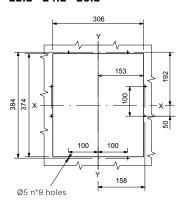


Distance from connected to isolated position

E1.2

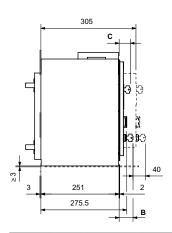

E1.2		Standard	Ronis/STI	Kirk	Castell
В	[mm]	44.5	55	55	85
С	[mm]	36	46.5	46.5	76.5


E2.2 - E4.2 - E6.2

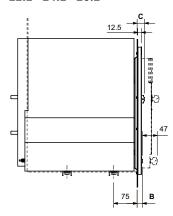

E2.2-I	E4.2-E6.2	Standard	Ronis/STI	Kirk	Castell
В	[mm]	22	34	39	57.5
С	[mm]	23	35	40	58.5

B refers to KLC; C refers to KLP

### Dimensions of the compartment

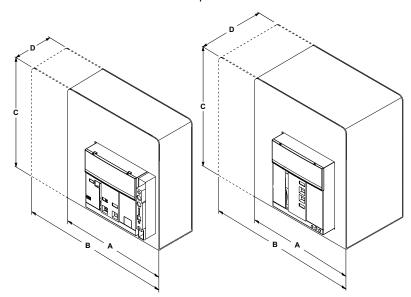


	Α	В	С	D
[mm]	3р	4p		
E1.2	280	350	440*	252
E2.2	400	490	500	355
E4.2	500	600	500	355
E6.2	900	1000	500	355
E6.2/f	-	1200	500	355


<sup>\* 390</sup> for voltages ≤ 440V AC

### Floor fixing

# Key 1 Ventilation drilling on the switchgear

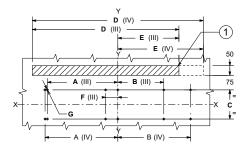

### Wall fixing (only for E1.2)

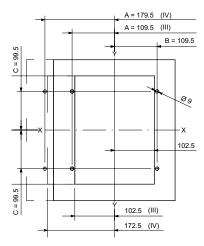


	Α		В		С	D		E		F	G
[mm]	3р	4p	3р	4p		3р	4p	3р	4p		
E1.2	80	150	80	80	100	-	-	=	-	-	9
E2.2	75	175	75	75	150	270	360	135	135	-	10
E4.2	100	225	100	100	150	378	504	189	189	-	10
E6.2	363	375	237	375	150	756	882	315	441	63	10
E6.2/f	-	425	-	425	150	-	1008	-	441	-	10

### Earthing device E2.2 - E4.2 - E6.2





### Fixing on support sheet (only for E1.2)

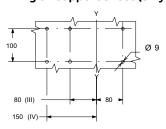


# Withdrawable circuit-breaker - E1.2


Rear orientable terminals - HR/VR

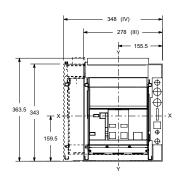


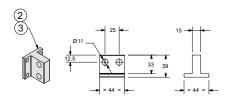


### **Terminals HR**

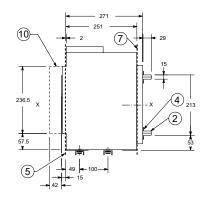


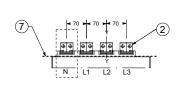


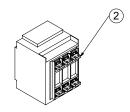

### **Terminals VR**

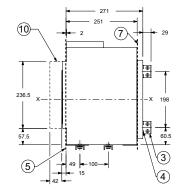

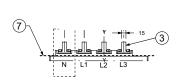


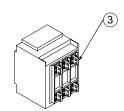


### — Key

- 2 Horizontal rear terminals
- Vertical rear terminals
- 4 Tightening torque 12 Nm
- 5 Door position -Ref. page 7/20
- 7 Rear segregation for rear terminals
- 10 Sectioning run

### Extended front terminals - EF

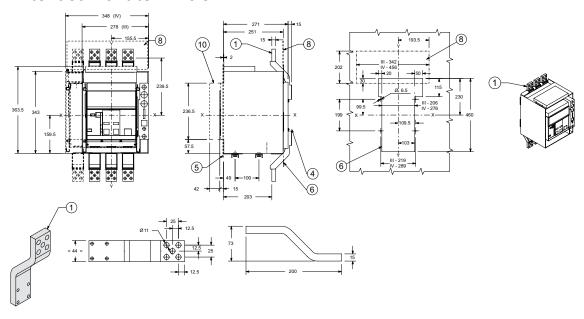

### Rear terminals for cables - FcCuAl

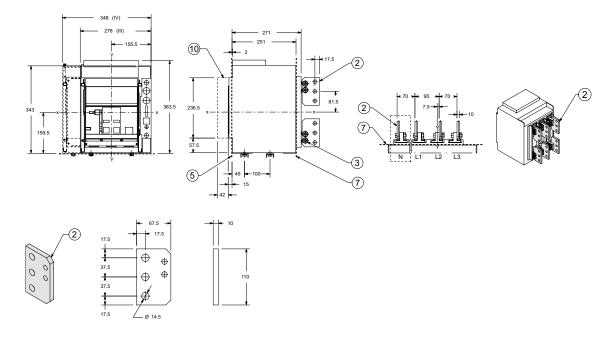


- 1 Front terminals
- 2 Rear terminals for cables
- 3 Tightening torque 48 Nm
- 4 Tightening torque 12 Nm
- 5 Door position -Ref. page 7/20
- 6 Rear segregation for front terminals
- Rear segregation for rear terminals -Ref. page 7/23
- 8 Insulating protection
- 10 Sectioning run


# Withdrawable circuit-breaker - E1.2

### Front spread terminals - ES

### 3-pole version

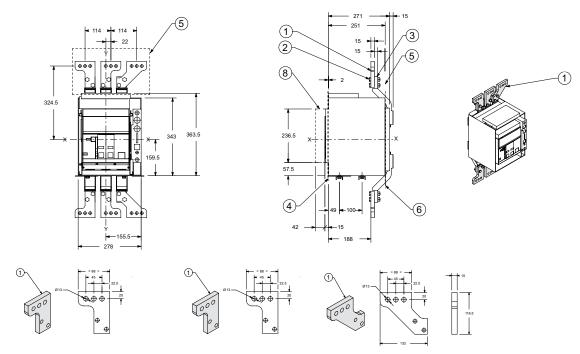


### 4-pole version

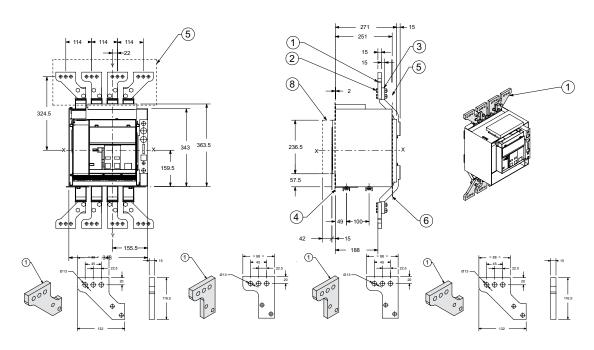


- 1 Spread terminal
- 2 Tightening torque 40 Nm
- 3 Front terminal
- 4 Door position -Ref. page 7/20
- 5 Insulating protection (refer to front terminals page 7/23)
- 6 Rear segregation for front terminals -Ref. page 7/23
- 8 Sectioning run


### Horizontal rear spread terminals – SHR

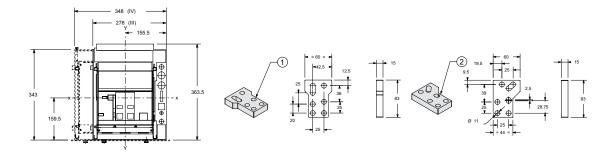

### 3-pole version

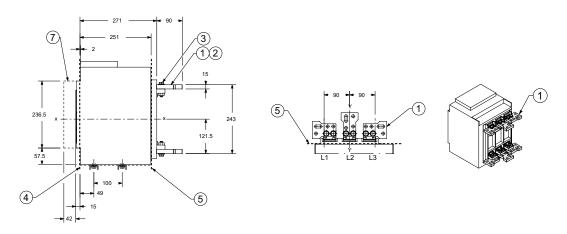

### 4-pole version

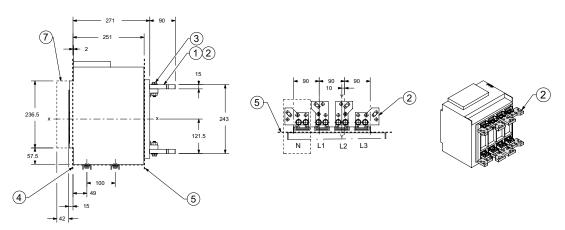


- Key
  1 Spread rear terminals for 3-pole version
- Spread rear terminals for 4-pole version
- 3 Tightening torque 18 Nm 4 Door position -Ref. page 7/20
- 5 Rear segregation of rear terminals
- 7 Sectioning run


# Withdrawable circuit-breaker - E2.2


Rear orientable terminals - HR/VR


### E2.2 B/N/S/H 2000A

### E2.2 N/S/H 2500A

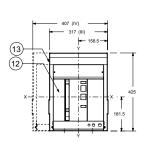


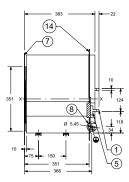


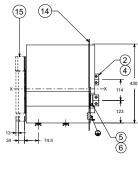


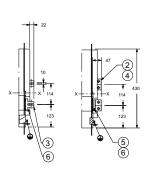


### E2.2 B/N/S/H 2000A

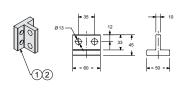


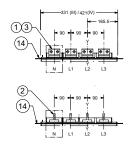


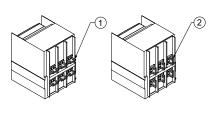

### E2.2 N/S/H 2500A

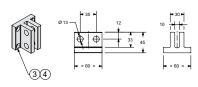

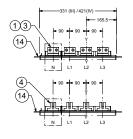


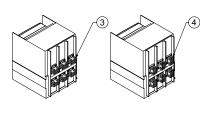



### — Key


- 1 Horizontal terminals 2000A
- 2 Vertical terminals 2000A
- 3 Horizontal terminals 2500A
- 4 Vertical terminals 2500A
- 5 Tightening torque 2000A 8.6Nm 6 Tightening torque
- 2500A 8.6Nm 7 Door position -
- Ref. page 7/20
- 8 Earthing device 12 Mobile part
- 13 Fixed part
- 14 Segregation (where envisaged)
- 15 Distance from connected for testing to isolated

### Front terminals – F

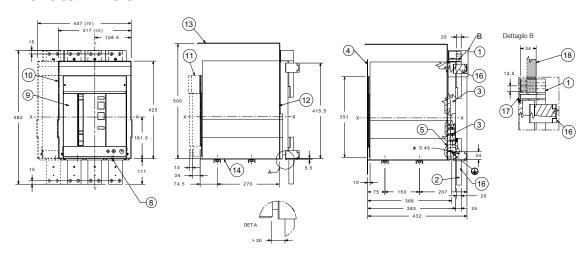

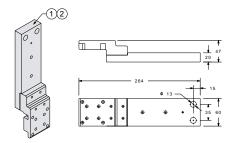

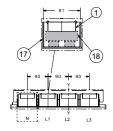

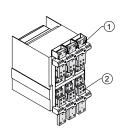


- Upper front terminals
   Lower front terminals
   Tightening
   torque 8.6Nm
- 4 Door position -Ref. page 7/20
- 5 Earthing device
- 8 External fixing point Reccomended screws M10x25 high class
- 9 Moving part
- 10 Fixed part
- 11 Connected, test, disconnected
- distances 12 Insulating sheet or insulated metallic sheet
- 13 Roof insulation or insulated metal
- 14 Fixing plate
  15 Crossbeam front
  terminal
- 16 Plastic protection
- 17 Customer busbar and screws (not provided)

# Withdrawable circuit-breaker - E2.2


Horizontal rear spread terminals - SHR

#### E2.2 B/N/S/H 2000A


# (13)

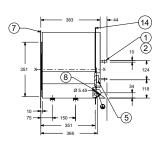



#### E2.2 N/S/H 2500A

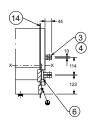


#### E2.2 B/N/S/H 2000A

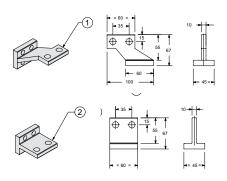


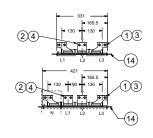


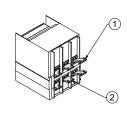

#### E2.2 N/S/H 2500A

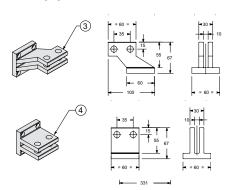

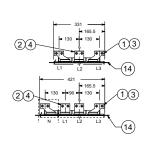


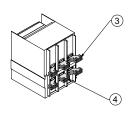


- 1 Side horizontal splayed terminals 2000A
- 2 Central horizontal splayed terminals 2000A
- 3 Side horizontal splayed terminals 2500A
- 4 Central horizontal splayed terminals 2500A
- 5 Tightening torque 2000A 8.6Nm
- 6 Tightening torque 2500A 8.6Nm
- 7 Door position -Ref. page 7/20 8 Earthing device 12 Mobile part
- 13 Fixed part
- 14 Segregation (where envisaged)


### Vertical rear spread terminals – SVR

### E2.2 B/N/S/H 2000A

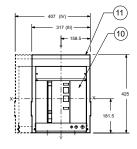


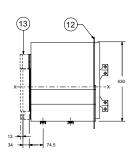



#### E2.2 N/S/H 2500A

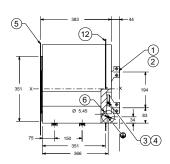


### E2.2 B/N/S/H 2000A

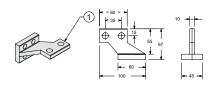


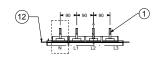


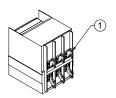

#### E2.2 N/S/H 2500A

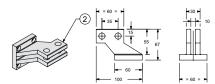

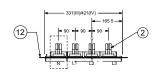


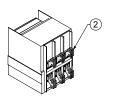



- Vertical splayed terminals 2000A
- 2 Vertical splayed terminals 2500A
- 3 Tightening torque 2000A 8.6Nm
- 4 Tightening torque 2500A 8.6Nm
- 5 Door position -
- Ref. page 7/20
- 6 Earthing device 10 Mobile part 11 Fixed part 12 Segregation (where envisaged)
- 13 Distance from connected for testing to isolated

# Withdrawable circuit-breaker - E2.2


### Flat terminals

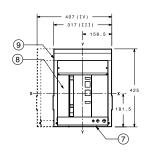


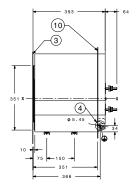


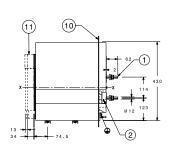

#### E2.2 B/N/S/H 2000A

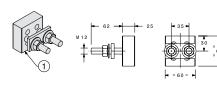


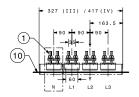


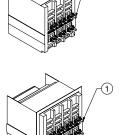


- 1 Flat terminals 2000A
- 2 Tightening torque 8.6Nm
- 3 Door position -Ref. page 7/20 4 Grounding 7 Mounting fixed part
- screws provided M8x25
- 8 Moving part
- 9 Fixed part 10 Segregation (where envisaged)
- 11 Connected, test, disconnected distances


### Flat terminals

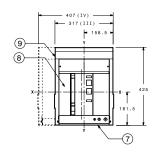


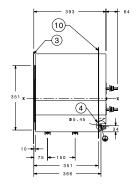


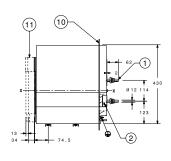


### E2.2 N/S/H 2500A

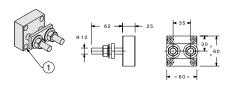

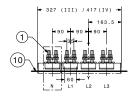

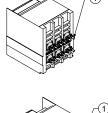

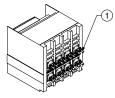

- Key 1 Flat terminals 2500A 2 Tightening torque
- 8.6Nm
- 8.6Nm
  3 Door position Ref. page 7/20
  4 Grounding
  7 Mounting fixed part
- 7 Mounting fixed par screws provided M8x25 8 Moving part 9 Fixed part 10 Segregation (where envisaged)


- 11 Connected, test, disconnected distances


# Withdrawable circuit-breaker - E4.2


Rear orientable terminals - HR/VR


### E4.2 N/S/H 3200A

E4.2 N/S/H 4000A E4.2 V 2000...4000A

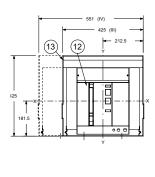


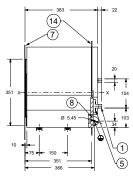


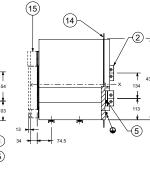


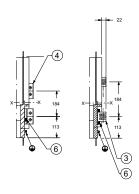


#### E4.2 N/S/H 3200A

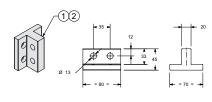


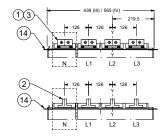


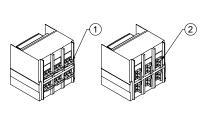

#### E4.2 N/S/H 4000A E4.2 V 2000...4000A

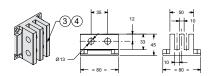


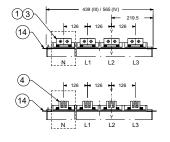

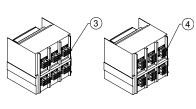

- 1 Horizontal terminals 3200A
- 2 Vertical terminals 3200A
- Horizontal terminals 4000A
- 4 Vertical terminals 4000A
- 5 Tightening torque 3200A 20Nm 6 Tightening torque
- 4000A 20Nm 7 Door position - Ref.
- page 7/20 8 Earthing device 12 Mobile part
- 13 Fixed part
- 14 Segregation (where envisaged)
- 15 Distance from connected for testing to isolated

### Front terminals – F

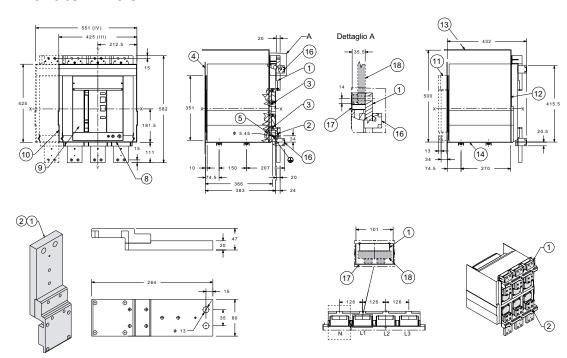


- Upper front terminals
   Lower front terminals
- 3 Tightening torque 8.6Nm
- 4 Door position -Ref. page 7/20
- 5 Earthing device 8 External fixing point Reccomended screws M10x25 high class
- 9 Moving part
- 10 Fixed part
- 11 Connected, test, disconnected distances
- 12 Insulating sheet or insulated metallic sheet
- 13 Roof insulation or insulated metal
- 14 Fixing plate
  15 Crossbeam front
  terminal
- 16 Plastic protection
- 17 Customer busbar and screws (not provided)


### Withdrawable circuit-breaker - E4.2


Horizontal rear spread terminals - SHR

#### E4.2 N/S/H 3200A


E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

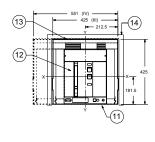

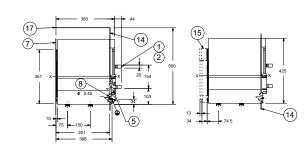


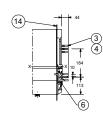



### E4.2 N/S/H 3200A

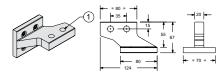



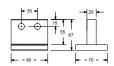

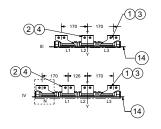


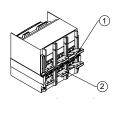


#### 1 Side horizontal divaricated terminals 3200A


- 2 Central horizontal divaricated terminals 3200A
- 3 Side horizontal divaricated terminals 4000A
- 4 Central horizontal divaricated terminals 4000A
- 5 Tightening torque 3200A 8.6Nm
- 6 Tightening torque 4000A 8.6Nm
- Door position -Ref. page 7/20
- 8 Grounding
- 11 Mounting fixed part screws recommend M8x25 high class 8.8 or couple superior Tightening tourque 20Nm compulsory fixing screws from high
- 12 Moving part
- 13 Fixed part 15 Connected, test, disconnected distances
- 17 Metallic sheet


#### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

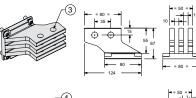



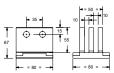

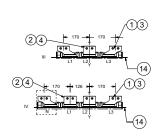


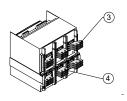



### Vertical rear spread terminals – SVR

### E4.2 N/S/H 3200A


#### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

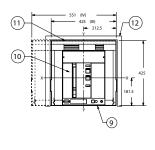


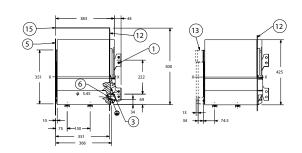


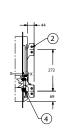

### E4.2 N/S/H 3200A

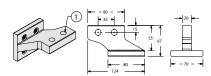


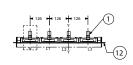


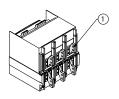


- Key
  1 Vertical divaricated terminals 3200A
- 2 Vertical divaricated terminals 4000A
- Tightening torque 3200A 8.6Nm
- 4 Tightening torque
- 4000A 8.6Nm 5 Door position -Ref. page 7/20
- 6 Grounding
- Mounting fixed part screws recommend M8x25 high class 8.8 or couple superior Tightening tourque 20Nm compulsory fixing screws from high
- 10 Moving part
- 11 Fixed part
  12 Metallic segregation
  (when provided)
  13 Connected, test,
- disconnected distances
- 15 Metallic sheet

#### E4.2 N/S/H 4000A E4.2 V 2000 ... 4000A

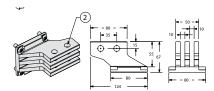


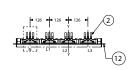


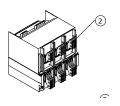


# Withdrawable circuit-breaker - E4.2


### Flat terminals

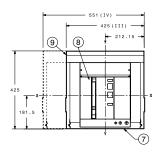


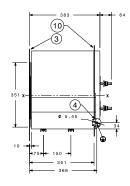

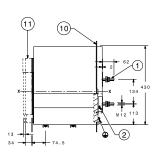


#### E4.2 N/S/H 3200A

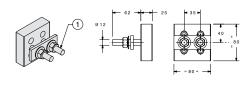

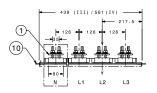





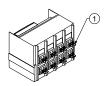


- 1 Flat terminals 3200A
- 2 Tightening torque 20Nm
- 3 Door position -Ref. page 7/20 4 Grounding 7 Mounting fixed part
- screws provided M8x25
- 8 Moving part
- 9 Fixed part
- 10 Segregation (where envisaged)
- 11 Connected, test, disconnected distances


### Flat terminals

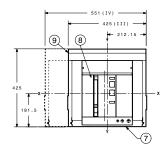


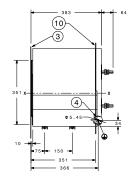

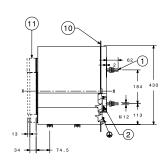


#### E4.2 N/S/H 4000A E4.2 V 2000...4000A

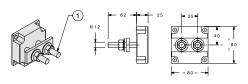

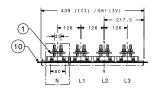



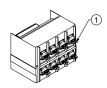


- Key 1 Flat terminals 4000A 2 Tightening torque
- 20Nm

- 20Nm
  3 Door position Ref. page 7/20
  4 Grounding
  7 Mounting fixed part 7 Mounting fixed par screws provided M8x25 8 Moving part 9 Fixed part 10 Segregation (where envisaged)


- 11 Connected, test, disconnected distances

# Withdrawable circuit-breaker - E6.2


### Horizontal rear terminals - HR

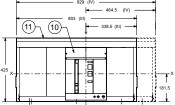


E6.2 H/V 4000-5000A

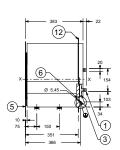



E6.2 H/V 6300A E6.2 X 4000...6300A

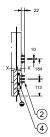


#### E6.2 H/V 4000-5000A

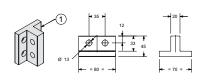


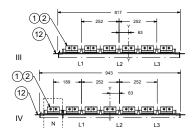


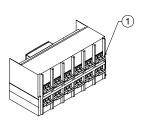

#### E6.2 H/V 6300A E6.2 X 4000...6300A

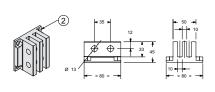

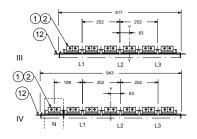

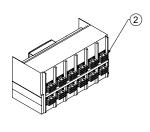



- 1 Horizontal terminals 4000-5000A
- 2 Horizontal terminals 6300A
- Tightening torque 4000-5000A 20Nm
- Tightening torque 6300A 20Nm
- 5 Door position -
- Ref. page 7/20 6 Earthing device 10 Mobile part
- 11 Fixed part
- 12 Segregation (where envisaged)


### Vertical rear terminals – VR

E6.2 H/V 4000-5000A


E6.2 H/V 6300A E6.2 X 4000...6300A

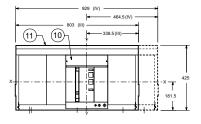


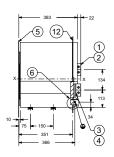


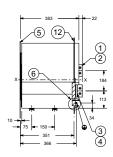


#### E6.2 H/V 4000-5000A

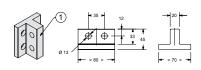


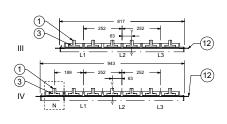


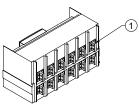

#### E6.2 H/V 6300A E6.2 X 4000...6300A

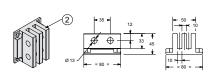

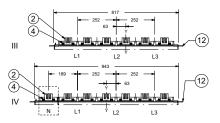

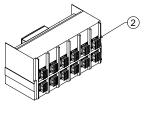

- 1 Vertical terminals 4000-5000A
- 2 Vertical terminals 6300A
- Tightening torque 4000-5000A 20Nm
- 4 Tightening torque 6300A 20Nm
- 5 Door position -
- Ref. page 7/20 6 Earthing device 10 Mobile part
- 11 Fixed part
- 12 Segregation (where envisaged)


### Withdrawable circuit-breaker - E6.2


Rear orientable terminals - HR/VR full size

# 13 1055 464.5 181.5


### E6.2 H/V 4000...5000A


E6.2 H/V 6300A E6.2 X 4000...6300A

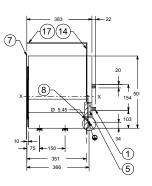

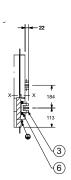

#### E6.2 H/V 4000-5000A

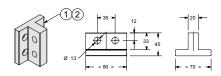


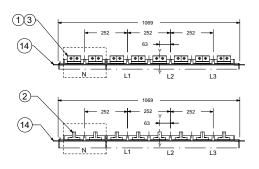


#### E6.2 H/V 6300A E6.2 X 4000...6300A


#### — Key

- 1 Horizontal terminals 4000-5000A
- 2 Vertical terminals 4000-5000A
- 3 Horizontal terminals 6300A
- 4 Vertical terminals 6300A
- 5 Tightening torque 4000-5000A 20Nm 6 Tightening torque
- 6300A 20Nm 7 Door position -
- Ref. page 7/20 8 Earthing device
- 8 Earthing device 12 Mobile part
- 13 Fixed part
- 14 Segregation (where envisaged)
- 17 Metallic sheet

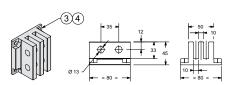

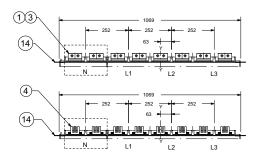

### Front terminals - F

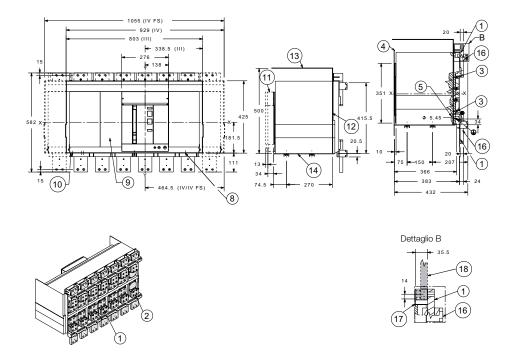



#### Upper front terminals


#### Lower front terminal


#### — Key


- 1 Upper front terminals
- 2 Lower front terminals3 Tightening torque8.6Nm
- 4 Door position -Ref. page 7/20
- Ref. page 7/20 5 Earthing device
- 8 External fixing point Reccomended screws M10x25 high class
- 9 Moving part
- 10 Fixed part
- 11 Connected, test, disconnected distances
- 12 Insulating sheet or insulated metallic sheet
- 13 Roof insulation or insulated metal
- 14 Fixing plate
- 15 Crossbeam front terminal
- 16 Plastic protection
- 17 Customer busbar and screws (not provided)

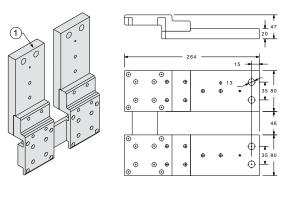


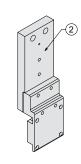

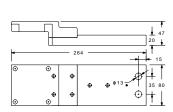

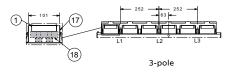


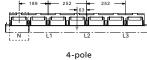


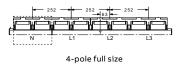


# Withdrawable circuit-breaker - E6.2


### Flat terminals

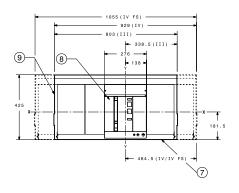


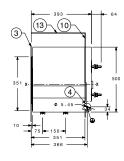


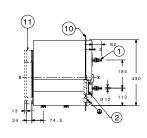

#### E6.2 H/V/X 4000...6300A

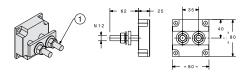

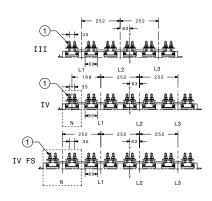

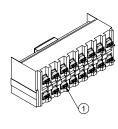

- 1 Flat terminal
- 2 Tightening torque on power circuit connections 45Nm
- 3 Door position -Ref. page 7/20
- Grounding
  Mounting fixed part screws provided M8x25 head convex high class 8.8 or couple superior Tightening torque 20Nm compulsory fixing from high
- 8 Moving part
- 9 Fixed part
- 10 Segregation (when provided)
  11 Connected, test,
- disconnected distances
- 13 Metallic sheet

CHAPTER 9

# **Electrical diagrams**

<b>196</b> -200	Reading information	
<b>196</b> -200	Circuit-breakers	
<b>201</b> -201	Circuit-breakers	
<b>202</b> -202	Terminal box E1.2	
<b>203</b> -203	Terminal box E2.2 - E4.2 - E6.2	
<b>204</b> -229	Electrical accessories	

# **Reading information**

### Circuit-breakers

#### Operating state shown

The diagram is shown in the following conditions:

- withdrawable version circuit-breaker, open and racked-in
- with de-energized circuits
- · trip units not tripped
- · motor operator with unloaded springs.

#### **Versions**

The diagram shows a withdrawable version circuit-breaker, but it is also valid for fixed version circuit-breakers.

#### **Fixed version**

The control circuits are included between the XV terminals (the X connector is not supplied).

#### Withdrawable version

The control circuits are included between the poles of the X connector (the XV terminal box is not supplied).

#### **Description of figures**

- Supplementary open/closed auxiliary contacts of the circuit-breaker - AUX 6Q (6 Form C)
- 2) Ekip Signalling 4K
- 11) Trip signalling contact
- 12) Contact for signalling position of loaded springs S33 M/2
- 13) Motor for loading closing springs- M
- 14) Remote reset YR
- 20) Ekip Measuring/Measuring Pro with voltage socket inside the four pole circuit-breaker
- 21) Ekip Measuring/Measuring Pro with voltage sockets inside the three-pole circuit-breaker and connection for external neutral
- 22) Ekip Measuring Pro for residual voltage protection (for Ekip G only)
- 23) Ekip Measuring/Measuring Pro with external voltage socket
- 24) Rc residual current protection sensor input
- 25) Transformer star center sensor input

- 26) Zone selectivity
- 27) Current sensor input on external neutral (only for 3-pole circuit-breakers)
- 31) Direct auxiliary supply 24V DC and local bus Ekip Supply
- 32) Auxiliary supply through module 110-240V AC/DC or 24-48V DC and local bus - Ekip Supply
- 41) Ekip signalling 2K-1
- 42) Ekip signalling 2K-2
- 43) Ekip signalling 2K-3
- 48) Ekip sinchrocheck
- 51) Ekip COM Modbus RS-485
- 52) Ekip COM Modbus TCP
- 53) Ekip COM Profibus
- 54) Ekip COM Profinet
- 55) Ekip COM EtherNet/IP™
- 56) Ekip COM EtherNet/IP™
- 57) Ekip COM IEC61850
- 58) Ekip LINK
- 59) Ekip Com Hub
- 60) Ekip Com Open ADR
- 61) Ekip COM R Modbus RS-485 Redundant
- 62) Ekip COM R Modbus TCP Redundant
- 53) Ekip COM R Profibus Redundant
- 64) Ekip COM R Profinet Redundant
- 65) Ekip COM R DeviceNet™ Redundant
- 66) Ekip COM R EtherNet/IP™ Redundant
- 71) Ready to close contact RTC
- 72) Second opening coil YO2
- 73) Undervoltage coil YU
- 74) Undervoltage coil with external time-lag device YU, D
- 75) First opening coil YO
- 76) First opening coil with control from protection trip unit YO, Ekip Com Actuator
- 77) First closing coil YC
- 78) First closing coil with control from protection trip unit YC, Ekip Com Actuator
- 79) Second closing coil YC2
- 81) Open/closed auxiliary contacts of circuitbreaker - AUX 4Q (4 Form C)
- 91) External supplementary open/closed auxiliary contacts of circuit-breaker AUX 15Q (15 Form C)

- 95) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position
- 96) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (first set)
- 97) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (second set)
- 97A) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (second set)

# **Reading information**

# Circuit-breakers

Key		Q/1Q/25	= Auxiliary contacts of circuit- breaker
*	= See the note indicated by the letter		7 = Auxiliary open/close contacts used
A1	= Applications located on the mobile		internally by the trip unit
	part of the circuit-breaker	RC	= RC (residual current) protection
A3	= Applications located on the fixed		sensor
	part of the circuit-breaker	RT1RT3	= Temperature sensors
A4	<ul> <li>Indicative devices and connections for control and signalling, outside the circuit-breaker</li> </ul>	RTC EKIP	<ul> <li>Auxiliary ready to close contact of circuit-breaker, used internally by the trip unit</li> </ul>
BUS1	= Serial interface with external bus	RTC	= Contact for signalling circuit-
D	= Electronic time-lag device of YU		breaker is ready to close
	undervoltage coil, outside the circuit-breaker	S33M/12	= Limit contacts of spring loading motor
F1	= Time-delayed trip fuse	S43	= Switch for presetting remote/local
GZi(DBi)	= Zone selectivity input for G		control
	protection or input in "reverse" di-	S51	= Trip signalling contact
	rection for D protection	S75E/14	= Contacts for signalling circuit-
GZo(DBo)	= Zone selectivity output for G		breaker in racked-out position
	protection or output in "reverse"		(provided only with withdrawable
I O132	direction for D protection	6751/1 5	version)
10132	<ul> <li>Programmable digital inputs of the EKIP protection trip unit</li> </ul>	S75I/15	<ul> <li>Contacts for signalling circuit- breaker in racked-in position</li> </ul>
K51	= Electronic overcurrent protection		(provided only with withdrawable
	trip unit of the types: EKIP DIP,		version)
	EKIP TOUCH, EKIP LCD,	S75T/12	= Contact for signalling circuit-
	EKIP HI-TOUCH , EKIP HI-LCD,		breaker in test position (provided
	EKIP G TOUCH, EKIP G LCD,		only with withdrawable version)
	EKIP G HI-TOUCH , EKIP G HI-LCD	SC	= Pushbutton or contact for closing
K51/COM	= Communication module		the circuit-breaker
K51/MEAS	= Measurement module	so	= Pushbutton or contact for
K51/SIGN	= Signalling module		immediate opening of the circuit-
K51/SUPPL	Y = Optional auxiliary supply module	601	breaker
K51/SYNC	(110-220VAC/DC and 24-48VDC) = Synchronization module	SO1	<ul> <li>Pushbutton or contact for opening the circuit-breaker with time-</li> </ul>
K51/3TNC K51/YC	= Closing control from the EKIP		delayed trip
KSI/ IC	protection trip unit	SR	= Pushbutton or contact for
K51/YO	= Opening control from the EKIP	310	electrical resetting of S51trip
,	protection trip unit		contact
М	= Motor for loading closing springs	SZi(DFi)	= Input for zone selectivity for S
O 0132	= Programmable signalling contacts	•	protection or input in "direct"
	of the EKIP protection trip unit		direction for S protection
O SC	= EKIP protection trip unit contact	SZo(DFo)	= Output for zone selectivity for S
	for synchronism control		protection or output in "direct"
Q	= Circuit-breaker		direction for D protection

TI/L1	= Current transformer phase L1
TI/L2	= Current transformer phase L2
TI/L3	= Current transformer phase L3
TI/N	= Current transformer on neutral
TU1TU2	= Insulation voltage transformer
	(outside circuit-breaker)
Uaux	= Auxiliary supply voltage
UI/L1	= Current sensor phase L1
UI/L2	= Current sensor phase L2
UI/L3	= Current sensor on phase L3
UI/N	= Current sensor on neutral
UI/O	= Single-pole current sensor
W2	= Serial interface with internal bus
	(local bus)
W9W13	= RJ45 connector for communication
	modules
W9R.W11R	= RJ45 connector for redundant
	communication modules
Χ	= Delivery connector for auxiliary cir-
	cuits for withdrawable version of
	circuit-breaker
XB1XB7	= Connectors for circuit-breaker
	applications
XF	= Delivery terminal board for
	position contacts of withdrawable
	version of circuit-breaker
XK1XK3	= Connectors for auxiliary circuits of
	the EKIP protection trip unit
XK7	= Connector for auxiliary circuits of
	communication module
XV	= Delivery terminal box for auxiliary
	circuits of fixed version circuit-
	breaker
YC	= Closing coil
YC2	= Second closing coil
YO	= Opening coil
YO1	= Opening coil for overcurrent
YO2	= Second opening coil
YR	= Coil for electrical resetting of trip
	contact S51

= Undervoltage coil

YU

# **Reading information**

### Circuit-breakers


#### Notes

- A) Auxiliary supply for Ekip trip unit is mandatory (refer to diagram 1SDM00009R0001 figures 31 32-33 34).
- B) When there are mixed auxiliary contacts Q1 and Q2 are 400V, while Q3 and Q4 are 24V. Then Q5, Q6, Q7 are 400V, while Q8, Q9, Q10 are 24V.
- C) Always supplied with Ekip Com module.
- D) Always supplied with motor for loading closing springs in Fig. 13.
- E) Obligatory voltage transformer in the case of external sockets. Obligatory external sockets for systems with rated voltage greater than 690V.
- F) The connections between the RC residual current protection sensor and the poles of the X connector (or XV) of the circuitbreaker must be made with 4-pole shielded cable with conductors interwoven in pairs (type BELDEN 9696 paired or equivalent), of a length no greater than 10 m. The shield should be earthed on circuit-breaker side.
- G) With all electronic protection trip units equipped with display interface with LSIG protections, protection against an earth fault is available (Gext) by means of current sensor positioned on the star centre of the MV/LV transformer. The connection between terminals 1 and 2 of the UI/O current transformer and Ge+ and Ge- poles of the X connector (or XV) must be made with shielded and stranded 2-pole cable (type BELDEN 9841 or equivalent) of length no greater than 15 m.
- H) The connection between the terminal box and external neutral sensor must be made with the 2m cable provided. For three pole circuitbreakers, the Ne+ and Ne- poles of the X connector (or XV) must be short-circuited if no sensor is present on the external neutral conductor.
- Obligatory in the case of the presence of any Ekip module.
- J) Only for E2.2, E4.2 and E6.2 withdrawable version circuit-breakers as an alternative to Fig. 31-32-34.
- K) Only for E2.2, E4.2 and E6.2 withdrawable version circuit-breakers as an alternative to Fig. 31-32-33.


- K) Only for E2.2, E4.2 and E6.2 withdrawable version circuit-breakers as an alternative to Fig. 31-32-33.
- L) In the presence of Fig. 32, for E2.2, E4.2 and E6.2 circuit-breakers up to three applications between Fig. 41...58 taken only once can be supplied, instead for E1.2 circuit-breakers, up to two applications between Fig. 41...58 taken only once can be supplied. The Ekip Com module selected can be duplicated if required, by choosing between Fig. 61...66.
- M) In the presence of Fig. 33, for E2.2, E4.2 and E6.2 circuit-breakers, up to two applications between Fig. 41...58 taken only once can be supplied. The Ekip Com module selected can be duplicated if required, by choosing between Fig. 61...66.
- N) In the presence of Fig. 34, for E2.2, E4.2 and E6.2 circuit-breakers, a single application between Fig. 41...58 can be supplied.
- O) In the presence of several Ekip Com modules with withdrawable version circuit-breakers, the contact S75I/5 should be connected only once to a single module.
- P) The auxiliary voltage Uaux. enables activation of all the functions of the EKIP electronic protection trip units. Since an earth insulated Uaux was requested, it is necessary to use "galvanically separated convertors" which comply with the standards IEC 60950 (UL 1950) or equivalent, which guarantee a common mode current or leakage current (refer to IEC 478/1, CEI 22/3) no greater than 3.5mA, IEC 60364-41 and CEI 64-8.
- Q) Regarding local bus the maximum cable length is 15m.
- R) Suggested RJ45 cable: CAT6 STP.
- T) Connect terminals  $120~\Omega$  on if you want to insert a termination resistance on the Local Bus.

# Circuit-breakers (IEC60617 standards)


#### 3-pole or 4-pole circuit-breaker

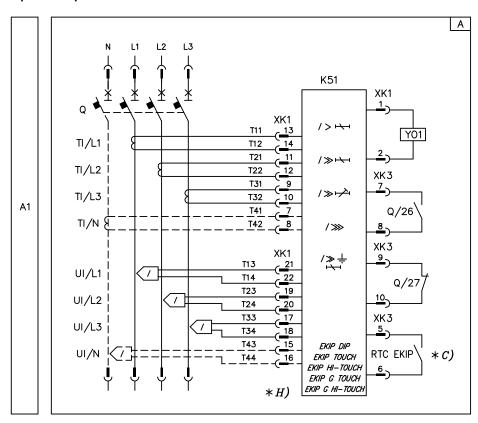


#### 3-pole or 4-pole switch-disconnector

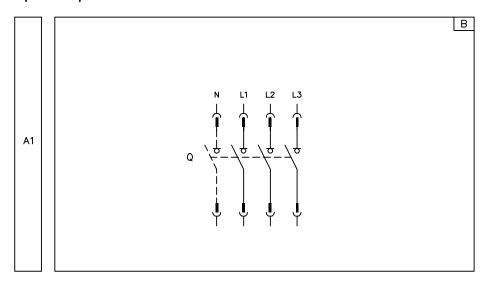


### **Terminal box E1.2**

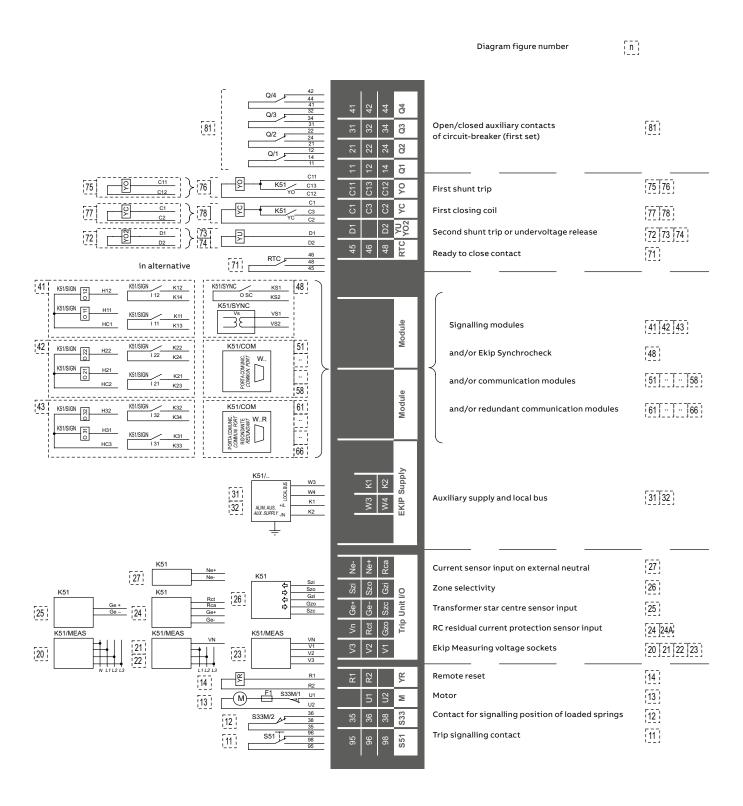


### **Terminal box E2.2 - E4.2 - E6.2**

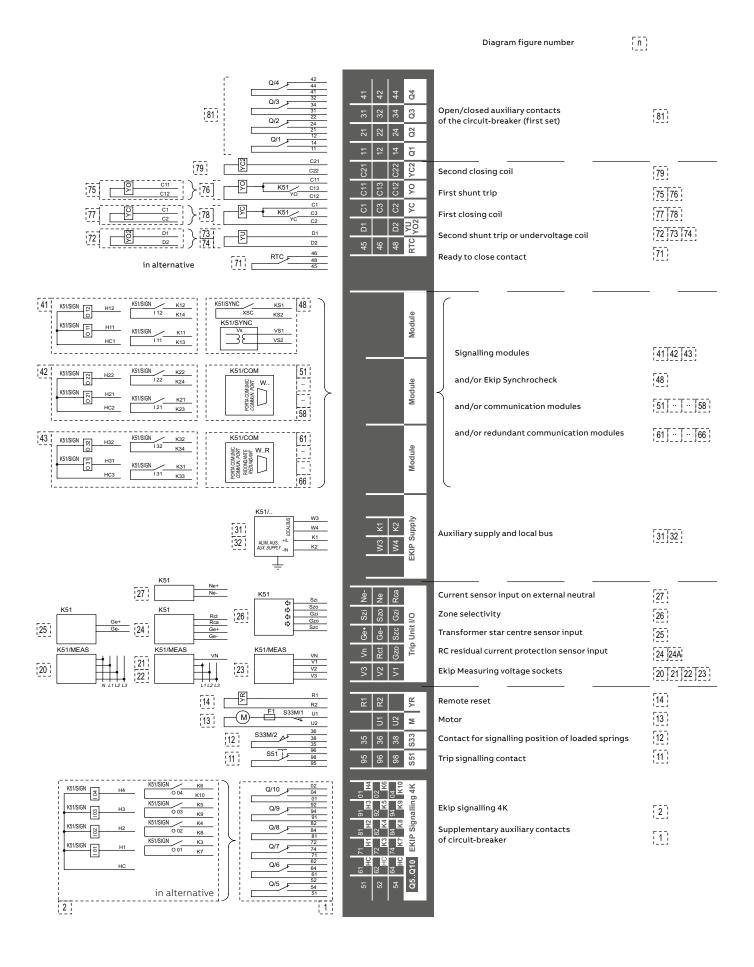

# **Electrical accessories**

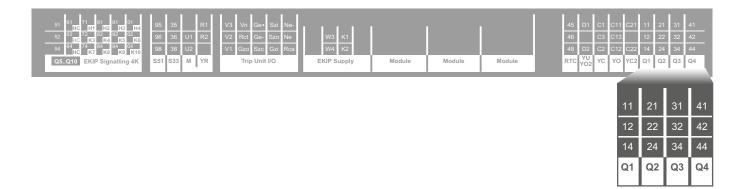

#### 81) Open/closed auxiliary contacts of circuit-breaker - AUX 4Q (4 Form C)

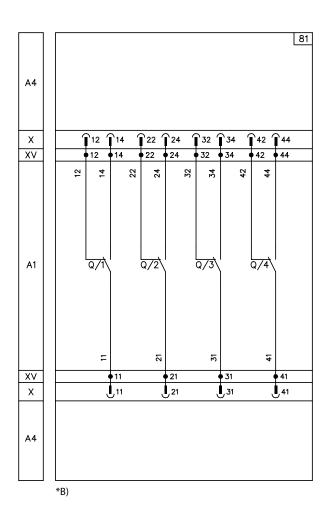



77) First closing coil - YC

77-78 as an alternative

to each other

79 valid only for
E2.2 - E4.2 - E6.2

- 78) First closing coil with control from protection trip unit YC, Ekip Com Actuator
- 79) Second closing coil YC2


79 77 78 Α4 sc E-1 sc Esc E--Х C1 C1 **⊤**c3 C21 ΧV C1 C1 **♦** C3 C21 घ घ C322 xk7 1 9 K51 K51 YC Сош Egip Α1 XK7, 1,10 XB3 **1**1 XB3 1 1 XB3 **1**3 YC YC2 хвз, 1,2 хвз, ,2 XB3, 1,4 C22  $^{\circ}$  $^{\circ}$ ΧV C22 **♦** C2 • C2 Χ ,C2 ,C2 ,C22 Α4

# **Electrical accessories**



- 75) First opening coil YO
- 76) First opening coil with control from protection trip unit YO, Ekip Com Actuator


75-76 as an alternative to each other

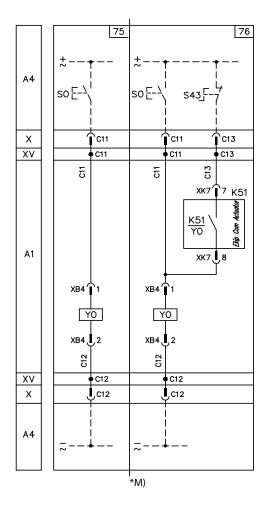




- 71) Ready to close signalling contact RTC
- 72) Second opening coil YO2
- 73) Undervoltage coil YU
- 74) Undervoltage coil with external time-lag device YU, D


72-73 or 74 as an altenative to each other

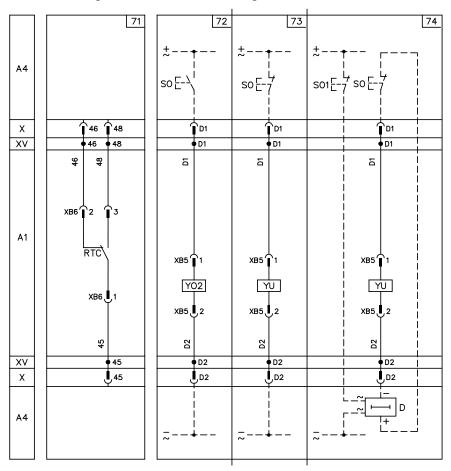


# **Electrical accessories**

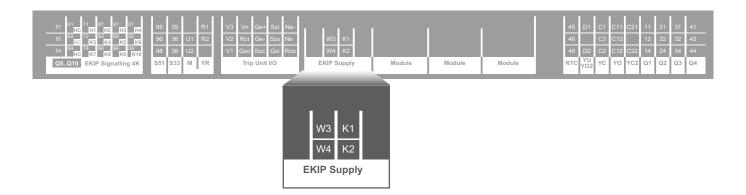


32) Auxiliary supply through module 110-240V AC/DC or 24-48V DC and local bus - Ekip Supply

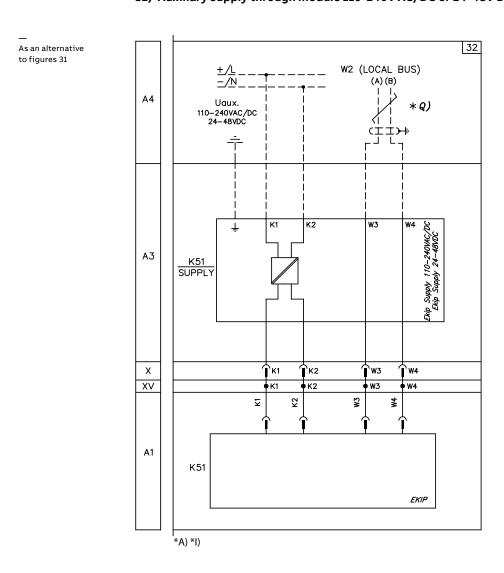

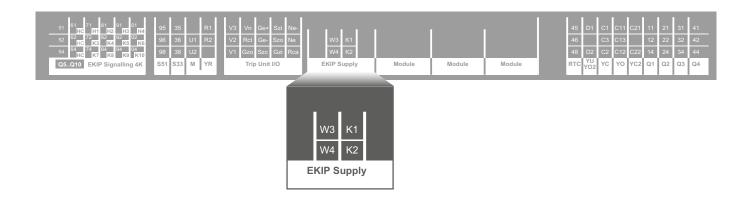


### 31) Direct auxiliary supply 24V DC and local bus - Ekip Supply


As an alternative to figures 32

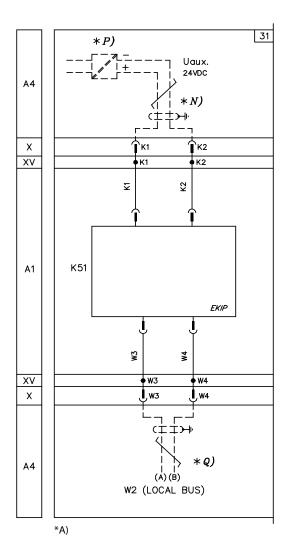


# **Electrical accessories**

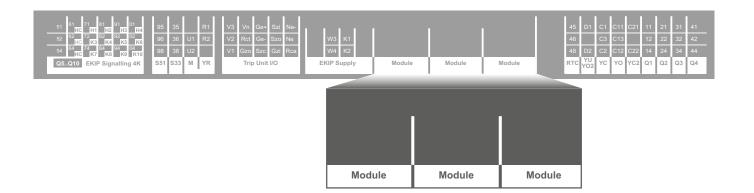


- 41) Ekip signalling 2K-1
- 42) Ekip signalling 2K-2

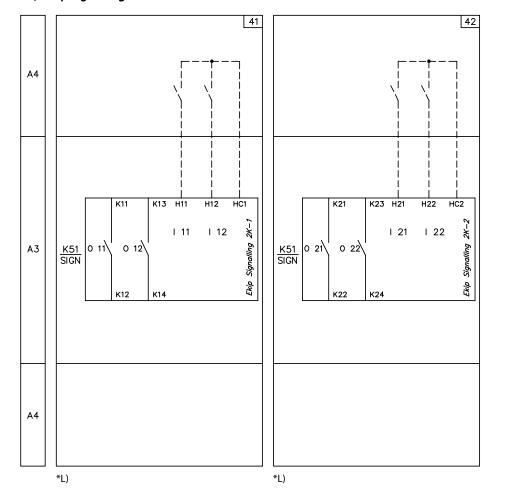

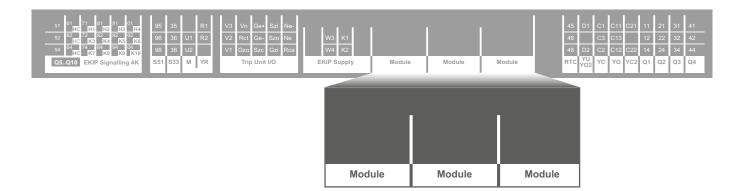


### 43) Ekip signalling 2K-3


### 48) Ekip Synchrocheck

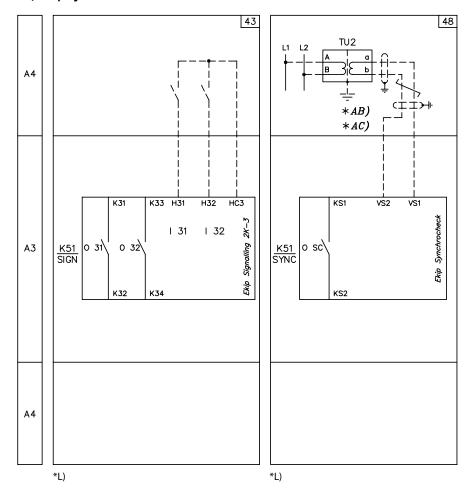


# **Electrical accessories**

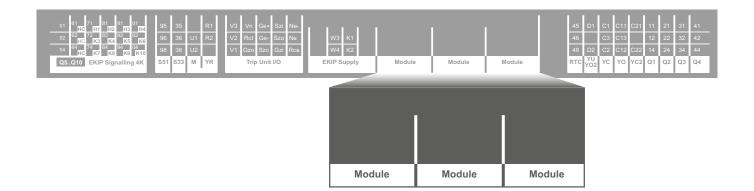


- 51) Ekip COM Modbus RS-485
- 52) Ekip COM Modbus TCP
- 53) Ekip COM Profibus

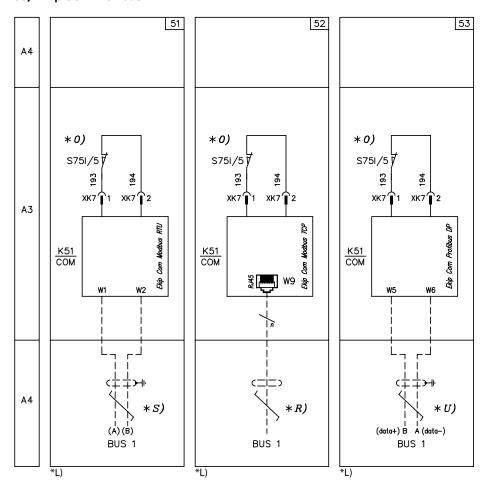


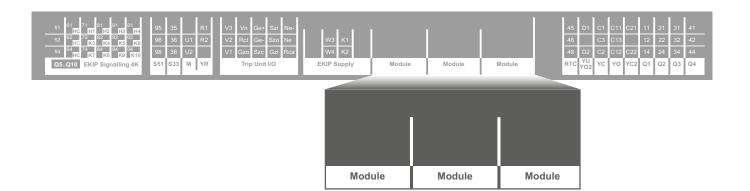


- 54) Ekip COM Profinet
- 55) Ekip COM DeviceNet™
- 56) Ekip COM EtherNet/IP™

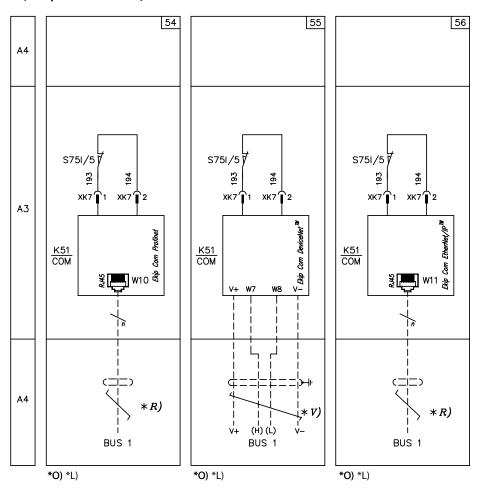


# **Electrical accessories**

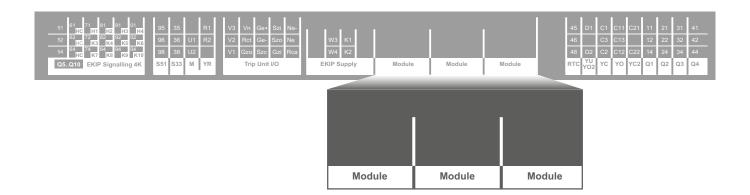


- 57) Ekip COM IEC61850
- 58) Ekip LINK
- 59) Ekip Com Hub
- 61) Ekip COM R Modbus RS-485 Redundant

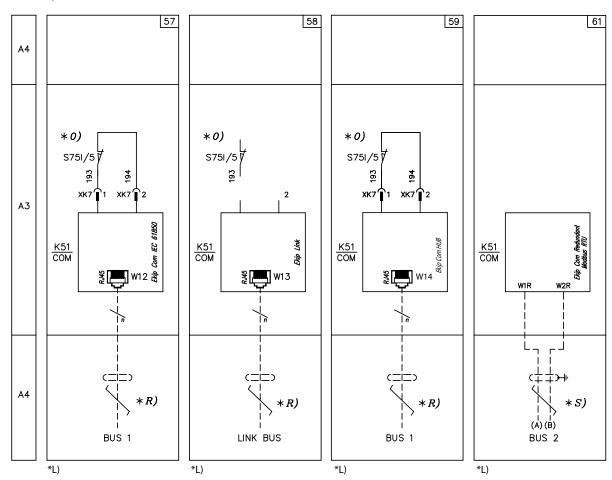

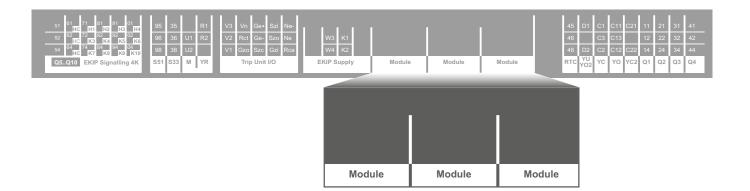


- 62) Ekip COM R Modbus TCP Redundant
- 63) Ekip COM R Profibus Redundant
- 64) Ekip COM R ProfiNet Redundant

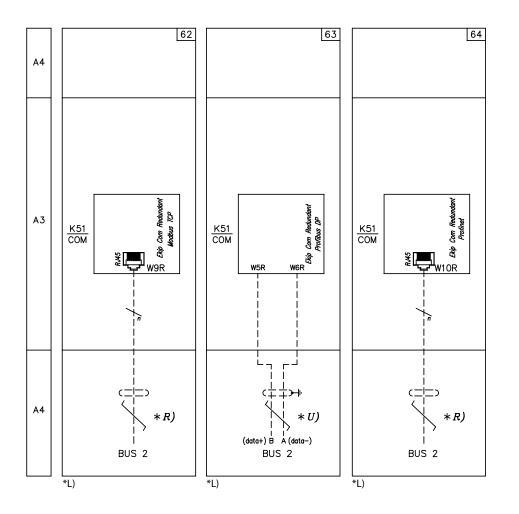



### \_\_\_\_

# **Electrical accessories**

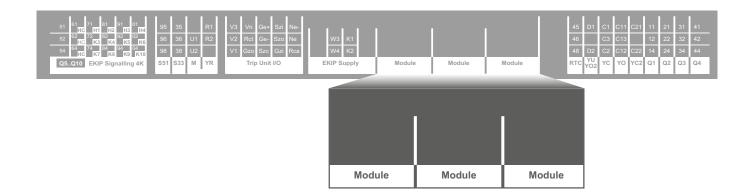


- 65) Ekip COM R DeviceNet™ Redundant
- 66) Ekip COM R EtherNet/IP™ Redundant
- 66) Ekip COM R IEC 61850 Redundant

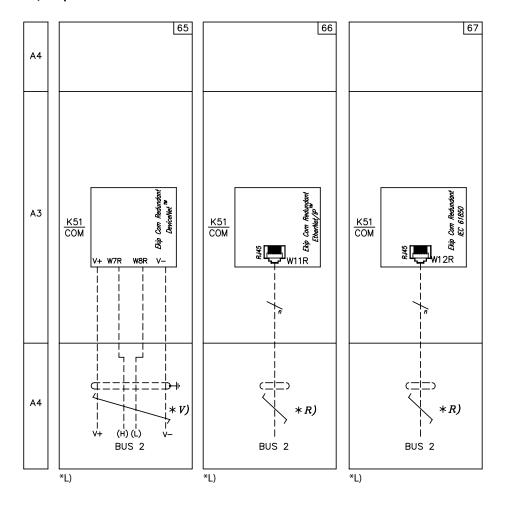

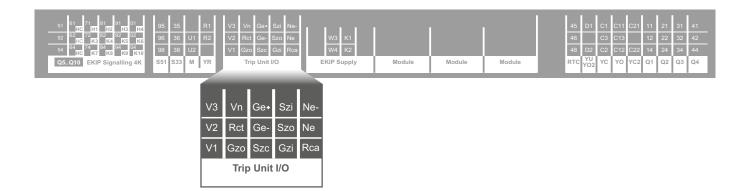


- 25) Transformer star center sensor input (homopolar toroid for the earthing conductor of main power suppy)
- 27) Current sensor input on external neutral (only for 3-pole circuit-breakers)


As an alternative to figures 24 - 24A

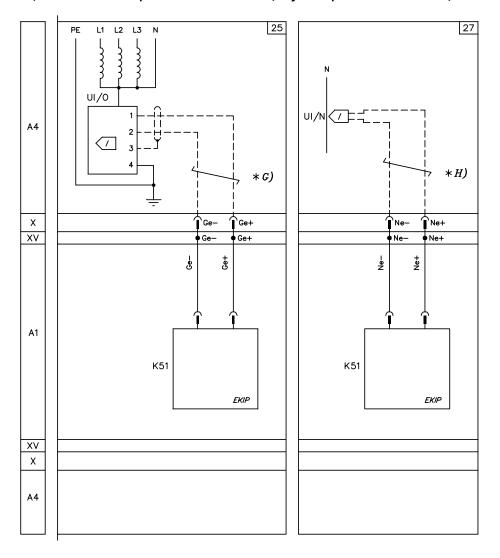

# **Electrical accessories**

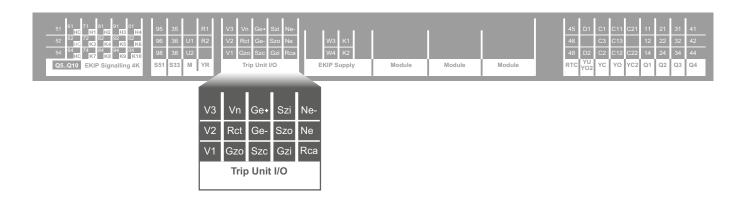


24) Rc residual current protection sensor input (ANSI 64 & 50NTD) 24a) Rc differential ground fault protection (ANSI 87N)

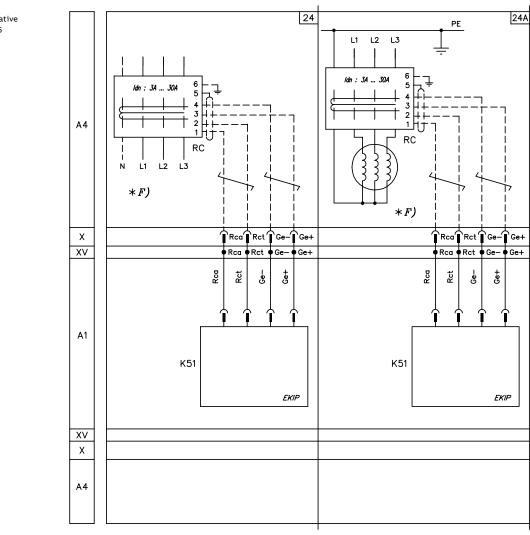

As an alternative to figures 25

23

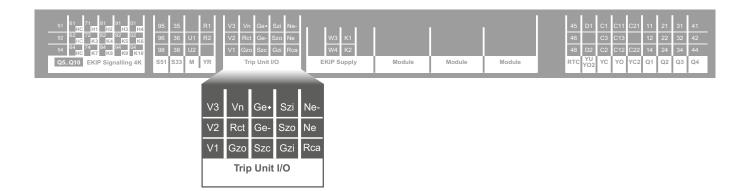

- 22) Ekip Measuring Pro for residual voltage protection (for Ekip G only)
- 23) Ekip Measuring/Measuring Pro with external voltage socket

22


As an alternative to

XV X


Α4

to each other or to TU1 N L1 L2 L3 20-21 diagram L1 L2 L3 B1 **a**2 b2 В2 Α4 А3 a3 ь3 В3 (±±)H \* E) \*AB)TVN TV3 TV2 TV1 ΧV VN ● V3 ● V2 ● V1 ∳ VN ٧3 **♦** V1 L1 L2 L3 Α1 Ekip Measuring Pro K51 MEAS K51 MEAS


# **Electrical accessories**

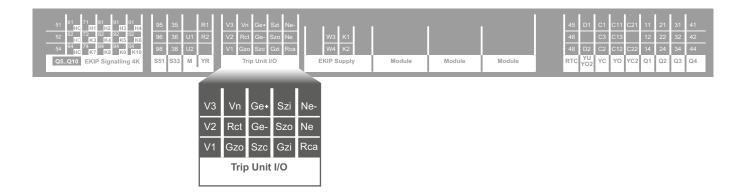


- 20) Ekip Measuring/Measuring Pro with voltage socket inside the four pole circuit-breaker
- 21) Ekip Measuring/Measuring Pro with voltage sockets inside the three-pole circuit-breaker and connection to the external neutral

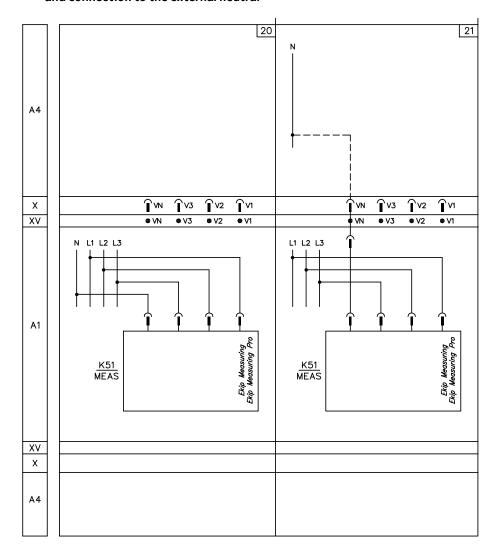


As an alternative to each other or to 22-23 diagram

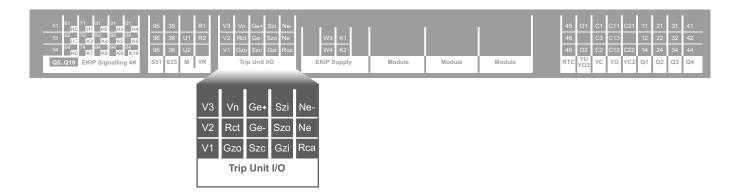

### 26) Zone selectivity

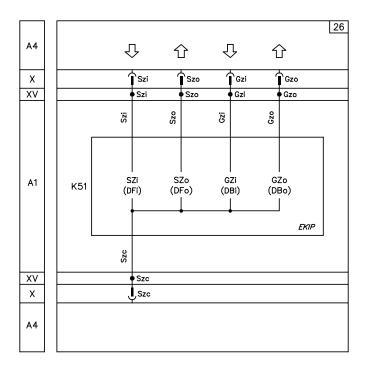

### Example for application diagram (among 3 circuit-breakers)

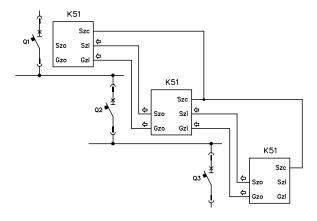


### **Electrical accessories**






- 11) Trip signalling contact S51
- 12) Contact for signalling position of loaded springs S33 M/2
- 13) Motor for loading closing springs M
- 14) Trip contact reset coil YR

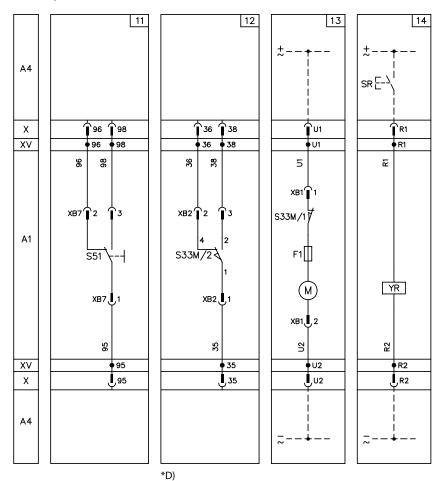




### 2) Ekip Signalling 4K

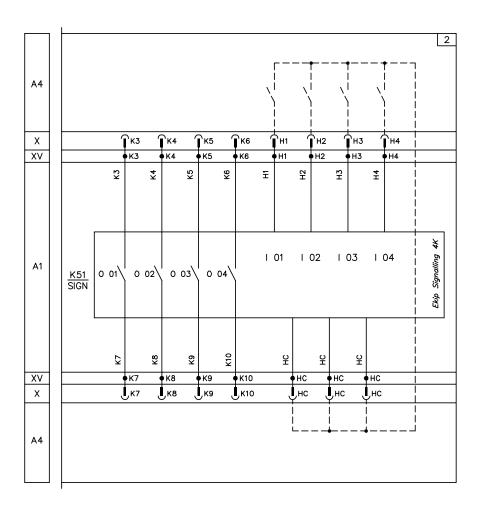


# **Electrical accessories**



1) Supplementary open/closed auxiliary contacts of the circuit-breaker - AUX 6Q (6 Form C)

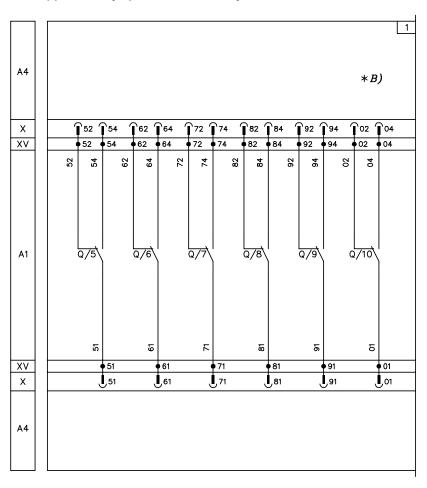


### 91) Supplementary open/closed auxiliary contacts outside the circuit-breaker - AUX 15Q (15 Form C)

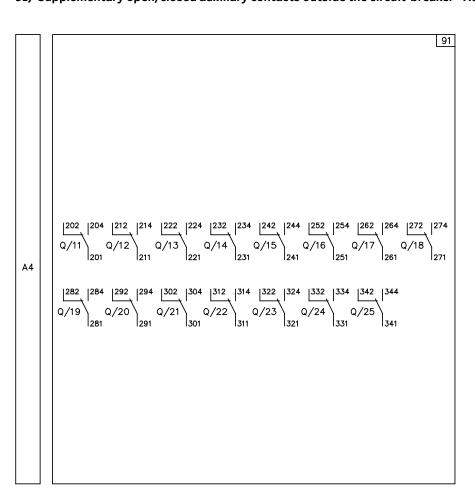


## **Electrical accessories**

### 95) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position

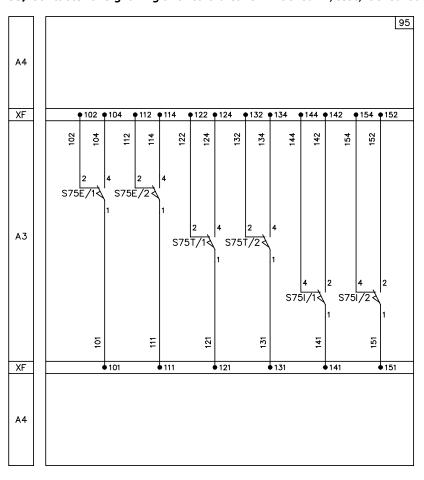


### 96) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (first set)

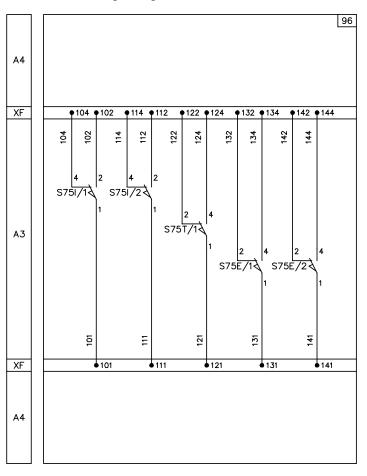


## **Electrical accessories**

### 97) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (second set)

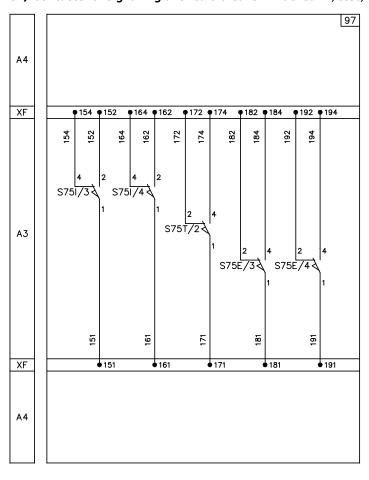

### 97A) Contacts for signalling of circuit-breaker in racked-in, test, racked-out position (second set)

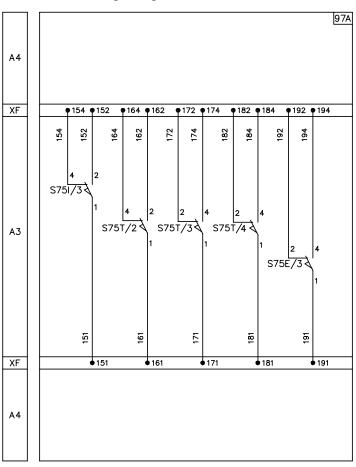

CHAPTER 10

# **Ordering codes**

<b>232</b> -234	Instructions for ordering
<b>232</b> -234	Ordering examples
<b>235</b> -235	General information
<b>236</b> -274	Automatic circuit-breakers
<b>236</b> -250	Fixed version for power distribution
<b>251</b> -264	Withdrawable version for power distribution
<b>265</b> -269	Fixed version for generators
<b>270</b> -274	Withdrawable version for generators
<b>275</b> -278	Switch-disconnectors
<b>275</b> -276	Fixed version
<b>277</b> -278	Withdrawable version
<b>279</b> -282	Automatic circuit-breakers
<b>279</b> -280	Fixed version for Emax 2/E9 up to 900V
<b>281</b> -282	Withdrawable version for Emax 2/E9 up to 900V
<b>283</b> -283	Derived versions
<b>283</b> -283	Sectionalizing truck
<b>283</b> -283	Earthing truck
<b>283</b> -283	Earthing switch with making capacity
<b>284</b> -284	Fixed parts
<b>285</b> -305	Accessories
<b>285</b> -287	Electrical accessories
<b>289</b> -290	Mechanical accessories
<b>291</b> -291	Mechanical interlock
<b>292</b> -294	Ekip modules
<b>295</b> -299	Terminals
<b>300</b> -300	Service
<b>301</b> -305	Spare Parts

# Instructions for ordering

## Ordering examples

Standard version Emax 2 series circuit-breakers are identified by means of commercial codes that can be accessorized.

#### Ordering examples

 Terminal kit codes (other than standard supply) for fixed circuit-breaker or for fixed part of withdrawable circuit-breaker. The codes refer to 3 or 4 pieces (for mounting on top or bottom terminals). To convert a complete circuit-breaker, 1 kit for upper terminals and 1 kit for lower terminals must be specified in the order.

#### Example no. 1

Emax E2.2N 3 poles fixed with vertical rear terminals (VR)		
1SDA071066R1	E2.2N 2500 Ekip Touch LSIG 3p F HR	
1SDA074009R1	Kit VR Sup E2.2 lu=2500 3pcs INST	
1SDA074011R1	Kit VR Inf E2.2 Iu=2500 3pcs INST	

### Example no. 2

Emax E1.2N 4 poles fixed with upper vertical rear (VR) and front (F) terminals (standard supply)		
1SDA071513R1	E1.2N 1600 Ekip Dip LSIG 4p F F	
1SDA073986R1	Kit VR Upper E1.2 F 4pcs INST	

#### Example no. 3

Emax E4.2H 3 poles fixed with upper front terminals (F) and adjustable rear bottom vertical (VR) terminals	
1SDA071169R1	E4.2H 3200 Ekip Hi-Touch LSIG 3p F HR
1SDA074126R1	Kit F upper E4.2 F 3pcs INST
1SDA074017R1	Kit VR lower E4.2 lu=3200 3pcs INST

### Example no. 4

Emax E2.2 2000A 3 poles fixed part with spread upper vertical terminals (SVR) and rear bottom adjustable horizontal (HR) terminals (standard supply)		
1SDA073909R1	E2.2 W FP lu=2000 3p HR HR	
1SDA074057R1	Kit SVR upper E2.2 lu=2000 3pcs INST	

Rating Plug for lower values than rated current.
 Rating plug installed on the circuit-breaker enables to obtain lower current values than rated current.

#### Example no. 5

Emax E2.2S 2500 4 poles fixed In=1600A	
1SDA071706R1	E2.2S 2500 Ekip Touch LSIG 4p F HR
1SDA074266R1	Rating Plug 1600 E1.2E6.2 INST

Ordering for Ekip modules.

Ekip Supply module enables Ekip Com, Ekip Link, Ekip 2K, Ekip Syncrocheck cartridge modules to be installed. In addition to Ekip Supply modules, up to 3 cartridge modules can be installed on E2.2, E4.2 and E6.2 and up to 2 modules on E1.2.

### Example no. 6

Emax E4.2H 3 poles fixed with modules: Ekip Supply, Ekip Com Modbus TCP, Ekip Signalling 2K-1, Ekip Com Modbus TCP Redundant and Ekip Signalling 4K	
1SDA071169R1	E4.2H 3200 Ekip Hi-Touch LSIG 3p F HR
1SDA074173R1	Ekip Supply 24-48V DC E1.2E6.2
1SDA074151R1	Ekip Com Modbus TCP E1.2E6.2
1SDA074158R1	Ekip Com R Modbus TCP E1.2E6.2
1SDA074167R1	Ekip Sign. 2K-1 E1.2E6.2
1SDA074170R1	Ekip Sign. 4K E2.2E6.2

### Example no. 7

Emax E4.2H 3 poles fixed with modules: Ekip Supply, Ekip Com EtherNet/IP™, Ekip Com Modbus RS-485 and Ekip Measuring Pro	
1SDA071166R1	E4.2H 3200 Ekip Touch LSIG 3p F HR
1SDA074173R1	Ekip Supply 24-48V DC E1.2E6.2
1SDA074155R1	Ekip Com EtherNet/IP™ E1.2E6.2
1SDA074150R1	Ekip Com Modbus RS-485 E1.2E6.2
1SDA074189R1	Ekip Measuring Pro E4.2

#### Example no. 8

Emax E1.2N 4 poles fixed with modules: Ekip Supply, Ekip Link		
1SDA071513R1	E1.2N 1600 Ekip Dip LSIG 4p F F	
1SDA074172R1	Ekip Supply 110-240V AC/DC E1.2E6.2	
1SDA074163R1	Ekip Link E1.2E6.2	

• Ordering for electrical accessories.

All the accessories are available. In particular, up to 3 coils can be ordered for E1.2, whereas up to 4 coils for E2.2, E4.2 and E6.2.

### Example no. 9

Emax E2.25 3 poles withdrawable with accessories: opening release, closing release, motor for automatic charging of the springs, second opening release	
1SDA072395R1	E2.2S 2000 Ekip Touch LSi LSIG 3p WMP
1SDA073674R1	YO E1.2E6.2 220-240V AC/DC
1SDA073687R1	YC E1.2E6.2 220-240V AC/DC
1SDA073725R1	M E2.2E6.2 220-250V AC/DC
1SDA073674R1	YO E1.2E6.2 220-240V AC/DC

• Ordering for key locks.

### Example no. 10

Emax E2.2N 3 poles with double key lock in racked-in / test / racked-out position, using different keys	
1SDA071066R1	E2.2N 2500 Ekip Touch LSIG 3p F HR
1SDA073806R1	KLP-D Bl. Racked in/out E2.2E6.2 1st key
1SDA073812R1	KLP-D Bl. Racked in/out E2.2E6.2 2nd key

### \_

# Instructions for ordering

## Ordering examples

- Ordering for mechanical Interlocks.
   Interlocks have several strategy configuration, suitable for fixed circuit-breakers and withdrawable circuit-breakers.
  - Each configuration requires different groups:
  - Cables, select one Kit for strategy A / B / C /
    D. The cables must be ordered on fixed circuit-breaker or fixed part of withdrawable circuit-breaker.
- Lever, required only for E2.2, E4.2 and E6.2.
  These lever must be mounted on fixed circuit-breaker or on mobile part of withdrawable circuit-breaker
- Support, installed on fixed circuit-breaker or on fixed part of withdrawable circuit-breaker.
   This support is mounted on the external right side of the circuit-breaker.

### Example no. 12

Interlock between two fixed circuit-breakers: E1.2 and E2.2					
E1.2 Fixed circuit-breaker	E2.2 Fixed circuit-breaker				
Cables [Group 1]: 1 Item	Lever [Group 2]: 1 Item				
Support [Group 3]: 1 Item	Support [Group 3]: 1 Item				

### Example no. 13

Interlock between three fixed breakers: one E2.2 and two E4.2						
E2.2 Fixed circuit-breaker	E4.2 Fixed circuit-breaker	E4.2 Fixed circuit-breaker				
Cables [Group 1]: 1 Item	Lever [Group 2]: 1 Item	Lever [Group 2]: 1 Item				
Lever [Group 2]: 1 Item	Support [Group 3]: 1 Item	Support [Group 3]: 1 Item				
Support [Group 3]: 1 Item						

#### Example no. 14

Interlock between two withdrawable breakers: E1.2 and E2.2				
E1.2 Fixed Part	E2.2 Mobile Part			
Cables [Group 1]: 1 Item	Lever [Group 2]: 1 Item			
Support [Group 4]: 1 Item	+			
	E2.2 Fixed Part			
	Support [Group 4]: 1 Item			

### Example no. 15

Interlock between three withdrawa	ble breakers: one E2.2 and two E4.2	
E2.2 Mobile Part	E4.2 Mobile Part	E4.2 Mobile Part
Lever [Group 2]: 1 Item	Lever [Group 2]: 1 Item	Lever [Group 2]: 1 Item
+		
E2.2 Fixed Part	E4.2 Fixed Part	E4.2 Fixed Part
Cables [Group 1]: 1 Item	Support [Group 4]: 1 Item	Support [Group 4]: 1 Item
Support [Group 4]: 1 Item	Support [Group 4]: 1 Item	Support [Group 4]: 1 Item

### \_\_\_\_

## **General informations**

### Abbreviations used for the description of the product

Versions and terminals	
F	Fixed circuit-breaker
W	Withdrawable circuit-breaker
MP	Mobile part of withdrawable circuit-breaker
FP	Fixed part of withdrawable circuit-breaker
lu	Rated uninterrupted current
In	Rated current of the rating plug
lcu	Rated ultimate short-circuit breaking capacity
Icw	Rated short-time withstand current
/MS	Switch-disconnector
<u>/f</u>	Four-pole circuit-breakers with neutral pole at 100%
cs	Sectionalizing truck
мт	Earthing truck
МТР	Earthing switch with making capacity
HR VR	Rear orientable terminals
SHR	Horizontal rear spread terminals
SVR	Vertical rear spread terminals
F	Front terminals
FL	Flat terminals
EF	Extended front terminals
ES	Front spread terminals
Fc CuAl	Terminals for cables
Protection trip units and f	unctions
Ekip Dip	Protection trip unit for power distribution
Ekip Touch	Measurement and protection trip unit for power distribution
Ekip Hi Touch	Measurement and protection trip unit and network analyzer for power distribution
Ekip G Touch	Measurement and protection trip unit for generators
Ekip G Hi-Touch	Measurement and protection trip unit and protection network analyzer for generators
L	Overload protection
<u>S</u>	Protection against selective short circuit
<u>I</u>	Protection against instantaneous short circuit
<u>G</u>	Earth fault protection
Rc	Residual current protection
Power Controller	Load management function

# Fixed version for power distribution



### SACE Emax E1.2B • Front terminals (F)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
.2В	630	42	42	E1.2B 630 Ekip Dip LI	1SDA070701R1	1SDA071331R1
				E1.2B 630 Ekip Dip LSI	1SDA070702R1	1SDA071332R1
				E1.2B 630 Ekip Dip LSIG	1SDA070703R1	1SDA071333R1
				E1.2B 630 Ekip Touch LI	1SDA070704R1	1SDA071334R1
				E1.2B 630 Ekip Touch LSI	1SDA070705R1	1SDA071335R1
				E1.2B 630 Ekip Touch LSIG	1SDA070706R1	1SDA071336R1
				E1.2B 630 Ekip Hi-Touch LSI	1SDA070708R1	1SDA071338R1
				E1.2B 630 Ekip Hi-Touch LSIG	1SDA070709R1	1SDA071339R1
	800	42	42	E1.2B 800 Ekip Dip LI	1SDA070741R1	1SDA071371R1
				E1.2B 800 Ekip Dip LSI	1SDA070742R1	1SDA071372R1
				E1.2B 800 Ekip Dip LSIG	1SDA070743R1	1SDA071373R1
				E1.2B 800 Ekip Touch LI	1SDA070744R1	1SDA071374R1
				E1.2B 800 Ekip Touch LSI	1SDA070745R1	1SDA071375R1
				E1.2B 800 Ekip Touch LSIG	1SDA070746R1	1SDA071376R1
				E1.2B 800 Ekip Hi-Touch LSI	1SDA070748R1	1SDA071378R1
				E1.2B 800 Ekip Hi-Touch LSIG	1SDA070749R1	1SDA071379R1
	1000	42	42	E1.2B 1000 Ekip Dip LI	1SDA070781R1	1SDA071411R1
				E1.2B 1000 Ekip Dip LSI	1SDA070782R1	1SDA071412R1
				E1.2B 1000 Ekip Dip LSIG	1SDA070783R1	1SDA071413R1
				E1.2B 1000 Ekip Touch LI	1SDA070784R1	1SDA071414R1
				E1.2B 1000 Ekip Touch LSI	1SDA070785R1	1SDA071415R1
				E1.2B 1000 Ekip Touch LSIG	1SDA070786R1	1SDA071416R1
				E1.2B 1000 Ekip Hi-Touch LSI	1SDA070788R1	1SDA071418R1
				E1.2B 1000 Ekip Hi-Touch LSIG	1SDA070789R1	1SDA071419R1
	1250	42	42	E1.2B 1250 Ekip Dip LI	1SDA070821R1	1SDA071451R1
				E1.2B 1250 Ekip Dip LSI	1SDA070822R1	1SDA071452R1
				E1.2B 1250 Ekip Dip LSIG	1SDA070823R1	1SDA071453R1
				E1.2B 1250 Ekip Touch LI	1SDA070824R1	1SDA071454R1
				E1.2B 1250 Ekip Touch LSI	1SDA070825R1	1SDA071455R1
				E1.2B 1250 Ekip Touch LSIG	1SDA070826R1	1SDA071456R1
				E1.2B 1250 Ekip Hi-Touch LSI	1SDA070828R1	1SDA071458R1
				E1.2B 1250 Ekip Hi-Touch LSIG	1SDA070829R1	1SDA071459R1
	1600	42	42	E1.2B 1600 Ekip Dip LI	1SDA070861R1	1SDA071491R1
				E1.2B 1600 Ekip Dip LSI	1SDA070862R1	1SDA071492R1
				E1.2B 1600 Ekip Dip LSIG	1SDA070863R1	1SDA071493R1
				E1.2B 1600 Ekip Touch LI	1SDA070864R1	1SDA071494R1
				E1.2B 1600 Ekip Touch LSI	1SDA070865R1	1SDA071495R1
				E1.2B 1600 Ekip Touch LSIG	1SDA070866R1	1SDA071496R1
				E1.2B 1600 Ekip Hi-Touch LSI	1SDA070868R1	1SDA071498R1
				E1.2B 1600 Ekip Hi-Touch LSIG		1SDA071499R1



### SACE Emax E1.2C • Front terminals (F)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
.2C	630	50	42	E1.2C 630 Ekip Dip LI	1SDA070711R1	1SDA071341R1
				E1.2C 630 Ekip Dip LSI	1SDA070712R1	1SDA071342R1
				E1.2C 630 Ekip Dip LSIG	1SDA070713R1	1SDA071343R1
				E1.2C 630 Ekip Touch LI	1SDA070714R1	1SDA071344R1
				E1.2C 630 Ekip Touch LSI	1SDA070715R1	1SDA071345R1
				E1.2C 630 Ekip Touch LSIG	1SDA070716R1	1SDA071346R1
				E1.2C 630 Ekip Hi-Touch LSI	1SDA070718R1	1SDA071348R1
				E1.2C 630 Ekip Hi-Touch LSIG	1SDA070719R1	1SDA071349R1
	800	50	42	E1.2C 800 Ekip Dip LI	1SDA070751R1	1SDA071381R1
				E1.2C 800 Ekip Dip LSI	1SDA070752R1	1SDA071382R1
				E1.2C 800 Ekip Dip LSIG	1SDA070753R1	1SDA071383R1
				E1.2C 800 Ekip Touch LI	1SDA070754R1	1SDA071384R1
				E1.2C 800 Ekip Touch LSI	1SDA070755R1	1SDA071385R1
				E1.2C 800 Ekip Touch LSIG	1SDA070756R1	1SDA071386R1
				E1.2C 800 Ekip Hi-Touch LSI	1SDA070758R1	1SDA071388R1
				E1.2C 800 Ekip Hi-Touch LSIG	1SDA070759R1	1SDA071389R1
	1000	50	42	E1.2C 1000 Ekip Dip LI	1SDA070791R1	1SDA071421R1
				E1.2C 1000 Ekip Dip LSI	1SDA070792R1	1SDA071422R1
				E1.2C 1000 Ekip Dip LSIG	1SDA070793R1	1SDA071423R1
				E1.2C 1000 Ekip Touch LI	1SDA070794R1	1SDA071424R1
				E1.2C 1000 Ekip Touch LSI	1SDA070795R1	1SDA071425R1
				E1.2C 1000 Ekip Touch LSIG	1SDA070796R1	1SDA071426R1
				E1.2C 1000 Ekip Hi-Touch LSI	1SDA070798R1	1SDA071428R1
				E1.2C 1000 Ekip Hi-Touch LSIG	1SDA070799R1	1SDA071429R1
	1250	50	42	E1.2C 1250 Ekip Dip LI	1SDA070831R1	1SDA071461R1
				E1.2C 1250 Ekip Dip LSI	1SDA070832R1	1SDA071462R1
				E1.2C 1250 Ekip Dip LSIG	1SDA070833R1	1SDA071463R1
				E1.2C 1250 Ekip Touch LI	1SDA070834R1	1SDA071464R1
				E1.2C 1250 Ekip Touch LSI	1SDA070835R1	1SDA071465R1
				E1.2C 1250 Ekip Touch LSIG	1SDA070836R1	1SDA071466R1
				E1.2C 1250 Ekip Hi-Touch LSI	1SDA070838R1	1SDA071468R1
				E1.2C 1250 Ekip Hi-Touch LSIG	1SDA070839R1	1SDA071469R1
	1600	50	42	E1.2C 1600 Ekip Dip LI	1SDA070871R1	1SDA071501R1
				E1.2C 1600 Ekip Dip LSI	1SDA070872R1	1SDA071502R1
				E1.2C 1600 Ekip Dip LSIG	1SDA070873R1	1SDA071503R1
				E1.2C 1600 Ekip Touch LI	1SDA070874R1	1SDA071504R1
				E1.2C 1600 Ekip Touch LSI	1SDA070875R1	1SDA071505R1
				E1.2C 1600 Ekip Touch LSIG	1SDA070876R1	1SDA071506R1
				E1.2C 1600 Ekip Hi-Touch LSI	1SDA070878R1	1SDA071508R1
				E1.2C 1600 Ekip Hi-Touch LSIG	1SDA070879R1	1SDA071509R1

# Fixed version for power distribution



#### SACE Emax E1.2N • Front terminals (F)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
1.2N	250	66	50	E1.2N 250 Ekip Dip LI	1SDA070691R1	1SDA071321R1
				E1.2N 250 Ekip Dip LSI	1SDA070692R1	1SDA071322R1
				E1.2N 250 Ekip Dip LSIG	1SDA070693R1	1SDA071323R1
				E1.2N 250 Ekip Touch LI	1SDA070694R1	1SDA071324R1
				E1.2N 250 Ekip Touch LSI	1SDA070695R1	1SDA071325R1
				E1.2N 250 Ekip Touch LSIG	1SDA070696R1	1SDA071326R1
				E1.2N 250 Ekip Hi-Touch LSI	1SDA070698R1	1SDA071328R1
				E1.2N 250 Ekip Hi-Touch LSIG	1SDA070699R1	1SDA071329R1
	630	66	50	E1.2N 630 Ekip Dip LI	1SDA070721R1	1SDA071351R1
				E1.2N 630 Ekip Dip LSI	1SDA070722R1	1SDA071352R1
				E1.2N 630 Ekip Dip LSIG	1SDA070723R1	1SDA071353R1
				E1.2N 630 Ekip Touch LI	1SDA070724R1	1SDA071354R1
				E1.2N 630 Ekip Touch LSI	1SDA070725R1	1SDA071355R1
				E1.2N 630 Ekip Touch LSIG	1SDA070726R1	1SDA071356R1
				E1.2N 630 Ekip Hi-Touch LSI	1SDA070728R1	1SDA071358R1
				E1.2N 630 Ekip Hi-Touch LSIG	1SDA070729R1	1SDA071359R1
	800	66	50	E1.2N 800 Ekip Dip LI	1SDA070761R1	1SDA071391R1
				E1.2N 800 Ekip Dip LSI	1SDA070762R1	1SDA071392R1
				E1.2N 800 Ekip Dip LSIG	1SDA070763R1	1SDA071393R1
				E1.2N 800 Ekip Touch LI	1SDA070764R1	1SDA071394R1
				E1.2N 800 Ekip Touch LSI	1SDA070765R1	1SDA071395R1
				E1.2N 800 Ekip Touch LSIG	1SDA070766R1	1SDA071396R1
				E1.2N 800 Ekip Hi-Touch LSI	1SDA070768R1	1SDA071398R1
				E1.2N 800 Ekip Hi-Touch LSIG	1SDA070769R1	1SDA071399R1
	1000	66	50	E1.2N 1000 Ekip Dip LI	1SDA070801R1	1SDA071431R1
				E1.2N 1000 Ekip Dip LSI	1SDA070802R1	1SDA071432R1
				E1.2N 1000 Ekip Dip LSIG	1SDA070803R1	1SDA071433R1
				E1.2N 1000 Ekip Touch LI	1SDA070804R1	1SDA071434R1
				E1.2N 1000 Ekip Touch LSI	1SDA070805R1	1SDA071435R1
				E1.2N 1000 Ekip Touch LSIG	1SDA070806R1	1SDA071436R1
				E1.2N 1000 Ekip Hi-Touch LSI	1SDA070808R1	1SDA071438R1
				E1.2N 1000 Ekip Hi-Touch LSIG	1SDA070809R1	1SDA071439R1



### SACE Emax E1.2N • Front terminals (F)

Size	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E1.2N	1250	66	50	E1.2N 1250 Ekip Dip LI	1SDA070841R1	1SDA071471R1
				E1.2N 1250 Ekip Dip LSI	1SDA070842R1	1SDA071472R1
				E1.2N 1250 Ekip Dip LSIG	1SDA070843R1	1SDA071473R1
				E1.2N 1250 Ekip Touch LI	1SDA070844R1	1SDA071474R1
				E1.2N 1250 Ekip Touch LSI	1SDA070845R1	1SDA071475R1
				E1.2N 1250 Ekip Touch LSIG	1SDA070846R1	1SDA071476R1
				E1.2N 1250 Ekip Hi-Touch LSI	1SDA070848R1	1SDA071478R1
				E1.2N 1250 Ekip Hi-Touch LSIG	1SDA070849R1	1SDA071479R1
	1600	66	50	E1.2N 1600 Ekip Dip LI	1SDA070881R1	1SDA071511R1
				E1.2N 1600 Ekip Dip LSI	1SDA070882R1	1SDA071512R1
				E1.2N 1600 Ekip Dip LSIG	1SDA070883R1	1SDA071513R1
				E1.2N 1600 Ekip Touch LI	1SDA070884R1	1SDA071514R1
				E1.2N 1600 Ekip Touch LSI	1SDA070885R1	1SDA071515R1
				E1.2N 1600 Ekip Touch LSIG	1SDA070886R1	1SDA071516R1
				E1.2N 1600 Ekip Hi-Touch LSI	1SDA070888R1	1SDA071518R1
				E1.2N 1600 Ekip Hi-Touch LSIG	1SDA070889R1	1SDA071519R1

# Fixed version for power distribution



### SACE Emax E2.2B • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E2.2B	1600	42	42	E2.2B 1600 Ekip Dip LI	1SDA070981R1	1SDA071611R1
				E2.2B 1600 Ekip Dip LSI	1SDA070982R1	1SDA071612R1
				E2.2B 1600 Ekip Dip LSIG	1SDA070983R1	1SDA071613R1
				E2.2B 1600 Ekip Touch LI	1SDA070984R1	1SDA071614R1
				E2.2B 1600 Ekip Touch LSI	1SDA070985R1	1SDA071615R1
				E2.2B 1600 Ekip Touch LSIG	1SDA070986R1	1SDA071616R1
				E2.2B 1600 Ekip Hi-Touch LSI	1SDA070988R1	1SDA071618R1
				E2.2B 1600 Ekip Hi-Touch LSIG	1SDA070989R1	1SDA071619R1
	2000	42	42	E2.2B 2000 Ekip Dip LI	1SDA071021R1	1SDA071651R1
				E2.2B 2000 Ekip Dip LSI	1SDA071022R1	1SDA071652R1
				E2.2B 2000 Ekip Dip LSIG	1SDA071023R1	1SDA071653R1
				E2.2B 2000 Ekip Touch LI	1SDA071024R1	1SDA071654R1
				E2.2B 2000 Ekip Touch LSI	1SDA071025R1	1SDA071655R1
				E2.2B 2000 Ekip Touch LSIG	1SDA071026R1	1SDA071656R1
				E2.2B 2000 Ekip Hi-Touch LSI	1SDA071028R1	1SDA071658R1
				E2.2B 2000 Ekip Hi-Touch LSIG	1SDA071029R1	1SDA071659R1



### SACE Emax E2.2N • Orientable rear terminals (HR)

	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
N.	800	66	66	E2.2N 800 Ekip Dip LI	1SDA070891R1	1SDA071521R1
				E2.2N 800 Ekip Dip LSI	1SDA070892R1	1SDA071522R1
				E2.2N 800 Ekip Dip LSIG	1SDA070893R1	1SDA071523R1
				E2.2N 800 Ekip Touch LI	1SDA070894R1	1SDA071524R1
				E2.2N 800 Ekip Touch LSI	1SDA070895R1	1SDA071525R1
				E2.2N 800 Ekip Touch LSIG	1SDA070896R1	1SDA071526R1
				E2.2N 800 Ekip Hi-Touch LSI	1SDA070898R1	1SDA071528R1
				E2.2N 800 Ekip Hi-Touch LSIG	1SDA070899R1	1SDA071529R1
	1000	66	66	E2.2N 1000 Ekip Dip LI	1SDA070921R1	1SDA071551R1
				E2.2N 1000 Ekip Dip LSI	1SDA070922R1	1SDA071552R1
				E2.2N 1000 Ekip Dip LSIG	1SDA070923R1	1SDA071553R1
				E2.2N 1000 Ekip Touch LI	1SDA070924R1	1SDA071554R1
				E2.2N 1000 Ekip Touch LSI	1SDA070925R1	1SDA071555R1
				E2.2N 1000 Ekip Touch LSIG	1SDA070926R1	1SDA071556R1
				E2.2N 1000 Ekip Hi-Touch LSI	1SDA070928R1	1SDA071558R1
				E2.2N 1000 Ekip Hi-Touch LSIG	1SDA070929R1	1SDA071559R1
	1250	66	66	E2.2N 1250 Ekip Dip LI	1SDA070951R1	1SDA071581R1
				E2.2N 1250 Ekip Dip LSI	1SDA070952R1	1SDA071582R1
				E2.2N 1250 Ekip Dip LSIG	1SDA070953R1	1SDA071583R1
				E2.2N 1250 Ekip Touch LI	1SDA070954R1	1SDA071584R1
				E2.2N 1250 Ekip Touch LSI	1SDA070955R1	1SDA071585R1
				E2.2N 1250 Ekip Touch LSIG	1SDA070956R1	1SDA071586R1
				E2.2N 1250 Ekip Hi-Touch LSI	1SDA070958R1	1SDA071588R1
				E2.2N 1250 Ekip Hi-Touch LSIG	1SDA070959R1	1SDA071589R1
	1600	66	66	E2.2N 1600 Ekip Dip LI	1SDA070991R1	1SDA071621R1
				E2.2N 1600 Ekip Dip LSI	1SDA070992R1	1SDA071622R1
				E2.2N 1600 Ekip Dip LSIG	1SDA070993R1	1SDA071623R1
				E2.2N 1600 Ekip Touch LI	1SDA070994R1	1SDA071624R1
				E2.2N 1600 Ekip Touch LSI	1SDA070995R1	1SDA071625R1
				E2.2N 1600 Ekip Touch LSIG	1SDA070996R1	1SDA071626R1
				E2.2N 1600 Ekip Hi-Touch LSI	1SDA070998R1	1SDA071628R1
				E2.2N 1600 Ekip Hi-Touch LSIG	1SDA070999R1	1SDA071629R1
	2000	66	66	E2.2N 2000 Ekip Dip LI	1SDA071031R1	1SDA071661R1
				E2.2N 2000 Ekip Dip LSI	1SDA071032R1	1SDA071662R1
				E2.2N 2000 Ekip Dip LSIG	1SDA071033R1	1SDA071663R1
				E2.2N 2000 Ekip Touch LI	1SDA071034R1	1SDA071664R1
				E2.2N 2000 Ekip Touch LSI	1SDA071035R1	1SDA071665R1
				E2.2N 2000 Ekip Touch LSIG	1SDA071036R1	1SDA071666R1
				E2.2N 2000 Ekip Hi-Touch LSI	1SDA071038R1	1SDA071668R1
				E2.2N 2000 Ekip Hi-Touch LSIG	1SDA071039R1	1SDA071669R1
	2500	66	66	E2.2N 2500 Ekip Dip LI	1SDA071061R1	1SDA071691R1
				E2.2N 2500 Ekip Dip LSI	1SDA071062R1	1SDA071692R1
				E2.2N 2500 Ekip Dip LSIG	1SDA071063R1	1SDA071693R1
				E2.2N 2500 Ekip Touch LI	1SDA071064R1	1SDA071694R1
				E2.2N 2500 Ekip Touch LSI	1SDA071065R1	1SDA071695R1
				E2.2N 2500 Ekip Touch LSIG	1SDA071066R1	1SDA071696R1
				E2.2N 2500 Ekip Hi-Touch LSI	1SDA071068R1	1SDA071698R1
				E2.2N 2500 Ekip Hi-Touch LSIG	1SDA071069R1	1SDA071699R1

# Fixed version for power distribution



### SACE Emax E2.2S • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E2.2S	250	85	66	E2.2S 250 Ekip Dip LI	1SDA073628R1	1SDA073638R1
				E2.2S 250 Ekip Dip LSI	1SDA073629R1	1SDA073639R1
				E2.2S 250 Ekip Dip LSIG	1SDA073630R1	1SDA073640R1
				E2.2S 250 Ekip Touch LI	1SDA073631R1	1SDA073641R1
				E2.2S 250 Ekip Touch LSI	1SDA073632R1	1SDA073642R1
				E2.2S 250 Ekip Touch LSIG	1SDA073633R1	1SDA073643R1
				E2.2S 250 Ekip Hi-Touch LSI	1SDA073635R1	1SDA073645R1
				E2.2S 250 Ekip Hi-Touch LSIG	1SDA073636R1	1SDA073646R1
	800	85	66	E2.2S 800 Ekip Dip LI	1SDA070901R1	1SDA071531R1
				E2.2S 800 Ekip Dip LSI	1SDA070902R1	1SDA071532R1
				E2.2S 800 Ekip Dip LSIG	1SDA070903R1	1SDA071533R1
				E2.2S 800 Ekip Touch LI	1SDA070904R1	1SDA071534R1
				E2.2S 800 Ekip Touch LSI	1SDA070905R1	1SDA071535R1
				E2.2S 800 Ekip Touch LSIG	1SDA070906R1	1SDA071536R1
				E2.2S 800 Ekip Hi-Touch LSI	1SDA070908R1	1SDA071538R1
				E2.2S 800 Ekip Hi-Touch LSIG	1SDA070909R1	1SDA071539R1
	1000	85	66	E2.2S 1000 Ekip Dip LI	1SDA070931R1	1SDA071561R1
				E2.2S 1000 Ekip Dip LSI	1SDA070932R1	1SDA071562R1
				E2.2S 1000 Ekip Dip LSIG	1SDA070933R1	1SDA071563R1
				E2.2S 1000 Ekip Touch LI	1SDA070934R1	1SDA071564R1
				E2.2S 1000 Ekip Touch LSI	1SDA070935R1	1SDA071565R1
				E2.2S 1000 Ekip Touch LSIG	1SDA070936R1	1SDA071566R1
				E2.2S 1000 Ekip Hi-Touch LSI	1SDA070938R1	1SDA071568R1
				E2.2S 1000 Ekip Hi-Touch LSIG	1SDA070939R1	1SDA071569R1
	1250	85	66	E2.2S 1250 Ekip Dip LI	1SDA070961R1	1SDA071591R1
				E2.2S 1250 Ekip Dip LSI	1SDA070962R1	1SDA071592R1
				E2.2S 1250 Ekip Dip LSIG	1SDA070963R1	1SDA071593R1
				E2.2S 1250 Ekip Touch LI	1SDA070964R1	1SDA071594R1
				E2.2S 1250 Ekip Touch LSI	1SDA070965R1	1SDA071595R1
				E2.2S 1250 Ekip Touch LSIG	1SDA070966R1	1SDA071596R1
				E2.2S 1250 Ekip Hi-Touch LSI	1SDA070968R1	1SDA071598R1
				E2.2S 1250 Ekip Hi-Touch LSIG	1SDA070969R1	1SDA071599R1



### SACE Emax E2.2S • Orientable rear terminals (HR)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
2.25	1600	85	66	E2.2S 1600 Ekip Dip LI	1SDA071001R1	1SDA071631R1
				E2.2S 1600 Ekip Dip LSI	1SDA071002R1	1SDA071632R1
				E2.2S 1600 Ekip Dip LSIG	1SDA071003R1	1SDA071633R1
				E2.2S 1600 Ekip Touch LI	1SDA071004R1	1SDA071634R1
				E2.2S 1600 Ekip Touch LSI	1SDA071005R1	1SDA071635R1
		E2.2S 1600 Ekip Touch LSIG			1SDA071006R1	1SDA071636R1
				E2.2S 1600 Ekip Hi-Touch LSI	1SDA071008R1	1SDA071638R1
				E2.2S 1600 Ekip Hi-Touch LSIG	1SDA071009R1	1SDA071639R1
	2000	85	66	E2.2S 2000 Ekip Dip LI	1SDA071041R1	1SDA071671R1
				E2.2S 2000 Ekip Dip LSI	1SDA071042R1	1SDA071672R1
				E2.2S 2000 Ekip Dip LSIG	1SDA071043R1	1SDA071673R1
				E2.2S 2000 Ekip Touch LI	1SDA071044R1	1SDA071674R1
				E2.2S 2000 Ekip Touch LSI	1SDA071045R1	1SDA071675R1
				E2.2S 2000 Ekip Touch LSIG	1SDA071046R1	1SDA071676R1
				E2.2S 2000 Ekip Hi-Touch LSI	1SDA071048R1	1SDA071678R1
				E2.2S 2000 Ekip Hi-Touch LSIG	1SDA071049R1	1SDA071679R1
	2500	85	66	E2.2S 2500 Ekip Dip LI	1SDA071071R1	1SDA071701R1
				E2.2S 2500 Ekip Dip LSI	1SDA071072R1	1SDA071702R1
				E2.2S 2500 Ekip Dip LSIG	1SDA071073R1	1SDA071703R1
				E2.2S 2500 Ekip Touch LI	1SDA071074R1	1SDA071704R1
				E2.2S 2500 Ekip Touch LSI	1SDA071075R1	1SDA071705R1
				E2.2S 2500 Ekip Touch LSIG	1SDA071076R1	1SDA071706R1
				E2.2S 2500 Ekip Hi-Touch LSI	1SDA071078R1	1SDA071708R1
				E2.2S 2500 Ekip Hi-Touch LSIG	1SDA071079R1	1SDA071709R1

# Fixed version for power distribution



### SACE Emax E2.2H • Orientable rear terminals (HR)

ze	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
.2H	800	100	85	E2.2H 800 Ekip Dip LI	1SDA070911R1	1SDA071541R1
				E2.2H 800 Ekip Dip LSI	1SDA070912R1	1SDA071542R1
				E2.2H 800 Ekip Dip LSIG	1SDA070913R1	1SDA071543R1
				E2.2H 800 Ekip Touch LI	1SDA070914R1	1SDA071544R1
				E2.2H 800 Ekip Touch LSI	1SDA070915R1	1SDA071545R1
				E2.2H 800 Ekip Touch LSIG	1SDA070916R1	1SDA071546R1
				E2.2H 800 Ekip Hi-Touch LSI	1SDA070918R1	1SDA071548R1
				E2.2H 800 Ekip Hi-Touch LSIG	1SDA070919R1	1SDA071549R1
	1000	100	85	E2.2H 1000 Ekip Dip LI	1SDA070941R1	1SDA071571R1
				E2.2H 1000 Ekip Dip LSI	1SDA070942R1	1SDA071572R1
				E2.2H 1000 Ekip Dip LSIG	1SDA070943R1	1SDA071573R1
				E2.2H 1000 Ekip Touch LI	1SDA070944R1	1SDA071574R1
				E2.2H 1000 Ekip Touch LSI	1SDA070945R1	1SDA071575R1
				E2.2H 1000 Ekip Touch LSIG	1SDA070946R1	1SDA071576R1
				E2.2H 1000 Ekip Hi-Touch LSI	1SDA070948R1	1SDA071578R1
				E2.2H 1000 Ekip Hi-Touch LSIG	1SDA070949R1	1SDA071579R1
	1250	100	85	E2.2H 1250 Ekip Dip LI	1SDA070971R1	1SDA071601R1
				E2.2H 1250 Ekip Dip LSI	1SDA070972R1	1SDA071602R1
				E2.2H 1250 Ekip Dip LSIG	1SDA070973R1	1SDA071603R1
				E2.2H 1250 Ekip Touch LI	1SDA070974R1	1SDA071604R1
				E2.2H 1250 Ekip Touch LSI	1SDA070975R1	1SDA071605R1
				E2.2H 1250 Ekip Touch LSIG	1SDA070976R1	1SDA071606R1
				E2.2H 1250 Ekip Hi-Touch LSI	1SDA070978R1	1SDA071608R1
				E2.2H 1250 Ekip Hi-Touch LSIG	1SDA070979R1	1SDA071609R1
	1600	100	85	E2.2H 1600 Ekip Dip LI	1SDA071011R1	1SDA071641R1
				E2.2H 1600 Ekip Dip LSI	1SDA071012R1	1SDA071642R1
				E2.2H 1600 Ekip Dip LSIG	1SDA071013R1	1SDA071643R1
				E2.2H 1600 Ekip Touch LI	1SDA071014R1	1SDA071644R1
				E2.2H 1600 Ekip Touch LSI	1SDA071015R1	1SDA071645R1
				E2.2H 1600 Ekip Touch LSIG	1SDA071016R1	1SDA071646R1
				E2.2H 1600 Ekip Hi-Touch LSI	1SDA071018R1	1SDA071648R1
				E2.2H 1600 Ekip Hi-Touch LSIG		1SDA071649R1
	2000	100	85	E2.2H 2000 Ekip Dip LI	1SDA071051R1	1SDA071681R1
				E2.2H 2000 Ekip Dip LSI	1SDA071052R1	1SDA071682R1
				E2.2H 2000 Ekip Dip LSIG	1SDA071053R1	1SDA071683R1
				E2.2H 2000 Ekip Touch LI	1SDA071054R1	1SDA071684R1
				E2.2H 2000 Ekip Touch LSI	1SDA071055R1	1SDA071685R1
				E2.2H 2000 Ekip Touch LSIG	1SDA071056R1	1SDA071686R1
				E2.2H 2000 Ekip Hi-Touch LSI	1SDA071058R1	1SDA071688R1
				E2.2H 2000 Ekip Hi-Touch LSIG		1SDA071689R1
	2500	100	85	E2.2H 2500 Ekip Dip LI	1SDA071081R1	1SDA071711R1
				E2.2H 2500 Ekip Dip LSI	1SDA071082R1	1SDA071712R1
				E2.2H 2500 Ekip Dip LSIG	1SDA071083R1	1SDA071713R1
				E2.2H 2500 Ekip Touch LI	1SDA071084R1	1SDA071714R1
				E2.2H 2500 Ekip Touch LSI	1SDA071085R1	1SDA071715R1
				E2.2H 2500 Ekip Touch LSIG	1SDA071086R1	1SDA071716R1
				E2.2H 2500 Ekip Hi-Touch LSI	1SDA071088R1	1SDA071718R1
				E2.2H 2500 Ekip Hi-Touch LSIG		1SDA071719R1



### SACE Emax E4.2N-S • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E4.2N	3200	66	66	E4.2N 3200 Ekip Dip LI	1SDA071141R1	1SDA071771R1
				E4.2N 3200 Ekip Dip LSI	1SDA071142R1	1SDA071772R1
				E4.2N 3200 Ekip Dip LSIG	1SDA071143R1	1SDA071773R1
				E4.2N 3200 Ekip Touch LI	1SDA071144R1	1SDA071774R1
				E4.2N 3200 Ekip Touch LSI	1SDA071145R1	1SDA071775R1
				E4.2N 3200 Ekip Touch LSIG	1SDA071146R1	1SDA071776R1
				E4.2N 3200 Ekip Hi-Touch LSI	1SDA071148R1	1SDA071778R1
				E4.2N 3200 Ekip Hi-Touch LSIG	1SDA071149R1	1SDA071779R1
	4000	66	66	E4.2N 4000 Ekip Dip LI	1SDA071191R1	1SDA071821R1
				E4.2N 4000 Ekip Dip LSI	1SDA071192R1	1SDA071822R1
				E4.2N 4000 Ekip Dip LSIG	1SDA071193R1	1SDA071823R1
				E4.2N 4000 Ekip Touch LI	1SDA071194R1	1SDA071824R1
				E4.2N 4000 Ekip Touch LSI	1SDA071195R1	1SDA071825R1
				E4.2N 4000 Ekip Touch LSIG	1SDA071196R1	1SDA071826R1
				E4.2N 4000 Ekip Hi-Touch LSI	1SDA071198R1	1SDA071828R1
				E4.2N 4000 Ekip Hi-Touch LSIG	1SDA071199R1	1SDA071829R1
E4.2S	3200	85	66	E4.2S 3200 Ekip Dip LI	1SDA071151R1	1SDA071781R1
				E4.2S 3200 Ekip Dip LSI	1SDA071152R1	1SDA071782R1
				E4.2S 3200 Ekip Dip LSIG	1SDA071153R1	1SDA071783R1
				E4.2S 3200 Ekip Touch LI	1SDA071154R1	1SDA071784R1
				E4.2S 3200 Ekip Touch LSI	1SDA071155R1	1SDA071785R1
				E4.2S 3200 Ekip Touch LSIG	1SDA071156R1	1SDA071786R1
				E4.2S 3200 Ekip Hi-Touch LSI	1SDA071158R1	1SDA071788R1
				E4.2S 3200 Ekip Hi-Touch LSIG	1SDA071159R1	1SDA071789R1
	4000	85	66	E4.2S 4000 Ekip Dip LI	1SDA071201R1	1SDA071831R1
				E4.2S 4000 Ekip Dip LSI	1SDA071202R1	1SDA071832R1
				E4.2S 4000 Ekip Dip LSIG	1SDA071203R1	1SDA071833R1
				E4.2S 4000 Ekip Touch LI	1SDA071204R1	1SDA071834R1
				E4.2S 4000 Ekip Touch LSI	1SDA071205R1	1SDA071835R1
				E4.2S 4000 Ekip Touch LSIG	1SDA071206R1	1SDA071836R1
				E4.2S 4000 Ekip Hi-Touch LSI	1SDA071208R1	1SDA071838R1
				E4.2S 4000 Ekip Hi-Touch LSIG	1SDA071209R1	1SDA071839R1

# Fixed version for power distribution



### SACE Emax E4.2H-V • Orientable rear terminals (HR)

	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E4.2H			1SDA071161R1	1SDA071791R1		
				E4.2H 3200 Ekip Dip LSI	1SDA071162R1	1SDA071792R1
				E4.2H 3200 Ekip Dip LSIG	1SDA071163R1	1SDA071793R1
				E4.2H 3200 Ekip Touch LI	1SDA071164R1	1SDA071794R1
				E4.2H 3200 Ekip Touch LSI	1SDA071165R1	1SDA071795R1
				E4.2H 3200 Ekip Touch LSIG	1SDA071166R1	1SDA071796R1
				E4.2H 3200 Ekip Hi-Touch LSI	1SDA071168R1	1SDA071798R1
				E4.2H 3200 Ekip Hi-Touch LSIG	1SDA071169R1	1SDA071799R1
	4000	100	85	E4.2H 4000 Ekip Dip LI	1SDA071211R1	1SDA071841R1
				E4.2H 4000 Ekip Dip LSI	1SDA071212R1	1SDA071842R1
				E4.2H 4000 Ekip Dip LSIG	1SDA071213R1	1SDA071843R1
				E4.2H 4000 Ekip Touch LI	1SDA071214R1	1SDA071844R1
				E4.2H 4000 Ekip Touch LSI	1SDA071215R1	1SDA071845R1
				E4.2H 4000 Ekip Touch LSIG	1SDA071216R1	1SDA071846R1
				E4.2H 4000 Ekip Hi-Touch LSI	1SDA071218R1	1SDA071848R1
				E4.2H 4000 Ekip Hi-Touch LSIG	1SDA071219R1	1SDA071849R1
4.2V	2000	150	100	E4.2V 2000 Ekip Dip LI	1SDA071101R1	1SDA071731R1
				E4.2V 2000 Ekip Dip LSI	1SDA071102R1	1SDA071732R1
				E4.2V 2000 Ekip Dip LSIG	1SDA071103R1	1SDA071733R1
				E4.2V 2000 Ekip Touch LI	1SDA071104R1	1SDA071734R1
				E4.2V 2000 Ekip Touch LSI	1SDA071105R1	1SDA071735R1
				E4.2V 2000 Ekip Touch LSIG	1SDA071106R1	1SDA071736R1
				E4.2V 2000 Ekip Hi-Touch LSI	1SDA071108R1	1SDA071738R1
				E4.2V 2000 Ekip Hi-Touch LSIG	1SDA071109R1	1SDA071739R1
	2500	150	100	E4.2V 2500 Ekip Dip LI	1SDA071121R1	1SDA071751R1
				E4.2V 2500 Ekip Dip LSI	1SDA071122R1	1SDA071752R1
				E4.2V 2500 Ekip Dip LSIG	1SDA071123R1	1SDA071753R1
				E4.2V 2500 Ekip Touch LI	1SDA071124R1	1SDA071754R1
				E4.2V 2500 Ekip Touch LSI	1SDA071125R1	1SDA071755R1
				E4.2V 2500 Ekip Touch LSIG	1SDA071126R1	1SDA071756R1
				E4.2V 2500 Ekip Hi-Touch LSI	1SDA071128R1	1SDA071758R1
				E4.2V 2500 Ekip Hi-Touch LSIG		1SDA071759R1
	3200	150	100	E4.2V 3200 Ekip Dip LI	1SDA071171R1	1SDA071801R1
				E4.2V 3200 Ekip Dip LSI	1SDA071172R1	1SDA071802R1
				E4.2V 3200 Ekip Dip LSIG	1SDA071173R1	1SDA071803R1
				E4.2V 3200 Ekip Touch LI	1SDA071174R1	1SDA071804R1
				E4.2V 3200 Ekip Touch LSI	1SDA071175R1	1SDA071805R1
				E4.2V 3200 Ekip Touch LSIG	1SDA071176R1	1SDA071806R1
				E4.2V 3200 Ekip Hi-Touch LSI	1SDA071178R1	1SDA071808R1
					1SDA071179R1	1SDA071809R1
	4000	150	100	E4.2V 4000 Ekip Dip LI	1SDA071221R1	1SDA071853R1
	1000	100	100	E4.2V 4000 Ekip Dip LSI	1SDA071222R1	1SDA071852R1
				E4.2V 4000 Ekip Dip LSIG	1SDA071222R1 1SDA071223R1	1SDA071853R1
				E4.2V 4000 Ekip Touch LI	1SDA071223R1 1SDA071224R1	1SDA071854R1
				E4.2V 4000 Ekip Touch LSI		
				·	1SDA071225R1	1SDA071855R1
				E4.2V 4000 Ekip Touch LSIG	1SDA071226R1	1SDA071856R1
				E4.2V 4000 Ekip Hi-Touch LSI E4.2V 4000 Ekip Hi-Touch LSIG	1SDA071228R1	1SDA071858R1 1SDA071859R1



### SACE Emax E6.2H-V • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E6.2H	4000	100	100	E6.2H 4000 Ekip Dip LI	1SDA071231R1	1SDA071861R1
				E6.2H 4000 Ekip Dip LSI	1SDA071232R1	1SDA071862R1
				E6.2H 4000 Ekip Dip LSIG	1SDA071233R1	1SDA071863R1
				E6.2H 4000 Ekip Touch LI	1SDA071234R1	1SDA071864R1
				E6.2H 4000 Ekip Touch LSI	1SDA071235R1	1SDA071865R1
				E6.2H 4000 Ekip Touch LSIG	1SDA071236R1	1SDA071866R1
				E6.2H 4000 Ekip Hi-Touch LSI	1SDA071238R1	1SDA071868R1
				E6.2H 4000 Ekip Hi-Touch LSIG	1SDA071239R1	1SDA071869R1
	5000	100	100	E6.2H 5000 Ekip Dip LI	1SDA071261R1	1SDA071891R1
				E6.2H 5000 Ekip Dip LSI	1SDA071262R1	1SDA071892R1
				E6.2H 5000 Ekip Dip LSIG	1SDA071263R1	1SDA071893R1
				E6.2H 5000 Ekip Touch LI	1SDA071264R1	1SDA071894R1
				E6.2H 5000 Ekip Touch LSI	1SDA071265R1	1SDA071895R1
				E6.2H 5000 Ekip Touch LSIG	1SDA071266R1	1SDA071896R1
				E6.2H 5000 Ekip Hi-Touch LSI	1SDA071268R1	1SDA071898R1
				E6.2H 5000 Ekip Hi-Touch LSIG	1SDA071269R1	1SDA071899R1
	6300	100	100	E6.2H 6300 Ekip Dip LI	1SDA071291R1	1SDA071921R1
				E6.2H 6300 Ekip Dip LSI	1SDA071292R1	1SDA071922R1
				E6.2H 6300 Ekip Dip LSIG	1SDA071293R1	1SDA071923R1
				E6.2H 6300 Ekip Touch LI	1SDA071294R1	1SDA071924R1
				E6.2H 6300 Ekip Touch LSI	1SDA071295R1	1SDA071925R1
				E6.2H 6300 Ekip Touch LSIG	1SDA071296R1	1SDA071926R1
				E6.2H 6300 Ekip Hi-Touch LSI	1SDA071298R1	1SDA071928R1
				E6.2H 6300 Ekip Hi-Touch LSIG		1SDA071929R1
5.2V	4000	150	100	E6.2V 4000 Ekip Dip LI	1SDA071241R1	1SDA071871R1
				E6.2V 4000 Ekip Dip LSI	1SDA071242R1	1SDA071872R1
				E6.2V 4000 Ekip Dip LSIG	1SDA071243R1	1SDA071873R1
				E6.2V 4000 Ekip Touch LI	1SDA071244R1	1SDA071874R1
				E6.2V 4000 Ekip Touch LSI	1SDA071245R1	1SDA071875R1
				E6.2V 4000 Ekip Touch LSIG	1SDA071246R1	1SDA071876R1
				E6.2V 4000 Ekip Hi-Touch LSI	1SDA071248R1	1SDA071878R1
					1SDA071249R1	1SDA071879R1
	5000	150	100	E6.2V 5000 Ekip Dip LI	1SDA071271R1	1SDA071901R1
				E6.2V 5000 Ekip Dip LSI	1SDA071272R1	1SDA071902R1
				E6.2V 5000 Ekip Dip LSIG	1SDA071273R1	1SDA071903R1
				E6.2V 5000 Ekip Touch LI	1SDA071274R1	1SDA071904R1
				E6.2V 5000 Ekip Touch LSI	1SDA071275R1	1SDA071905R1
				E6.2V 5000 Ekip Touch LSIG	1SDA071276R1	1SDA071906R1
				E6.2V 5000 Ekip Hi-Touch LSI	1SDA071278R1	1SDA071908R1
				E6.2V 5000 Ekip Hi-Touch LSIG		1SDA071909R1
	6300	150	100	E6.2V 6300 Ekip Dip LI	1SDA071273R1	1SDA071909R1 1SDA071931R1
	2300	-50	-55	E6.2V 6300 Ekip Dip LSI	1SDA071301R1	1SDA071931R1 1SDA071932R1
				E6.2V 6300 Ekip Dip LSIG	1SDA071302R1	1SDA071932R1 1SDA071933R1
				E6.2V 6300 Ekip Touch LI	1SDA071303R1	1SDA071933R1 1SDA071934R1
				E6.2V 6300 Ekip Touch LSI		
				E6.2V 6300 Ekip Touch LSIG	1SDA071305R1	1SDA071935R1
				·	1SDA071306R1	1SDA071936R1
				E6.2V 6300 Ekip Hi-Touch LSI	1SDA071308R1	1SDA071938R1
				E6.2V 6300 Ekip Hi-Touch LSIG	1SDA071309R1	1SDA071939R1

# Fixed version for power distribution



### SACE Emax E6.2X • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
6.2X	4000	0 150 120 E6.2X 4000 Ekip Dip LI		E6.2X 4000 Ekip Dip LI	1SDA071251R1	1SDA071881R1
				E6.2X 4000 Ekip Dip LSI	1SDA071252R1	1SDA071882R1
				E6.2X 4000 Ekip Dip LSIG	1SDA071253R1	1SDA071883R1
				E6.2X 4000 Ekip Touch LI	1SDA071254R1	1SDA071884R1
				E6.2X 4000 Ekip Touch LSI	1SDA071255R1	1SDA071885R1
				E6.2X 4000 Ekip Touch LSIG	1SDA071256R1	1SDA071886R1
				E6.2X 4000 Ekip Hi-Touch LSI	1SDA071258R1	1SDA071888R1
				E6.2X 4000 Ekip Hi-Touch LSIG	1SDA071259R1	1SDA071889R1
	5000	150	120	E6.2X 5000 Ekip Dip LI	1SDA071281R1	1SDA071911R1
				E6.2X 5000 Ekip Dip LSI	1SDA071282R1	1SDA071912R1
				E6.2X 5000 Ekip Dip LSIG	1SDA071283R1	1SDA071913R1
				E6.2X 5000 Ekip Touch LI	1SDA071284R1	1SDA071914R1
				E6.2X 5000 Ekip Touch LSI	1SDA071285R1	1SDA071915R1
				E6.2X 5000 Ekip Touch LSIG	1SDA071286R1	1SDA071916R1
				E6.2X 5000 Ekip Hi-Touch LSI	1SDA071288R1	1SDA071918R1
				E6.2X 5000 Ekip Hi-Touch LSIG	1SDA071289R1	1SDA071919R1
	6300	150	120	E6.2X 6300 Ekip Dip LI	1SDA071311R1	1SDA071941R1
				E6.2X 6300 Ekip Dip LSI	1SDA071312R1	1SDA071942R1
				E6.2X 6300 Ekip Dip LSIG	1SDA071313R1	1SDA071943R1
				E6.2X 6300 Ekip Touch LI	1SDA071314R1	1SDA071944R1
				E6.2X 6300 Ekip Touch LSI	1SDA071315R1	1SDA071945R1
				E6.2X 6300 Ekip Touch LSIG	1SDA071316R1	1SDA071946R1
				E6.2X 6300 Ekip Hi-Touch LSI	1SDA071318R1	1SDA071948R1
				E6.2X 6300 Ekip Hi-Touch LSIG	1SDA071319R1	1SDA071949R1



SACE Emax E6.2H-V/f Full size • Orientable rear terminals (HR)

Size	lu	lcu	lcw (1s)	Туре	4 Poles
		(440V)			Code
E6.2H/f	4000	100	100	E6.2H/f 4000 Ekip Dip LI	1SDA071951R1
E6.2H/T				E6.2H/f 4000 Ekip Dip LSI	1SDA071952R1
				E6.2H/f 4000 Ekip Dip LSIG	1SDA071953R1
				E6.2H/f 4000 Ekip Touch LI	1SDA071954R1
				E6.2H/f 4000 Ekip Touch LSI	1SDA071955R1
				E6.2H/f 4000 Ekip Touch LSIG	1SDA071956R1
				E6.2H/f 4000 Ekip Hi-Touch LSI	1SDA071958R1
				E6.2H/f 4000 Ekip Hi-Touch LSIG	1SDA071959R1
	5000	100	100	E6.2H/f 5000 Ekip Dip LI	1SDA071981R1
				E6.2H/f 5000 Ekip Dip LSI	1SDA071982R1
				E6.2H/f 5000 Ekip Dip LSIG	1SDA071983R1
				E6.2H/f 5000 Ekip Touch LI	1SDA071984R1
				E6.2H/f 5000 Ekip Touch LSI	1SDA071985R1
				E6.2H/f 5000 Ekip Touch LSIG	1SDA071986R1
				E6.2H/f 5000 Ekip Hi-Touch LSI	1SDA071988R1
				E6.2H/f 5000 Ekip Hi-Touch LSIG	1SDA071989R1
	6300	100	100	E6.2H/f 6300 Ekip Dip LI	1SDA072011R1
				E6.2H/f 6300 Ekip Dip LSI	1SDA072012R1
				E6.2H/f 6300 Ekip Dip LSIG	1SDA072013R1
				E6.2H/f 6300 Ekip Touch LI	1SDA072014R1
				E6.2H/f 6300 Ekip Touch LSI	1SDA072015R1
				E6.2H/f 6300 Ekip Touch LSIG	1SDA072016R1
				E6.2H/f 6300 Ekip Hi-Touch LSI	1SDA072018R1
				E6.2H/f 6300 Ekip Hi-Touch LSIG	1SDA072019R1
E6.2V/f	4000	150	100	E6.2V/f 4000 Ekip Dip LI	1SDA071961R1
				E6.2V/f 4000 Ekip Dip LSI	1SDA071962R1
				E6.2V/f 4000 Ekip Dip LSIG	1SDA071963R1
				E6.2V/f 4000 Ekip Touch LI	1SDA071964R1
				E6.2V/f 4000 Ekip Touch LSI	1SDA071965R1
				E6.2V/f 4000 Ekip Touch LSIG	1SDA071966R1
				E6.2V/f 4000 Ekip Hi-Touch LSI	1SDA071968R1
				E6.2V/f 4000 Ekip Hi-Touch LSIG	1SDA071969R1
	5000	150	100	E6.2V/f 5000 Ekip Dip LI	1SDA071991R1
				E6.2V/f 5000 Ekip Dip LSI	1SDA071992R1
				E6.2V/f 5000 Ekip Dip LSIG	1SDA071993R1
				E6.2V/f 5000 Ekip Touch LI	1SDA071994R1
				E6.2V/f 5000 Ekip Touch LSI	1SDA071995R1
				E6.2V/f 5000 Ekip Touch LSIG	1SDA071996R1
				E6.2V/f 5000 Ekip Hi-Touch LSI	1SDA071998R1
				E6.2V/f 5000 Ekip Hi-Touch LSIG	1SDA071999R1
	6300	150	100	E6.2V/f 6300 Ekip Dip LI	1SDA072021R1
				E6.2V/f 6300 Ekip Dip LSI	1SDA072022R1
				E6.2V/f 6300 Ekip Dip LSIG	1SDA072023R1
				E6.2V/f 6300 Ekip Touch LI	1SDA072024R1
				E6.2V/f 6300 Ekip Touch LSI	1SDA072025R1
				E6.2V/f 6300 Ekip Touch LSIG	1SDA072026R1
				E6.2V/f 6300 Ekip Hi-Touch LSI	1SDA072028R1
				E6.2V/f 6300 Ekip Hi-Touch LSIG	1SDA072029R1

# Fixed version for power distribution



#### SACE Emax E6.2X/f Full size • Orientable rear terminals (HR)

Size	lu	lcu	lcw (1s)	Туре	4 Poles
		(440V)			Code
E6.2X/f	4000	150	120	E6.2X/f 4000 Ekip Dip LI	1SDA071971R1
				E6.2X/f 4000 Ekip Dip LSI	1SDA071972R1
				E6.2X/f 4000 Ekip Dip LSIG	1SDA071973R1
				E6.2X/f 4000 Ekip Touch LI	1SDA071974R1
				E6.2X/f 4000 Ekip Touch LSI	1SDA071975R1
				E6.2X/f 4000 Ekip Touch LSIG	1SDA071976R1
				E6.2X/f 4000 Ekip Hi-Touch LSI	1SDA071978R1
				E6.2X/f 4000 Ekip Hi-Touch LSIG	1SDA071979R1
	5000	150	120	E6.2X/f 5000 Ekip Dip LI	1SDA072001R1
				E6.2X/f 5000 Ekip Dip LSI	1SDA072002R1
				E6.2X/f 5000 Ekip Dip LSIG	1SDA072003R1
				E6.2X/f 5000 Ekip Touch LI	1SDA072004R1
				E6.2X/f 5000 Ekip Touch LSI	1SDA072005R1
				E6.2X/f 5000 Ekip Touch LSIG	1SDA072006R1
				E6.2X/f 5000 Ekip Hi-Touch LSI	1SDA072008R1
				E6.2X/f 5000 Ekip Hi-Touch LSIG	1SDA072009R1
	6300	150	120	E6.2X/f 6300 Ekip Dip LI	1SDA072031R1
				E6.2X/f 6300 Ekip Dip LSI	1SDA072032R1
				E6.2X/f 6300 Ekip Dip LSIG	1SDA072033R1
				E6.2X/f 6300 Ekip Touch LI	1SDA072034R1
				E6.2X/f 6300 Ekip Touch LSI	1SDA072035R1
				E6.2X/f 6300 Ekip Touch LSIG	1SDA072036R1
				E6.2X/f 6300 Ekip Hi-Touch LSI	1SDA072038R1
				E6.2X/f 6300 Ekip Hi-Touch LSIG	1SDA072039R1

## **Automatic circuit-breakers**

# Withdrawable version for power distribution



SACE Emax E1.2B · Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
.2B	630	42	42	E1.2B 630 Ekip Dip LI	1SDA072051R1	1SDA072681R1
				E1.2B 630 Ekip Dip LSI	1SDA072052R1	1SDA072682R1
				E1.2B 630 Ekip Dip LSIG	1SDA072053R1	1SDA072683R1
				E1.2B 630 Ekip Touch LI	1SDA072054R1	1SDA072684R1
				E1.2B 630 Ekip Touch LSI	1SDA072055R1	1SDA072685R1
				E1.2B 630 Ekip Touch LSIG	1SDA072056R1	1SDA072686R1
				E1.2B 630 Ekip Hi-Touch LSI	1SDA072058R1	1SDA072688R1
				E1.2B 630 Ekip Hi-Touch LSIG	1SDA072059R1	1SDA072689R1
	800	42	42	E1.2B 800 Ekip Dip LI	1SDA072091R1	1SDA072721R1
				E1.2B 800 Ekip Dip LSI	1SDA072092R1	1SDA072722R1
				E1.2B 800 Ekip Dip LSIG	1SDA072093R1	1SDA072723R1
				E1.2B 800 Ekip Touch LI	1SDA072094R1	1SDA072724R1
				E1.2B 800 Ekip Touch LSI	1SDA072095R1	1SDA072725R1
				E1.2B 800 Ekip Touch LSIG	1SDA072096R1	1SDA072726R1
				E1.2B 800 Ekip Hi-Touch LSI	1SDA072098R1	1SDA072728R1
				E1.2B 800 Ekip Hi-Touch LSIG	1SDA072099R1	1SDA072729R1
	1000	42	42	E1.2B 1000 Ekip Dip LI	1SDA072131R1	1SDA072761R1
				E1.2B 1000 Ekip Dip LSI	1SDA072132R1	1SDA072762R1
				E1.2B 1000 Ekip Dip LSIG	1SDA072133R1	1SDA072763R1
				E1.2B 1000 Ekip Touch LI	1SDA072134R1	1SDA072764R1
				E1.2B 1000 Ekip Touch LSI	1SDA072135R1	1SDA072765R1
				E1.2B 1000 Ekip Touch LSIG	1SDA072136R1	1SDA072766R1
				E1.2B 1000 Ekip Hi-Touch LSI	1SDA072138R1	1SDA072768R1
				E1.2B 1000 Ekip Hi-Touch LSIG	1SDA072139R1	1SDA072769R1
	1250	42	42	E1.2B 1250 Ekip Dip LI	1SDA072171R1	1SDA072801R1
				E1.2B 1250 Ekip Dip LSI	1SDA072172R1	1SDA072802R1
				E1.2B 1250 Ekip Dip LSIG	1SDA072173R1	1SDA072803R1
				E1.2B 1250 Ekip Touch LI	1SDA072174R1	1SDA072804R1
				E1.2B 1250 Ekip Touch LSI	1SDA072175R1	1SDA072805R1
				E1.2B 1250 Ekip Touch LSIG	1SDA072176R1	1SDA072806R1
				E1.2B 1250 Ekip Hi-Touch LSI	1SDA072178R1	1SDA072808R1
				E1.2B 1250 Ekip Hi-Touch LSIG	1SDA072179R1	1SDA072809R1
	1600	42	42	E1.2B 1600 Ekip Dip LI	1SDA072211R1	1SDA072841R1
				E1.2B 1600 Ekip Dip LSI	1SDA072212R1	1SDA072842R1
				E1.2B 1600 Ekip Dip LSIG	1SDA072213R1	1SDA072843R1
				E1.2B 1600 Ekip Touch LI	1SDA072214R1	1SDA072844R1
				E1.2B 1600 Ekip Touch LSI	1SDA072215R1	1SDA072845R1
				E1.2B 1600 Ekip Touch LSIG	1SDA072216R1	1SDA072846R1
				E1.2B 1600 Ekip Hi-Touch LSI	1SDA072218R1	1SDA072848R1
				E1.2B 1600 Ekip Hi-Touch LSIG	1SDA072219R1	1SDA072849R1

# Withdrawable version for power distribution



SACE Emax E1.2C • Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
2C	630	50	42	E1.2C 630 Ekip Dip LI	1SDA072061R1	1SDA072691R1
				E1.2C 630 Ekip Dip LSI	1SDA072062R1	1SDA072692R1
				E1.2C 630 Ekip Dip LSIG	1SDA072063R1	1SDA072693R1
				E1.2C 630 Ekip Touch LI	1SDA072064R1	1SDA072694R1
				E1.2C 630 Ekip Touch LSI	1SDA072065R1	1SDA072695R1
				E1.2C 630 Ekip Touch LSIG	1SDA072066R1	1SDA072696R1
				E1.2C 630 Ekip Hi-Touch LSI	1SDA072068R1	1SDA072698R1
				E1.2C 630 Ekip Hi-Touch LSIG	1SDA072069R1	1SDA072699R1
	800	50	42	E1.2C 800 Ekip Dip LI	1SDA072101R1	1SDA072731R1
				E1.2C 800 Ekip Dip LSI	1SDA072102R1	1SDA072732R1
				E1.2C 800 Ekip Dip LSIG	1SDA072103R1	1SDA072733R1
				E1.2C 800 Ekip Touch LI	1SDA072104R1	1SDA072734R1
				E1.2C 800 Ekip Touch LSI	1SDA072105R1	1SDA072735R1
				E1.2C 800 Ekip Touch LSIG	1SDA072106R1	1SDA072736R1
				E1.2C 800 Ekip Hi-Touch LSI	1SDA072108R1	1SDA072738R1
				E1.2C 800 Ekip Hi-Touch LSIG	1SDA072109R1	1SDA072739R1
	1000	50	42	E1.2C 1000 Ekip Dip LI	1SDA072141R1	1SDA072771R1
				E1.2C 1000 Ekip Dip LSI	1SDA072142R1	1SDA072772R1
				E1.2C 1000 Ekip Dip LSIG	1SDA072143R1	1SDA072773R1
				E1.2C 1000 Ekip Touch LI	1SDA072144R1	1SDA072774R1
				E1.2C 1000 Ekip Touch LSI	1SDA072145R1	1SDA072775R1
				E1.2C 1000 Ekip Touch LSIG	1SDA072146R1	1SDA072776R1
				E1.2C 1000 Ekip Hi-Touch LSI	1SDA072148R1	1SDA072778R1
				E1.2C 1000 Ekip Hi-Touch LSIG	1SDA072149R1	1SDA072779R1
	1250	50	42	E1.2C 1250 Ekip Dip LI	1SDA072181R1	1SDA072811R1
				E1.2C 1250 Ekip Dip LSI	1SDA072182R1	1SDA072812R1
				E1.2C 1250 Ekip Dip LSIG	1SDA072183R1	1SDA072813R1
				E1.2C 1250 Ekip Touch LI	1SDA072184R1	1SDA072814R1
				E1.2C 1250 Ekip Touch LSI	1SDA072185R1	1SDA072815R1
				E1.2C 1250 Ekip Touch LSIG	1SDA072186R1	1SDA072816R1
				E1.2C 1250 Ekip Hi-Touch LSI	1SDA072188R1	1SDA072818R1
				E1.2C 1250 Ekip Hi-Touch LSIG	1SDA072189R1	1SDA072819R1
	1600	50	42	E1.2C 1600 Ekip Dip LI	1SDA072221R1	1SDA072851R1
				E1.2C 1600 Ekip Dip LSI	1SDA072222R1	1SDA072852R1
				E1.2C 1600 Ekip Dip LSIG	1SDA072223R1	1SDA072853R1
				E1.2C 1600 Ekip Touch LI	1SDA072224R1	1SDA072854R1
				E1.2C 1600 Ekip Touch LSI	1SDA072225R1	1SDA072855R1
				E1.2C 1600 Ekip Touch LSIG	1SDA072226R1	1SDA072856R1
				E1.2C 1600 Ekip Hi-Touch LSI	1SDA072228R1	1SDA072858R1
				E1.2C 1600 Ekip Hi-Touch LSIG	1SDA072229R1	1SDA072859R1



### SACE Emax E1.2N • Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
1.2N	250	66	50	E1.2N 250 Ekip Dip LI	1SDA072041R1	1SDA072671R1
				E1.2N 250 Ekip Dip LSI	1SDA072042R1	1SDA072672R1
				E1.2N 250 Ekip Dip LSIG	1SDA072043R1	1SDA072673R1
				E1.2N 250 Ekip Touch LI	1SDA072044R1	1SDA072674R1
				E1.2N 250 Ekip Touch LSI	1SDA072045R1	1SDA072675R1
				E1.2N 250 Ekip Touch LSIG	1SDA072046R1	1SDA072676R1
				E1.2N 250 Ekip Hi-Touch LSI	1SDA072048R1	1SDA072678R1
				E1.2N 250 Ekip Hi-Touch LSIG	1SDA072049R1	1SDA072679R1
	630	66	50	E1.2N 630 Ekip Dip LI	1SDA072071R1	1SDA072701R1
				E1.2N 630 Ekip Dip LSI	1SDA072072R1	1SDA072702R1
				E1.2N 630 Ekip Dip LSIG	1SDA072073R1	1SDA072703R1
				E1.2N 630 Ekip Touch LI	1SDA072074R1	1SDA072704R1
				E1.2N 630 Ekip Touch LSI	1SDA072075R1	1SDA072705R1
				E1.2N 630 Ekip Touch LSIG	1SDA072076R1	1SDA072706R1
				E1.2N 630 Ekip Hi-Touch LSI	1SDA072078R1	1SDA072708R1
				E1.2N 630 Ekip Hi-Touch LSIG	1SDA072079R1	1SDA072709R1
	800	66	50	E1.2N 800 Ekip Dip LI	1SDA072111R1	1SDA072741R1
				E1.2N 800 Ekip Dip LSI	1SDA072112R1	1SDA072742R1
				E1.2N 800 Ekip Dip LSIG	1SDA072113R1	1SDA072743R1
				E1.2N 800 Ekip Touch LI	1SDA072114R1	1SDA072744R1
				E1.2N 800 Ekip Touch LSI	1SDA072115R1	1SDA072745R1
				E1.2N 800 Ekip Touch LSIG	1SDA072116R1	1SDA072746R1
				E1.2N 800 Ekip Hi-Touch LSI	1SDA072118R1	1SDA072748R1
				E1.2N 800 Ekip Hi-Touch LSIG	1SDA072119R1	1SDA072749R1
	1000	66	50	E1.2N 1000 Ekip Dip LI	1SDA072151R1	1SDA072781R1
				E1.2N 1000 Ekip Dip LSI	1SDA072152R1	1SDA072782R1
				E1.2N 1000 Ekip Dip LSIG	1SDA072153R1	1SDA072783R1
				E1.2N 1000 Ekip Touch LI	1SDA072154R1	1SDA072784R1
				E1.2N 1000 Ekip Touch LSI	1SDA072155R1	1SDA072785R1
				E1.2N 1000 Ekip Touch LSIG	1SDA072156R1	1SDA072786R1
				E1.2N 1000 Ekip Hi-Touch LSI	1SDA072158R1	1SDA072788R1
				E1.2N 1000 Ekip Hi-Touch LSIG	1SDA072159R1	1SDA072789R1
	1250	66	50	E1.2N 1250 Ekip Dip LI	1SDA072191R1	1SDA072821R1
				E1.2N 1250 Ekip Dip LSI	1SDA072192R1	1SDA072822R1
				E1.2N 1250 Ekip Dip LSIG	1SDA072193R1	1SDA072823R1
				E1.2N 1250 Ekip Touch LI	1SDA072194R1	1SDA072824R1
				E1.2N 1250 Ekip Touch LSI	1SDA072195R1	1SDA072825R1
				E1.2N 1250 Ekip Touch LSIG	1SDA072196R1	1SDA072826R1
				E1.2N 1250 Ekip Hi-Touch LSI	1SDA072198R1	1SDA072828R1
				E1.2N 1250 Ekip Hi-Touch LSIG	1SDA072199R1	1SDA072829R1
	1600	66	50	E1.2N 1600 Ekip Dip LI	1SDA072231R1	1SDA072861R1
				E1.2N 1600 Ekip Dip LSI	1SDA072232R1	1SDA072862R1
				E1.2N 1600 Ekip Dip LSIG	1SDA072233R1	1SDA072863R1
				E1.2N 1600 Ekip Touch LI	1SDA072234R1	1SDA072864R1
				E1.2N 1600 Ekip Touch LSI	1SDA072235R1	1SDA072865R1
				E1.2N 1600 Ekip Touch LSIG	1SDA072236R1	1SDA072866R1
				E1.2N 1600 Ekip Hi-Touch LSI	1SDA072238R1	1SDA072868R1
				E1.2N 1600 Ekip Hi-Touch LSIG	1SDA072239R1	1SDA072869R1

# Withdrawable version for power distribution



#### SACE Emax E2.2B • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)	)	Code	Code
E2.2B	1600	42	42	E2.2B 1600 Ekip Dip LI	1SDA072331R1	1SDA072961R1
				E2.2B 1600 Ekip Dip LSI	1SDA072332R1	1SDA072962R1
				E2.2B 1600 Ekip Dip LSIG	1SDA072333R1	1SDA072963R1
				E2.2B 1600 Ekip Touch LI	1SDA072334R1	1SDA072964R1
				E2.2B 1600 Ekip Touch LSI	1SDA072335R1	1SDA072965R1
				E2.2B 1600 Ekip Touch LSIG	1SDA072336R1	1SDA072966R1
				E2.2B 1600 Ekip Hi-Touch LSI	1SDA072338R1	1SDA072968R1
				E2.2B 1600 Ekip Hi-Touch LSIG	1SDA072339R1	1SDA072969R1
	2000	42	42	E2.2B 2000 Ekip Dip LI	1SDA072371R1	1SDA073001R1
				E2.2B 2000 Ekip Dip LSI	1SDA072372R1	1SDA073002R1
				E2.2B 2000 Ekip Dip LSIG	1SDA072373R1	1SDA073003R1
				E2.2B 2000 Ekip Touch LI	1SDA072374R1	1SDA073004R1
				E2.2B 2000 Ekip Touch LSI	1SDA072375R1	1SDA073005R1
				E2.2B 2000 Ekip Touch LSIG	1SDA072376R1	1SDA073006R1
				E2.2B 2000 Ekip Hi-Touch LSI	1SDA072378R1	1SDA073008R1
				E2.2B 2000 Ekip Hi-Touch LSIG	1SDA072379R1	1SDA073009R1



### SACE Emax E2.2N • Mobile part of withdrawable circuit-breaker (MP)

ze	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V	) (1s)		Code	Code
.2N	800	66	66	E2.2N 800 Ekip Dip LI	1SDA072241R1	1SDA072871R1
				E2.2N 800 Ekip Dip LSI	1SDA072242R1	1SDA072872R1
				E2.2N 800 Ekip Dip LSIG	1SDA072243R1	1SDA072873R1
				E2.2N 800 Ekip Touch LI	1SDA072244R1	1SDA072874R1
				E2.2N 800 Ekip Touch LSI	1SDA072245R1	1SDA072875R1
				E2.2N 800 Ekip Touch LSIG	1SDA072246R1	1SDA072876R1
				E2.2N 800 Ekip Hi-Touch LSI	1SDA072248R1	1SDA072878R1
				E2.2N 800 Ekip Hi-Touch LSIG	1SDA072249R1	1SDA072879R1
	1000	66	66	E2.2N 1000 Ekip Dip LI	1SDA072271R1	1SDA072901R1
				E2.2N 1000 Ekip Dip LSI	1SDA072272R1	1SDA072902R1
				E2.2N 1000 Ekip Dip LSIG	1SDA072273R1	1SDA072903R1
				E2.2N 1000 Ekip Touch LI	1SDA072274R1	1SDA072904R1
				E2.2N 1000 Ekip Touch LSI	1SDA072275R1	1SDA072905R1
				E2.2N 1000 Ekip Touch LSIG	1SDA072276R1	1SDA072906R1
				E2.2N 1000 Ekip Hi-Touch LSI	1SDA072278R1	1SDA072908R1
				E2.2N 1000 Ekip Hi-Touch LSIG	1SDA072279R1	1SDA072909R1
	1250	66	66	E2.2N 1250 Ekip Dip LI	1SDA072301R1	1SDA072931R1
				E2.2N 1250 Ekip Dip LSI	1SDA072302R1	1SDA072932R1
				E2.2N 1250 Ekip Dip LSIG	1SDA072303R1	1SDA072933R1
				E2.2N 1250 Ekip Touch LI	1SDA072304R1	1SDA072934R1
				E2.2N 1250 Ekip Touch LSI	1SDA072305R1	1SDA072935R1
				E2.2N 1250 Ekip Touch LSIG	1SDA072306R1	1SDA072936R1
				E2.2N 1250 Ekip Hi-Touch LSI	1SDA072308R1	1SDA072938R1
				E2.2N 1250 Ekip Hi-Touch LSIG		1SDA072939R1
	1600	66	66	E2.2N 1600 Ekip Dip LI	1SDA072341R1	1SDA072971R1
				E2.2N 1600 Ekip Dip LSI	1SDA072342R1	1SDA072972R1
				E2.2N 1600 Ekip Dip LSIG	1SDA072343R1	1SDA072973R1
				E2.2N 1600 Ekip Touch LI	1SDA072344R1	1SDA072974R1
				E2.2N 1600 Ekip Touch LSI	1SDA072345R1	1SDA072975R1
				E2.2N 1600 Ekip Touch LSIG	1SDA072346R1	1SDA072976R1
				E2.2N 1600 Ekip Hi-Touch LSI	1SDA072348R1	1SDA072978R1
				E2.2N 1600 Ekip Hi-Touch LSIG		1SDA072979R1
	2000	66	66	E2.2N 2000 Ekip Dip LI	1SDA072381R1	1SDA073011R1
				E2.2N 2000 Ekip Dip LSI	1SDA072382R1	1SDA073012R1
				E2.2N 2000 Ekip Dip LSIG	1SDA072383R1	1SDA073013R1
				E2.2N 2000 Ekip Touch LI	1SDA072384R1	1SDA073014R1
				E2.2N 2000 Ekip Touch LSI	1SDA072385R1	1SDA073015R1
				E2.2N 2000 Ekip Touch LSIG	1SDA072386R1	1SDA073016R1
				E2.2N 2000 Ekip Hi-Touch LSI	1SDA072388R1	1SDA073018R1
				E2.2N 2000 Ekip Hi-Touch LSIG		1SDA073019R1
	2500	66	66	E2.2N 2500 Ekip Dip LI	1SDA072309R1	1SDA073041R1
				E2.2N 2500 Ekip Dip LSI	1SDA072412R1	1SDA073042R1
				E2.2N 2500 Ekip Dip LSIG	1SDA072412R1	1SDA073042R1 1SDA073043R1
				E2.2N 2500 Ekip Touch LI	1SDA072414R1	1SDA073044R1
				E2.2N 2500 Ekip Touch LSI		
				E2.2N 2500 Ekip Touch LSIG	1SDA072415R1	1SDA073045R1
				E2.2N 2500 Ekip Touch LSIG	1SDA072418R1	1SDA073046R1
				E2.2N 2500 Ekip Hi-Touch LSIG	1SDA072418R1	1SDA073048R1 1SDA073049R1

# Withdrawable version for power distribution



#### SACE Emax E2.2S • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
2.25	250	85	66	E2.2S 250 Ekip Dip LI	1SDA073648R1	1SDA073658R1
				E2.2S 250 Ekip Dip LSI	1SDA073649R1	1SDA073659R1
				E2.2S 250 Ekip Dip LSIG	1SDA073650R1	1SDA073660R1
				E2.2S 250 Ekip Touch LI	1SDA073651R1	1SDA073661R1
				E2.2S 250 Ekip Touch LSI	1SDA073652R1	1SDA073662R1
				E2.2S 250 Ekip Touch LSIG	1SDA073653R1	1SDA073663R1
				E2.2S 250 Ekip Hi-Touch LSI	1SDA073655R1	1SDA073665R1
				E2.2S 250 Ekip Hi-Touch LSIG	1SDA073656R1	1SDA073666R1
	800	85	66	E2.2S 800 Ekip Dip LI	1SDA072251R1	1SDA072881R1
				E2.2S 800 Ekip Dip LSI	1SDA072252R1	1SDA072882R1
				E2.2S 800 Ekip Dip LSIG	1SDA072253R1	1SDA072883R1
				E2.2S 800 Ekip Touch LI	1SDA072254R1	1SDA072884R1
				E2.2S 800 Ekip Touch LSI	1SDA072255R1	1SDA072885R1
				E2.2S 800 Ekip Touch LSIG	1SDA072256R1	1SDA072886R1
				E2.2S 800 Ekip Hi-Touch LSI	1SDA072258R1	1SDA072888R1
				E2.2S 800 Ekip Hi-Touch LSIG	1SDA072259R1	1SDA072889R1
	1000	85	66	E2.2S 1000 Ekip Dip LI	1SDA072281R1	1SDA072911R1
				E2.2S 1000 Ekip Dip LSI	1SDA072282R1	1SDA072912R1
				E2.2S 1000 Ekip Dip LSIG	1SDA072283R1	1SDA072913R1
				E2.2S 1000 Ekip Touch LI	1SDA072284R1	1SDA072914R1
				E2.2S 1000 Ekip Touch LSI	1SDA072285R1	1SDA072915R1
				E2.2S 1000 Ekip Touch LSIG	1SDA072286R1	1SDA072916R1
				E2.2S 1000 Ekip Hi-Touch LSI	1SDA072288R1	1SDA072918R1
				E2.2S 1000 Ekip Hi-Touch LSIG	1SDA072289R1	1SDA072919R1
	1250	85	66	E2.2S 1250 Ekip Dip LI	1SDA072311R1	1SDA072941R1
				E2.2S 1250 Ekip Dip LSI	1SDA072312R1	1SDA072942R1
				E2.2S 1250 Ekip Dip LSIG	1SDA072313R1	1SDA072943R1
				E2.2S 1250 Ekip Touch LI	1SDA072314R1	1SDA072944R1
				E2.2S 1250 Ekip Touch LSI	1SDA072315R1	1SDA072945R1
				E2.2S 1250 Ekip Touch LSIG	1SDA072316R1	1SDA072946R1
				E2.2S 1250 Ekip Hi-Touch LSI	1SDA072318R1	1SDA072948R1
				E2.2S 1250 Ekip Hi-Touch LSIG	1SDA072319R1	1SDA072949R1



### SACE Emax E2.2S • Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
2.25	1600	85	66	E2.2S 1600 Ekip Dip LI	1SDA072351R1	1SDA072981R1
				E2.2S 1600 Ekip Dip LSI	1SDA072352R1	1SDA072982R1
				E2.2S 1600 Ekip Dip LSIG	1SDA072353R1	1SDA072983R1
				E2.2S 1600 Ekip Touch LI	1SDA072354R1	1SDA072984R1
				E2.2S 1600 Ekip Touch LSI	1SDA072355R1	1SDA072985R1
				E2.2S 1600 Ekip Touch LSIG	1SDA072356R1	1SDA072986R1
				E2.2S 1600 Ekip Hi-Touch LSI	1SDA072358R1	1SDA072988R1
				E2.2S 1600 Ekip Hi-Touch LSIG	1SDA072359R1	1SDA072989R1
	2000	85	66	E2.2S 2000 Ekip Dip LI	1SDA072391R1	1SDA073021R1
				E2.2S 2000 Ekip Dip LSI	1SDA072392R1	1SDA073022R1
				E2.2S 2000 Ekip Dip LSIG	1SDA072393R1	1SDA073023R1
				E2.2S 2000 Ekip Touch LI	1SDA072394R1	1SDA073024R1
				E2.2S 2000 Ekip Touch LSI	1SDA072395R1	1SDA073025R1
				E2.2S 2000 Ekip Touch LSIG	1SDA072396R1	1SDA073026R1
				E2.2S 2000 Ekip Hi-Touch LSI	1SDA072398R1	1SDA073028R1
				E2.2S 2000 Ekip Hi-Touch LSIG	1SDA072399R1	1SDA073029R1
	2500	85	66	E2.2S 2500 Ekip Dip LI	1SDA072421R1	1SDA073051R1
				E2.2S 2500 Ekip Dip LSI	1SDA072422R1	1SDA073052R1
				E2.2S 2500 Ekip Dip LSIG	1SDA072423R1	1SDA073053R1
				E2.2S 2500 Ekip Touch LI	1SDA072424R1	1SDA073054R1
				E2.2S 2500 Ekip Touch LSI	1SDA072425R1	1SDA073055R1
				E2.2S 2500 Ekip Touch LSIG	1SDA072426R1	1SDA073056R1
				E2.2S 2500 Ekip Hi-Touch LSI	1SDA072428R1	1SDA073058R1
				E2.2S 2500 Ekip Hi-Touch LSIG	1SDA072429R1	1SDA073059R1

# Withdrawable version for power distribution



SACE Emax E2.2H • Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
.2H	800	100	85	E2.2H 800 Ekip Dip LI	1SDA072261R1	1SDA072891R1
				E2.2H 800 Ekip Dip LSI	1SDA072262R1	1SDA072892R1
				E2.2H 800 Ekip Dip LSIG	1SDA072263R1	1SDA072893R1
				E2.2H 800 Ekip Touch LI	1SDA072264R1	1SDA072894R1
				E2.2H 800 Ekip Touch LSI	1SDA072265R1	1SDA072895R1
				E2.2H 800 Ekip Touch LSIG	1SDA072266R1	1SDA072896R1
				E2.2H 800 Ekip Hi-Touch LSI	1SDA072268R1	1SDA072898R1
				E2.2H 800 Ekip Hi-Touch LSIG	1SDA072269R1	1SDA072899R1
	1000	100	85	E2.2H 1000 Ekip Dip LI	1SDA072291R1	1SDA072921R1
				E2.2H 1000 Ekip Dip LSI	1SDA072292R1	1SDA072922R1
				E2.2H 1000 Ekip Dip LSIG	1SDA072293R1	1SDA072923R1
				E2.2H 1000 Ekip Touch LI	1SDA072294R1	1SDA072924R1
				E2.2H 1000 Ekip Touch LSI	1SDA072295R1	1SDA072925R1
				E2.2H 1000 Ekip Touch LSIG	1SDA072296R1	1SDA072926R1
				E2.2H 1000 Ekip Hi-Touch LSI	1SDA072298R1	1SDA072928R1
				E2.2H 1000 Ekip Hi-Touch LSIG	1SDA072299R1	1SDA072929R1
	1250	100	85	E2.2H 1250 Ekip Dip LI	1SDA072321R1	1SDA072951R1
				E2.2H 1250 Ekip Dip LSI	1SDA072322R1	1SDA072952R1
				E2.2H 1250 Ekip Dip LSIG	1SDA072323R1	1SDA072953R1
				E2.2H 1250 Ekip Touch LI	1SDA072324R1	1SDA072954R1
				E2.2H 1250 Ekip Touch LSI	1SDA072325R1	1SDA072955R1
				E2.2H 1250 Ekip Touch LSIG	1SDA072326R1	1SDA072956R1
				E2.2H 1250 Ekip Hi-Touch LSI	1SDA072328R1	1SDA072958R1
				E2.2H 1250 Ekip Hi-Touch LSIG	1SDA072329R1	1SDA072959R1
	1600	100	85	E2.2H 1600 Ekip Dip LI	1SDA072361R1	1SDA072991R1
				E2.2H 1600 Ekip Dip LSI	1SDA072362R1	1SDA072992R1
				E2.2H 1600 Ekip Dip LSIG	1SDA072363R1	1SDA072993R1
				E2.2H 1600 Ekip Touch LI	1SDA072364R1	1SDA072994R1
				E2.2H 1600 Ekip Touch LSI	1SDA072365R1	1SDA072995R1
				E2.2H 1600 Ekip Touch LSIG	1SDA072366R1	1SDA072996R1
				E2.2H 1600 Ekip Hi-Touch LSI	1SDA072368R1	1SDA072998R1
				E2.2H 1600 Ekip Hi-Touch LSIG	1SDA072369R1	1SDA072999R1
	2000	100	85	E2.2H 2000 Ekip Dip LI	1SDA072401R1	1SDA073031R1
				E2.2H 2000 Ekip Dip LSI	1SDA072402R1	1SDA073032R1
				E2.2H 2000 Ekip Dip LSIG	1SDA072403R1	1SDA073033R1
				E2.2H 2000 Ekip Touch LI	1SDA072404R1	1SDA073034R1
				E2.2H 2000 Ekip Touch LSI	1SDA072405R1	1SDA073035R1
				E2.2H 2000 Ekip Touch LSIG	1SDA072406R1	1SDA073036R1
				E2.2H 2000 Ekip Hi-Touch LSI	1SDA072408R1	1SDA073038R1
				E2.2H 2000 Ekip Hi-Touch LSIG	1SDA072409R1	1SDA073039R1
	2500	100	85	E2.2H 2500 Ekip Dip LI	1SDA072431R1	1SDA073061R1
				E2.2H 2500 Ekip Dip LSI	1SDA072432R1	1SDA073062R1
				E2.2H 2500 Ekip Dip LSIG	1SDA072433R1	1SDA073063R1
				E2.2H 2500 Ekip Touch LI	1SDA072434R1	1SDA073064R1
				E2.2H 2500 Ekip Touch LSI	1SDA072435R1	1SDA073065R1
				E2.2H 2500 Ekip Touch LSIG	1SDA072436R1	1SDA073066R1
				E2.2H 2500 Ekip Hi-Touch LSI	1SDA072438R1	1SDA073068R1
				E2.2H 2500 Ekip Hi-Touch LSIG	1SDA072439R1	1SDA073069R1



### SACE Emax E4.2N-S-H • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V	) (1s)		Code	Code
4.2N	3200	66	66	E4.2N 3200 Ekip Dip LI	1SDA072491R1	1SDA073121R1
				E4.2N 3200 Ekip Dip LSI	1SDA072492R1	1SDA073122R1
				E4.2N 3200 Ekip Dip LSIG	1SDA072493R1	1SDA073123R1
				E4.2N 3200 Ekip Touch LI	1SDA072494R1	1SDA073124R1
				E4.2N 3200 Ekip Touch LSI	1SDA072495R1	1SDA073125R1
				E4.2N 3200 Ekip Touch LSIG	1SDA072496R1	1SDA073126R1
				E4.2N 3200 Ekip Hi-Touch LSI	1SDA072498R1	1SDA073128R1
				E4.2N 3200 Ekip Hi-Touch LSIG	1SDA072499R1	1SDA073129R1
	4000	66	66	E4.2N 4000 Ekip Dip LI	1SDA072541R1	1SDA073171R1
				E4.2N 4000 Ekip Dip LSI	1SDA072542R1	1SDA073172R1
				E4.2N 4000 Ekip Dip LSIG	1SDA072543R1	1SDA073173R1
				E4.2N 4000 Ekip Touch LI	1SDA072544R1	1SDA073174R1
				E4.2N 4000 Ekip Touch LSI	1SDA072545R1	1SDA073175R1
				E4.2N 4000 Ekip Touch LSIG	1SDA072546R1	1SDA073176R1
				E4.2N 4000 Ekip Hi-Touch LSI	1SDA072548R1	1SDA073178R1
				E4.2N 4000 Ekip Hi-Touch LSIG	1SDA072549R1	1SDA073179R1
4.25	3200	85	66	E4.2S 3200 Ekip Dip LI	1SDA072501R1	1SDA073131R1
				E4.2S 3200 Ekip Dip LSI	1SDA072502R1	1SDA073132R1
				E4.2S 3200 Ekip Dip LSIG	1SDA072503R1	1SDA073133R1
				E4.2S 3200 Ekip Touch LI	1SDA072504R1	1SDA073134R1
				E4.2S 3200 Ekip Touch LSI	1SDA072505R1	1SDA073135R1
				E4.2S 3200 Ekip Touch LSIG	1SDA072506R1	1SDA073136R1
				E4.2S 3200 Ekip Hi-Touch LSI	1SDA072508R1	1SDA073138R1
				E4.2S 3200 Ekip Hi-Touch LSIG	1SDA072509R1	1SDA073139R1
	4000	85	66	E4.2S 4000 Ekip Dip LI	1SDA072551R1	1SDA073181R1
				E4.2S 4000 Ekip Dip LSI	1SDA072552R1	1SDA073182R1
				E4.2S 4000 Ekip Dip LSIG	1SDA072553R1	1SDA073183R1
				E4.2S 4000 Ekip Touch LI	1SDA072554R1	1SDA073184R1
				E4.2S 4000 Ekip Touch LSI	1SDA072555R1	1SDA073185R1
				E4.2S 4000 Ekip Touch LSIG	1SDA072556R1	1SDA073186R1
				E4.2S 4000 Ekip Hi-Touch LSI	1SDA072558R1	1SDA073188R1
				E4.2S 4000 Ekip Hi-Touch LSIG		1SDA073189R1
4.2H	3200	100	85	E4.2H 3200 Ekip Dip LI	1SDA072511R1	1SDA073141R1
				E4.2H 3200 Ekip Dip LSI	1SDA072512R1	1SDA073142R1
				E4.2H 3200 Ekip Dip LSIG	1SDA072513R1	1SDA073143R1
				E4.2H 3200 Ekip Touch LI	1SDA072514R1	1SDA073144R1
				E4.2H 3200 Ekip Touch LSI	1SDA072515R1	1SDA073145R1
				E4.2H 3200 Ekip Touch LSIG	1SDA072516R1	1SDA073146R1
				E4.2H 3200 Ekip Hi-Touch LSI	1SDA072518R1	1SDA073148R1
				E4.2H 3200 Ekip Hi-Touch LSIG		1SDA073149R1
	4000	100	85	E4.2H 4000 Ekip Dip LI	1SDA072561R1	1SDA073191R1
				E4.2H 4000 Ekip Dip LSI	1SDA072562R1	1SDA073192R1
				E4.2H 4000 Ekip Dip LSIG	1SDA072563R1	1SDA073193R1
				E4.2H 4000 Ekip Touch LI	1SDA072564R1	1SDA073194R1
				E4.2H 4000 Ekip Touch LSI	1SDA072565R1	1SDA073194R1 1SDA073195R1
				· ·		
				E4.2H 4000 Ekip Touch LSIG	1SDA072566R1	1SDA073196R1
				E4.2H 4000 Ekip Hi-Touch LSI	1SDA072568R1	1SDA073198R1
				E4.2H 4000 Ekip Hi-Touch LSIG	12DA012569K1	1SDA073199R1

# Withdrawable version for power distribution



SACE Emax E4.2V • Mobile part of withdrawable circuit-breaker (MP)

ize	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
1.2V	2000	150	100	E4.2V 2000 Ekip Dip LI	1SDA072451R1	1SDA073081R1
				E4.2V 2000 Ekip Dip LSI	1SDA072452R1	1SDA073082R1
				E4.2V 2000 Ekip Dip LSIG	1SDA072453R1	1SDA073083R1
				E4.2V 2000 Ekip Touch LI	1SDA072454R1	1SDA073084R1
				E4.2V 2000 Ekip Touch LSI	1SDA072455R1	1SDA073085R1
				E4.2V 2000 Ekip Touch LSIG	1SDA072456R1	1SDA073086R1
				E4.2V 2000 Ekip Hi-Touch LSI	1SDA072458R1	1SDA073088R1
				E4.2V 2000 Ekip Hi-Touch LSIG	1SDA072459R1	1SDA073089R1
	2500	150	100	E4.2V 2500 Ekip Dip LI	1SDA072471R1	1SDA073101R1
				E4.2V 2500 Ekip Dip LSI	1SDA072472R1	1SDA073102R1
				E4.2V 2500 Ekip Dip LSIG	1SDA072473R1	1SDA073103R1
				E4.2V 2500 Ekip Touch LI	1SDA072474R1	1SDA073104R1
				E4.2V 2500 Ekip Touch LSI	1SDA072475R1	1SDA073105R1
				E4.2V 2500 Ekip Touch LSIG	1SDA072476R1	1SDA073106R1
				E4.2V 2500 Ekip Hi-Touch LSI	1SDA072478R1	1SDA073108R1
				E4.2V 2500 Ekip Hi-Touch LSIG	1SDA072479R1	1SDA073109R1
	3200	150	100	E4.2V 3200 Ekip Dip LI	1SDA072521R1	1SDA073151R1
				E4.2V 3200 Ekip Dip LSI	1SDA072522R1	1SDA073152R1
				E4.2V 3200 Ekip Dip LSIG	1SDA072523R1	1SDA073153R1
				E4.2V 3200 Ekip Touch LI	1SDA072524R1	1SDA073154R1
				E4.2V 3200 Ekip Touch LSI	1SDA072525R1	1SDA073155R1
				E4.2V 3200 Ekip Touch LSIG	1SDA072526R1	1SDA073156R1
				E4.2V 3200 Ekip Hi-Touch LSI	1SDA072528R1	1SDA073158R1
				E4.2V 3200 Ekip Hi-Touch LSIG	1SDA072529R1	1SDA073159R1
	4000	150	100	E4.2V 4000 Ekip Dip LI	1SDA072571R1	1SDA073201R1
				E4.2V 4000 Ekip Dip LSI	1SDA072572R1	1SDA073202R1
				E4.2V 4000 Ekip Dip LSIG	1SDA072573R1	1SDA073203R1
				E4.2V 4000 Ekip Touch LI	1SDA072574R1	1SDA073204R1
				E4.2V 4000 Ekip Touch LSI	1SDA072575R1	1SDA073205R1
				E4.2V 4000 Ekip Touch LSIG	1SDA072576R1	1SDA073206R1
				E4.2V 4000 Ekip Hi-Touch LSI	1SDA072578R1	1SDA073208R1
				E4.2V 4000 Ekip Hi-Touch LSIG	1SDA072579R1	1SDA073209R1



SACE Emax E6.2H-V • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E6.2H	4000	100	100	E6.2H 4000 Ekip Dip LI	1SDA072581R1	1SDA073211R1
				E6.2H 4000 Ekip Dip LSI	1SDA072582R1	1SDA073212R1
				E6.2H 4000 Ekip Dip LSIG	1SDA072583R1	1SDA073213R1
				E6.2H 4000 Ekip Touch LI	1SDA072584R1	1SDA073214R1
				E6.2H 4000 Ekip Touch LSI	1SDA072585R1	1SDA073215R1
				E6.2H 4000 Ekip Touch LSIG	1SDA072586R1	1SDA073216R1
				E6.2H 4000 Ekip Hi-Touch LSI	1SDA072588R1	1SDA073218R1
				E6.2H 4000 Ekip Hi-Touch LSIG	1SDA072589R1	1SDA073219R1
	5000	100	100	E6.2H 5000 Ekip Dip LI	1SDA072611R1	1SDA073241R1
				E6.2H 5000 Ekip Dip LSI	1SDA072612R1	1SDA073242R1
				E6.2H 5000 Ekip Dip LSIG	1SDA072613R1	1SDA073243R1
				E6.2H 5000 Ekip Touch LI	1SDA072614R1	1SDA073244R1
				E6.2H 5000 Ekip Touch LSI	1SDA072615R1	1SDA073245R1
				E6.2H 5000 Ekip Touch LSIG	1SDA072616R1	1SDA073246R1
				E6.2H 5000 Ekip Hi-Touch LSI	1SDA072618R1	1SDA073248R1
				E6.2H 5000 Ekip Hi-Touch LSIG	·	1SDA073249R1
	6300	100	100	E6.2H 6300 Ekip Dip LI	1SDA072641R1	1SDA073271R1
	0300	100	100	E6.2H 6300 Ekip Dip LSI	1SDA072642R1	1SDA073272R1
				E6.2H 6300 Ekip Dip LSIG	1SDA072643R1	1SDA073272R1
				E6.2H 6300 Ekip Touch LI	1SDA072644R1	1SDA073274R1
				E6.2H 6300 Ekip Touch LSI		
					1SDA072645R1	1SDA073275R1
				E6.2H 6300 Ekip Touch LSIG E6.2H 6300 Ekip Hi-Touch LSI	1SDA072646R1	1SDA073276R1
					1SDA072648R1	1SDA073278R1
-6 21/	4000	150	100	E6.2H 6300 Ekip Hi-Touch LSIG		1SDA073279R1
20.2 V	4000	150	100	E6.2V 4000 Ekip Dip LI	1SDA072591R1	1SDA073221R1
				E6.2V 4000 Ekip Dip LSI	1SDA072592R1	1SDA073222R1
				E6.2V 4000 Ekip Dip LSIG	1SDA072593R1	1SDA073223R1
				E6.2V 4000 Ekip Touch LI	1SDA072594R1	1SDA073224R1
				E6.2V 4000 Ekip Touch LSI	1SDA072595R1	1SDA073225R1
				E6.2V 4000 Ekip Touch LSIG	1SDA072596R1	1SDA073226R1
				E6.2V 4000 Ekip Hi-Touch LSI	1SDA072598R1	1SDA073228R1
				E6.2V 4000 Ekip Hi-Touch LSIG		1SDA073229R1
	5000	150	100	E6.2V 5000 Ekip Dip LI	1SDA072621R1	1SDA073251R1
				E6.2V 5000 Ekip Dip LSI	1SDA072622R1	1SDA073252R1
				E6.2V 5000 Ekip Dip LSIG	1SDA072623R1	1SDA073253R1
				E6.2V 5000 Ekip Touch LI	1SDA072624R1	1SDA073254R1
				E6.2V 5000 Ekip Touch LSI	1SDA072625R1	1SDA073255R1
				E6.2V 5000 Ekip Touch LSIG	1SDA072626R1	1SDA073256R1
				E6.2V 5000 Ekip Hi-Touch LSI	1SDA072628R1	1SDA073258R1
				E6.2V 5000 Ekip Hi-Touch LSIG	1SDA072629R1	1SDA073259R1
	6300	150	100	E6.2V 6300 Ekip Dip LI	1SDA072651R1	1SDA073281R1
				E6.2V 6300 Ekip Dip LSI	1SDA072652R1	1SDA073282R1
				E6.2V 6300 Ekip Dip LSIG	1SDA072653R1	1SDA073283R1
				E6.2V 6300 Ekip Touch LI	1SDA072654R1	1SDA073284R1
				E6.2V 6300 Ekip Touch LSI	1SDA072655R1	1SDA073285R1
				E6.2V 6300 Ekip Touch LSIG	1SDA072656R1	1SDA073286R1
				E6.2V 6300 Ekip Hi-Touch LSI	1SDA072658R1	1SDA073288R1
				E6.2V 6300 Ekip Hi-Touch LSIG	1SDA072659R1	1SDA073289R1

# Withdrawable version for power distribution



### SACE Emax E6.2X • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E6.2X	4000	150	120	E6.2X 4000 Ekip Dip LI	1SDA072601R1	1SDA073231R1
				E6.2X 4000 Ekip Dip LSI	1SDA072602R1	1SDA073232R1
				E6.2X 4000 Ekip Dip LSIG	1SDA072603R1	1SDA073233R1
				E6.2X 4000 Ekip Touch LI	1SDA072604R1	1SDA073234R1
				E6.2X 4000 Ekip Touch LSI	1SDA072605R1	1SDA073235R1
				E6.2X 4000 Ekip Touch LSIG	1SDA072606R1	1SDA073236R1
				E6.2X 4000 Ekip Hi-Touch LSI	1SDA072608R1	1SDA073238R1
				E6.2X 4000 Ekip Hi-Touch LSIG	1SDA072609R1	1SDA073239R1
	5000	150	120	E6.2X 5000 Ekip Dip LI	1SDA072631R1	1SDA073261R1
				E6.2X 5000 Ekip Dip LSI	1SDA072632R1	1SDA073262R1
				E6.2X 5000 Ekip Dip LSIG	1SDA072633R1	1SDA073263R1
				E6.2X 5000 Ekip Touch LI	1SDA072634R1	1SDA073264R1
				E6.2X 5000 Ekip Touch LSI	1SDA072635R1	1SDA073265R1
				E6.2X 5000 Ekip Touch LSIG	1SDA072636R1	1SDA073266R1
				E6.2X 5000 Ekip Hi-Touch LSI	1SDA072638R1	1SDA073268R1
				E6.2X 5000 Ekip Hi-Touch LSIG	1SDA072639R1	1SDA073269R1
	6300	150	120	E6.2X 6300 Ekip Dip LI	1SDA072661R1	1SDA073291R1
				E6.2X 6300 Ekip Dip LSI	1SDA072662R1	1SDA073292R1
				E6.2X 6300 Ekip Dip LSIG	1SDA072663R1	1SDA073293R1
				E6.2X 6300 Ekip Touch LI	1SDA072664R1	1SDA073294R1
				E6.2X 6300 Ekip Touch LSI	1SDA072665R1	1SDA073295R1
				E6.2X 6300 Ekip Touch LSIG	1SDA072666R1	1SDA073296R1
				E6.2X 6300 Ekip Hi-Touch LSI	1SDA072668R1	1SDA073298R1
				E6.2X 6300 Ekip Hi-Touch LSIG	1SDA072669R1	1SDA073299R1



SACE Emax E6.2H-V/f Full size • Mobile part of withdrawable circuit-breaker (MP)

Size	lu		lcw (1s)	Type	4 Poles
		V)			Code
E6.2H/f	4000	100	100	E6.2H/f 4000 Ekip Dip LI	1SDA073301R1
				E6.2H/f 4000 Ekip Dip LSI	1SDA073302R1
				E6.2H/f 4000 Ekip Dip LSIG	1SDA073303R1
				E6.2H/f 4000 Ekip Touch LI	1SDA073304R1
				E6.2H/f 4000 Ekip Touch LSI	1SDA073305R1
				E6.2H/f 4000 Ekip Touch LSIG	1SDA073306R1
				E6.2H/f 4000 Ekip Hi-Touch LSI	1SDA073308R1
				E6.2H/f 4000 Ekip Hi-Touch LSIG	1SDA073309R1
	5000	100	100	E6.2H/f 5000 Ekip Dip LI	1SDA073331R1
				E6.2H/f 5000 Ekip Dip LSI	1SDA073332R1
				E6.2H/f 5000 Ekip Dip LSIG	1SDA073333R1
				E6.2H/f 5000 Ekip Touch LI	1SDA073334R1
				E6.2H/f 5000 Ekip Touch LSI	1SDA073335R1
				E6.2H/f 5000 Ekip Touch LSIG	1SDA073336R1
				E6.2H/f 5000 Ekip Hi-Touch LSI	1SDA073338R1
				E6.2H/f 5000 Ekip Hi-Touch LSIG	1SDA073339R1
	6300	100	100	E6.2H/f 6300 Ekip Dip LI	1SDA073361R1
				E6.2H/f 6300 Ekip Dip LSI	1SDA073362R1
				E6.2H/f 6300 Ekip Dip LSIG	1SDA073363R1
				E6.2H/f 6300 Ekip Touch LI	1SDA073364R1
				E6.2H/f 6300 Ekip Touch LSI	1SDA073365R1
				E6.2H/f 6300 Ekip Touch LSIG	1SDA073366R1
				E6.2H/f 6300 Ekip Hi-Touch LSI	1SDA073368R1
				E6.2H/f 6300 Ekip Hi-Touch LSIG	1SDA073369R1
6.2V/f	4000	150	100	E6.2V/f 4000 Ekip Dip LI	1SDA073311R1
				E6.2V/f 4000 Ekip Dip LSI	1SDA073312R1
				E6.2V/f 4000 Ekip Dip LSIG	1SDA073313R1
				E6.2V/f 4000 Ekip Touch LI	1SDA073314R1
				E6.2V/f 4000 Ekip Touch LSI	1SDA073315R1
				E6.2V/f 4000 Ekip Touch LSIG	1SDA073316R1
				E6.2V/f 4000 Ekip Hi-Touch LSI	1SDA073318R1
				E6.2V/f 4000 Ekip Hi-Touch LSIG	1SDA073319R1
	5000	150	100	E6.2V/f 5000 Ekip Dip LI	1SDA073313R1 1SDA073341R1
	3000	150	100		
				E6.2V/f 5000 Ekip Dip LSI E6.2V/f 5000 Ekip Dip LSIG	1SDA073342R1 1SDA073343R1
				E6.2V/f 5000 Ekip Touch LI E6.2V/f 5000 Ekip Touch LSI	1SDA073344R1
				· · · · · · · · · · · · · · · · · · ·	1SDA073345R1
				E6.2V/f 5000 Ekip Touch LSIG	1SDA073346R1
				E6.2V/f 5000 Ekip Hi-Touch LSI	1SDA073348R1
	6300	150	100	E6.2V/f 5000 Ekip Hi-Touch LSIG	1SDA073349R1
	6300	150	100	E6.2V/f 6300 Ekip Dip LI	1SDA073371R1
				E6.2V/f 6300 Ekip Dip LSI	1SDA073372R1
				E6.2V/f 6300 Ekip Dip LSIG	1SDA073373R1
				E6.2V/f 6300 Ekip Touch LI	1SDA073374R1
				E6.2V/f 6300 Ekip Touch LSI	1SDA073375R1
				E6.2V/f 6300 Ekip Touch LSIG	1SDA073376R1
				E6.2V/f 6300 Ekip Hi-Touch LSI	1SDA073378R1
				E6.2V/f 6300 Ekip Hi-Touch LSIG	1SDA073379R1

# Withdrawable version for power distribution



SACE Emax E6.2X/f Full size • Mobile part of withdrawable circuit-breaker (MP)

Size	lu		lcw (1s)	Туре	4 Poles
		V)			Code
E6.2X/f	4000	150	120	E6.2X/f 4000 Ekip Dip LI	1SDA073321R1
				E6.2X/f 4000 Ekip Dip LSI	1SDA073322R1
				E6.2X/f 4000 Ekip Dip LSIG	1SDA073323R1
				E6.2X/f 4000 Ekip Touch LI	1SDA073324R1
				E6.2X/f 4000 Ekip Touch LSI	1SDA073325R1
				E6.2X/f 4000 Ekip Touch LSIG	1SDA073326R1
				E6.2X/f 4000 Ekip Hi-Touch LSI	1SDA073328R1
				E6.2X/f 4000 Ekip Hi-Touch LSIG	1SDA073329R1
	5000	150	120	E6.2X/f 5000 Ekip Dip LI	1SDA073351R1
				E6.2X/f 5000 Ekip Dip LSI	1SDA073352R1
				E6.2X/f 5000 Ekip Dip LSIG	1SDA073353R1
				E6.2X/f 5000 Ekip Touch LI	1SDA073354R1
				E6.2X/f 5000 Ekip Touch LSI	1SDA073355R1
				E6.2X/f 5000 Ekip Touch LSIG	1SDA073356R1
				E6.2X/f 5000 Ekip Hi-Touch LSI	1SDA073358R1
				E6.2X/f 5000 Ekip Hi-Touch LSIG	1SDA073359R1
	6300	150	120	E6.2X/f 6300 Ekip Dip LI	1SDA073381R1
				E6.2X/f 6300 Ekip Dip LSI	1SDA073382R1
				E6.2X/f 6300 Ekip Dip LSIG	1SDA073383R1
				E6.2X/f 6300 Ekip Touch LI	1SDA073384R1
				E6.2X/f 6300 Ekip Touch LSI	1SDA073385R1
				E6.2X/f 6300 Ekip Touch LSIG	1SDA073386R1
				E6.2X/f 6300 Ekip Hi-Touch LSI	1SDA073388R1
				E6.2X/f 6300 Ekip Hi-Touch LSIG	1SDA073389R1

## **Automatic circuit-breakers**

# Fixed version for generators



#### SACE Emax E1.2B-C-N-L • Front terminals (F)

Size	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E1.2B	630	42	42	E1.2B 630 Ekip G Touch LSIG	1SDA070707R1	1SDA071337R1
				E1.2B 630 Ekip G Hi-Touch LSIG	1SDA070710R1	1SDA071340R1
	800	42	42	E1.2B 800 Ekip G Touch LSIG	1SDA070747R1	1SDA071377R1
				E1.2B 800 Ekip G Hi-Touch LSIG	1SDA070750R1	1SDA071380R1
	1000	42	42	E1.2B 1000 Ekip G Touch LSIG	1SDA070787R1	1SDA071417R1
				E1.2B 1000 Ekip G Hi-Touch LSIG	1SDA070790R1	1SDA071420R1
	1250	42	42	E1.2B 1250 Ekip G Touch LSIG	1SDA070827R1	1SDA071457R1
				E1.2B 1250 Ekip G Hi-Touch LSIG	1SDA070830R1	1SDA071460R1
	1600	42	42	E1.2B 1600 Ekip G Touch LSIG	1SDA070867R1	1SDA071497R1
				E1.2B 1600 Ekip G Hi-Touch LSIG	1SDA070870R1	1SDA071500R1
E1.2C	630	50	42	E1.2C 630 Ekip G Touch LSIG	1SDA070717R1	1SDA071347R1
				E1.2C 630 Ekip G Hi-Touch LSIG	1SDA070720R1	1SDA071350R1
	800	50	42	E1.2C 800 Ekip G Touch LSIG	1SDA070757R1	1SDA071387R1
				E1.2C 800 Ekip G Hi-Touch LSIG	1SDA070760R1	1SDA071390R1
	1000	50	42	E1.2C 1000 Ekip G Touch LSIG	1SDA070797R1	1SDA071427R1
				E1.2C 1000 Ekip G Hi-Touch LSIG	1SDA070800R1	1SDA071430R1
	1250	50	42	E1.2C 1250 Ekip G Touch LSIG	1SDA070837R1	1SDA071467R1
				E1.2C 1250 Ekip G Hi-Touch LSIG	1SDA070840R1	1SDA071470R1
	1600	50	42	E1.2C 1600 Ekip G Touch LSIG	1SDA070877R1	1SDA071507R1
				E1.2C 1600 Ekip G Hi-Touch LSIG	1SDA070880R1	1SDA071510R1
E1.2N	250	66	50	E1.2N 250 Ekip G Touch LSIG	1SDA070697R1	1SDA071327R1
				E1.2N 250 Ekip G Hi-Touch LSIG	1SDA070700R1	1SDA071330R1
	630	66	50	E1.2N 630 Ekip G Touch LSIG	1SDA070727R1	1SDA071357R1
				E1.2N 630 Ekip G Hi-Touch LSIG	1SDA070730R1	1SDA071360R1
	800	66	50	E1.2N 800 Ekip G Touch LSIG	1SDA070767R1	1SDA071397R1
				E1.2N 800 Ekip G Hi-Touch LSIG	1SDA070770R1	1SDA071400R1
	1000	66	50	E1.2N 1000 Ekip G Touch LSIG	1SDA070807R1	1SDA071437R1
				E1.2N 1000 Ekip G Hi-Touch LSIG	1SDA070810R1	1SDA071440R1
	1250	66	50	E1.2N 1250 Ekip G Touch LSIG	1SDA070847R1	1SDA071477R1
				E1.2N 1250 Ekip G Hi-Touch LSIG	1SDA070850R1	1SDA071480R1
	1600	66	50	E1.2N 1600 Ekip G Touch LSIG	1SDA070887R1	1SDA071517R1
				E1.2N 1600 Ekip G Hi-Touch LSIG	1SDA070890R1	1SDA071520R1

# Fixed version for generators



#### SACE Emax E2.2B-N-S-H • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
2.2B	1600	42	42	E2.2B 1600 Ekip G Touch LSIG	1SDA070987R1	1SDA071617R1
				E2.2B 1600 Ekip G Hi-Touch LSIG	1SDA070990R1	1SDA071620R1
	2000	42	42	E2.2B 2000 Ekip G Touch LSIG	1SDA071027R1	1SDA071657R1
				E2.2B 2000 Ekip G Hi-Touch LSIG	1SDA071030R1	1SDA071660R1
E2.2N	800	66	66	E2.2N 800 Ekip G Touch LSIG	1SDA070897R1	1SDA071527R1
				E2.2N 800 Ekip G Hi-Touch LSIG	1SDA070900R1	1SDA071530R1
	1000	66	66	E2.2N 1000 Ekip G Touch LSIG	1SDA070927R1	1SDA071557R1
				E2.2N 1000 Ekip G Hi-Touch LSIG	1SDA070930R1	1SDA071560R1
	1250	66	66	E2.2N 1250 Ekip G Touch LSIG	1SDA070957R1	1SDA071587R1
				E2.2N 1250 Ekip G Hi-Touch LSIG	1SDA070960R1	1SDA071590R1
	1600	66	66	E2.2N 1600 Ekip G Touch LSIG	1SDA070997R1	1SDA071627R1
				E2.2N 1600 Ekip G Hi-Touch LSIG	1SDA071000R1	1SDA071630R1
	2000	66	66	E2.2N 2000 Ekip G Touch LSIG	1SDA071037R1	1SDA071667R1
				E2.2N 2000 Ekip G Hi-Touch LSIG	1SDA071040R1	1SDA071670R1
	2500	66	66	E2.2N 2500 Ekip G Touch LSIG	1SDA071067R1	1SDA071697R1
				E2.2N 2500 Ekip G Hi-Touch LSIG	1SDA071070R1	1SDA071700R1
E2.2S	250	85	66	E2.2S 250 Ekip G Touch LSIG	1SDA073634R1	1SDA073644R1
				E2.2S 250 Ekip G Hi-Touch LSIG	1SDA073637R1	1SDA073647R1
	800	85	66	E2.2S 800 Ekip G Touch LSIG	1SDA070907R1	1SDA071537R1
				E2.2S 800 Ekip G Hi-Touch LSIG	1SDA070910R1	1SDA071540R1
	1000	85	66	E2.2S 1000 Ekip G Touch LSIG	1SDA070937R1	1SDA071567R1
				E2.2S 1000 Ekip G Hi-Touch LSIG	1SDA070940R1	1SDA071570R1
	1250	85	66	E2.2S 1250 Ekip G Touch LSIG	1SDA070967R1	1SDA071597R1
				E2.2S 1250 Ekip G Hi-Touch LSIG		1SDA071600R1
	1600	85	66	E2.2S 1600 Ekip G Touch LSIG	1SDA071007R1	1SDA071637R1
				E2.2S 1600 Ekip G Hi-Touch LSIG	1SDA071010R1	1SDA071640R1
	2000	85	66	E2.2S 2000 Ekip G Touch LSIG	1SDA071047R1	1SDA071677R1
				E2.2S 2000 Ekip G Hi-Touch LSIG		1SDA071680R1
	2500	85	66	E2.2S 2500 Ekip G Touch LSIG	1SDA071077R1	1SDA071707R1
				E2.2S 2500 Ekip G Hi-Touch LSIG		1SDA071710R1
E2.2H	800	100	85	E2.2H 800 Ekip G Touch LSIG	1SDA070917R1	1SDA071547R1
				E2.2H 800 Ekip G Hi-Touch LSIG		1SDA071550R1
	1000	100	85	E2.2H 1000 Ekip G Touch LSIG	1SDA070947R1	1SDA071577R1
				E2.2H 1000 Ekip G Hi-Touch LSIG		1SDA071580R1
	1250	100	85	E2.2H 1250 Ekip G Touch LSIG	1SDA070977R1	1SDA071607R1
				E2.2H 1250 Ekip G Hi-Touch LSIG		1SDA071610R1
	1600	100	85	E2.2H 1600 Ekip G Touch LSIG	1SDA071017R1	1SDA071647R1
				E2.2H 1600 Ekip G Hi-Touch LSIG		1SDA071650R1
	2000	100	85	E2.2H 2000 Ekip G Touch LSIG	1SDA071057R1	1SDA071687R1
				E2.2H 2000 Ekip G Hi-Touch LSIG		1SDA071690R1
	2500	100	85	E2.2H 2500 Ekip G Touch LSIG	1SDA071087R1	1SDA071717R1
				E2.2H 2500 Ekip G Hi-Touch LSIG		1SDA071717R1



### SACE Emax E4.2N-S-H-V • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V) (1s)			Code	Code
E4.2N	3200	66	66	E4.2N 3200 Ekip G Touch LSIG	1SDA071147R1	1SDA071777R1
				E4.2N 3200 Ekip G Hi-Touch LSIG	1SDA071150R1	1SDA071780R1
	4000	66	66	E4.2N 4000 Ekip G Touch LSIG	1SDA071197R1	1SDA071827R1
				E4.2N 4000 Ekip G Hi-Touch LSIG	1SDA071200R1	1SDA071830R1
E4.2S	3200	85	66	E4.2S 3200 Ekip G Touch LSIG	1SDA071157R1	1SDA071787R1
				E4.2S 3200 Ekip G Hi-Touch LSIG	1SDA071160R1	1SDA071790R1
	4000	85	66	E4.2S 4000 Ekip G Touch LSIG	1SDA071207R1	1SDA071837R1
				E4.2S 4000 Ekip G Hi-Touch LSIG	1SDA071210R1	1SDA071840R1
E4.2H	3200	100	85	E4.2H 3200 Ekip G Touch LSIG	1SDA071167R1	1SDA071797R1
				E4.2H 3200 Ekip G Hi-Touch LSIG	1SDA071170R1	1SDA071800R1
	4000	100	85	E4.2H 4000 Ekip G Touch LSIG	1SDA071217R1	1SDA071847R1
				E4.2H 4000 Ekip G Hi-Touch LSIG	1SDA071220R1	1SDA071850R1
E4.2V	2000	150	100	E4.2V 2000 Ekip G Touch LSIG	1SDA071107R1	1SDA071737R1
				E4.2V 2000 Ekip G Hi-Touch LSIG	1SDA071110R1	1SDA071740R1
	2500	150	100	E4.2V 2500 Ekip G Touch LSIG	1SDA071127R1	1SDA071757R1
				E4.2V 2500 Ekip G Hi-Touch LSIG	1SDA071130R1	1SDA071760R1
	3200	150	100	E4.2V 3200 Ekip G Touch LSIG	1SDA071177R1	1SDA071807R1
				E4.2V 3200 Ekip G Hi-Touch LSIG	1SDA071180R1	1SDA071810R1
	4000	150	100	E4.2V 4000 Ekip G Touch LSIG	1SDA071227R1	1SDA071857R1
				E4.2V 4000 Ekip G Hi-Touch LSIG	1SDA071230R1	1SDA071860R1

# Fixed version for generators



### SACE Emax E6.2H-V-X • Orientable rear terminals (HR)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E6.2H	4000	100	100	E6.2H 4000 Ekip G Touch LSIG	1SDA071237R1	1SDA071867R1
				E6.2H 4000 Ekip G Hi-Touch LSIG	1SDA071240R1	1SDA071870R1
	5000	100	100	E6.2H 5000 Ekip G Touch LSIG	1SDA071267R1	1SDA071897R1
				E6.2H 5000 Ekip G Hi-Touch LSIG	1SDA071270R1	1SDA071900R1
	6300	100	100	E6.2H 6300 Ekip G Touch LSIG	1SDA071297R1	1SDA071927R1
				E6.2H 6300 Ekip G Hi-Touch LSIG	1SDA071300R1	1SDA071930R1
E6.2V	4000	150	100	E6.2V 4000 Ekip G Touch LSIG	1SDA071247R1	1SDA071877R1
				E6.2V 4000 Ekip G Hi-Touch LSIG	1SDA071250R1	1SDA071880R1
	5000	150	100	E6.2V 5000 Ekip G Touch LSIG	1SDA071277R1	1SDA071907R1
				E6.2V 5000 Ekip G Hi-Touch LSIG	1SDA071280R1	1SDA071910R1
	6300	150	100	E6.2V 6300 Ekip G Touch LSIG	1SDA071307R1	1SDA071937R1
				E6.2V 6300 Ekip G Hi-Touch LSIG	1SDA071310R1	1SDA071940R1
E6.2X	4000	150	120	E6.2X 4000 Ekip G Touch LSIG	1SDA071257R1	1SDA071887R1
				E6.2X 4000 Ekip G Hi-Touch LSIG	1SDA071260R1	1SDA071890R1
	5000	150	120	E6.2X 5000 Ekip G Touch LSIG	1SDA071287R1	1SDA071917R1
				E6.2X 5000 Ekip G Hi-Touch LSIG	1SDA071290R1	1SDA071920R1
	6300	150	120	E6.2X 6300 Ekip G Touch LSIG	1SDA071317R1	1SDA071947R1
				E6.2X 6300 Ekip G Hi-Touch LSIG	1SDA071320R1	1SDA071950R1



### SACE Emax E6.2H-V-X/f Full size • Orientable rear terminals (HR)

Size	lu	lcu	lcw (1s)	Type	4 Poles
		(440 V)			Code
E6.2H/f	4000	100	100	E6.2H/f 4000 Ekip G Touch LSIG	1SDA071957R1
				E6.2H/f 4000 Ekip G Hi-Touch LSIG	1SDA071960R1
	5000	100	100	E6.2H/f 5000 Ekip G Touch LSIG	1SDA071987R1
				E6.2H/f 5000 Ekip G Hi-Touch LSIG	1SDA071990R1
	6300	100	100	E6.2H/f 6300 Ekip G Touch LSIG	1SDA072017R1
				E6.2H/f 6300 Ekip G Hi-Touch LSIG	1SDA072020R1
E6.2V/f	4000	150	100	E6.2V/f 4000 Ekip G Touch LSIG	1SDA071967R1
				E6.2V/f 4000 Ekip G Hi-Touch LSIG	1SDA071970R1
	5000	150	100	E6.2V/f 5000 Ekip G Touch LSIG	1SDA071997R1
				E6.2V/f 5000 Ekip G Hi-Touch LSIG	1SDA072000R1
	6300	150	100	E6.2V/f 6300 Ekip G Touch LSIG	1SDA072027R1
				E6.2V/f 6300 Ekip G Hi-Touch LSIG	1SDA072030R1
E6.2X/f	4000	150	120	E6.2X/f 4000 Ekip G Touch LSIG	1SDA071977R1
				E6.2X/f 4000 Ekip G Hi-Touch LSIG	1SDA071980R1
	5000	150	120	E6.2X/f 5000 Ekip G Touch LSIG	1SDA072007R1
				E6.2X/f 5000 Ekip G Hi-Touch LSIG	1SDA072010R1
	6300	150	120	E6.2X/f 6300 Ekip G Touch LSIG	1SDA072037R1
				E6.2X/f 6300 Ekip G Hi-Touch LSIG	1SDA072040R1

# Withdrawable version for generators



#### SACE Emax E1.2B-C-N-L • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Type	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E1.2B	630	42	42	E1.2B 630 Ekip G Touch LSIG	1SDA072057R1	1SDA072687R1
				E1.2B 630 Ekip G Hi-Touch LSIG	1SDA072060R1	1SDA072690R1
	800	42	42	E1.2B 800 Ekip G Touch LSIG	1SDA072097R1	1SDA072727R1
				E1.2B 800 Ekip G Hi-Touch LSIG	1SDA072100R1	1SDA072730R1
	1000	42	42	E1.2B 1000 Ekip G Touch LSIG	1SDA072137R1	1SDA072767R1
				E1.2B 1000 Ekip G Hi-Touch LSIG	1SDA072140R1	1SDA072770R1
	1250	42	42	E1.2B 1250 Ekip G Touch LSIG	1SDA072177R1	1SDA072807R1
				E1.2B 1250 Ekip G Hi-Touch LSIG	1SDA072180R1	1SDA072810R1
	1600	42	42	E1.2B 1600 Ekip G Touch LSIG	1SDA072217R1	1SDA072847R1
				E1.2B 1600 Ekip G Hi-Touch LSIG	1SDA072220R1	1SDA072850R1
E1.2C	630	50	42	E1.2C 630 Ekip G Touch LSIG	1SDA072067R1	1SDA072697R1
				E1.2C 630 Ekip G Hi-Touch LSIG	1SDA072070R1	1SDA072700R1
	800	50	42	E1.2C 800 Ekip G Touch LSIG	1SDA072107R1	1SDA072737R1
				E1.2C 800 Ekip G Hi-Touch LSIG	1SDA072110R1	1SDA072740R1
	1000	50	42	E1.2C 1000 Ekip G Touch LSIG	1SDA072147R1	1SDA072777R1
				E1.2C 1000 Ekip G Hi-Touch LSIG	1SDA072150R1	1SDA072780R1
	1250	50	42	E1.2C 1250 Ekip G Touch LSIG	1SDA072187R1	1SDA072817R1
				E1.2C 1250 Ekip G Hi-Touch LSIG	1SDA072190R1	1SDA072820R1
	1600	50	42	E1.2C 1600 Ekip G Touch LSIG	1SDA072227R1	1SDA072857R1
				E1.2C 1600 Ekip G Hi-Touch LSIG	1SDA072230R1	1SDA072860R1
E1.2N	250	66	50	E1.2N 250 Ekip G Touch LSIG	1SDA072047R1	1SDA072677R1
				E1.2N 250 Ekip G Hi-Touch LSIG	1SDA072050R1	1SDA072680R1
	630	66	50	E1.2N 630 Ekip G Touch LSIG	1SDA072077R1	1SDA072707R1
				E1.2N 630 Ekip G Hi-Touch LSIG	1SDA072080R1	1SDA072710R1
	800	66	50	E1.2N 800 Ekip G Touch LSIG	1SDA072117R1	1SDA072747R1
				E1.2N 800 Ekip G Hi-Touch LSIG	1SDA072120R1	1SDA072750R1
	1000	66	50	E1.2N 1000 Ekip G Touch LSIG	1SDA072157R1	1SDA072787R1
				E1.2N 1000 Ekip G Hi-Touch LSIG	1SDA072160R1	1SDA072790R1
	1250	66	50	E1.2N 1250 Ekip G Touch LSIG	1SDA072197R1	1SDA072827R1
				E1.2N 1250 Ekip G Hi-Touch LSIG	1SDA072200R1	1SDA072830R1
	1600	66	50	E1.2N 1600 Ekip G Touch LSIG	1SDA072237R1	1SDA072867R1
				E1.2N 1600 Ekip G Hi-Touch LSIG	1SDA072240R1	1SDA072870R1



### SACE Emax E2.2B-N-S-H • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E2.2B	1600	42	42	E2.2B 1600 Ekip G Touch LSIG	1SDA072337R1	1SDA072967R1
				E2.2B 1600 Ekip G Hi-Touch LSIG	1SDA072340R1	1SDA072970R1
	2000	42	42	E2.2B 2000 Ekip G Touch LSIG	1SDA072377R1	1SDA073007R1
				E2.2B 2000 Ekip G Hi-Touch LSIG	1SDA072380R1	1SDA073010R1
E2.2N	800	66	66	E2.2N 800 Ekip G Touch LSIG	1SDA072247R1	1SDA072877R1
				E2.2N 800 Ekip G Hi-Touch LSIG	1SDA072250R1	1SDA072880R1
	1000	66	66	E2.2N 1000 Ekip G Touch LSIG	1SDA072277R1	1SDA072907R1
				E2.2N 1000 Ekip G Hi-Touch LSIG	1SDA072280R1	1SDA072910R1
	1250	66	66	E2.2N 1250 Ekip G Touch LSIG	1SDA072307R1	1SDA072937R1
				E2.2N 1250 Ekip G Hi-Touch LSIG	1SDA072310R1	1SDA072940R1
	1600	66	66	E2.2N 1600 Ekip G Touch LSIG	1SDA072347R1	1SDA072977R1
				E2.2N 1600 Ekip G Hi-Touch LSIG	1SDA072350R1	1SDA072980R1
	2000	66	66	E2.2N 2000 Ekip G Touch LSIG	1SDA072387R1	1SDA073017R1
				E2.2N 2000 Ekip G Hi-Touch LSIG	1SDA072390R1	1SDA073020R1
	2500	66	66	E2.2N 2500 Ekip G Touch LSIG	1SDA072417R1	1SDA073047R1
				E2.2N 2500 Ekip G Hi-Touch LSIG	1SDA072420R1	1SDA073050R1
 E2.2S	250	85	66	E2.2S 250 Ekip G Touch LSIG	1SDA073654R1	1SDA073664R1
				E2.2S 250 Ekip G Hi-Touch LSIG	1SDA073657R1	1SDA073667R1
	800	85	66	E2.2S 800 Ekip G Touch LSIG	1SDA072257R1	1SDA072887R1
				E2.2S 800 Ekip G Hi-Touch LSIG	1SDA072260R1	1SDA072890R1
	1000	85	66	E2.2S 1000 Ekip G Touch LSIG	1SDA072287R1	1SDA072917R1
				E2.2S 1000 Ekip G Hi-Touch LSIG		1SDA072920R1
	1250	85	66	E2.2S 1250 Ekip G Touch LSIG	1SDA072317R1	1SDA072947R1
				E2.2S 1250 Ekip G Hi-Touch LSIG		1SDA072950R1
	1600	85	66	E2.2S 1600 Ekip G Touch LSIG	1SDA072357R1	1SDA072987R1
				E2.2S 1600 Ekip G Hi-Touch LSIG		1SDA072990R1
	2000	85	66	E2.2S 2000 Ekip G Touch LSIG	1SDA072397R1	1SDA073027R1
				E2.2S 2000 Ekip G Hi-Touch LSIG	1SDA072400R1	1SDA073030R1
	2500	85	66	E2.2S 2500 Ekip G Touch LSIG	1SDA072427R1	1SDA073057R1
				E2.2S 2500 Ekip G Hi-Touch LSIG		1SDA073060R1
E2.2H	800	100	85	E2.2H 800 Ekip G Touch LSIG	1SDA072267R1	1SDA072897R1
				E2.2H 800 Ekip G Hi-Touch LSIG		1SDA072900R1
	1000	100	85	E2.2H 1000 Ekip G Touch LSIG	1SDA072297R1	1SDA072927R1
				E2.2H 1000 Ekip G Hi-Touch LSIG		1SDA072930R1
	1250	100	85	E2.2H 1250 Ekip G Touch LSIG	1SDA072327R1	1SDA072957R1
				E2.2H 1250 Ekip G Hi-Touch LSIG		1SDA072960R1
	1600	100	85	E2.2H 1600 Ekip G Touch LSIG	1SDA072367R1	1SDA072997R1
				E2.2H 1600 Ekip G Hi-Touch LSIG		1SDA073000R1
	2000	100	85	E2.2H 2000 Ekip G Touch LSIG	1SDA072407R1	1SDA073037R1
		- •		E2.2H 2000 Ekip G Hi-Touch LSIG		1SDA073040R1
	2500	100	85	E2.2H 2500 Ekip G Touch LSIG	1SDA072437R1	1SDA073040R1
				E2.2H 2500 Ekip G Hi-Touch LSIG		1SDA073070R1

# Withdrawable version for generators



### SACE Emax E4.2N-S-H-V • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E4.2N	3200	66	66	E4.2N 3200 Ekip G Touch LSIG	1SDA072497R1	1SDA073127R1
				E4.2N 3200 Ekip G Hi-Touch LSIG	1SDA072500R1	1SDA073130R1
	4000	66	66	E4.2N 4000 Ekip G Touch LSIG	1SDA072547R1	1SDA073177R1
				E4.2N 4000 Ekip G Hi-Touch LSIG	1SDA072550R1	1SDA073180R1
E4.2S	3200	85	66	E4.2S 3200 Ekip G Touch LSIG	1SDA072507R1	1SDA073137R1
				E4.2S 3200 Ekip G Hi-Touch LSIG	1SDA072510R1	1SDA073140R1
	4000	85	66	E4.2S 4000 Ekip G Touch LSIG	1SDA072557R1	1SDA073187R1
				E4.2S 4000 Ekip G Hi-Touch LSIG	1SDA072560R1	1SDA073190R1
E4.2H	3200	100	85	E4.2H 3200 Ekip G Touch LSIG	1SDA072517R1	1SDA073147R1
				E4.2H 3200 Ekip G Hi-Touch LSIG	1SDA072520R1	1SDA073150R1
	4000	100	85	E4.2H 4000 Ekip G Touch LSIG	1SDA072567R1	1SDA073197R1
				E4.2H 4000 Ekip G Hi-Touch LSIG	1SDA072570R1	1SDA073200R1
E4.2V	2000	150	100	E4.2V 2000 Ekip G Touch LSIG	1SDA072457R1	1SDA073087R1
				E4.2V 2000 Ekip G Hi-Touch LSIG	1SDA072460R1	1SDA073090R1
	2500	150	100	E4.2V 2500 Ekip G Touch LSIG	1SDA072477R1	1SDA073107R1
				E4.2V 2500 Ekip G Hi-Touch LSIG	1SDA072480R1	1SDA073110R1
	3200	150	100	E4.2V 3200 Ekip G Touch LSIG	1SDA072527R1	1SDA073157R1
				E4.2V 3200 Ekip G Hi-Touch LSIG	1SDA072530R1	1SDA073160R1
	4000	150	100	E4.2V 4000 Ekip G Touch LSIG	1SDA072577R1	1SDA073207R1
				E4.2V 4000 Ekip G Hi-Touch LSIG	1SDA072580R1	1SDA073210R1



### SACE Emax E6.2H-V-X • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw	Туре	3 Poles	4 Poles
		(440 V)	(1s)		Code	Code
E6.2H	4000	100 100 E6		E6.2H 4000 Ekip G Touch LSIG	1SDA072587R1	1SDA073217R1
				E6.2H 4000 Ekip G Hi-Touch LSIG	1SDA072590R1	1SDA073220R1
	5000	100	100	E6.2H 5000 Ekip G Touch LSIG	1SDA072617R1	1SDA073247R1
				E6.2H 5000 Ekip G Hi-Touch LSIG	1SDA072620R1	1SDA073250R1
	6300	100	100	E6.2H 6300 Ekip G Touch LSIG	1SDA072647R1	1SDA073277R1
				E6.2H 6300 Ekip G Hi-Touch LSIG	1SDA072650R1	1SDA073280R1
E6.2V	4000	150	100	E6.2V 4000 Ekip G Touch LSIG	1SDA072597R1	1SDA073227R1
				E6.2V 4000 Ekip G Hi-Touch LSIG	1SDA072600R1	1SDA073230R1
	5000	150	100	E6.2V 5000 Ekip G Touch LSIG	1SDA072627R1	1SDA073257R1
				E6.2V 5000 Ekip G Hi-Touch LSIG	1SDA072630R1	1SDA073260R1
	6300	150	100	E6.2V 6300 Ekip G Touch LSIG	1SDA072657R1	1SDA073287R1
				E6.2V 6300 Ekip G Hi-Touch LSIG	1SDA072660R1	1SDA073290R1
E6.2X	4000	150	120	E6.2X 4000 Ekip G Touch LSIG	1SDA072607R1	1SDA073237R1
				E6.2X 4000 Ekip G Hi-Touch LSIG	1SDA072610R1	1SDA073240R1
	5000	150	120	E6.2X 5000 Ekip G Touch LSIG	1SDA072637R1	1SDA073267R1
				E6.2X 5000 Ekip G Hi-Touch LSIG	1SDA072640R1	1SDA073270R1
	6300	150	120	E6.2X 6300 Ekip G Touch LSIG	1SDA072667R1	1SDA073297R1
				E6.2X 6300 Ekip G Hi-Touch LSIG	1SDA072670R1	1SDA073300R1

# Withdrawable version for generators



SACE Emax E6.2H-V-X/f Full size • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcu	lcw (1s)	Type	4 Poles
		(440 V)			Code
E6.2H/f	4000	100	100	E6.2H/f 4000 Ekip G Touch LSIG	1SDA073307R1
				E6.2H/f 4000 Ekip G Hi-Touch LSIG	1SDA073310R1
	5000	100	100	E6.2H/f 5000 Ekip G Touch LSIG	1SDA073337R1
				E6.2H/f 5000 Ekip G Hi-Touch LSIG	1SDA073340R1
	6300	100	100	E6.2H/f 6300 Ekip G Touch LSIG	1SDA073367R1
				E6.2H/f 6300 Ekip G Hi-Touch LSIG	1SDA073370R1
E6.2V/f	4000	150	100	E6.2V/f 4000 Ekip G Touch LSIG	1SDA073317R1
				E6.2V/f 4000 Ekip G Hi-Touch LSIG	1SDA073320R1
	5000	150	100	E6.2V/f 5000 Ekip G Touch LSIG	1SDA073347R1
				E6.2V/f 5000 Ekip G Hi-Touch LSIG	1SDA073350R1
	6300	150	100	E6.2V/f 6300 Ekip G Touch LSIG	1SDA073377R1
				E6.2V/f 6300 Ekip G Hi-Touch LSIG	1SDA073380R1
E6.2X/f	4000	150	120	E6.2X/f 4000 Ekip G Touch LSIG	1SDA073327R1
				E6.2X/f 4000 Ekip G Hi-Touch LSIG	1SDA073330R1
	5000	150	120	E6.2X/f 5000 Ekip G Touch LSIG	1SDA073357R1
				E6.2X/f 5000 Ekip G Hi-Touch LSIG	1SDA073360R1
	6300	150	120	E6.2X/f 6300 Ekip G Touch LSIG	1SDA073387R1
				E6.2X/f 6300 Ekip G Hi-Touch LSIG	1SDA073390R1

## **Switch-disconnectors**

## Fixed version



### SACE Emax E1.2B-N/MS • Front terminals (F)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E1.2B/MS	630	42	E1.2B/MS 630	1SDA073392R1	1SDA073431R1
	800	42	E1.2B/MS 800	1SDA073394R1	1SDA073433R1
	1000	42	E1.2B/MS 1000	1SDA073396R1	1SDA073435R1
	1250	42	E1.2B/MS 1250	1SDA073398R1	1SDA073437R1
	1600	42	E1.2B/MS 1600	1SDA073400R1	1SDA073439R1
E1.2N/MS	250	50	E1.2N/MS 250	1SDA073391R1	1SDA073430R1
	630	50	E1.2N/MS 630	1SDA073393R1	1SDA073432R1
	800	50	E1.2N/MS 800	1SDA073395R1	1SDA073434R1
	1000	50	E1.2N/MS 1000	1SDA073397R1	1SDA073436R1
	1250	50	E1.2N/MS 1250	1SDA073399R1	1SDA073438R1
	1600	50	E1.2N/MS 1600	1SDA073401R1	1SDA073440R1



### SACE Emax E2.2B-N-H/MS • Orientable rear terminals (HR)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E2.2B/MS	1600	42	E2.2B/MS 1600	1SDA073408R1	1SDA073447R1
	2000	42	E2.2B/MS 2000	1SDA073411R1	1SDA073450R1
E2.2N/MS	800	66	E2.2N/MS 800	1SDA073402R1	1SDA073441R1
	1000	66	E2.2N/MS 1000	1SDA073404R1	1SDA073443R1
	1250	66	E2.2N/MS 1250	1SDA073406R1	1SDA073445R1
	1600	66	E2.2N/MS 1600	1SDA073409R1	1SDA073448R1
	2000	66	E2.2N/MS 2000	1SDA073412R1	1SDA073451R1
	2500	66	E2.2N/MS 2500	1SDA073414R1	1SDA073453R1
E2.2H/MS	800	85	E2.2H/MS 800	1SDA073403R1	1SDA073442R1
	1000	85	E2.2H/MS 1000	1SDA073405R1	1SDA073444R1
	1250	85	E2.2H/MS 1250	1SDA073407R1	1SDA073446R1
	1600	85	E2.2H/MS 1600	1SDA073410R1	1SDA073449R1
	2000	85	E2.2H/MS 2000	1SDA073413R1	1SDA073452R1
	2500	85	E2.2H/MS 2500	1SDA073415R1	1SDA073454R1

## **Switch-disconnectors**

## Fixed version



#### SACE Emax E4.2N-H-V/MS • Orientable rear terminals (HR)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E4.2N/MS	3200	66	E4.2N/MS 3200	1SDA073418R1	1SDA073457R1
	4000	66	E4.2N/MS 4000	1SDA073421R1	1SDA073460R1
E4.2H/MS	3200	85	E4.2H/MS 3200	1SDA073419R1	1SDA073458R1
	4000	85	E4.2H/MS 4000	1SDA073422R1	1SDA073461R1
E4.2V/MS	2000	100	E4.2V/MS 2000	1SDA073416R1	1SDA073455R1
	2500	100	E4.2V/MS 2500	1SDA073417R1	1SDA073456R1
	3200	100	E4.2V/MS 3200	1SDA073420R1	1SDA073459R1
	4000	100	E4.2V/MS 4000	1SDA073423R1	1SDA073462R1



### SACE Emax E6.2H-X/MS • Orientable rear terminals (HR)

		-		• •	
Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E6.2H/MS	4000	100	E6.2H/MS 4000	1SDA073424R1	1SDA073463R1
	5000	100	E6.2H/MS 5000	1SDA073426R1	1SDA073465R1
	6300	100	E6.2H/MS 6300	1SDA073428R1	1SDA073467R1
E6.2X/MS	4000	120	E6.2X/MS 4000	1SDA073425R1	1SDA073464R1
	5000	120	E6.2X/MS 5000	1SDA073427R1	1SDA073466R1
	6300	120	E6.2X/MS 6300	1SDA073429R1	1SDA073468R1



### SACE Emax E6.2H-X/MS/f Full size • Orientable rear terminals (HR)

Size	lu	lcw (1s)	Туре	4 Poles
				Code
E6.2H/MS/f	4000	100	E6.2H/MS/f 4000	1SDA073469R1
	5000	100	E6.2H/MS/f 5000	1SDA073471R1
	6300	100	E6.2H/MS/f 6300	1SDA073473R1
E6.2X/MS/f	4000	120	E6.2X/MS/f 4000	1SDA073470R1
	5000	120	E6.2X/MS/f 5000	1SDA073472R1
	6300	120	E6.2X/MS/f 6300	1SDA073474R1

## **Switch-disconnectors**

## Withdrawable version



### SACE Emax E1.2B-N/MS • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E1.2B/MS	630	42	E1.2B/MS 630	1SDA073476R1	1SDA073515R1
	800	42	E1.2B/MS 800	1SDA073478R1	1SDA073517R1
	1000	42	E1.2B/MS 1000	1SDA073480R1	1SDA073519R1
	1250	42	E1.2B/MS 1250	1SDA073482R1	1SDA073521R1
	1600	42	E1.2B/MS 1600	1SDA073484R1	1SDA073523R1
E1.2N/MS	250	50	E1.2N/MS 250	1SDA073475R1	1SDA073514R1
	630	50	E1.2N/MS 630	1SDA073477R1	1SDA073516R1
	800	50	E1.2N/MS 800	1SDA073479R1	1SDA073518R1
	1000	50	E1.2N/MS 1000	1SDA073481R1	1SDA073520R1
	1250	50	E1.2N/MS 1250	1SDA073483R1	1SDA073522R1
	1600	50	E1.2N/MS 1600	1SDA073485R1	1SDA073524R1



### SACE Emax E2.2B-N-H/MS • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E2.2B/MS	1600	42	E2.2B/MS 1600	1SDA073492R1	1SDA073531R1
	2000	42	E2.2B/MS 2000	1SDA073495R1	1SDA073534R1
E2.2N/MS	800	66	E2.2N/MS 800	1SDA073486R1	1SDA073525R1
	1000	66	E2.2N/MS 1000	1SDA073488R1	1SDA073527R1
	1250	66	E2.2N/MS 1250	1SDA073490R1	1SDA073529R1
	1600	66	E2.2N/MS 1600	1SDA073493R1	1SDA073532R1
	2000	66	E2.2N/MS 2000	1SDA073496R1	1SDA073535R1
	2500	66	E2.2N/MS 2500	1SDA073498R1	1SDA073537R1
E2.2H/MS	800	85	E2.2H/MS 800	1SDA073487R1	1SDA073526R1
	1000	85	E2.2H/MS 1000	1SDA073489R1	1SDA073528R1
	1250	85	E2.2H/MS 1250	1SDA073491R1	1SDA073530R1
	1600	85	E2.2H/MS 1600	1SDA073494R1	1SDA073533R1
	2000	85	E2.2H/MS 2000	1SDA073497R1	1SDA073536R1
	2500	85	E2.2H/MS 2500	1SDA073499R1	1SDA073538R1

### **Switch-disconnectors**

## Withdrawable version



### SACE Emax E4.2N-H-V/MS • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcw (1s)	Type	3 Poles	4 Poles
				Code	Code
E4.2N/MS	3200	66	E4.2N/MS 3200	1SDA073502R1	1SDA073541R1
	4000	66	E4.2N/MS 4000	1SDA073505R1	1SDA073544R1
E4.2H/MS	3200	85	E4.2H/MS 3200	1SDA073503R1	1SDA073542R1
	4000	85	E4.2H/MS 4000	1SDA073506R1	1SDA073545R1
E4.2V/MS	2000	100	E4.2V/MS 2000	1SDA073500R1	1SDA073539R1
	2500	100	E4.2V/MS 2500	1SDA073501R1	1SDA073540R1
	3200	100	E4.2V/MS 3200	1SDA073504R1	1SDA073543R1
	4000	100	E4.2V/MS 4000	1SDA073507R1	1SDA073546R1



### SACE Emax E6.2H-X/MS • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcw (1s)	Туре	3 Poles	4 Poles
				Code	Code
E6.2H/MS	4000	100	E6.2H/MS 4000	1SDA073508R1	1SDA073547R1
	5000	100	E6.2H/MS 5000	1SDA073510R1	1SDA073549R1
	6300	100	E6.2H/MS 6300	1SDA073512R1	1SDA073551R1
E6.2X/MS	4000	120	E6.2X/MS 4000	1SDA073509R1	1SDA073548R1
	5000	120	E6.2X/MS 5000	1SDA073511R1	1SDA073550R1
	6300	120	E6.2X/MS 6300	1SDA073513R1	1SDA073552R1

### SACE Emax E6.2H-X/MS/f Full size • Mobile part of withdrawable circuit-breaker (MP)

Size	lu	lcw (1s)	Туре	4 Poles
				Code
E6.2H/MS/f	4000	100	E6.2H/MS/f 4000 1SDA073553R1	
	5000	100	E6.2H/MS/f 5000	1SDA073555R1
	6300	100	E6.2H/MS/f 6300	1SDA073557R1
E6.2X/MS/f	4000	120	E6.2X/MS/f 4000	1SDA073554R1
	5000	120	E6.2X/MS/f 5000	1SDA073556R1
	6300	120	E6.2X/MS/f 6300	1SDA073558R1

## **Automatic circuit-breakers**

# Fixed version Emax 2/E9 up to 900V



Size	lu	lcu (900 V)	Туре	3 Poles	4 Poles
E2.2H	1250	65	E2.2H/E9 1250 Ekip Dip LSI FHR	1SDA104347R1	1SDA104362R1
			E2.2H/E9 1250 Ekip Dip LSIG FHR	1SDA104348R1	1SDA104363R1
			E2.2H/E9 1250 Ekip Touch LSI FHR	1SDA104351R1	1SDA104366R1
			E2.2H/E9 1250 Ekip Touch LSIG FHR	1SDA104349R1	1SDA104364R1
			E2.2H/E9 1250 Ekip Hi-Touch LSIG FHR	1SDA104350R1	1SDA104365R1
	2000	65	E2.2H/E9 2000 Ekip Dip LSI FHR	1SDA104352R1	1SDA104367R1
			E2.2H/E9 2000 Ekip Dip LSIG FHR	1SDA104353R1	1SDA104368R1
			E2.2H/E9 2000 Ekip Touch LSI FHR	1SDA104356R1	1SDA104371R1
			E2.2H/E9 2000 Ekip Touch LSIG FHR	1SDA104354R1	1SDA104369R1
			E2.2H/E9 2000 Ekip Hi-Touch LSIG FHR	1SDA104355R1	1SDA104370R1
	2500	65	E2.2H/E9 2500 Ekip Dip LSI FHR	1SDA104357R1	1SDA104372R1
			E2.2H/E9 2500 Ekip Dip LSIG FHR	1SDA104358R1	1SDA104373R1
			E2.2H/E9 2500 Ekip Touch LSI FHR	1SDA104361R1	1SDA104376R1
			E2.2H/E9 2500 Ekip Touch LSIG FHR	1SDA104359R1	1SDA104374R1
			E2.2H/E9 2500 Ekip Hi-Touch LSIG FHR	1SDA104360R1	1SDA104375R1
2.25	1250	50	E2.2S/E9 1250 Ekip Dip LSI FHR	1SDA104317R1	1SDA104332R1
			E2.2S/E9 1250 Ekip Dip LSIG FHR	1SDA104318R1	1SDA104333R1
			E2.2S/E9 1250 Ekip Touch LSI FHR	1SDA104321R1	1SDA104336R1
			E2.2S/E9 1250 Ekip Touch LSIG FHR	1SDA104319R1	1SDA104334R1
			E2.2S/E9 1250 Ekip Hi-Touch LSIG FHR	1SDA104320R1	1SDA104335R1
	2000	50	E2.2S/E9 2000 Ekip Dip LSI FHR	1SDA104322R1	1SDA104337R1
			E2.2S/E9 2000 Ekip Dip LSIG FHR	1SDA104323R1	1SDA104338R1
			E2.2S/E9 2000 Ekip Touch LSI FHR	1SDA104326R1	1SDA104341R1
			E2.2S/E9 2000 Ekip Touch LSIG FHR	1SDA104324R1	1SDA104339R1
			E2.2S/E9 2000 Ekip Hi-Touch LSIG FHR	1SDA104325R1	1SDA104340R1
	2500	50	E2.2S/E9 2500 Ekip Dip LSI FHR	1SDA104327R1	1SDA104342R1
			E2.2S/E9 2500 Ekip Dip LSIG FHR	1SDA104328R1	1SDA104343R1
			E2.2S/E9 2500 Ekip Touch LSI FHR	1SDA104331R1	1SDA104346R1
			E2.2S/E9 2500 Ekip Touch LSIG FHR	1SDA104329R1	1SDA104344R1
			E2.2S/E9 2500 Ekip Hi-Touch LSIG FHR	1SDA104330R1	1SDA104345R1

## Fixed version Emax 2/E9 up to 900V



Size	lu	lcu (900 V)	Туре	3 Poles	4 Poles
E4.2H	3200	75	E4.2H/E9 3200 Ekip Dip LSI FHR	1SDA104397R1	1SDA104407R1
			E4.2H/E9 3200 Ekip Dip LSIG FHR	1SDA104398R1	1SDA104408R1
			E4.2H/E9 3200 Ekip Touch LSI FHR	1SDA104401R1	1SDA104411R1
			E4.2H/E9 3200 Ekip Touch LSIG FHR	1SDA104399R1	1SDA104409R1
			E4.2H/E9 3200 Ekip Hi-Touch LSIG FHR	1SDA104400R1	1SDA104410R1
	4000	75	E4.2H/E9 4000 Ekip Dip LSI FHR	1SDA104402R1	1SDA104412R1
			E4.2H/E9 4000 Ekip Dip LSIG FHR	1SDA104403R1	1SDA104413R1
			E4.2H/E9 4000 Ekip Touch LSI FHR	1SDA104406R1	1SDA104416R1
			E4.2H/E9 4000 Ekip Touch LSIG FHR	1SDA104404R1	1SDA104414R1
			E4.2H/E9 4000 Ekip Hi-Touch LSIG FHR	1SDA104405R1	1SDA104415R1
E4.2S	3200	65	E4.2S/E9 3200 Ekip Dip LSI FHR	1SDA104377R1	1SDA104387R1
			E4.2S/E9 3200 Ekip Dip LSIG FHR	1SDA104378R1	1SDA104388R1
			E4.2S/E9 3200 Ekip Touch LSI FHR	1SDA104381R1	1SDA104391R1
			E4.2S/E9 3200 Ekip Touch LSIG FHR	1SDA104379R1	1SDA104389R1
			E4.2S/E9 3200 Ekip Hi-Touch LSIG FHR	1SDA104380R1	1SDA104390R1
	4000	65	E4.2S/E9 4000 Ekip Dip LSI FHR	1SDA104382R1	1SDA104392R1
			E4.2S/E9 4000 Ekip Dip LSIG FHR	1SDA104383R1	1SDA104393R1
			E4.2S/E9 4000 Ekip Touch LSI FHR	1SDA104386R1	1SDA104396R1
			E4.2S/E9 4000 Ekip Touch LSIG FHR	1SDA104384R1	1SDA104394R1
			E4.2S/E9 4000 Ekip Hi-Touch LSIG FHR	1SDA104385R1	1SDA104395R1
E6.2H	5000	75	E6.2H/E9 5000 Ekip Dip LSI FHR	1SDA104605R1	1SDA104615R1
			E6.2H/E9 5000 Ekip Dip LSIG FHR	1SDA104606R1	1SDA104616R1
			E6.2H/E9 5000 Ekip Touch LSI FHR	1SDA104609R1	1SDA104619R1
			E6.2H/E9 5000 Ekip Touch LSIG FHR	1SDA104607R1	1SDA104617R1
			E6.2H/E9 5000 Ekip Hi-Touch LSIG FHR	1SDA104608R1	1SDA104618R1
	6300	75	E6.2H/E9 6300 Ekip Dip LSI FHR	1SDA104610R1	1SDA104620R1
			E6.2H/E9 6300 Ekip Dip LSIG FHR	1SDA104611R1	1SDA104621R1
			E6.2H/E9 6300 Ekip Touch LSI FHR	1SDA104614R1	1SDA104624R1
			E6.2H/E9 6300 Ekip Touch LSIG FHR	1SDA104612R1	1SDA104622R1
			E6.2H/E9 6300 Ekip Hi-Touch LSIG FHR	1SDA104613R1	1SDA104623R1
E6.2X	5000	90	E6.2X/E9 5000 Ekip Dip LSI FHR	1SDA104417R1	1SDA104427R1
			E6.2X/E9 5000 Ekip Dip LSIG FHR	1SDA104418R1	1SDA104428R1
			E6.2X/E9 5000 Ekip Touch LSI FHR	1SDA104421R1	1SDA104431R1
			E6.2X/E9 5000 Ekip Touch LSIG FHR	1SDA104419R1	1SDA104429R1
			E6.2X/E9 5000 Ekip Hi-Touch LSIG FHR	1SDA104420R1	1SDA104430R1
	6300	90	E6.2X/E9 6300 Ekip Dip LSI FHR	1SDA104422R1	1SDA104432R1
			E6.2X/E9 6300 Ekip Dip LSIG FHR	1SDA104423R1	1SDA104433R1
			E6.2X/E9 6300 Ekip Touch LSI FHR	1SDA104426R1	1SDA104436R1

E6.2X/E9 6300 Ekip Touch LSIG FHR

E6.2X/E9 6300 Ekip Hi-Touch LSIG FHR

1SDA104434R1

1SDA104435R1

1SDA104424R1

1SDA104425R1



## **Automatic circuit-breakers**

## Withdrawable version Emax 2/E9 up to 900V



Size	lu	lcu (900 V)	Туре	3 Poles	4 Poles
E2.2H	1250	65	E2.2H/E9 1250 Ekip Dip LSI WMP	1SDA104467R1	1SDA104482R1
			E2.2H/E9 1250 Ekip Dip LSIG WMP	1SDA104468R1	1SDA104483R1
			E2.2H/E9 1250 Ekip Touch LSI WMP	1SDA104471R1	1SDA104486R1
			E2.2H/E9 1250 Ekip Touch LSIG WMP	1SDA104469R1	1SDA104484R1
			E2.2H/E9 1250 Ekip Hi-Touch LSIG WMP	1SDA104470R1	1SDA104485R1
	2000	65	E2.2H/E9 2000 Ekip Dip LSI WMP	1SDA104472R1	1SDA104487R1
			E2.2H/E9 2000 Ekip Dip LSIG WMP	1SDA104473R1	1SDA104488R1
			E2.2H/E9 2000 Ekip Touch LSI WMP	1SDA104476R1	1SDA104491R1
			E2.2H/E9 2000 Ekip Touch LSIG WMP	1SDA104474R1	1SDA104489R1
			E2.2H/E9 2000 Ekip Hi-Touch LSIG WMP	1SDA104475R1	1SDA104490R1
	2500	65	E2.2H/E9 2500 Ekip Dip LSI WMP	1SDA104477R1	1SDA104492R1
			E2.2H/E9 2500 Ekip Dip LSIG WMP	1SDA104478R1	1SDA104493R1
			E2.2H/E9 2500 Ekip Touch LSI WMP	1SDA104481R1	1SDA104496R1
			E2.2H/E9 2500 Ekip Touch LSIG WMP	1SDA104479R1	1SDA104494R1
			E2.2H/E9 2500 Ekip Hi-Touch LSIG WMP	1SDA104480R1	1SDA104495R1
E2.2S	1250	50	E2.2S/E9 1250 Ekip Dip LSI WMP	1SDA104437R1	1SDA104452R1
			E2.2S/E9 1250 Ekip Dip LSIG WMP	1SDA104438R1	1SDA104453R1
			E2.2S/E9 1250 Ekip Touch LSI WMP	1SDA104441R1	1SDA104456R1
			E2.2S/E9 1250 Ekip Touch LSIG WMP	1SDA104439R1	1SDA104454R1
			E2.2S/E9 1250 Ekip Hi-Touch LSIG WMP	1SDA104440R1	1SDA104455R1
	2000	50	E2.2S/E9 2000 Ekip Dip LSI WMP	1SDA104442R1	1SDA104457R1
			E2.2S/E9 2000 Ekip Dip LSIG WMP	1SDA104443R1	1SDA104458R1
			E2.2S/E9 2000 Ekip Touch LSI WMP	1SDA104446R1	1SDA104461R1
			E2.2S/E9 2000 Ekip Touch LSIG WMP	1SDA104444R1	1SDA104459R1
			E2.2S/E9 2000 Ekip Hi-Touch LSIG WMP	1SDA104445R1	1SDA104460R1
	2500	50	E2.2S/E9 2500 Ekip Dip LSI WMP	1SDA104447R1	1SDA104462R1
			E2.2S/E9 2500 Ekip Dip LSIG WMP	1SDA104448R1	1SDA104463R1
			E2.2S/E9 2500 Ekip Touch LSI WMP	1SDA104451R1	1SDA104466R1
			E2.2S/E9 2500 Ekip Touch LSIG WMP	1SDA104449R1	1SDA104464R1
			E2.2S/E9 2500 Ekip Hi-Touch LSIG WMP	1SDA104450R1	1SDA104465R1

## Withdrawable version Emax 2/E9 up to 900V



Size	lu	lcu (900 V)	Туре	3 Poles	4 Poles
E4.2H	3200	75	E4.2H/E9 3200 Ekip Dip LSI WMP	1SDA104517R1	1SDA104527R1
			E4.2H/E9 3200 Ekip Dip LSIG WMP	1SDA104518R1	1SDA104528R1
			E4.2H/E9 3200 Ekip Touch LSI WMP	1SDA104521R1	1SDA104531R1
			E4.2H/E9 3200 Ekip Touch LSIG WMP	1SDA104519R1	1SDA104529R1
			E4.2H/E9 3200 Ekip Hi-Touch LSIG WMP	1SDA104520R1	1SDA104530R1
	4000	75	E4.2H/E9 4000 Ekip Dip LSI WMP	1SDA104522R1	1SDA104532R1
			E4.2H/E9 4000 Ekip Dip LSIG WMP	1SDA104523R1	1SDA104533R1
			E4.2H/E9 4000 Ekip Touch LSI WMP	1SDA104526R1	1SDA104536R1
			E4.2H/E9 4000 Ekip Touch LSIG WMP	1SDA104524R1	1SDA104534R1
			E4.2H/E9 4000 Ekip Hi-Touch LSIG WMP	1SDA104525R1	1SDA104535R1
4.2S	3200	65	E4.2S/E9 3200 Ekip Dip LSI WMP	1SDA104497R1	1SDA104507R1
			E4.2S/E9 3200 Ekip Dip LSIG WMP	1SDA104498R1	1SDA104508R1
			E4.2S/E9 3200 Ekip Touch LSI WMP	1SDA104501R1	1SDA104511R1
			E4.2S/E9 3200 Ekip Touch LSIG WMP	1SDA104499R1	1SDA104509R1
			E4.2S/E9 3200 Ekip Hi-Touch LSIG WMP	1SDA104500R1	1SDA104510R1
	4000	65	E4.2S/E9 4000 Ekip Dip LSI WMP	1SDA104502R1	1SDA104512R1
			E4.2S/E9 4000 Ekip Dip LSIG WMP	1SDA104503R1	1SDA104513R1
			E4.2S/E9 4000 Ekip Touch LSI WMP	1SDA104506R1	1SDA104516R1
			E4.2S/E9 4000 Ekip Touch LSIG WMP	1SDA104504R1	1SDA104514R1
			E4.2S/E9 4000 Ekip Hi-Touch LSIG WMP	1SDA104505R1	1SDA104515R1
E6.2H	5000	75	E6.2H/E9 5000 Ekip Dip LSI WMP	1SDA104625R1	1SDA104635R1
			E6.2H/E9 5000 Ekip Dip LSIG WMP	1SDA104626R1	1SDA104636R1
			E6.2H/E9 5000 Ekip Touch LSI WMP	1SDA104629R1	1SDA104639R1
			E6.2H/E9 5000 Ekip Touch LSIG WMP	1SDA104627R1	1SDA104637R1
			E6.2H/E9 5000 Ekip Hi-Touch LSIG WMP	1SDA104628R1	1SDA104638R1
	6300	75	E6.2H/E9 6300 Ekip Dip LSI WMP	1SDA104630R1	1SDA104640R1
			E6.2H/E9 6300 Ekip Dip LSIG WMP	1SDA104631R1	1SDA104641R1
			E6.2H/E9 6300 Ekip Touch LSI WMP	1SDA104634R1	1SDA104644R1
			E6.2H/E9 6300 Ekip Touch LSIG WMP	1SDA104632R1	1SDA104642R1
			E6.2H/E9 6300 Ekip Hi-Touch LSIG WMP	1SDA104633R1	1SDA104643R1
6.2X	5000	90	E6.2X/E9 5000 Ekip Dip LSI WMP	1SDA104537R1	1SDA104547R1
			E6.2X/E9 5000 Ekip Dip LSIG WMP	1SDA104538R1	1SDA104548R1
			E6.2X/E9 5000 Ekip Touch LSI WMP	1SDA104541R1	1SDA104551R1
			E6.2X/E9 5000 Ekip Touch LSIG WMP	1SDA104539R1	1SDA104549R1
			EC 3V /E0 E000 Elvin Hi Tourb I CIC WIND	100410454001	100410455001

E6.2X/E9 5000 Ekip Hi-Touch LSIG WMP

E6.2X/E9 6300 Ekip Dip LSI WMP

E6.2X/E9 6300 Ekip Dip LSIG WMP

E6.2X/E9 6300 Ekip Touch LSI WMP

E6.2X/E9 6300 Ekip Touch LSIG WMP

E6.2X/E9 6300 Ekip Hi-Touch LSIG WMP

1SDA104540R1

1SDA104542R1

1SDA104543R1

1SDA104546R1

1SDA104544R1

1SDA104545R1

1SDA104550R1

1SDA104552R1

1SDA104553R1

1SDA104556R1

1SDA104554R1

1SDA104555R1



6300

## **Derived versions**

### Sectionalizing truck - CS

Size	lu	Туре	3 poles	4 poles
			Code	Code
E2.2/CS	2000	E2.2/CS 2000 MP	1SDA081778R1	1SDA081779R1
E2.2/CS	2500	E2.2/CS 2500 MP	1SDA074348R1	1SDA074349R1
E4.2/CS	3200	E4.2/CS 3200 MP	1SDA081780R1	1SDA081781R1
E4.2/CS	4000	E4.2/CS 4000 MP	1SDA074350R1	1SDA074351R1
E6.2/CS	6300	E6.2/CS 6300 MP	1SDA074352R1	1SDA074353R1
E6.2/CS/f	6300	E6.2/CS/f 6300 MP	-	1SDA082504R1

### Earthing truck - MT

Size	lu	Туре	3 poles	4 poles
			Code	Code
E2.2/MT	2000	E2.2/MT 2000 MP Earth connection from upper terminals	1SDA081782R1	1SDA081783R1
E2.2/MT	2500	E2.2/MT 2500 MP Earth connection from upper terminals	1SDA074354R1	1SDA074355R1
E4.2/MT	3200	E4.2/MT 3200 MP Earth connection from upper terminals	1SDA081784R1	1SDA081785R1
E4.2/MT	4000	E4.2/MT 4000 MP Earth connection from upper terminals	1SDA074356R1	1SDA074357R1
E6.2/MT	6300	E6.2/MT 6300 MP Earth connection from upper terminals	1SDA074358R1	1SDA074359R1
E2.2/MT	2000	E2.2/MT 2000 MP Earth connection from lower terminals	1SDA081786R1	1SDA081787R1
E2.27MT	2500	E2.2/MT 2500 MP Earth connection from lower terminals	1SDA074360R1	1SDA074361R1
E4.2/MT	3200	E4.2/MT 3200 MP Earth connection from lower terminals	1SDA081788R1	1SDA081789R1
E4.2/MT	4000	E4.2/MT 4000 MP Earth connection from lower terminals	1SDA074362R1	1SDA074363R1
E6.2/MT	6300	E6.2/MT 6300 MP Earth connection from lower terminals	1SDA074364R1	1SDA074365R1
E6.2/MT/f	6300	E6.2/MT/f 6300 MP Earth connection from upper terminals	-	1SDA082505R1
E6.2/MT/f	6300	E6.2/MT/f 6300 MP Earth connection from lower terminals	-	1SDA082506R1

### Earthing switch with making capacity - MTP

Size	lu	Туре	3 poles	4 poles
			Code	Code
E2.2/MTP	2000	E2.2/MTP 2000 MP Earth connection from upper terminals	1SDA081790R1	1SDA081791R1
E2.2/MTP	2500	E2.2/MTP 2500 MP Earth connection from upper terminals	1SDA074366R1	1SDA074367R1
E4.2/MTP	3200	E4.2/MTP 3200 MP Earth connection from upper terminals	1SDA081792R1	1SDA081793R1
E4.2/MTP	4000	E4.2/MTP 4000 MP Earth connection from upper terminals	1SDA074368R1	1SDA074369R1
E6.2/MTP	6300	E6.2/MTP 6300 MP Earth connection from upper terminals	1SDA074370R1	1SDA074371R1
E2.2/MTP	2000	E2.2/MTP 2000 MP Earth connection from lower terminals	1SDA081794R1	1SDA081795R1
E2.2/MTP	2500	E2.2/MTP 2500 MP Earth connection from lower terminals	1SDA074372R1	1SDA074373R1
E4.2/MTP	3200	E4.2/MTP 3200 MP Earth connection from lower terminals	1SDA081796R1	1SDA081797R1
E4.2/MTP	4000	E4.2/MTP 4000 MP Earth connection from lower terminals	1SDA074374R1	1SDA074375R1
E6.2/MTP	6300	E6.2/MTP 6300 MP Earth connection from lower terminals	1SDA074376R1	1SDA074377R1
E6.2/MTP/f	6300	E6.2/MTP/f 6300 MP Earth connection from upper terminals	-	1SDA082507R1
E6.2/MTP/f	6300	E6.2/MTP/f 6300 MP Earth connection from lower terminals	-	1SDA082508R1

#### Accessories for MT and MTP

Size	Туре	Code
E2.2*	Grounding clamp PF E2.2 for MT/MTP	1SDA074378R1
E4.2-E6.2*	Grounding clamp PF E4.2-E6.2 for MT/MTP	1SDA074379R1
E2.2	Grounding clamp retrofitting FP E2.2 for MT/MTP (Front/Side mounting)	1SDA085591R1
E4.2-E6.2	Grounding clamp retrofitting FP E4.2-E6.2 for MT/MTP (Front/Side mounting)	1SDA085592R1

Grounding clamps must be installed in every fixed parts in which a MT/MTP mobile parts is foreseen. Otherwise the standard fixed parts can not accept MT/MTP device. \* Only mounted. For loose supply contact ABB.

### Fixed or Mobile Part with neutral on right side


Size	Туре	Code
E1.2E6.2	Installation with neutral on right side sequence L1,L2,L3,N	1SDA076153R1

## **Fixed parts**







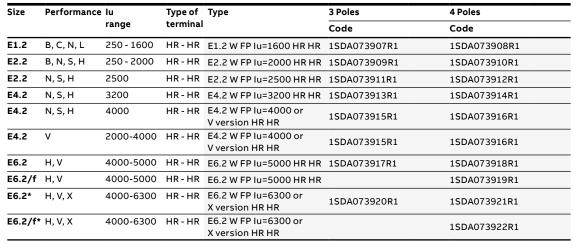

<sup>\*</sup>These types of fixed parts are suitable for all types of E6.2 mobile parts from 4000A to 6300A (all Icu performance level) For Emax 2/E9 phase separators are mandatory

For circuit breakers in fixed version, phase separators are provided with the breakers.



### 0-Arc distance top cover for fixed parts

Size	Туре	Code
E2.2E6.2*	0-arc distance top cover E2.26.2 W FP	1SDA085710R1

 $^{\star}$  Factory fitted only. Not compatible with standard AUP, it is necessary to order the following codes: AUP 5 contacts 400V E2.2...E6.2 - left set 1SDA080373R1 AUP 5 contacts 24V E2.2...E6.2 - left set 1SDA080374R1 AUP 5 suppl. contacts 400V E2.2...E6.2 - right set 1SDA080375R1 AUP 5 suppl. contacts 24V E2.2...E6.2 - right set 1SDA080376R1

NOTE: the standard fixed parts can not accept MT/MTP device. In order to allow the utilization of MT/ MTP mobile parts is mandatory to install the grounding clamps on fixed parts. Accessorizing only in the factory

For circuit breakers in withdrawable version, phase separators have to be ordered as loose part

### **Accessories**

## Electrical accessories



### First and second opening release - YO

Size	Туре	Code
E1.2E6.2	YO E1.2E6.2 24V AC/DC	1SDA073668R1
E1.2E6.2	YO E1.2E6.2 30V AC/DC	1SDA073669R1
E1.2E6.2	YO E1.2E6.2 48V AC/DC	1SDA073670R1
E1.2E6.2	YO E1.2E6.2 60V AC/DC	1SDA073671R1
E1.2E6.2	YO E1.2E6.2 110-120V AC/DC	1SDA073672R1
E1.2E6.2	YO E1.2E6.2 120-127V AC/DC	1SDA073673R1
E1.2E6.2	YO E1.2E6.2 220-240V AC/DC	1SDA073674R1
E1.2E6.2	YO E1.2E6.2 240-250V AC/DC	1SDA073675R1
E1.2E6.2	YO E1.2E6.2 277V AC	1SDA073676R1
E1.2E6.2	YO E1.2E6.2 380-400V AC	1SDA073677R1
E1.2E6.2	YO E1.2E6.2 415-440V AC	1SDA073678R1
E1.2E6.2	YO E1.2E6.2 480-500V AC	1SDA073679R1

### First and second closing release- YC

Size	Туре	Code
E1.2E6.2	YC E1.2E6.2 24V AC/DC	1SDA073681R1
E1.2E6.2	YC E1.2E6.2 30V AC/DC	1SDA073682R1
E1.2E6.2	YC E1.2E6.2 48V AC/DC	1SDA073683R1
E1.2E6.2	YC E1.2E6.2 60V AC/DC	1SDA073684R1
E1.2E6.2	YC E1.2E6.2 110-120V AC/DC	1SDA073685R1
E1.2E6.2	YC E1.2E6.2 120-127V AC/DC	1SDA073686R1
E1.2E6.2	YC E1.2E6.2 220-240V AC/DC	1SDA073687R1
E1.2E6.2	YC E1.2E6.2 240-250V AC/DC	1SDA073688R1
E1.2E6.2	YC E1.2E6.2 277V AC	1SDA073689R1
E1.2E6.2	YC E1.2E6.2 380-400V AC	1SDA073690R1
E1.2E6.2	YC E1.2E6.2 415-440V AC	1SDA073691R1
E1.2E6.2	YC E1.2E6.2 480-500V AC	1SDA073692R1

### YO/YC test unit

Size	Туре	Code
E1.2E6.2a)	YO/YC test unit E1.2E6.2	1SDA082751R1

a) Only as loose part

### Undervoltage release - YU

Size	Туре	Code
E1.2E6.2	YU E1.2E6.2 24V AC/DC	1SDA073694R1
E1.2E6.2	YU E1.2E6.2 30V AC/DC	1SDA073695R1
E1.2E6.2	YU E1.2E6.2 48V AC/DC	1SDA073696R1
E1.2E6.2	YU E1.2E6.2 60V AC/DC	1SDA073697R1
E1.2E6.2	YU E1.2E6.2 110-120V AC/DC	1SDA073698R1
E1.2E6.2	YU E1.2E6.2 120-127V AC/DC	1SDA073699R1
E1.2E6.2	YU E1.2E6.2 220-240V AC/DC	1SDA073700R1
E1.2E6.2	YU E1.2E6.2 240-250V AC/DC	1SDA073701R1
E1.2E6.2	YU E1.2E6.2 277V AC	1SDA073702R1
E1.2E6.2	YU E1.2E6.2 380-400V AC	1SDA073703R1
E1.2E6.2	YU E1.2E6.2 415-440V AC	1SDA073704R1
E1.2E6.2	YU E1.2E6.2 480-500V AC	1SDA073705R1

### Electronic time-delay device for undervoltage release - UVD

Size	Туре	Code
E1.2E6.2	2430V DC	1SDA038316R1
E1.2E6.2	48V AC/DC	1SDA038317R1
E1.2E6.2	60V AC/DC	1SDA038318R1
E1.2E6.2	110127V AC/DC	1SDA038319R1
E1.2E6.2	220250V AC/DC	1SDA038320R1

## **Accessories**

## Electrical accessories



#### Remote Reset - YR

Size	Туре	Code
E1.2	YR 24V DC E1.2	1SDA073744R1
E1.2a)	YR 110V AC/DC E1.2	1SDA073745R1
E1.2a)	YR 220V AC/DC E1.2	1SDA073746R1
E2.2E6.2	YR 24V DC E2.2E6.2	1SDA073747R1
E2.2E6.2a)	YR 110V AC/DC E2.2E6.2	1SDA073748R1
E2.2E6.2a)	YR 220V AC/DC E2.2E6.2	1SDA073749R1

a) when YR is used in DC, the activation of YR must be done with a maximum impulse time of 50ms. The YR cannot be powered permanently.





a)			
b	8	ĥ	
ä		ı	
i	ä	U	
ğ	2	ă	
Ų	1	5	

ä	5		io.	
ì		3		
i)	i	1	r	
	£	3	Ė	
			j.	











Size	Туре	Code
E1.2	M E1.2 24-30V AC/DC+S33 M/2 250V	1SDA073708R1
E1.2	M E1.2 48-60V AC/DC+S33 M/2 250V	1SDA073709R1
E1.2	M E1.2 100-130V AC/DC+S33 M/2 250V	1SDA073710R1
E1.2	M E1.2 220-250V AC/DC+S33 M/2 250V	1SDA073711R1
E1.2	M E1.2 380-415V AC+S33 M/2 250V	1SDA073713R1
E2.2E6.2	M E2.2E6.2 24-30V AC/DC+S33 M/2 400V	1SDA073722R1
E2.2E6.2	M E2.2E6.2 48-60V AC/DC+S33 M/2 400V	1SDA073723R1
E2.2E6.2	M E2.2E6.2 100-130V AC/DC+S33 M/2 400V	1SDA073724R1
E2.2E6.2	M E2.2E6.2 220-250V AC/DC+S33 M/2 400V	1SDA073725R1
E2.2E6.2	M E2.2E6.2 380-415V AC+S33 M/2 400V	1SDA073727R1
E2.2E6.2	M E2.2E6.2 440-480V AC+S33 M/2 400V	1SDA073728R1
E1.2	M E1.2 24-30V AC/DC + S33 M/2 24V DC	1SDA073715R1
E1.2	M E1.2 48-60V AC/DC + S33 M/2 24V DC	1SDA073716R1
E1.2	M E1.2 100-130V AC/DC + S33 M/2 24V DC	1SDA073717R1
E1.2	M E1.2 220-250V AC/DC + S33 M/2 24V DC	1SDA073718R1
E1.2	M E1.2 380-415V AC + S33 M/2 24V DC	1SDA073720R1
E2.2E6.2	M E2.2E6.2 24-30V AC/DC + S33 M/2 24V DC	1SDA073729R1
E2.2E6.2	M E2.2E6.2 48-60V AC/DC + S33 M/2 24V DC	1SDA073730R1
E2.2E6.2	M E2.2E6.2 100-130V AC/DC + S33 M/2 24V DC	1SDA073731R1
E2.2E6.2	M E2.2E6.2 220-250V AC/DC + S33 M/2 24V DC	1SDA073732R1
E2.2E6.2	M E2.2E6.2 380-415V AC + S33 M/2 24V DC	1SDA073734R1
E2.2E6.2	M E2.2E6.2 440-480V AC + S33 M/2 24V DC	1SDA073735R1

### Current sensor for neutral conductor outside the circuit-breaker

Size	Туре	Code
E1.2 - E2.2b)	Ext CS N E1.2 E2.2 2000A	1SDA073736R1
E2.2 <sup>b)</sup>	Ext CS N E2.2 2500A	1SDA073737R1
E4.2 <sup>b)</sup>	Ext CS N E4.2 3200A	1SDA073738R1
E4.2 - E6.2b)	Ext CS N E4.2 4000A E6.2 50%	1SDA073739R1
E6.2 <sup>b)</sup>	Ext CS N E6.2	1SDA073740R1

b) Only as loose part

### Homopolar toroid for the earthing conductor of main power supply

<u> </u>		• • •
Size	Туре	Code
E1.2E6.2c)	Homopolar toroid E1.2 E6.2 100A	1SDA073743R1
E1.2E6.2c)	Homopolar toroid E1.2 E6.2 250A	1SDA076248R1
E1.2E6.2c)	Homopolar toroid E1.2 E6.2 400A	1SDA076249R1
E1.2E6.2c)	Homopolar toroid E1.2 E6.2 800A	1SDA076250R1

c) Only as loose part

### Toroid for differential protection

Size	Туре	Code
E1.2 - E2.2 3p <sup>d)</sup>	Toroid RC E1.2, E2.2 3p	1SDA073741R1
E2.2 4p - E4.2 <sup>d)</sup>	Toroid RC E2.2 4p, E4.2 3p	1SDA073742R1

d) Only as loose part

Code

1SDA073750R1

1SDA073751R1

1SDA073752R1

1SDA073753R1

1SDA073754R1

1SDA073755R1

1SDA073756R1

1SDA073757R1

1SDA075973R1

1SDA073758R1

1SDA073759R1

1SDA073760R1

1SDA073761R1

1SDA073846R1

1SDA073847R1



#### Open/closed auxiliary contacts - AUX

Type

AUX 4Q 400V E1.2

AUX 2Q 400V + 2Q 24V E1.2

AUX 2Q 400V + 2Q 24V E2.2...E6.2

AUX 3Q 400V AC + 3Q 24V DC E2.2...E6.2

AUX 15Q 400V (for fixed or withdrawable with signaling in

AUX 15Q 24V (for fixed or withdrawable with signaling in

AUX15Q 400V (for withdrawable with signaling in racked in/

AUX15Q 24V (for withdrawable with signaling in racked in/test

AUX 4Q 400V E2.2...E6.2

AUX 6Q 400V E2.2...E6.2

AUX 6Q 24V E2.2...E6.2

AUX 15Q 400V E1.2

AUX 15Q 24V E1.2

racked in)

racked in)

isolated)

test isolated)

AUX 4Q 24V E2.2...E6.2

AUX 4Q 24V E1.2



Size

E1.2b)

E1.2

E1.2

E2.2...E6.2b)

E2.2...E6.2

E2.2...E6.2

E2.2...E6.2

E2.2...E6.2

E2.2...E6.2 E1.2a)d)

E2.2...E6.2a)

E2.2...E6.2a)

E2.2...E6.2a)c)

E2.2...E6.2a) c)

E1.2a)d)












Plate for fixed - wall mounted 1SDA079782R1 Plate for withdrawable 1SDA079784R1

b) Standard supply with automatic circuit-breakers; c) also compatible with fixed version;

d) For E1.2 withdrawable, the AUX 15Q works only in racked-in position





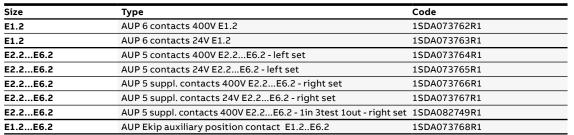





Size	Туре	Code
E1.2	RTC 250V E1.2	1SDA073770R1
E1.2	RTC 24V E1.2	1SDA073771R1
E1.2	RTC Ekip 24V E1.2	1SDA073772R1
E2.2E6.2	RTC 250V E2.2E6.2	1SDA073773R1
E2.2E6.2	RTC 24V E2.2E6.2	1SDA073774R1
E2.2E6.2	RTC Ekip 24V E2.2E6.2	1SDA073775R1

#### Contact signalling tripping of Ekip protection trip unit - S51



Size	Туре	Code
E1.2	S51 250V E1.2 a)	1SDA073776R1
E1.2	S51 24V E1.2	1SDA073777R1
E2.2E6.2	S51 250V E2.2E6.2 a)	1SDA073778R1
E2.2E6.2	S51 24V E2.2E6.2	1SDA073779R1
E2.2E6.2	S51/2 250V	1SDA085699R1
E2.2E6.2	S51/2 24V	1SDA085700R1

a) Standard supply with automatic circuit-breakers.

#### Terminals for auxiliary connection

Size	Туре	Code
E1.2E6.2	Terminals 10 pcs	1SDA073906R1

# Mechanical accessories



#### Mechanical operation counter - MOC

Size	Туре	Code
E1.2a)	MOC Mechanical operation counter	1SDA073780R1
E2.2E6.2	MOC Mechanical operation counter	1SDA073781R1

a) only available with Motor, for installation without Motor the support 1SDA105237R1 is required





## Key lock in open position - KLC

Size	Туре	Code
E1.2	KLC-D Key lock open E1.2	1SDA073782R1
E1.2	KLC-S Key lock open N.20005 E1.2	1SDA073783R1
E1.2	KLC-S Key lock open N.20006 E1.2	1SDA073784R1
E1.2	KLC-S Key lock open N.20007 E1.2	1SDA073785R1
E1.2	KLC-S Key lock open N.20008 E1.2	1SDA073786R1
E1.2	KLC-S Key lock open N.20009 E1.2	1SDA073787R1
E1.2 <sup>c)</sup>	KLC-A Castell key lock open E1.2	1SDA073788R1
E1.2 <sup>c)</sup>	KLC-A Kirk key lock open E1.2	1SDA073789R1
E1.2 <sup>c) e)</sup>	KLC-A STI key lock open E1.2	1SDA073790R1
E1.2 <sup>c) d)</sup>	KLC-A Ronis-STI lock Open E1.2	1SDA085733R1
E2.2E6.2	KLC-D Key lock open E2.2E6.2	1SDA073791R1
E2.2E6.2	KLC-S key lock open N.20005 E2.2E6.2	1SDA073792R1
E2.2E6.2	KLC-S key lock open N.20006 E2.2E6.2	1SDA073793R1
E2.2E6.2	KLC-S key lock open N.20007 E2.2E6.2	1SDA073794R1
E2.2E6.2	KLC-S key lock open N.20008 E2.2E6.2	1SDA073795R1
E2.2E6.2	KLC-S key lock open N.20009 E2.2E6.2	1SDA073796R1
E2.2E6.2 <sup>b) c)</sup>	KLC-A Castell key lock open E2.2E6.2	1SDA073797R1
E2.2E6.2 <sup>c)</sup>	KLC-A Kirk key lock open E2.2E6.2	1SDA073798R1
E2.2E6.2 <sup>c) e)</sup>	KLC-A STI key lock open E2.2E6.2	1SDA073799R1
E2.2E6.2 <sup>c) d)</sup>	KLC-A Ronis-STI lock open E2.2E6.2	1SDA085734R1

b) you need to order also the cover. Please select the suitable one at pag. 298; c) arrangement only;

d) compatible models: Ronis 1104B - STI ABA90DEL5000 - STI HBA90DPS5000; e) compatible models: STI ABA90DEL5000 - STI HBA90DPS5000



## Padlocks in open position - PLC

Size	Туре	Code
E1.2	PLC E1.2 Padlocks in open position D=4mm	1SDA073800R1
E1.2	PLC E1.2 Padlocks in open position D=7mm	1SDA073801R1
E1.2	PLC E1.2 Padlocks in open position D=8mm	1SDA073802R1
E2.2E6.2	PLC E2.2E6.2 Padlocks in open position D=4mm	1SDA073803R1
E2.2E6.2	PLC E2.2E6.2 Padlocks in open position D=7mm	1SDA073804R1
E2.2E6.2	PLC E2.2E6.2 Padlocks in open position D=8mm	1SDA073805R1

## Floor fixing plate - F

Size	Туре	Code
E1.2	Floor fixing plate for fixed unit	1SDA076020R1



## Key lock in racked-in / test / racked-out position- KLP

Size	Туре	Code
E1.2	KLP-D Racked in/out E1.2 1st key	1SDA073822R1
E1.2	KLP-S Racked in/out N.20005 E1.2 1st key	1SDA073823R1
E1.2	KLP-S Racked in/out N.20006 E1.2 1st key	1SDA073824R1
E1.2	KLP-S Racked in/out N.20007 E1.2 1st key	1SDA073825R1
E1.2	KLP-S Racked in/out N.20008 E1.2 1st key	1SDA073826R1
E1.2	KLP-S Racked in/out N.20009 E1.2 1st key	1SDA073827R1
E1.2	KLP-D Racked in/out E1.2 2nd key	1SDA073828R1
E1.2	KLP-S Racked in/out N.20005 E1.2 2nd key	1SDA073829R1
E1.2	KLP-S Racked in/out N.20006 E1.2 2nd key	1SDA073830R1
E1.2	KLP-S Racked in/out N.20007 E1.2 2nd key	1SDA073831R1
E1.2	KLP-S Racked in/out N.20008 E1.2 2nd key	1SDA073832R1
E1.2	KLP-S Racked in/out N.20009 E1.2 2nd key	1SDA073833R1
E1.2 <sup>d)</sup>	KLP-A Racked in/out STI Kirk E1.2 1st key	1SDA073834R1
E1.2 <sup>d)</sup>	KLP-A Racked in/out STI Kirk E1.2 2nd key	1SDA073835R1
E1.2 <sup>b)</sup>	KLP-A Racked in/out Castell E1.2 1st key	1SDA073836R1
E1.2 <sup>b)</sup>	KLP-A Racked in/out Castell E1.2 2nd key	1SDA073837R1
E1.2 <sup>b) c)</sup>	KLP-A Racked in/out Ronis-STI E1.2 1st key	1SDA085737R1
E1.2 <sup>b) c)</sup>	KLP-A Racked in/out Ronis-STI E1.2 2nd key	1SDA085738R1
E2.2E6.2	KLP-D Racked in/out E2.2E6.2 1st key	1SDA073806R1
E2.2E6.2	KLP-S Racked in/out N.20005 E2.2E6.2 1st key	1SDA073807R1
E2.2E6.2	KLP-S Racked in/out N.20006 E2.2E6.2 1st key	1SDA073808R1
E2.2E6.2	KLP-S Racked in/out N.20007 E2.2E6.2 1st key	1SDA073809R1
E2.2E6.2	KLP-S Racked in/out N.20008 E2.2E6.2 1st key	1SDA073810R1
E2.2E6.2	KLP-S Racked in/out N.20009 E2.2E6.2 1st key	1SDA073811R1
E2.2E6.2	KLP-D Racked in/out E2.2E6.2 2nd key	1SDA073812R1
E2.2E6.2	KLP-S Racked in/out N.20005 E2.2E6.2 2nd key	1SDA073813R1
E2.2E6.2	KLP-S Racked in/out N.20006 E2.2E6.2 2nd key	1SDA073814R1
E2.2E6.2	KLP-S Racked in/out N.20007 E2.2E6.2 2nd key	1SDA073815R1
E2.2E6.2	KLP-S Racked in/out N.20008 E2.2E6.2 2nd key	1SDA073816R1
E2.2E6.2	KLP-S Racked in/out N.20009 E2.2E6.2 2nd key	1SDA073817R1
E2.2E6.2 <sup>b) d)</sup>	KLP-A Racked in/out STI Kirk E2.2E6.2 1st key	1SDA073818R1
E2.2E6.2 <sup>b) d)</sup>	KLP-A Racked in/out STI Kirk E2.2E6.2 2nd key	1SDA073819R1
E2.2E6.2a) b)	KLP-A Racked in/out Castell E2.2E6.2 1st key	1SDA073820R1
E2.2E6.2a) b)	KLP-A Racked in/out Castell E2.2E6.2 2nd key	1SDA073821R1
E2.2E6.2 <sup>b) c)</sup>	KLP-A Racked in/out Ronis-STI E2.2/E6.2 1st key	1SDA085735R1
E2.2E6.2 <sup>b) c)</sup>	KLP-A Racked in/out Ronis-STI E2.2/E6.2 2nd key	1SDA085736R1

When the PLP is already present, you have to order the KLP 2nd key and not the KLP 1st key

- a) you need to order also the cover. Please select the suitable one at pag. 298; b) arrangement only; c) compatible models: Ronis 1104B STI ABA90DEL5000 STI HBA90DPS5000;
- d) compatible models: STI ABA90DEL5000 STI HBA90DPS5000 KIRK KCAM00010



# Accessory for supplementary lock in racked-out position

Size	Туре	Code
E1.2	Suppl. locks in racked-out E1.2	1SDA073838R1
E2.2E6.2	Suppl. locks in racked-out E2.2E6.2	1SDA073839R1

# Padlock in racked-in / test / racked-out position - PLP

Size	Туре	Code
E1.2	PLP Bl. padlocks Racked in/out D=4/6/8mm E1.2	1SDA073840R1
E2.2E6.2	PLP Bl. padlocks Racked in/out D=4/6/8mm E2.2E6.2	1SDA073841R1

# Mechanical accessories



### Lock for racking in / racking out the mobile part when the door is open - DLR

Size	Туре	Code
E2.2E6.2a)	DLR E2.2E6.2	1SDA073845R1

a) Only as loose part



### Lock to prevent door opening when circuit-breaker is in racked-in / test position - DLP

Size	Туре	Code
E2.2E6.2*	DLP E2.2E6.2	1SDA073849R1

a) Only as loose part

# Lock to prevent door opening when circuit-breaker is in closed position $\,$ - DLC $\,$

Size	Туре	Code
E1.2	DLC Interlock cable door for fixed to wall E1.2	1SDA081032R1
E1.2	DLC Interlock cable door for fixed to floor E1.2	1SDA081033R1
E1.2	DLC Interlock cable door for fixed part withdrawable E1.2	1SDA081034R1
E1.2	DLC Interlock direct door for fixed to wall E1.2	1SDA079779R1
E1.2	DLC Interlock direct door for fixed to floor E1.2	1SDA079780R1
E1.2	DLC Interlock direct door for fixed part withdrawable E1.2	1SDA079781R1
E2.2E6.2b)	DLC Interlock cable door E2.2E6.2	1SDA073852R1
E2.2E6.2b)	DLC Interlock direct door E2.2E6.2	1SDA073853R1

b) To be ordered with lever for interlock [group 2] and support for interlock [1SDA073895R1]



## Protection device for opening and closing pushbuttons - PBC

Size	Туре	Code
E1.2	PBC Prot. Pushbuttons AP/CH E1.2	1SDA073854R1
E1.2	PBC Prot. Pushbuttons AP/CH D=4mm E1.2	1SDA073855R1
E1.2	PBC Prot. Pushbuttons AP/CH D=7mm E1.2	1SDA073856R1
E1.2	PBC Prot. Pushbuttons AP/CH D=8mm E1.2	1SDA073857R1
E2.2E6.2	PBC Prot. Pushbuttons AP/CH E2.2E6.2	1SDA073858R1
E2.2E6.2	PBC Prot. Pushbuttons AP/CH D=4mm E2.2E6.2	1SDA073859R1
E2.2E6.2	PBC Prot. Pushbuttons AP/CH D=7mm E2.2E6.2	1SDA073860R1
E2.2E6.2	PBC Prot. Pushbuttons AP/CH D=8mm E2.2E6.2	1SDA073861R1



# Circuit-breaker flange

Size	Туре	Code
E1.2	IP30 Flange E1.2 F	1SDA073862R1
E1.2	IP30 Flange E1.2 W	1SDA073863R1
E2.2E6.2	IP30 Flange E2.2E6.2 F	1SDA073864R1
E2.2E6.2	IP30 Flange E2.2E6.2 W	1SDA073865R1
E1.2a)	IP54 Flange different keys E1.2	1SDA073866R1
E2.2E6.2a)	IP54 Flange different keys E2.2E6.2	1SDA073867R1
E1.2a)	IP54 Flange key No. 20005 E1.2	1SDA073868R1
E2.2E6.2a)	IP54 Flange key No. 20005 E2.2E6.2	1SDA073869R1
E2.2E6.2	Sealable trip unit cover	1SDA073870R1

a) Only as loose part


# **Accessories**

# Mechanical interlock



### High or low terminal covers- HTC/LTC

Size	Туре	3 poles	4 poles
		Code	Code
E1.2	HTC high terminal covers E1.2 2pcs	1SDA073871R1	1SDA073872R1
E1.2	LTC low terminal covers E1.2 F 2pcs	1SDA073873R1	1SDA073874R1

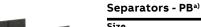

Size	Туре	Code
E1.2	PB Separators H=100mm 4pz E1.2 F 3P	1SDA073877R1
E1.2	PB Separators H=100mm 6pz E1.2 F 4P	1SDA073878R1
E1.2	PB Separators H=200mm 4pz E1.2 F 3P	1SDA073879R1
E1.2	PB Separators H=200mm 6pz E1.2 F 4P	1SDA073880R1
E1.2	PB Separators 2 pz E1.2 W FP 3P	1SDA076164R1
E1.2	PB Separators 3 pz E1.2 W FP 4P	1SDA076165R1
E2.2E6.2	PB Separators 2 pz E2.2E6.2 F 3P	1SDA076166R1
E2.2E6.2	PB Separators 3 pz E2.2E6.2 F 4P	1SDA076167R1
E2.2E6.2	PB Separators 2 pz E2.2E6.2 W FP 3P	1SDA076168R1
E2.2E6.2	PB Separators 3 pz E2.2E6.2 W FP 4P	1SDA076169R1

a) Only as loose part

### Cables for mechanical interlock [Group 1]

Size	Туре	Code
E1.2E6.2	Type A horizontal	1SDA073881R1
E2.2E6.2	Type B,C,D horizontal	1SDA073882R1
E1.2E6.2	Type A vertical	1SDA073885R1
E2.2E6.2	Type B,C,D vertical	1SDA073886R1

Order on etype of cable for each interlock. The cable must be ordered on the fixed circuit-breaker or on the fixed part of withdrawable circuit-breaker.

### Lever for mechanical interlock of fixed circuit-breaker or mobile part [Group 2]

Size	Туре	3 Poles	4 Poles
		Code	Code
E2.2	Lever for mechanical interlock	1SDA073889R1	1SDA073889R1
E4.2	Lever for mechanical interlock	1SDA073890R1	1SDA073890R1
E6.2	Lever for mechanical interlock	1SDA073891R1	1SDA073892R1

The lever for mechanical interlock is not required for E1.2

### Support for mechanical interlock of fixed circuit-breaker [Group 3]

Size	Туре	Code
E1.2	Type A - floor mounted	1SDA073893R1
E1.2	Type A - wall mounted	1SDA073894R1
E2.2 E6.2	Type A / B / D	1SDA073895R1
E2.2 E6.2	Type C	1SDA073897R1

## Support for mechanical interlock of fixed part [Group 4]

Size	Туре	Code
E1.2	Type A	1SDA073896R1
E2.2 E6.2	Type A / B / D	1SDA073895R1
E2.2 E6.2	Type C	1SDA073897R1





### Automatic transfer switch

Size	Туре	Code
E1.2E6.2	ATS021	1SDA065523R1
E1.2E6.2	ATS022	1SDA065524R1

# Ekip modules











## Ekip electrical trip units - loose supply

Size	Туре	Code
E1.2E6.2	Ekip Dip LI	1SDA074194R1
E1.2E6.2	Ekip Dip LSI	1SDA074195R1
E1.2E6.2	Ekip Dip LSIG	1SDA074196R1
E1.2E6.2	Ekip Touch LI	1SDA074197R1
E1.2E6.2	Ekip Touch LSI	1SDA074198R1
E1.2E6.2	Ekip Touch LSIG	1SDA074199R1
E1.2E6.2a)	Ekip G Touch LSIG	1SDA074200R1
E1.2E6.2a)	Ekip Hi-Touch LSI	1SDA074201R1
E1.2E6.2a)	Ekip Hi-Touch LSIG	1SDA074202R1
E1.2E6.2a)	Ekip G Hi-Touch LSIG	1SDA074203R1
E1.2E6.2a)	Ekip LCD LI	1SDA074204R1
E1.2E6.2a)	Ekip LCD LSI	1SDA074205R1
E1.2E6.2a)	Ekip LCD LSIG	1SDA074206R1
E1.2E6.2a)	Ekip G LCD LSIG	1SDA074207R1
E1.2E6.2a)	Ekip Hi-LCD LSI	1SDA074208R1
E1.2E6.2a)	Ekip Hi-LCD LSIG	1SDA074209R1
E1.2E6.2a)	Ekip G Hi-LCD LSIG	1SDA074210R1
E1.2E6.2	Battery for Ekip trip units	1SDA074193R1

a) provided without Ekip Measuring/Ekip Measuring Pro.

## Options for Ekip electrical trip units

Size	Туре	Code
E1.2E6.2	Ekip LCD Installed	1SDA074211R1
E1.2E6.2	Upper internal installed voltage outlets	1SDA074216R1
E1.2E6.2	External installed voltage outlets	1SDA074217R1
E1.2E6.2	Arrangement for cables with lower internal voltage outlets	1SDA074213R1
E1.2E6.2	Arrangement for cables with upper internal voltage outlets	1SDA074214R1
E1.2E6.2	Arrangement for cables with external voltage outlets	1SDA074215R1



Size	Туре	Code
E1.2E6.2	Ekip Supply 110-240V AC/DC	1SDA074172R1
F1 2 F6 2	Fkin Supply 24-48V DC	1SDA074173P1

### **Connectivity modules**

-		
Į,		
	ı	
	II.	1



Size	Туре	Code		
E1.2E6.2	Ekip Com Modbus RS-485	1SDA074150R1		
E1.2E6.2	Ekip Com Modbus TCP	1SDA074151R1		
E1.2E6.2	Ekip Com Profibus	1SDA074152R1		
E1.2E6.2	Ekip Com Profinet	1SDA074153R1		
E1.2E6.2	Ekip Com DeviceNet™	1SDA074154R1		
E1.2E6.2	Ekip Com EtherNet/IP™	1SDA074155R1		
E1.2E6.2	Ekip Com IEC61850	1SDA074156R1		
E1.2E6.2	Ekip Com Hub	1SDA082894R1		
E1.2E6.2	Ekip Com R Modbus RS-485	1SDA074157R1		
E1.2E6.2	Ekip Com R Modbus TCP	1SDA074158R1		
E1.2E6.2	Ekip Com R Profibus	1SDA074159R1		
E1.2E6.2	Ekip Com R Profinet 1SDA074160R1			
E1.2E6.2	Ekip Com R DeviceNet™	1SDA074161R1		
E1.2E6.2	Ekip Com R EtherNet/IP™	1SDA074162R1		
E1.2E6.2	Ekip Com R IEC61850	1SDA076170R1		
E1.2E6.2	Ekip Link	1SDA074163R1		
E1.2E6.2	Ekip Bluetooth	1SDA074164R1		
E1.2E6.2	Ekip Com GPRS-M	1SDA074165R1		
E1.2E6.2	Ekip Com Actuator	1SDA074166R1		





## Signalling modules

Size	Туре	Code
E1.2E6.2	Ekip Signalling 2K-1	1SDA074167R1
E1.2E6.2	Ekip Signalling 2K-2	1SDA074168R1
E1.2E6.2	Ekip Signalling 2K-3	1SDA074169R1
E2.2E6.2	Ekip Signalling 4K	1SDA074170R1
E1.2E6.2a)	Ekip Signalling 10K 1SDA074171R1	
E1.2E6.2b)	Ekip Signalling 3T-1 AI - Temp PT1000	1SDA085693R1
E1.2E6.2b)	Ekip Signalling 3T-2 Al - Temp PT1000 1SDA085694R1	
E1.2E6.2	Ekip Signalling ModBus TCP 1SDA082485R1	

a) Only as loose part; b) External probe PT1000 not supplied



## **Measuring and Measuring Pro modules**

Size	Туре	Code
E1.2	Ekip Measuring	1SDA074184R1
E1.2	Ekip Measuring Pro	1SDA074185R1
E2.2	Ekip Measuring	1SDA074186R1
E2.2	Ekip Measuring Pro	1SDA074187R1
E4.2	Ekip Measuring	1SDA074188R1
E4.2	Ekip Measuring Pro	1SDA074189R1
E6.2	Ekip Measuring	1SDA074190R1
E6.2	Ekip Measuring Pro	1SDA074191R1
E1.2c)	Voltage socket for neutral on right side L1 L2 L3 N - E1.2	1SDA076244R1
E2.2c)	Voltage socket for neutral on right side L1 L2 L3 N - E2.2	1SDA076245R1
E4.2c)	Voltage socket for neutral on right side L1 L2 L3 N - E4.2	1SDA076246R1
E6.2c)	Voltage socket for neutral on right side L1 L2 L3 N - E6.2	1SDA076247R1

c) use only with circuit breakers with neutral on right side L1 L2 L3 N  $\,$ 



# Synchrocheck modules

Size	Туре	Code
E1.2E6.2	Ekip Synchrocheck	1SDA074183R1

## External Probe for signalling 3T module

Size Type Code		Code
E1.2E6.2d)	External Probe PT1000 3mt	1SDA085695R1

d) use only with Ekip Signalling 3T Module



# Displaying and supervision systems

Size	Туре	Code
E1.2E6.2	Ekip T&P - Programming and Test unit	1SDA066989R1
E1.2E6.2	Ekip TT - Trip Test unit	1SDA066988R1
E1.2E6.2	Ekip Programming	1SDA076154R1
E1.2E6.2e)	Ekip Multimeter Display on front of switchgear	1SDA074192R1
E1.2E6.2	Ekip Control Panel for 10 circuit-breakers	1SDA074311R1
E1.2E6.2	Ekip control panel for 30 circuit-breakers	1SDA074312R1
E1.2E6.2	Ekip View Software for 30 circuit-breakers	1SDA074298R1
E1.2E6.2	Ekip View software for 60 circuit-breakers	1SDA074299R1
E1.2E6.2	Ekip View software for unlimited circuit-breakers	1SDA074300R1

e) Only as loose part

# Ekip modules



## **Advanced functionalities**

Size	Туре	Code
E1.2E6.2	IPS - Interface Protection	1SDA082919R1
E1.2E6.2	Synchro reclosing	1SDA082923R1
E1.2E6.2	Load shedding - adaptive	1SDA082921R1
E1.2E6.2	Load shedding - predictive 1SDA082922R1	
E1.2E6.2	ATS Licence main-tie-main closed 1SDA082886R1	
E1.2E6.2	ATS Licence main-main closed 1SDA082888R1	
E1.2E6.2	ATS Licence main-tie-main open 1SDA082887R1	
E1.2E6.2	ATS Licence main-main open 1SDA082889R1	
E1.2E6.2	Ekip Power Controller	1SDA074212R1



# Rating plug for Ekip trip units

Size	Туре	Code	Code	
E1.2E2.2	Rating Plug 100A	(loose supply) 1SDA074218R1	(installed) 1SDA074258R1	
E1.2E2.2	Rating Plug 200A	1SDA074219R1	1SDA074259R1	
E1.2E2.2	Rating Plug 250A	1SDA074220R1	1SDA074260R1	
E1.2E6.2	Rating Plug 400A	1SDA074221R1	1SDA074260R1	
E1.2E6.2	Rating Plug 630A	1SDA074222R1	1SDA074261R1	
E1.2E6.2	Rating Plug 800A	1SDA074222R1	1SDA074263R1	
E1.2E6.2		1SDA074223R1 1SDA074224R1	1SDA074263R1 1SDA074264R1	
E1.2E6.2	Rating Plug 1000A			
E1.2E6.2	Rating Plug 1250A	1SDA074225R1	1SDA074265R1	
	Rating Plug 1600A	1SDA074226R1	1SDA074266R1	
E2.2E6.2	Rating Plug 2000A	1SDA074227R1	1SDA074267R1	
E2.2E6.2	Rating Plug 2500A	1SDA074228R1	1SDA074268R1	
E4.2E6.2	Rating Plug 3200A	1SDA074229R1	1SDA074269R1	
E4.2E6.2	Rating Plug 4000A	1SDA074230R1	1SDA074270R1	
E6.2	Rating Plug 5000A	1SDA074231R1	1SDA074271R1	
E6.2	Rating Plug 6300A	1SDA074232R1	-	
E1.2E2.2 (a)	Rating Plug 100A L OFF	1SDA074233R1	1SDA074273R1	
E1.2E2.2 (a)	Rating Plug 200A L OFF	1SDA074234R1	1SDA074274R1	
E1.2E2.2 (a)	Rating Plug 250A L OFF	1SDA074235R1	1SDA074275R1	
E1.2E6.2 (a)	Rating Plug 400A L OFF	1SDA074236R1	1SDA074276R1	
E1.2E6.2 (a)	Rating Plug 630A L OFF	1SDA074237R1	1SDA074277R1	
E1.2E6.2 (a)	Rating Plug 800A L OFF	1SDA074238R1	1SDA074278R1	
E1.2E6.2 (a)	Rating Plug 1000A L OFF	1SDA074239R1	1SDA074279R1	
E1.2E6.2 (a)	Rating Plug 1250A L OFF	1SDA074240R1	1SDA074280R1	
E1.2E6.2 (a)	Rating Plug 1600A LOFF	1SDA074241R1	1SDA074281R1	
E2.2E6.2 (a)	Rating Plug 2000A L OFF	1SDA074242R1	1SDA074282R1	
E2.2E6.2 (a)	Rating Plug 2500A L OFF	1SDA074243R1	1SDA074283R1	
E4.2E6.2 (a)	Rating Plug 3200A L OFF	1SDA074244R1	1SDA074284R1	
E4.2E6.2 (a)	Rating Plug 4000A L OFF	1SDA074245R1	1SDA074285R1	
E6.2 (a)	Rating Plug 5000A L OFF	1SDA074246R1	1SDA074286R1	
E6.2 (a)	Rating Plug 6300A L OFF	1SDA074247R1	1SDA074287R1	
E1.2E2.2	Rating Plug RC 100A	1SDA074248R1	1SDA074288R1	
E1.2E2.2	Rating Plug RC 200A	1SDA074249R1	1SDA074289R1	
E1.2E2.2	Rating Plug RC 250A	1SDA074250R1	1SDA074290R1	
E1.2E6.2	Rating Plug RC 400A	1SDA074251R1	1SDA074291R1	
E1.2E6.2	Rating Plug RC 630A	1SDA074252R1	1SDA074292R1	
E1.2E6.2	Rating Plug RC 800A	1SDA074253R1	1SDA074293R1	
E1.2E6.2	Rating Plug RC 1250A	1SDA074254R1	1SDA074294R1	
E2.2E6.2	Rating Plug RC 2000A	1SDA074255R1	1SDA074295R1	
E4.2E6.2	Rating Plug RC 3200A	1SDA074256R1	1SDA074296R1	
E4.2E6.2	Rating Plug RC 4000A	1SDA074257R1	1SDA074297R1	

a) Available only with Ekip Touch and Ekip Hi-Touch

# **Accessories**

# **Terminals**




Rear orientable terminal - HR VR



Horizontal rear spread terminal - SHR




Vertical rear spread terminal - SVR

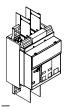


Extended front terminal - EF



Front terminal - F

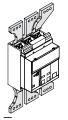

Front spread terminal - ES

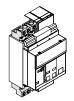

Terminal for cable FcCuAl 4x240mm² - Fc CuAl

### Kit for terminals - installed for fixed circuit-breaker

Size	Version	lu max	Туре	3 Poles	4 Poles
				Code	Code
E1.2a)	F	1600	Kit EF Upper	1SDA073963R1	1SDA073964R1
E1.2a)	F	1600	Kit EF Lower	1SDA073965R1	1SDA073966R1
E1.2ª)	F	1600	Kit ES Upper	1SDA073975R1	1SDA073976R1
E1.2ª)	F	1600	Kit ES Lower	1SDA073977R1	1SDA073978R1
E1.2ª)	F	1600	Kit HR Upper	1SDA073981R1	1SDA073982R1
E1.2a)	F	1600	Kit HR Lower	1SDA073983R1	1SDA073984R1
E1.2a)	F	1600	Kit VR Upper	1SDA073985R1	1SDA073986R1
E1.2a)	F	1600	Kit VR Lower	1SDA073987R1	1SDA073988R1
E1.2a)	F	1600	Kit FC CuAl 4x240 mm² Upper	1SDA073997R1	1SDA073998R1
E1.2a)	F	1600	Kit FC CuAl 4x240 mm² Lower	1SDA073999R1	1SDA074000R1
E2.2	F	2000	Kit VR Upper	1SDA074003R1	1SDA074004R1
E2.2	F	2000	Kit VR Lower	1SDA074005R1	1SDA074006R1
E2.2	F	2500	Kit VR Upper	1SDA074009R1	1SDA074010R1
E2.2	F	2500	Kit VR Lower	1SDA074011R1	1SDA074012R1
E2.2	F	2000	Kit SHR Upper	1SDA074045R1	1SDA074046R1
E2.2	F	2000	Kit SHR Lower	1SDA074047R1	1SDA074048R1
E2.2	F	2500	Kit SHR Upper	1SDA074051R1	1SDA074052R1
E2.2	F	2500	Kit SHR Lower	1SDA074053R1	1SDA074054R1
E2.2	F	2000	Kit SVR Upper	1SDA074057R1	1SDA074058R1
E2.2	F	2000	Kit SVR Lower	1SDA074059R1	1SDA074060R1
E2.2	F	2500	Kit SVR Upper	1SDA074063R1	1SDA074064R1
E2.2	F	2500	Kit SVR Lower	1SDA074065R1	1SDA074066R1
E2.2a)	F	2500	Kit F Upper	1SDA074118R1	1SDA074119R1
E2.2a)	F	2500	Kit F Lower	1SDA074120R1	1SDA074121R1
E4.2	F	3200	Kit VR Upper	1SDA074015R1	1SDA074016R1
E4.2	F	3200	Kit VR Lower	1SDA074017R1	1SDA074018R1
E4.2	F	3200	Kit SHR Upper	1SDA082816R1	1SDA082817R1
E4.2	F	3200	Kit SHR Lower	1SDA082818R1	1SDA082819R1
E4.2	F	3200	Kit SVR Upper	1SDA082828R1	1SDA082829R1
E4.2	F	3200	Kit SVR Lower	1SDA082830R1	1SDA082831R1
E4.2	F	4000	Kit VR Upper	1SDA074021R1	1SDA074022R1
E4.2	F	4000	Kit VR Lower	1SDA074023R1	1SDA074024R1
E4.2ª)	F	4000	Kit F Upper	1SDA074126R1	1SDA074127R1
E4.2ª)	F	4000	Kit F Lower	1SDA074128R1	1SDA074129R1
E4.2	F	4000	Kit SHR Upper	1SDA082822R1	1SDA082823R1
E4.2	F	4000	Kit SHR Lower	1SDA082824R1	1SDA082825R1
E4.2	F	4000	Kit SVR Upper	1SDA082834R1	1SDA082835R1
E4.2	F	4000	Kit SVR Lower	1SDA082836R1	1SDA082837R1
E6.2	F	5000	Kit VR Upper	1SDA074027R1	1SDA074028R1
E6.2	F	5000	Kit VR Lower	1SDA074030R1	1SDA074031R1
E6.2/f	F	5000	Kit VR Upper		1SDA074029R1
E6.2/f	F	5000	Kit VR Lower		1SDA074032R1
E6.2a)	F	6300	Kit F Upper	1SDA074134R1	1SDA074135R1
E6.2a)	F	6300	Kit F Lower	1SDA074137R1	1SDA074138R1
E6.2/fa)	F	6300	Kit F Upper		1SDA074136R1
E6.2/fa)	F.	6300	Kit F Lower		1SDA074139R1
E6.2	F.	6300	Kit VR Upper	1SDA074036R1	1SDA074037R1
E6.2	F	6300	Kit VR Lower	1SDA074039R1	1SDA074040R1
E6.2/f	F	6300	Kit VR Upper		1SDA074038R1
	•		The oppos		100/101/1000111

a) terminals supplied, but not physically installed

# **Terminals**



Rear adjustable terminal - HR VR



Horizontal rear terminal - SHR



Vertical rear spread terminal - SVR



Front terminal - F



Extended front terminal - EF



Front spread terminal - ES



Terminal for cable FcCuAl 4x240mm² - Fc CuAl

### Kit for terminals - installed for fixed part of withdrawable circuit-breaker

Size	Version	lu max	Туре	3 Poles	4 Poles
				Code	Code
E1.2a)	W	1600	Kit EF Upper	1SDA073939R1	1SDA073940R1
E1.2ª)	W	1600	Kit EF Lower	1SDA073941R1	1SDA073942R1
E1.2ª)	W	1600	Kit VR Upper	1SDA073945R1	1SDA073946R1
E1.2ª)	W	1600	Kit VR Lower	1SDA073947R1	1SDA073948R1
E1.2ª)	W	1600	Kit ES Upper	1SDA073951R1	1SDA073952R1
E1.2ª)	W	1600	Kit ES Lower	1SDA073953R1	1SDA073954R1
E1.2ª)	W	1600	Kit SHR Upper	1SDA073957R1	1SDA073958R1
E1.2ª)	W	1600	Kit SHR Lower	1SDA073959R1	1SDA073960R1
E1.2a)	W	1600	Kit FC CuAl Upper	1SDA073991R1	1SDA073993R1
E1.2a)	W	1600	Kit FC CuAl Lower	1SDA073992R1	1SDA073994R1
E2.2	W	2000	Kit FL Upper	1SDA081120R1	1SDA081121R1
E2.2	W	2000	Kit FL Lower	1SDA081122R1	1SDA081123R1
E2.2	W	2000	Kit VR Upper	1SDA074577R1	1SDA074578R1
E2.2	W	2000	Kit VR Lower	1SDA074579R1	1SDA074580R1
E2.2	W	2500	Kit VR Upper	1SDA074581R1	1SDA074582R1
E2.2	W	2500	Kit VR Lower	1SDA074583R1	1SDA074584R1
E2.2	W	2000	Kit SHR Upper	1SDA074585R1	1SDA074586R1
E2.2	W	2000	Kit SHR Lower	1SDA074587R1	1SDA074588R1
E2.2	W	2500	Kit SHR Upper	1SDA074589R1	1SDA074590R1
E2.2	W	2500	Kit SHR Lower	1SDA074591R1	1SDA074592R1
E2.2	W	2000	Kit SVR Upper	1SDA074593R1	1SDA074594R1
E2.2	W	2000	Kit SVR Lower	1SDA074595R1	1SDA074596R1
E2.2	W	2500	Kit SVR Upper	1SDA074597R1	1SDA074598R1
E2.2	W	2500	Kit SVR Lower	1SDA074599R1	1SDA074600R1
E2.2	W	2500	Kit FL Upper	1SDA074069R1	1SDA074070R1
E2.2	W	2500	Kit FL Lower	1SDA074071R1	1SDA074072R1
E2.2a)	W	2500	Kit F Upper	1SDA074090R1	1SDA074091R1
E2.2a)	W	2500	Kit F Lower	1SDA074092R1	1SDA074093R1
E4.2	W	3200	Kit FL Upper	1SDA081125R1	1SDA081127R1
E4.2	W	3200	Kit FL Lower	1SDA081128R1	1SDA081129R1
E4.2	W	3200	Kit VR Upper	1SDA074601R1	1SDA074602R1
E4.2	W	3200	Kit VR Lower	1SDA074603R1	1SDA074604R1
E4.2	W	3200	Kit SHR Upper	1SDA082840R1	1SDA082841R1
E4.2	W	3200	Kit SHR Lower	1SDA082842R1	1SDA082843R1
E4.2	W	3200	Kit SVR Upper	1SDA082848R1	1SDA082849R1
E4.2	W	3200	Kit SVR Lower	1SDA082850R1	1SDA082851R1
E4.2	W	4000	Kit VR Upper	1SDA074605R1	1SDA074606R1
E4.2	W	4000	Kit VR Lower	1SDA074607R1	1SDA074608R1
E4.2a)	W	4000	Kit F Upper	1SDA074098R1	1SDA074099R1
E4.2a)	W	4000	Kit F Lower	1SDA074100R1	1SDA074101R1
E4.2	W	4000	Kit FL Upper	1SDA074075R1	1SDA074076R1
E4.2	W	4000	Kit FL Lower	1SDA074077R1	1SDA074078R1
E4.2	W	4000	Kit HR Upper	1SDA076878R1	1SDA076879R1
E4.2	W	4000	Kit HR Lower	1SDA076880R1	1SDA076881R1
E4.2	W	4000	Kit SHR Upper	1SDA082844R1	1SDA082845R1
E4.2	W	4000	Kit SHR Lower	1SDA082846R1	1SDA082847R1
E4.2	W	4000	Kit SVR Upper	1SDA082852R1	1SDA082853R1
E4.2	W	4000	Kit SVR Lower	1SDA082854R1	1SDA082855R1

a) terminals supplied, but not physically installed.



Rear adjustable terminal - HR VR



Horizontal rear terminal - SHR




Vertical rear spread terminal - SVR



Front terminal - F



Extended front terminal - EF

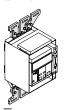

Front spread terminal - ES



Terminal for cable FcCuAl 4x240mm² - Fc CuAl

Kit for terminals - installed for fixed part of withdrawable circuit-breaker

Size	Version	lu max	Туре	3 Poles	4 Poles
				Code	Code
E6.2	W	5000	Kit VR Upper	1SDA074609R1	1SDA074610R1
E6.2	W	5000	Kit VR Lower	1SDA074612R1	1SDA074613R1
E6.2/f	W	5000	Kit VR Upper		1SDA074611R1
E6.2/f	W	5000	Kit VR Lower		1SDA074614R1
E6.2	W	6300	Kit VR Upper	1SDA074615R1	1SDA074616R1
E6.2	W	6300	Kit VR Lower	1SDA074618R1	1SDA074619R1
E6.2/f	W	6300	Kit VR Upper		1SDA074617R1
E6.2/f	W	6300	Kit VR Lower		1SDA074620R1
E6.2a)	W	6300	Kit F Upper	1SDA074106R1	1SDA074107R1
E6.2a)	W	6300	Kit F Lower	1SDA074109R1	1SDA074110R1
E6.2/fa)	W	6300	Kit F Upper		1SDA074108R1
E6.2/fa)	W	6300	Kit F Lower		1SDA074111R1
E6.2	W	6300	Kit FL Upper	1SDA074081R1	1SDA074082R1
E6.2	W	6300	Kit FL Lower	1SDA074084R1	1SDA074085R1
E6.2/f	W	6300	Kit FL Upper		1SDA074083R1
E6.2/f	W	6300	Kit FL Lower		1SDA074086R1

a) terminals supplied, but not physically installed.

# **Terminals**



Rear adjustable terminal - HR VR



Horizontal rear spread terminal - SHR



Vertical rear spread



Extended front terminal - EF



Front terminal - F



Front spread terminal - ES



Terminal for cable FcCuAl 4x240mm<sup>2</sup> - Fc CuAl

### Kit for terminals - loose supply for fixed circuit-breaker

Size	Version	lu max	Туре	Code	Pieces	Code	Pieces
E1.2	F	1600	Kit EF	1SDA073967R1	3	1SDA073968R1	4
E1.2	F	1600	Kit F	1SDA073973R1	3	1SDA073974R1	4
E1.2	F	1600	Kit ES	1SDA073979R1	3	1SDA073980R1	4
E1.2	F	1600	Kit Adjustable HR/VR	1SDA073989R1	3	1SDA073990R1	4
E1.2	F	1600	Kit FC CuAl 4x240 mm²	1SDA074001R1	3	1SDA074002R1	4
E2.2	F	2000	Kit Adjustable HR/VR	1SDA074007R1	3	1SDA074008R1	4
E2.2	F	2500	Kit Adjustable HR/VR	1SDA074013R1	3	1SDA074014R1	4
E2.2	F	2000	Kit SHR	1SDA074049R1	3	1SDA074050R1	4
E2.2	F	2500	Kit SHR	1SDA074055R1	3	1SDA074056R1	4
E2.2	F	2000	Kit SVR	1SDA074061R1	3	1SDA074062R1	4
E2.2	F	2500	Kit SVR	1SDA074067R1	3	1SDA074068R1	4
E2.2	F	2500	Kit F Upper	1SDA074122R1	3	1SDA074123R1	4
E2.2	F	2500	Kit F Lower	1SDA074124R1	3	1SDA074125R1	4
E4.2	F	3200	Kit Adjustable HR/VR	1SDA074019R1	3	1SDA074020R1	4
E4.2	F	3200	Kit SHR	1SDA082820R1	3	1SDA082821R1	4
E4.2	F	3200	Kit SVR	1SDA082832R1	3	1SDA082833R1	4
E4.2	F	4000	Kit Adjustable HR/VR	1SDA074025R1	3	1SDA074026R1	4
E4.2	F	4000	Kit F Upper	1SDA074130R1	3	1SDA074131R1	4
E4.2	F	4000	Kit F Lower	1SDA074132R1	3	1SDA074133R1	4
E4.2	F	4000	Kit SHR	1SDA082826R1	3	1SDA082827R1	4
E4.2	F	4000	Kit SVR	1SDA082838R1	3	1SDA082839R1	4
E6.2	F	5000	Kit Adjustable HR/VR	1SDA081672R1	6	1SDA081673R1	7
E6.2/f	F	5000	Kit Adjustable HR/VR			1SDA081674R1	8
E6.2	F	6300	Kit Adjustable HR/VR	1SDA074042R1	6	1SDA074043R1	7
E6.2/f	F	6300	Kit Adjustable HR/VR			1SDA074044R1	8
E6.2	F	6300	Kit F Upper	1SDA074140R1	6	1SDA074141R1	7
E6.2	F	6300	Kit F Lower	1SDA074143R1	6	1SDA074144R1	7
E6.2/f	F	6300	Kit F Upper			1SDA074142R1	8
E6.2/f	F	6300	Kit F Lower			1SDA074145R1	8



Rear orientable terminal - HR VR



— Horizontal rear terminal - SHR



Vertical rear spread terminal - SVR



Front terminal - F



Extended front terminal - EF



Front spread terminal - ES



Terminal for cable FcCuAl 4x240mm² - Fc CuAl

Kit for terminals - loose supply for fixed part of withdrawable circuit-breaker

Size	Version	lu max	Туре	Code	Pieces	Code	Pieces
E1.2	W	1600	Kit EF	1SDA073943R1	3	1SDA073944R1	4
E1.2	W	1600	Kit Adjustable HR/VR	1SDA073949R1	3	1SDA073950R1	4
E1.2a)	W	1600	Kit ES	1SDA073955R1	3	1SDA073956R1	4
E1.2	W	1600	Kit SHR	1SDA073961R1	3	1SDA073962R1	4
E1.2	W	1600	Kit FC CuAl	1SDA073995R1	3	1SDA073996R1	4
E2.2	W	2000	Kit Adjustable HR/VR	1SDA074007R1	3	1SDA074008R1	4
E2.2	W	2500	Kit Adjustable HR/VR	1SDA074013R1	3	1SDA074014R1	4
E2.2	W	2000	Kit SHR	1SDA074049R1	3	1SDA074050R1	4
E2.2	W	2500	Kit SHR	1SDA074055R1	3	1SDA074056R1	4
E2.2	W	2000	Kit SVR	1SDA074061R1	3	1SDA074062R1	4
E2.2	W	2500	Kit SVR	1SDA074067R1	3	1SDA074068R1	4
E2.2	W	2500	Kit F Upper	1SDA074094R1	3	1SDA074095R1	4
E2.2	W	2500	Kit F Lower	1SDA074096R1	3	1SDA074097R1	4
E4.2	W	3200	Kit Adjustable HR/VR	1SDA074019R1	3	1SDA074020R1	4
E4.2	W	3200	Kit SHR	1SDA082820R1	3	1SDA082821R1	4
E4.2	W	3200	Kit SVR	1SDA082832R1	3	1SDA082833R1	4
E4.2	W	4000	Kit Adjustable HR/VR	1SDA074025R1	3	1SDA074026R1	4
E4.2	W	4000	Kit F Upper	1SDA074102R1	3	1SDA074103R1	4
E4.2	W	4000	Kit F Lower	1SDA074104R1	3	1SDA074105R1	4
E4.2	W	4000	Kit SHR	1SDA082826R1	3	1SDA082827R1	4
E4.2	W	4000	Kit SVR	1SDA082838R1	3	1SDA082839R1	4
E6.2	W	5000	Kit Adjustable HR/VR	1SDA074033R1	6	1SDA074034R1	7
E6.2/f	W	5000	Kit Adjustable HR/VR			1SDA074035R1	8
E6.2	W	6300	Kit Adjustable HR/VR	1SDA074042R1	6	1SDA074043R1	7
E6.2/f	W	6300	Kit Adjustable HR/VR			1SDA074044R1	8
E6.2	W	6300	Kit F Upper	1SDA074112R1	6	1SDA074113R1	7
E6.2	W	6300	Kit F Lower	1SDA074115R1	6	1SDA074116R1	7
E6.2/f	W	6300	Kit F Upper			1SDA074114R1	8
E6.2/f	W	6300	Kit F Lower			1SDA074117R1	8

a) can be ordered only if the fixed part has EF terminals.

# Service



Warranty periods are measured from the date the circuit breaker leaves the factory.

#### **Extended warranty**

Size	Туре	Code <sup>c)</sup>
E1.2E6.2	Warranty 2 years E1.2E6.2 <sup>a)</sup>	1SDA082413R1
E1.2	Warranty 4 years E1.2b)	1SDA082414R1
E2.2	Warranty 4 years E2.2b)	1SDA082415R1
E4.2	Warranty 4 years E4.2b)	1SDA082416R1
E6.2	Warranty 4 years E6.2b)	1SDA082417R1
E1.2	Warranty 5 years E1.2b)	1SDA082418R1
E2.2	Warranty 5 years E2.2b)	1SDA082419R1
E4.2	Warranty 5 years E4.2b)	1SDA082420R1
E6.2	Warranty 5 years E6.2b)	1SDA082421R1

The registration in the Extended Warranty online tool is mandatory

- a) Free-of-charge with site details entered
- b) Warranty durations:
  - 4 years when site details not entered into the Extended Warranty online tool
- 5 years when site details entered into the Extended Warranty online tool c) Order only with the circuit breaker. Specify Registration code in the order to activate the warranty.

#### **Test certificate**

Size	Туре	Code
E2.2E6.2	Test certificate - Italian version	1SDA070197R1
E2.2E6.2	Test certificate - English version	1SDA070198R1
E2.2E6.2	Test certificate - German version	1SDA070199R1
E2.2E6.2	Test certificate - French version	1SDA070200R1
E2.2E6.2	Test certificate - Spanish version	1SDA070201R1

# **Accessories**

# Spare parts



#### Single phase pole

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2 - Iu≤2000A	3p; 4p	IEC	F; W (MP)	1SDA081187R1	Α	3 or 4
E2.2 - Iu=2500A	3p; 4p	IEC	F; W (MP)	1SDA081188R1	Α	3 or 4
E4.2	3p; 4p	IEC	F; W (MP)	1SDA081189R1	Α	3 or 4
E6.2 - Half phase	3p; 4p; 4p	/f IEC	F; W (MP)	1SDA081190R1	Α	6 or 7 or 8



## Arching chamber

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2	3p; 4p	IEC	F; W (MP)	1SDA081430R1		3 or 4
E4.2; E6.2	3p; 4p	IEC	F; W (MP)	1SDA081431R1		3 or 4 for E4.2,



## Operating mechanism a)

Min quantity	oe spare	Type spare	Code	Version	IEC/UL	Poles	Size
1		A	1SDA081191R1	F; W (MP)	IEC/UL	3p; 4p	E2.2
1	•	Α	1SDA081192R1	F; W (MP)	IEC/UL	3p; 4p	E4.2
1		Α	1SDA081193R1	F; W (MP)	IEC/UL	3p; 4p	E6.2
1		A	1SDA081194R1	F; W (MP)	IEC/UL	4p/f	E6.2
_1		A	1SDA081194R1	F; W (MP)	IEC/UL	4p/f	a) Add closing spring

### **Closing Spring**

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2 - Iu≤2000A	3p	IEC/UL	F; W (MP)	1SDA081207R1	Α	1
E2.2 - Iu≤2000A	4p	IEC/UL	F; W (MP)	1SDA081208R1	Α	1
E2.2 - lu=2500A; E4.2	3p	IEC/UL	F; W (MP)	1SDA081208R1	Α	1
E2.2 - lu=2500A; E4.2	4p	IEC/UL	F; W (MP)	1SDA081209R1	Α	1
E6.2	3p	IEC/UL	F; W (MP)	1SDA081210R1	Α	1
E6.2	4p; 4p/f	IEC/UL	F; W (MP)	1SDA081211R1	Α	1



## **Spring Charging lever**

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081217R1	Α	1



## Signalling charged spring lever

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081242R1	Α	1



### Spring charging device

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC	F; W(MP)	1SDA082230R1	A	1




# Tripping mechanism

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC	F; W (MP)	1SDA082187R1	Α	1



### Fixing screws kit - 50 pcs


Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2 - wall mounted	3p; 4p	IEC/UL	F	1SDA081179R1		1
E1.2 - floor mounted	3p; 4p	IEC/UL	F	1SDA081413R1		1
E1.2 - floor mounted	3p; 4p	IEC/UL	W (FP)	1SDA081414R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (FP)	1SDA081467R1		1

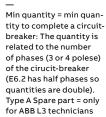


# Spare parts





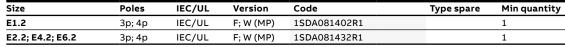


For each part ordered, specify the Serial number of the circuit-breaker it is intended for.

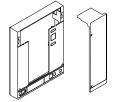

#### Accessories cover b)


Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p	IEC/UL	F; W (MP)	1SDA081403R1		1
E1.2	4p	IEC/UL	F; W (MP)	1SDA081404R1		1
E2.2	3р	IEC/UL	F	1SDA081433R1		1
E2.2	4p	IEC/UL	F	1SDA081434R1		1
E2.2	3р	IEC/UL	W (MP)	1SDA081435R1		1
E2.2	4p	IEC/UL	W (MP)	1SDA081436R1		1
E4.2	3p	IEC/UL	F	1SDA081437R1		1
E4.2	4p	IEC/UL	F	1SDA081438R1		1
E4.2	3p	IEC/UL	W (MP)	1SDA081439R1		1
E4.2	4p	IEC/UL	W (MP)	1SDA081440R1		1
E6.2	3p	IEC/UL	F	1SDA081441R1		1
E6.2	4p	IEC/UL	F	1SDA081442R1		1
E6.2	3p	IEC/UL	W (MP)	1SDA081443R1		1
E6.2	4p	IEC/UL	W (MP)	1SDA081444R1		1
E6.2	4p/f	IEC/UL	F	1SDA081445R1		1
E6.2	4p/f	IEC/UL	W (MP)	1SDA081446R1		1
E1.2 - Castella)	3p; 4p	IEC	F; W (MP)	1SDA082145R1		1
E2.2E6.2 - Castella)	3p; 4p	IEC	F	1SDA082146R1		1
E2.2E6.2 - Castell <sup>a)</sup> KLC	3p; 4p	IEC	W (MP)	1SDA082149R1		1
E2.2E6.2 - Castell <sup>a)</sup> KLC+ KLP	3p; 4p	IEC	W (MP)	1SDA082150R1		1
E2.2E6.2 - Castella KLP	3p; 4p	IEC	W (MP)	1SDA082151R1		1

a) The lock is not included; b) TU Reset not included. Use the existing one.

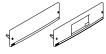


# Transparent cover for trip unit

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2 DIP	3p; 4p	IEC/UL	F; W (MP)	1SDA081405R1		1
E1.2 Touch	3p; 4p	IEC/UL	F; W (MP)	1SDA081406R1		1
E2.2; E4.2; E6.2 DIP	3p; 4p	IEC/UL	F; W (MP)	1SDA081447R1		1
E2.2; E4.2; E6.2 Touch	3p; 4p	IEC/UL	F; W (MP)	1SDA081448R1		1

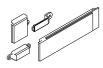

# Kit front cover plugs

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081415R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081471R1		1

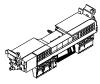

### Sliding contact for Moving Part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p	IEC/UL	W (MP)	1SDA081167R1		1
E1.2	4p	IEC/UL	W (MP)	1SDA081168R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	W (MP)	1SDA081212R1		1
E2.2; E4.2; E6.2 - MS	3p; 4p	IEC/UL	W (MP)	1SDA081213R1		1



#### Terminal box connection interface

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	F	1SDA081409R1	Α	1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081451R1	Α	1
E2.2: E4.2: E6.2 - MS	3p: 4p	IFC/UI	F: W (MP)	1SDA081452R1	Α	1





















### Trip coil

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081407R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081449R1		1

### Right plate for accessories (Right MID)

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081214R1	Α	1
E2.2; E4.2; E6.2 - MS	3p; 4p	IEC/UL	F; W (MP)	1SDA081215R1	Α	1

### Cover for right plate for accessories (Right MID Cover)

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081466R1		1

## Left plate for accessories (Left MID)

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081170R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081453R1		1

### Racked in and out device (CD)

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	W (MP)	1SDA081216R1	Α	1

### CD lock lever

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2: E4.2: E6.2	3p: 4p	IEC/UL	W (MP)	1SDA081256R1	Α	1

## Racking in and out lever

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	W (MP)	1SDA081410R1		1
F2 2: F4 2: F6 2	3n· 4n	IFC/UI	W (MP)	1SDA081455R1		1

# Lifting plates

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081454R1		1

## Moving part terminals

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2 - Iu≤2000A	3p; 4p	IEC	W (MP)	1SDA081243R1	А	3 or 4
E2.2 - lu=2500A	3p; 4p	IEC	W (MP)	1SDA081244R1	A	3 or 4
E4.2 - Iu≤3200A	3p; 4p	IEC	W (MP)	1SDA081245R1	A	3 or 4
E4.2 - lu=4000A	3p; 4p	IEC	W (MP)	1SDA081246R1	A	3 or 4
E6.2	3p; 4p/f	IEC	W (MP)	1SDA081247R1	A	6 or 7 or 8

#### Jaw contacts

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC	W (FP)	1SDA081164R1	Α	3 or 4
E2.2 - Iu≤2000A	3p; 4p	IEC	W (FP)	1SDA081195R1	Α	3 or 4
E2.2 - Iu=2500A	3p; 4p	IEC	W (FP)	1SDA081196R1	Α	3 or 4
E4.2 - Iu≤3200A	3p; 4p	IEC	W (FP)	1SDA081197R1	Α	3 or 4
E4.2 - Iu=4000A	3p; 4p	IEC	W (FP)	1SDA081198R1	Α	3 or 4
E6.2	3p; 4p; 4p	o/f IEC	W (FP)	1SDA081199R1	Α	6 or 7 or 8

# Spare parts



#### Conversion kit from Fixed to Moving part \*

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p	IEC	F	1SDA081176R1	Α	1
E1.2	4p	IEC	F	1SDA081177R1	Α	1
E2.2	3р	IEC	F	1SDA081234R1	Α	1
E2.2	4p	IEC	F	1SDA081235R1	Α	1
E4.2	3p	IEC	F	1SDA081236R1	Α	1
E4.2	4p	IEC	F	1SDA081237R1	Α	1
E6.2	3p	IEC	F	1SDA081238R1	Α	1
E6.2	4p	IEC	F	1SDA081239R1	Α	1
E6.2	4p/f	IEC	F	1SDA081240R1	Α	1


For each part ordered, specify the Serial number of the circuit-breaker it is intended for; \*moving part terminals not included for the circuit contains t



#### Conversion kit from Moving Part into Fixed version \*

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2 - wall mounted	3p; 4p	IEC/UL	W (MP)	1SDA081178R1	Α	1
E1.2 - floor mounted	3p; 4p	IEC/UL	W (MP)	1SDA082303R1	Α	1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	W (MP)	1SDA081241R1	Α	1

For each part ordered, it is mandatory to specify the Serial number of the circuit-breaker it is intended for; \*Standard terminals not included the circuit-breaker in circuit-breaker in the circuit-breake

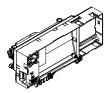

#### Main board

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081408R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA081450R1		1

For each part ordered, it is mandatory to specify the Serial number of the circuit-breaker it is intended for.



# Trip Unit Battery

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2; E2.2; E4.2; E6.2	3p; 4p	IEC/UL	F; W (MP)	1SDA074193R1		1



# Main board + Sensors + cables

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2	3p	IEC/UL	F; W (MP)	1SDA081200R1	Α	1
E2.2	4p	IEC/UL	F; W (MP)	1SDA081201R1	Α	1
E4.2	3p	IEC/UL	F; W (MP)	1SDA081202R1	Α	1
E4.2	4p	IEC/UL	F; W (MP)	1SDA081203R1	Α	1
E6.2	3p	IEC/UL	F; W (MP)	1SDA081204R1	Α	1
E6.2	4p	IEC/UL	F; W (MP)	1SDA081205R1	Α	1
E6.2	4p/f	IEC/UL	F; W (MP)	1SDA081206R1	Α	1

For each part ordered, it is mandatory to specify the Serial number of the circuit-breaker it is intended for.



### Sensors plastic covers

Size	Poles IE	C/UL	Version	Code	Type spare	Min quantity
E2.2	3p; 4p IE	C/UL	F; W (MP)	1SDA081468R1		1
E4.2	3p; 4p IE	C/UL	F; W (MP)	1SDA081469R1		1
E6.2	3p; 4p; 4p/f IE	EC/UL	F; W (MP)	1SDA081470R1		1




### **Terminal covers**

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity	
E1.2	3p	IEC/UL	W (MP)	1SDA081182R1		1	
E1.2	4p	IEC/UL	W (MP)	1SDA081183R1		1	




#### Terminal box fixed part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC/UL	W (FP)	1SDA081180R1	Α	1
E2.2; E4.2	3p; 4p	IEC	W (FP)	1SDA082152R1	Α	1
E6.2	3p; 4p; 4p	/f IEC	W (FP)	1SDA082153R1	Α	1

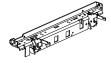

### Support for terminal box of Fixed Part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p	IEC/UL	W (FP)	1SDA082237R1	Α	1
E1.2	4p	IEC/UL	W (FP)	1SDA082238R1	А	1
E2.2	3p	IEC/UL	W (FP)	1SDA081249R1	Α	1
E2.2	4p	IEC/UL	W (FP)	1SDA081250R1	Α	1
E4.2	3р	IEC/UL	W (FP)	1SDA081251R1	Α	1
E4.2	4p	IEC/UL	W (FP)	1SDA081252R1	Α	1
E6.2	3р	IEC/UL	W (FP)	1SDA081253R1	Α	1
E6.2	4p	IEC/UL	W (FP)	1SDA081254R1	Α	1
E6.2	4p/f	IEC/UL	W (FP)	1SDA081255R1	Α	1

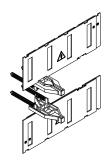

### Safety shutters for fixed part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p	IEC	W (FP)	1SDA081411R1		1
E1.2	4p	IEC	W (FP)	1SDA081412R1		1
E2.2	3p	IEC	W (FP)	1SDA081457R1		1
E2.2	4p	IEC	W (FP)	1SDA081458R1		1
E4.2	3p	IEC	W (FP)	1SDA081459R1		1
E4.2	4p	IEC	W (FP)	1SDA081460R1		1
E6.2	3p	IEC	W (FP)	1SDA081461R1		1
E6.2	4p	IEC	W (FP)	1SDA081462R1		1
E6.2	4p/f	IEC	W (FP)	1SDA081463R1		1



## Lateral guides for fixed part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC	W (FP)	1SDA082154R1	Α	1



### Lateral guides for Moving part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E1.2	3p; 4p	IEC	W (MP)	1SDA082188R1		1
E2.2; E4.2; E6.2	3p; 4p	IEC	W (MP)	1SDA082302R1		1



#### Earth sliding contact for Fixed Part

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	W (FP)	1SDA081465R1		1



### Safety cover

Size	Poles	IEC/UL	Version	Code	Type spare	Min quantity
E2.2; E4.2; E6.2	3p; 4p	IEC/UL	W (MP)	1SDA081464R1		1



ABB SACE Electrification Products Division Protection & Connection

5, Via Pescaria I-24123, Bergamo Phone: +39 035 395.111

www.abb.com



Stay tuned. Discover more by visiting the webpages reserved to Emax 2 and be always up-to-date with the latest edition of the catalogue.