

Catalog

ABB DC Drives DCS800-A Enclosed Converters 18 A to 9800 / 19600 A



DCS800 Drive Manuals

		Land	Language								
	Public. number	E	D	1	ES	F	CN	RU	PL	PT	SE
DCS800 Quick Guide	3ADW000191	х	х	х	х	х				х	х
DCS800 Tools & Documentation CD	3ADW000211	х									
DCS800 Converter module	0/12/1/000211	^									
Flver DCS800	3ADW000190	х	х		х	х				х	
Technical Catalog DCS800	3ADW000192	x	X	х	X	X	х	х	х	X	
Hardware Manual DCS800	3ADW000194	x	X	X	X	X	X	X	X		
Hardware Manual DCS800 update DCF503B/DCF504B	3ADW000194Z	х									
Firmware Manual DCS800	3ADW000193	х	х	р	Х	х	х	Х	х		
Installation according to EMC	3ADW000032	х									
Technical Guide	3ADW000163	х									
Service Manual DCS800	3ADW000195	х	Х								
12-Pulse Manual	3ADW000196	х									
CMA-2 Board	3ADW000136	х									
Flyer Hard - Parallel	3ADW000213	х									
Drive Tools											
DriveWindow 2.x - User's Manual	3BFE64560981	х									
DriveOPC 2.x - User's Manual	3BFE00073846	х									
Optical DDCS Communication Link	3AFE63988235	х									
DDCS Branching Units - User's Manual	3BFE64285513	х									
DCS800 Applications											
PLC Programming with Cs	Cs_V23	х	Х			Х					
61131 DCS800 target +tool description - Application Program	3ADW000199	х									
DCS800 Crane Drive											
DCS800 Crane Drive Manual suppl.	3AST004143	х									
DCS800 Crane Drive Product note	PDC5 EN	х									
DCS800 Winder ITC											
DCS800 Winder Product note	PDC2 EN	х									
DCS800 Winder description ITC	3ADW000308	х									
Winder Questionnaire	3ADW000253Z	х									
DCS800-E Panel Solution											
Flyer DCS800-E Panel solution	3ADW000210	х									
Hardware Manual DCS800-E	3ADW000224	х									
DCS800-A Enclosed Converters	0.4.514/00000/0										
Flyer DCS800-A	3ADW000213	Х									
Technical Catalog DCS800-A	3ADW000198	X									
Installation of DCS800-A	3ADW000091	х	х								
DCS800-R Rebuild System	24 DW000007										
Flyer DCS800-R DCS800-R Rebuild Kits	3ADW000007 3ADW000197	X	х								
	3ADW000197 3ADW000415	X									
DCS800-R Optical Rebuild Kits DCS800-R DCS500/DCS600 Upgrade Kits	3ADW000415 3ADW000256	X									
Extension Modules	3ADVV000250	х									
RAIO-01 Analog IO Extension	3AFE64484567	x									
RDIO-01 Digital IO Extension	3AFE64485733	x									
RRIA-01 Resolver Interface Module	3AFE68570760	x									
RTAC-01 Pulse Encoder Interface	3AFE64486853	x									
RTAC-03 TTL Pulse Encoder Interface	3AFE68650500	x									
AIMA R-slot extension	3AFE64661442	x									
Door mounting kits	0/11/20100111/2	~									
Door mounting DCS Control Panel (IP54, click in)	3AUA0000076085	х									
Door mounting DCS Control Panel (fix mounting)	3AFE68294673	x									
Door mounting DCS Control Panel (IP66, fix mounting)	3AFE68829593	x	1	1	1	1	1	1	1	1	
Serial Communication				1			1				
Drive specific serial communication				1			1				
NETA Remote diagnostic interface	3AFE64605062	х		1			1				
Fieldbus Adapter with DC Drives RPBA- (PROFIBUS)	3AFE64504215	X					1				
Fieldbus Adapter with DC Drives RCAN-02 (CANopen)				1			1				
Fieldbus Adapter with DC Drives RCNA-01 (ControlNet)	3AFE64506005	х		1			1				
Fieldbus Adapter with DC Drives RDNA- (DeviceNet)	3AFE64504223	X					1				
Fieldbus Adapter with DC Drives RMBA (MODBUS)	3AFE64498851	x	1	1	1		1	1			
Fieldbus Adapter with DC Drives RETA (Ethernet)	3AFE64539736	x	1	1		1	1				
$x \rightarrow \text{existing}$ $p \rightarrow \text{planned}$					•		•				
Status 01.2015										1	

DCS800 Manuals-list e m.docx

Contents ABB DC Drive DCS800-A

DCS800 Drive Manuals	2
Contents	3
DCS800-A Enclosed Converters	4
Description of DCS800-A Enclosed Converters	6
Structure of line-ups	7
DCS800-A Mechanical options	25
DCS800-A Electrical options	27
DCA630 Incomings	30
DCS800-A2x 3-phase field exciters in a separate cabinet	36
DCS800-A Door layout	37
DCA650 Overriding control	38
DCS800-A Unit data	42
DCS800-A Basic circuit diagrams	45
Dimensioning	47
DCS800-A Safety option ordering	48
DCS800-A Type Code (Ordering Code)	50

DCS800-A Enclosed Converters

Latest Technology, High Performance and a User-Friendly Concept

DCS800-A are DCS800 converter modules mounted in an enclosure.

The series is a complete range of enclosed converters intended for the supply and control of DC machines. DCS800-A provides maximum flexibility in the firmware, the drive itself is programmable as well as a serial communication (e.g. Profibus) interface plus 12-pulse parallel, serial and sequential.

DCS800-A enclosed converters are fully digital. Optional equipment is available to meet different safety standards. The converter can be used for standard applications but has the flexibility to be customized for the most demanding applications.

Comprehensive Product Range

DCS800-A enclosed converters are available as 6-/ 12-pulse and in 2- or 4-quadrant, with current ranges from 18 to 9800/19600 A and supply voltages of 230 ... 990 (1200) V AC. A selection of options is available to provide the user with a system meeting the most demanding technical requirements and performance expectations. Common control electronics throughout the product range reduces spare parts inventory and training requirements.

DCS800-A Concept

- A single drive control technology is available for a wide power range to reduce training costs and meets the requirements of various applications.
- Common AC busbar designs for group drives are available for the most cost-efficient and functional system structure.
- Incoming supply section for group drives can be equipped with air circuit breakers or insulation switches.
- Control cubicles offer various I/O solutions in combination with ABB controls e.g. AC800M.
- Approval for many application specific standards (e.g. ABS, DNV, Loyd, UL, CSA) can be ordered as option.
- Flexible design of power cable entry provide simple installation and minimum power down time especially for upgrades.



Digital Control

To meet the most stringent control requirements, the DCS800-A features speed control, which reduces the effects from gear backlash and torsional vibration arising in mechanical



systems. High-performance speed and torque control will fulfill all requirements for rapid response and high control accuracy. Autotuning for armature, field current and speed controller simplifies the commissioning.

What is a DCS800 DC drive?

The DCS800 DC Drive is simple to buy, install, configure and use, saving considerable time.

- Precise delivery
- Quick installation
- Rapid start-up

The drive has common user and process interface with fieldbus, common software tools for sizing, commissioning, maintenance and common spare parts.

Where can it be used?

DCS800 can be used in the wide range of all industrial application of

- Vessels

- Ski lifts

- Magnets

Mining

- Electrolysis

- Metals
- Pulp & Paper
- Material handling
- Test rigs
- Food & Beverage
- Printing
- Plastic & Rubber
- Battery Chargers
 ubber
 and more

DCS800 DC drive promises

The drive meet the requirement of all demanding drive application like: • testrig • mine hoist • rolling mill as well as none motoric applications like: electrolysis • magnetics • battery charger

Embedded software functions offer the upgrades of all classic installations 12-pulse, shared motion, double motor operation, field reversal control.



Highlights

- Assistant control panel providing intuitive use of the drive.
- Excellent control performance up to highest dynamic application in field weakening operation.
- All ACS800 PC tools (via DDCS) can be connected
- Reduced installation and commissioning work.
- Internal three phase field exciter without additional external hardware.
- Prepared for additional software function by adaptive programming and IEC61131 programming.
- Flexible fieldbus system with built-in Modbus and numerous internally mountable fieldbus adapters.

Software Tools

Start-up assistant

Faster and easier commissioning


The Start-up assistant serves in DCS800 DC Drives. It guides you actively through the commissioning procedure either by the control panel or ABB PC tools. It is multilingual, requests data with clear and plain text messages, and sets the required parameters to your needs.

IEC 61131 programming

ControlBuilder DCS800

The ControlBuilder is a user-friendly tool based on the IEC61131-3 standard for programming the DCS800. With the ControlBuilder it is possible to develop - in a fast and easy way - new function e.g. winders, decentralized controls, safety functions, ... directly in the drive.

Fieldbus control

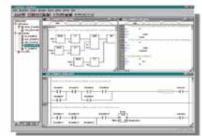

Gateway to your process

DCS800 DC Drives have connectivity to major automation systems. This is achieved with a dedicated gateway concept between the fieldbus systems and ABB drives. The fieldbus gateway module can easily be mounted inside the drive. As a result of the wide range of fieldbus gateways, your choice of automation system is independent from your decision to use first-class ABB drives.

Start-up and maintenance tool

DriveWindow Light 2 PC tool for ABB drives DriveWindow Light 2 is an easy-to-use start-up and maintenance tool for ABB drives. Supported drives are ACS140, ACS160, ACS350, ACH400, **DCS550**, ACS550, ACH550, **DCS800** and ACS800.

- Viewing and setting parameters in offline and online mode
- Editing, saving and downloading parameters
- Comparing parameters
- Graphical and numerical signal monitoring
- Drive control
- Start-up assistants
- DWL AP tool for DCS800
- All DCS800 DC drives are equipped with DriveWindow Light

Start-up, maintenance and integration


DriveWindow 2

ABB's DriveWindow is an advanced, easy-to-use PC software tool for the start-up and maintenance of ABB DCS800 DC Drives. Its host of features and clear, graphical presentation of the operation make it a valuable addition to your system providing information necessary for troubleshooting, maintenance and service, as well as training.

With DriveWindow the user is able to follow the co-operation of several drives simultaneously by collecting the actual values from the drives onto a single screen or printout.


DriveOPC


Integration tool

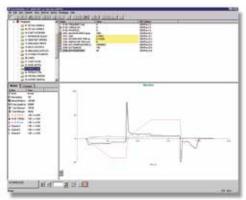

DriveOPC is a software package which allows OLE for Process Control (OPC) communication between Windows applications and DCS800 DC drives. It allows Object Linking and Embedding (OLE) for Process Control (OPC) communication. This OPC server is an ideal tool for integrating DCS800 DC drives and commercial PC software and creating PC-based controlling and monitoring systems.

  
Description of DCS800-A Enclosed Converters





0025 ... 0350 (D1/D2/D3-350)

0520 ... 1000 (D3/D4)

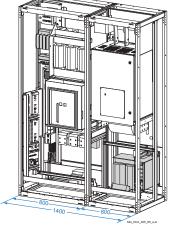


900 ... 2000 (D5)



The robust and strong frame body of the cabinets is made from steel with a thickness of 2.5 mm and all metal sheets are softline design to avoid accidents and are 1.5 mm thick. A basic protection against corrosion is given by a hot zink galvanisation of all metal work. The standard hight is 2120 mm (height is including detachable hood (120 mm)) with various widths (200/400/600/800/1000 mm) and depths (600) depending on the power and the size of the converter.


All dimensions in mm.

2050 ... 3000 (D6 with breaker)

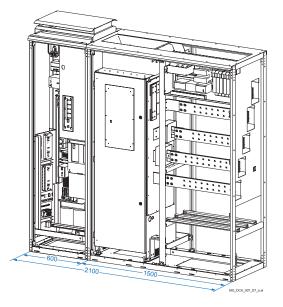

2050 ... 3300 (D7)

1900 ... 3000 (D6 without breaker)

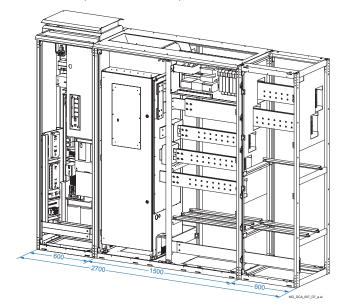

4000 ... 5200 (D7)

DCS800-A enclosed converters

DCS800-A enclosed converters are suitable for three-phase supply voltages from 230 V to 990 (1200) V, 50 or 60 Hz. The rated DC current range is from 18 to 9800 / 19600 A.

DCS800-A enclosed converters with rated DC current from 18 A up to 1850 A are available in two different layouts:

- Single drive configuration without horizontal busbars therefore AC cable connection
- Group drive configuration with horizontal busbars (size-depending on rated amps)

Group drives from sizes D6 and D7 on request.

DCS800-A can be tailored to meet different needs by using combinations of the following options:

• Earth Fault Detection (current sensitive) • Insulation Monitor (voltage sensitive) • Motor Fan Starter • Galvanic Isolation of converter voltage measurement • Cabinet design according to EMC-regulations • EMC Filters • Protection Class IP 21-Standard • Protection Class IP 31 with filter (insect screen) in air inlet and outlet • Protection Class IP 42 with filter in air inlet; air outlet same as IP 21 • IP 54 on request • Gland plate and bottom plate • Special Colour (only outside) acc. to RAL standard • Heater • Lighting • Horizontal Busbars

Incoming Supply Sections for Group Drives

Incoming supply sections (DCA63x) are used to supply several group drives connected by horizontal busbars. The connection to the AC supply can be made by cables or busbars. The cable / busbar entry is at the bottom of the incoming supply section as standard.

The incoming supply section can be located preferable left side of line-ups, but also right side and even in the middle of line-ups.

The cabinets standard protection class is IP21.

Basic design

Rated voltage: Rated frequency: Rated current: Short circuit ratings: 400, 500, 600, 690 V 50 or 60 Hz 1000, 2000, 3000, 4000 A_{AC} 50 kA (1 sec.) i_{dvn}= 105 kA (peak)

Options

 Cabinet design according to EMC-regulations
 Isolation Switch (DCA631)
 Air circuit breaker (DCA632)
 Earthing switch
 Residual Current Detection
 AC Current
 Measurement
 AC Voltage Measurement
 Arc Detecting
 Relay
 Emergency stop relays, tripping circuits


Important!

CE mark requires the options

- EMC procedure / part list check
- EMC filter or dedicated transformer (performed by the customer)
- Cable marking A2 plus

EN61800-3 (IEC 1800-3) standard requires the options

- EMC procedure/part list check
- EMC filter or dedicated transformer (performed by the customer)

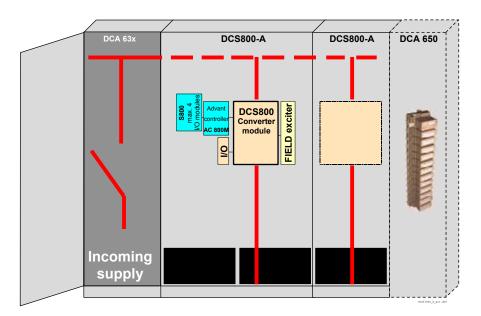

Field Exciters Several Solutions available

- Ratings from 6 to 450 A Integrated, separate or external
- 2-phase or 3-phase versions 1-; 2-; 4-Quadrant Digital control Auto/manual tuning

The field exciters are controlled via a serial DCSLink with a speed of 500 kBaud for fast and accurate control.

Internal field exciters

Field exciters from 6 A up to 25 A can be included in armature converter modules up to 500 / 525 V, 2000 A (Size D5).

On board field exciters are 3-phase half controlled field exciters 6 A / 15 A / 20 A / 25 A in D1 up to D4 converter modules (525 V). These field exciters are directly supplied from mains circuit internally and do not require any autotransformer in three-phase operation.

FEX425 field exciter is also a 25 A 3-phase half controlled unit assembled in a D5 converter module. It can be supplied directly from mains circuit or from a separate field supply voltage.

DCF803-0050

2-phase, 1-quadrant, half controlled, outside the converter module. An autotransformer is optional to reduce voltage ripple in the field circuit by adapting the AC voltage to a suitable level.

DCF804-0050

2-phase, 4-quadrant, full controlled, field exciter for field reversal. An autotransformer is optional to reduce voltage ripple in the field circuit by adapting the AC voltage to a suitable level.

DCS800-A21: 18 ... 400 A

18 ... 400 A, 3-phase, 2-quadrant, full controlled, separate cabinet including overvoltage protection

DCS800-F01: 18 ... 285 A

18 ... 285 A, 3-phase, 2-quadrant, inside D6/D7 armature cabinet is possible; including overvoltage protection

DCS800-A22: 22 ... 450 A

22 ... 450 A, 3-phase, 4-quadrant, full controlled, for field reversal, separate cabinet; overvoltage protection included

DCS800-F02: 22 ... 300 A

22 ... 300 A 4-quadrant for field reversal, inside D6/D7 armature cabinet is possible; overvoltage protection included

DCS800 Converter modules Basic design

All units are provided with the same digital control board and software. The DCS800 flexibility allows the user to configure functions of the drive easily, suitable for different applications. Functions of the DCS800 are normally activated by parameters.

The basic software includes following options:

Processing the speed reference with a speed ramp generator (S-ramp capability, accel/decel ramp) • Processing the speed feedback • Speed controller • Torque reference processing • Current controller • Field weakening • Automatic/manual field reversal • Autotuning of current controller • Autotuning of speed controller • Speed monitor • Drive control logic • Remote/local operation • Emergency stop • Electronic circuits are not sensitive to line phase sequence • Motor overload protection • Dual field • Programmable analog outputs • Field supply • Master/follower via fibre optics • 12-Pulse link

Monitoring functions

• Self-test • Fault logger • Motor protection • Power converter protection • Incorrect supply protection

I/O's of the converter module

The I/O connections in the DCS800 converter modules are used for safety and other drive specific functions like emergency stop and motor temperature measurement: • 1 analog tachometer input • 4 analog inputs • 2 voltage reference outputs • 3 analog outputs • 1 actual armature current output • 1 pulse encoder input (with IOB-3 isolated) • 8 digital inputs • 7 digital outputs

More detailed information about SDCS-IOB-2x/3 see *Hardware manual DCS800*.

DCS 800 Marine drive design (group drives)



DCS800-A Marine Drive

Typical Applications for Marine Drives

The DCS800-A marine cabinet is designed for standard marine applications like ships and oil rigs. The typical applications are propulsion, thrusters, mud

pumps, draw works, rotary tables and top drives.

Ordering

The standardized and type-approved design of DCS800-A Enclosed Converters allow DNV Certification of the complete cabinet line up. The DCS800-A marine cabinets include all components which are necessary for a standard marine drive application. A converter type of either 2-Q (single bridge) or 4-Q (double bridge) can be selected. Footprint 800 x 800 mm meets requirement of original converter.

The DCS800-A marine cabinets have a footprint of 800 x 800 mm. If motor assignment breakers or cable connection from top are required the footprint can be extended to a depth of 1200 mm.

Scope of delivery

- Type tested design and equipped DNV marine approval:
- 45°C ambient temperature
- IP22
- Marine hand grips and door stoppers
- IEC 332-3 flame retard cable

2-Q and 4-Q DCS800 drives

- 50 A or 60 A field exciter
- Options: RDIO/RAIO I/O Extension modules

DCA650 Control Cabinet

ABB controller AC 800 • Fieldbus interface FCI (AF100)

• Location of full range of S800 I/O modules.

Advant controller and S800 I/O System

The S800 I/O system consists of the control module (FCI,

AC 800M), digital and analog I/O modules. The control module has a connection to several different bus systems and optical channels to connect the drives. The modules are located on mounting rails (DIN).



AF 100 field bus interface FCI

Within this AF 100 interface up to 12 drives can be connected.

Advant controller AC 800M

Powerful controller with several fieldbus interfaces. Up to 12 drives can be connected with the optical module bus. The above mentioned control modules can also handle up to 12/24 I/O modules.

Digital inputs and outputs

8 channels • input voltages from 24 V ... 250 V

Analog inputs and outputs (12 bit resolution) 8 channels

Drive Bus Communication

The Drive Bus Communication module Cl854 provides another fast optical DDCS communication channel to the drives


Safety functions

Many different kinds of safety functions are available and requirements differ from application to application.


Safety functions are always an option.

Safety circuits, including safety relays, will be included according to customer specification.


Overview Enclosed converter DCS800-A-0020 ... 0350 (D1/D2/D3-350)

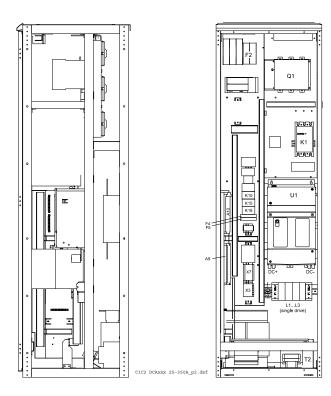

DCS800-A-0020 ... 0350 standard group drive

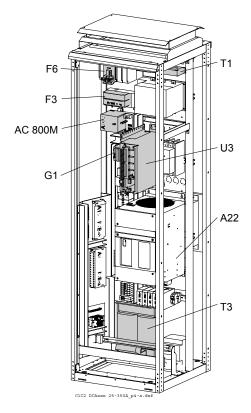


DCS800-A-0020 ... 0350 group drive with selected options (shaded)

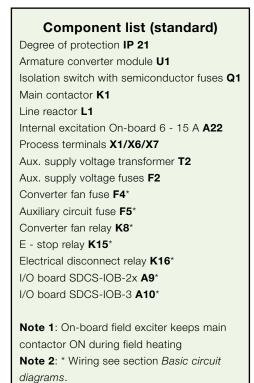


Component list (options)


Excitation contactor K3 Excitation line reactor L3 Excitation fuse F3 Excitation autotransformer T3 Excitation unit DCF803/804 U3 Residual current detection T1 Motor fan starter contactor K6 Motor fan starter thermal overload F60 Motor fan starter fuses F6 Advant controller AC 800M 24 VDC power supply G1


Note 3: Not all options are shown. For more options see section *Mechanical options* and *Electrical options*!

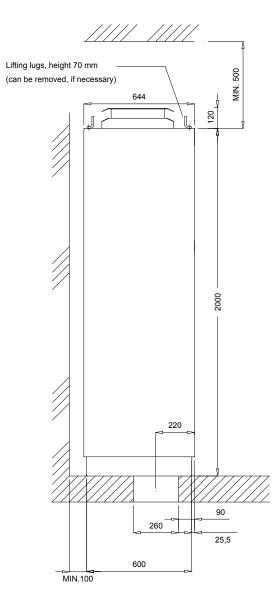

DCS800-A-0020 ... 0350 dimensions group and single drive

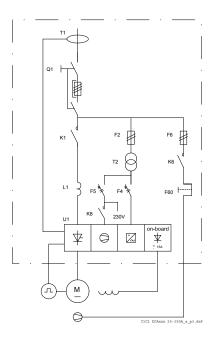

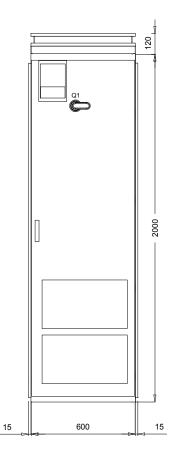

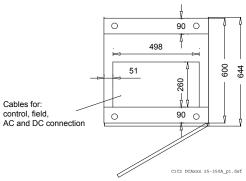



Note 4: For more details (e.g. losses and weight) see *tables on page 43 and 44*.

Note 5: All enclosed converters are available as group and single drives. Group drive require the option horizontal busbars.


DCS800-A-0020 ... 0350 single line diagram group and single drive

Overview Enclosed converter DCS800-A-0470 ... 1000 (D3/D4)

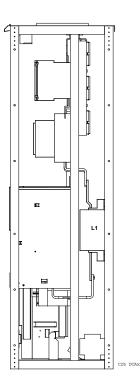

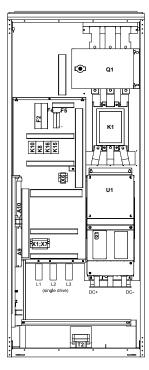

DCS800-A-0470 ... 1000 standard group drive

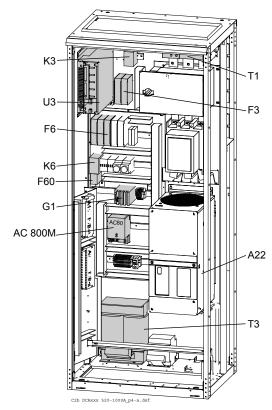

DCS800-A-0470 ... 1000 group drive with selected options (shaded)


Component list (standard)
Degree of protection IP 21
Armature converter module U1
Isolation switch with semiconductor fuses Q1
Main contactor K1
Auxiliary relay K10
Line reactor L1
Internal excitation On-board 20 - 25 A A22
Process terminals X1/X6/X7
Aux. supply voltage transformer T2
Aux. supply voltage fuses F2
Converter fan fuse F4 *
Auxiliary circuit fuse F5*
Converter fan relay K8*
E - stop relay K15 *
Electrical disconnect relay K16*
I/O board SDCS-IOB-2x A9*
I/O board SDCS-IOB-3 A10*
Note 1: On-board field exciter keeps main

Note 1: On-board field exciter keeps main contactor ON during field heating Note 2: * Wiring see section Basic circuit diagrams.


Component list (options)

External excitation DCF803/804 U3 Excitation contactor K3 Excitation fuse F3 Excitation autotransformer T3 Residual current detection T1 Motor fan starter contactor K6 Motor fan starter thermal overload F60 Motor fan starter fuses F6 Advant controller AC 800M 24 VDC power supply G1


Note 3: Not all options are shown. For more options see section *Mechanical options and Electrical options*!

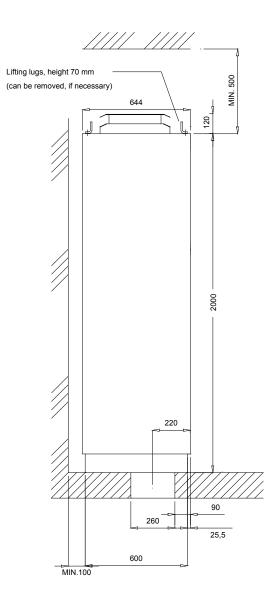


DCS800-A-0470 ... 1000 dimensions group and single drive

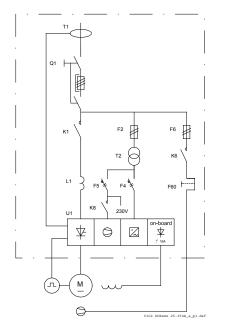


DCS800-A-0470 \ldots 1000 single line diagram group and single drive

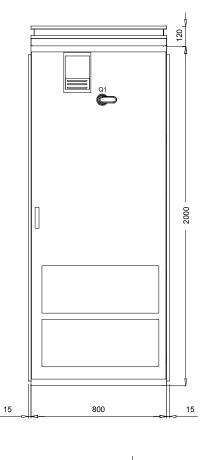

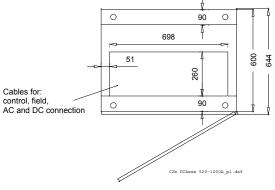


Note 4: For more details (e.g. losses and weight) see *tables on page 43 and 44*

Note 5: All enclosed converters are available as group and single drives. Group drive require the option horizontal busbars.

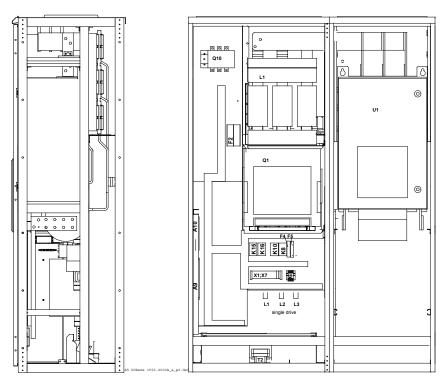

Overview Enclosed converter DCS800-A-(900)1200 ... 2000 (D5)

DCS800-A-(900)1200 ... 2000 standard group drive

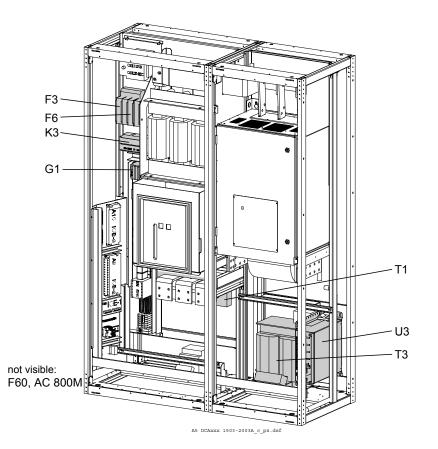

DCS800-A-(900)1200 ... 2000 group drive with selected options (shaded)


Component list (standard) Degree of protection IP 21 Armature converter module U1 Circuit breaker Q1 Isolation switch with fuses for aux. supply voltage Q10 Auxiliary relay K10 Line reactor L1 Process terminals X1/X6/X7 Aux. supply voltage transformer T2 Aux. supply voltage fuses F2 Converter fan fuse F4* Auxiliary circuit fuse F5* Converter fan relay K8* E - stop relay K15* Electrical disconnect relay K16* I/O board SDCS-IOB-2x A9* I/O board SDCS-IOB-3 A10* Note 1: This standard list does not include

any options or the excitation! Please choose the excitation from the options list. **Note 2**: * Wiring see section *Basic circuit diagrams*.


Component list (options)

Internal field exciter FEX425 INTERNAL 25 A External excitation DCF803/804 U3 Excitation contactor K3 Excitation fuse F3 Excitation autotransformer T3 Residual current detection T1 Motor fan starter contactor K6 Motor fan starter thermal overload F60 Motor fan starter fuses F6 Advant controller AC 800M 24 VDC power supply G1


Note 3: Not all options are shown. For more options see section *Mechanical options and Electrical options*!

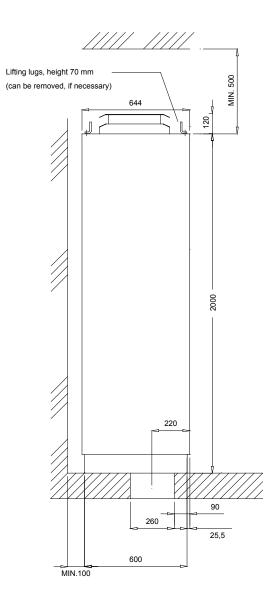

DCS800-A-(900)1200 ... 2000 dimensions group and single drive

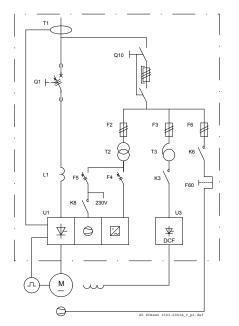


DCS800-A-(900)1200 ... 2000 single line diagram group and single drive

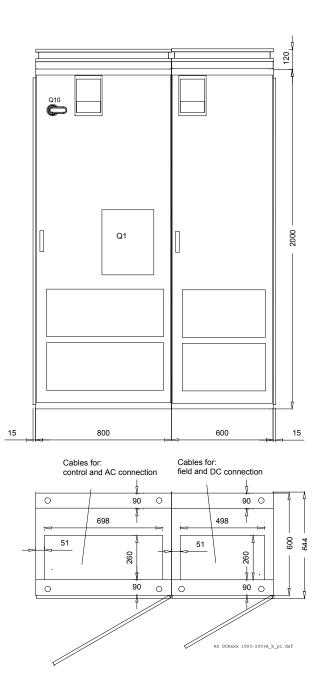


Note 4: For more details (e.g. losses and weight) see *tables on page 43 and 44*.

Note 5: All enclosed converters are available as group and single drives. Group drive require the option horizontal busbars.

 
Note 6: For easy connection of cables use additional incoming cabinet DCA635 (see *section Incoming DCA635*).




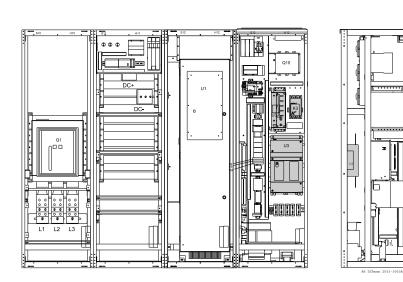

DCS800-A-2050 ... 3000 standard single drive (left hand connection)

 Component list (standard) Degree of protection IP 21 Armature converter module U1 Circuit breaker Q1 Isolation switch with fuses for aux. supply voltage Q10 Auxiliary relay K10 Process terminals X1/X6/X7 Aux. supply voltage transformer T2 Aux. supply voltage fuses F2 Converter fan fuse F4* Auxiliary circuit fuse F5* Converter fan relay K8* E - stop relay K15* Electrical disconnect relay K16* I/O board SDCS-IOB-2x A9* I/O board SDCS-IOB-3 A10* Note 1: This standard list does not include any options or the excitation! Please choose



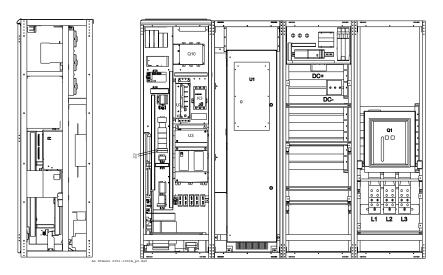

DCS800-A-2050 ... 3000 standard single drive (right hand connection)

Component list (options)

Excitation U3/K3


DCF803/804; to 50 A

or


DCS800-S01/S02; 25 ... 350 plus DCF506 - Overvoltage protection

Line reactor L1


Aux control of HSDC-breaker

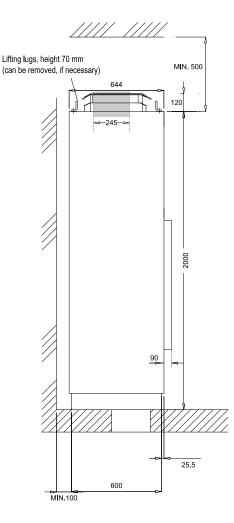


DCS800-A-2050 ... 3000 dimensions single drive (left hand connection)

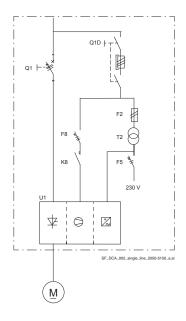


Single line diagram DCS800-A-2050 ... 3000 400 V ... 690 V with breaker

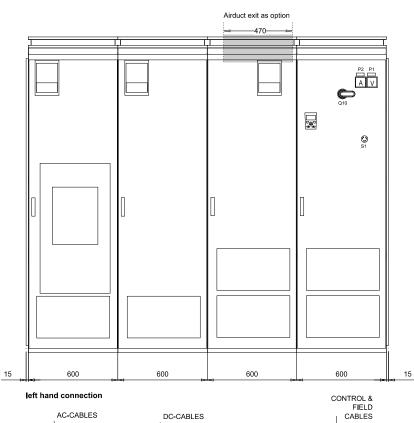

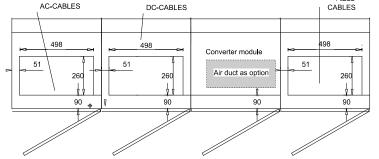


left hand connection

A6 DCAxxx 2053-3003A_a_p3.dsf

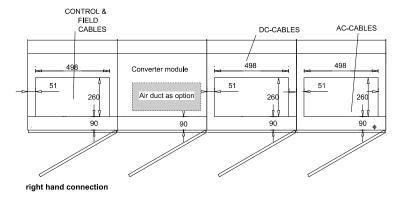

Note 3: Drive without line choke L1. Designed to be connected to dedicated transformers.


Overview Enclosed converter DCS800-A-1900 ... 3000 (D6, 790 V)

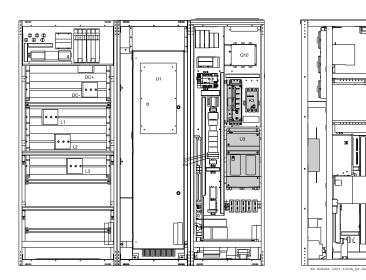

DCS800-A-1900 ... 3000 standard single drive (left hand connection)

Component list (standard) Degree of protection IP 21 Armature converter module U1 Isolation switch with fuses for aux. supply voltage Q10 Auxiliary relay K10 Process terminals X1/X6/X7 Aux. supply voltage transformer T2 Aux. supply voltage fuses F2 Converter fan fuse F4* Auxiliary circuit fuse F5* Converter fan relay K8* E - stop relay K15* Electrical disconnect relay K16* I/O board SDCS-IOB-2x A9* I/O board SDCS-IOB-3 A10* Note 1: This standard list does not include any options or the excitation! Please choose the excitation from the options list.

Note 2: * Wiring see section *Basic circuit diagrams*.

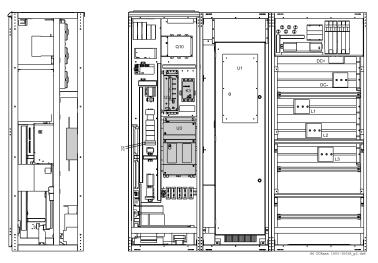

DCS800-A-1900 ... 3000 standard single drive (right hand connection)


Component list (options)

 
Excitation U3/K3


DCF803/804; to 50 A

or DCS800-S01 / S02; 25 ... 350 plus DCF506 - Overvoltage protection


Aux control of HSDC-breaker

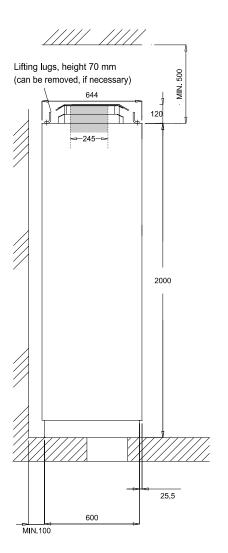



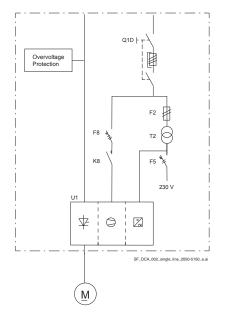


Single line diagram DCS800-A-1900 ... 3000 800 V without breaker

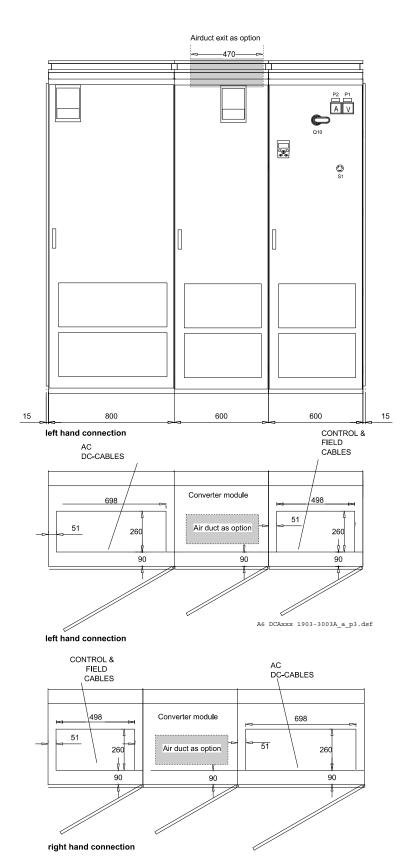

Note 3: Drive without line choke L1. Designed to be connected to dedicated transformers.

Overview Enclosed converter DCS800-A-2050 ... 3300 (D7)

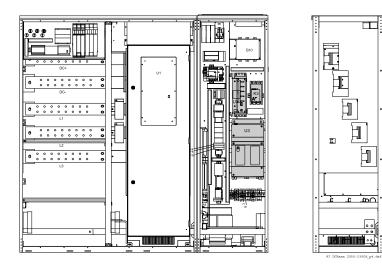


DCS800-A-2050 ... 3300 standard single drive (left hand connection)

Component list (standard)

Degree of protection **IP 21** Armature converter module **U1** Isolation switch with fuses for aux. supply voltage **Q10** Auxiliary relay **K10** Process terminals **X1/X6/X7** Aux. supply voltage transformer **T2** Aux. supply voltage fuses **F2** Converter fan fuse **F4*** Auxiliary circuit fuse **F5*** Converter fan relay **K8*** E - stop relay **K15*** Electrical disconnect relay **K16*** I/O board SDCS-IOB-2x **A9*** I/O board SDCS-IOB-3 **A10***

Note 1: This standard list does not include any options or the excitation! Please choose the excitation from the options list. Note 2: * Wiring see section *Basic circuit diagrams* Note 3: Circuit breaker Q1 on request

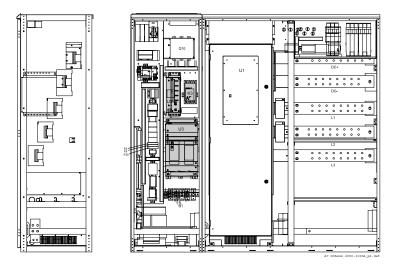

DCS800-A-2050 ... 3300 standard single drive (right hand connection)


Component list (options)

Excitation U3/K3


DCF803/804; to 50 A or DCS800-S01 / S02; 25 ... 350 plus DCF506 - Overvoltage protection

+P907 U1 control located in control cubicle (swing frame)


Aux control of HSDC-breaker

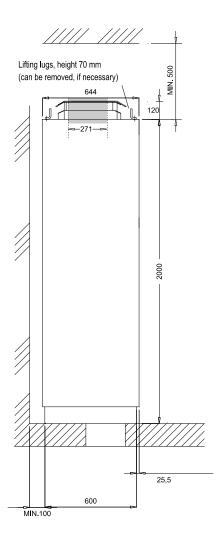

DCS800-A-2050 ... 3300 dimensions single drive (left hand connection)

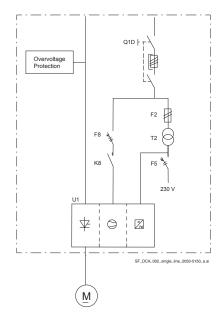


Single line diagram DCS800-A-2050 ... 3300 without breaker

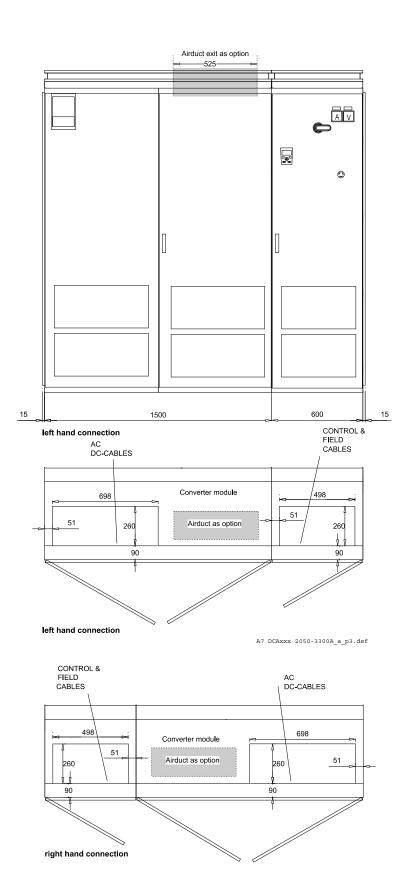

Note 3: Drive without line choke L1. Designed to be connected to dedicated transformers.

Overview Enclosed converter DCS800-A-4000 ... 5200 (D7)

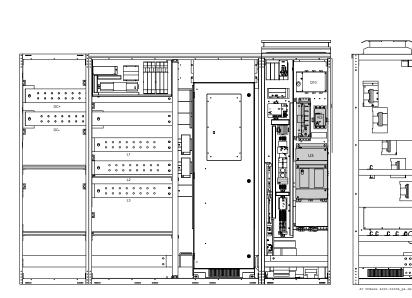


DCS800-A-4000 ... 5200 standard single drive (left hand connection)

Component list (standard)

Degree of protection **IP 21** Armature converter module **U1** Isolation switch with fuses for aux. supply voltage **Q10** Auxiliary relay **K10** Process terminals **X1/X6/X7** Aux. supply voltage transformer **T2** Aux. supply voltage fuses **F2** Converter fan fuse **F4*** Auxiliary circuit fuse **F5*** Converter fan relay **K8*** E - stop relay **K15*** Electrical disconnect relay **K16*** I/O board SDCS-IOB-2x **A9*** I/O board SDCS-IOB-3 **A10***

Note 1: This standard list does not include any options or the excitation! Please choose the excitation from the options list. Note 2: * Wiring see section *Basic circuit diagrams* Note 3: Circuit breaker on request

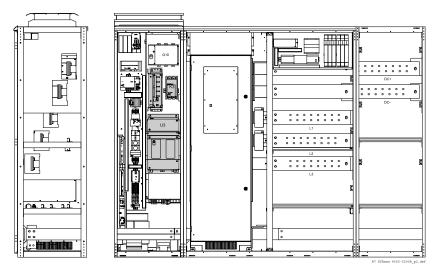

DCS800-A-4000 ... 5200 standard single drive (right hand connection)

Component list (options)


Excitation U3/K3

DCF803/804; to 50 A or DCS800-S01 / S02; 25 ... 350 plus DCF506 - Overvoltage protection

Circuit breaker Q1

+P907 U1 control located in control cubicle (swing frame)

Aux control of HSDC-breaker

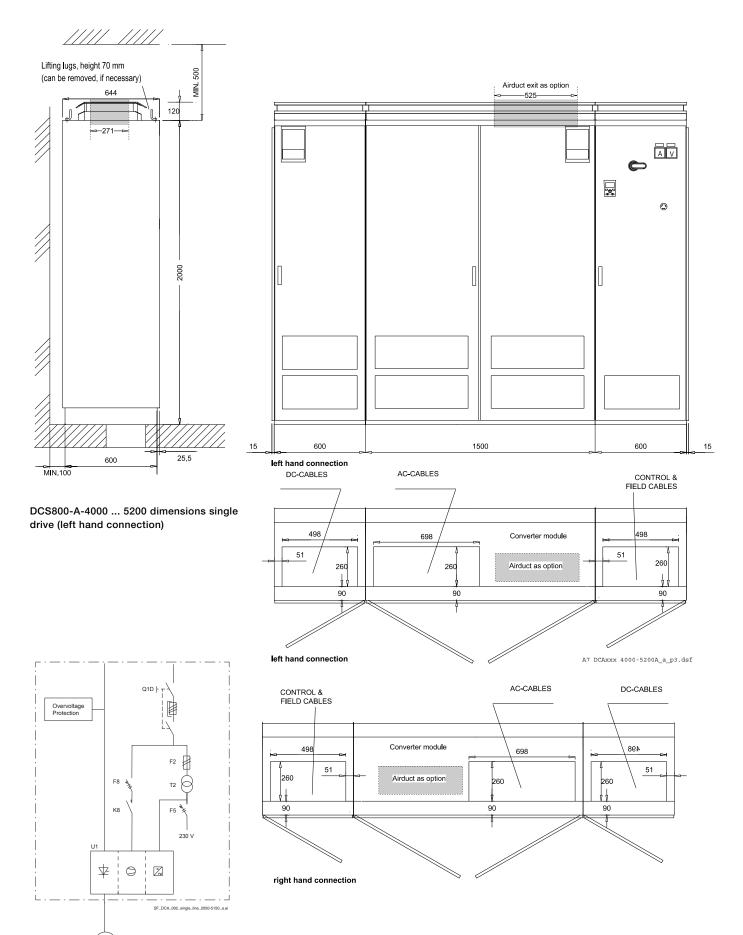


Note 3: Drive without line choke L1. Designed to be connected to dedicated transformers.


Single line diagram DCS800-A-4000 ... 5200 without breaker

M

Overview Enclosed converter Series D7P in Large Drive design

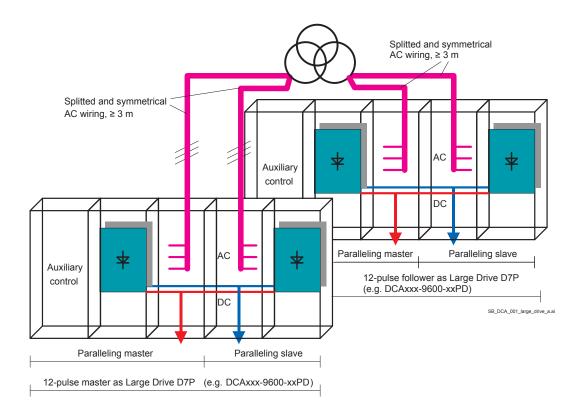

Configuration of 12-pulse parallel (12-pulse master and follower) in combination with hard parallel (paralleling master and slave)

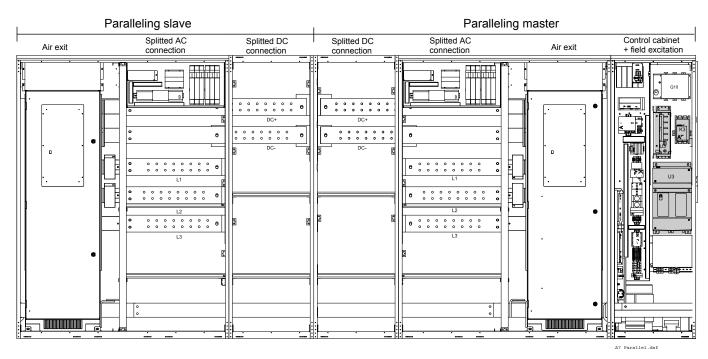

Layout of DCS800-A0x-9600-xxPD + three-phase field exciter (as option)

DCS800-A Mechanical options

CE mark

Requires options of EMC regulation and cable marking.

 EMC procedure according to part list check for Converters 25 A up to 5200 A.
 The DCS800-A converters and their options do not require an EMC-modified cabinet.

Note: see also Technical Guide 3ADW000163

Marking of conductors
 Conductors, cables and busbars are provided with either
 Standard Marking or Special Marking as an option.

Three different cable markings are available

 Standard Marking (not sufficient for CE mark) the main circuit input and output connections and the ribbon cables are marked. Marking is made by imprints, adhesive labels, pliotex PT-V rings or equivalent.

 
Class A2 plus

This cable marking complies with Standard EN60204 for CE marking.

Conductors between

- converter module and


- apparatus (e.g. contactor, switch) are marked with terminal numbers



The marking is done for long conductors and short obvious conductors.

Class B1

 In addition to the marking A2 cable marking provides the apparatus symbols.



Standard Design is IP21

Air inlet 8 mm longitudinal slots, air outlet same as air inlet plus a air ventilation hood on the top.

Insect screen in air inlet / outlet (IP31)

To clean the incoming air in dirty environment. Only in combination with gland plate and bottom plate. Insect screens reduce the rated current of the enclosed converters. The reduction is calculated by DC DriveSize.


Air inlet filters (IP41)

Air input IP41, air output standard IP21.

To clean the incoming air in dirty environment. Only in combination with the option gland plate and bottom plate. Air inlet filters reduce the rated current of the enclosed converters. The reduction is calculated by DC DriveSize.

IP54R

 The IP54R cabinet designed (option) to allow cooling by supply air duct of a recirculation air cooling system. The air entry (left or right side) and the air exit (top) are realized by rectangular flanges (400 x 600 mm). Ventilation shafts of the supply air



duct to the air water recirculation heat exchanger are connected to these flanges.

Gland plate and bottom plate

Cable glands for control-, field- and AC cables located in the bottom plate.

Bottom plate (without cable holes)

The cable holes must be drilled by the customer.

Bottom plate with conductive sleeves (according to EMC)

Bottom plate are equipped with conductive sleeves which provide simple cable screen connection. The bottom plate is not required for CE mark.

Special color (according to RAL standard)

Standard color is light grey RAL7035. Outside color of a cabinet can be chosen freely according to RAL standard. Special colors on request.

Key lock

For this doors

- a triangular key is standard
- a safety key lock is an option.

End panels

End panels have to be chosen to make a complete cabinet. For a line-up only one pair of panels is needed.

Horizontal AC busbars

Horizontal busbars are used to feed the entire line-up from the incoming supply section.

Tin plated copper busbars inside the cabinet are optional.

- without AC busbars => single drive
- copper (tin plated possible), 1000 A_{AC} => group drives
- copper (tin plated possible), 2000 A_{AC} => group drives

- copper (tin plated possible), $3000 \text{ A}_{ACWW} =>$ group drives Current rating depends on the power needed. Maximum current is 3000 A for horizontal AC-busbars. 4000 A incoming sections should be placed in the middle of a line up, in order to distribute the AC-current to left and right side.

AC cable connection for single drives

- Bottom entry/exit is standard and is included in converter basic design.
- Top entry/exit on request (needs additional engineering).

Control cable connection

- Bottom connection is standard and is included in converter basic design.
- Top connection on request.

Air circuit breaker

- Air circuit breaker is optional for drives with 4000 A and 400 ... 690 $\rm V_{\scriptscriptstyle AC}.$
- Air circuit breakers for more than 690 V_{AC} or ≥ 4800 A on request.

DCA680 Additional empty cabinets (without end panels and bottom plate)

Empty cabinet without end panels are available.

Depth 600 mm:

200 mm - busbar joining cabinet to connect shipping splits

Depth 600 mm *:
 400, 600, 800, 1000 mm - empty cabinet

* Bottom plate with conductive sleeves as option

Bottom plate are equipped with conductive sleeves which can provide simple cable screen connection.

Note1:

If a line up is splitted into several transportation segments an additional joining cabinet is needed per segment (except the last segment) for connection.

Note2:

Max. length of one transportation segment is 3.40 m.

EMC-Filters for drives cabinets

- Located in separate cabinet next to drive cabinet.
 Separate cabinet (on request).
- Instead of EMC filters a dedicated transformer can be used.

12-Pulse Configuration parallel, serial, sequential

The converters can be ordered with connection between 12-pulse master and 12-pulse follower. For the 12-pulse serial the emergency short circuit busbars are available.


12-pulse parallel configuration available for: 20 A ... 5200 A, 230 ... 1000 (1190) V_{AC}

12-pulse serial and sequential configuration available for: 900 A ... 2000 A, 230 ... 345 $V_{_{AC}}\,per$ D5 converter 2050 A ... 5200 A, 230 ... 600 $V_{_{AC}}\,per$ D6, D7 converter


Serial sandwich configuration available for:

- 1900 A ... 3000 A, 230 $V_{_{AC}}\ldots$ 800 $V_{_{AC}}$ per D6
- 2050 A ... 5200 A, 230 $V_{\rm\scriptscriptstyle AC}$... 1000 $V_{\rm\scriptscriptstyle AC}$ per D7

Note: see also Manual for 12-pulse operation 3ADW000115

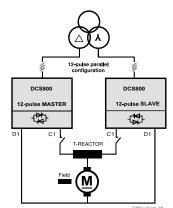

12-pulse parallel configuration

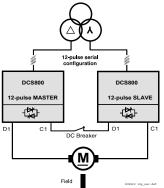

12-pulse serial configuration

DCS800-A Electrical options

Description of Electrical options 2-phase Field Exciters

(assembled in armature converter cabinet > 1000 A) Package includes

 Field supply
 The field exciter for enclosed converter is a complete field supply package (except autotransformer). The two phase line reactor is included.

Package does not include

- Autotransformers

An autotransformer is used to adapt the supply voltage of the single-phase field exciter and to reduce voltage ripple. Available units

- DCF803-0035 35 A, single-phase or three-phase operation outsisde converter module maximum input voltage 600 V
- DCF803 30, 50 A, outside converter module
- DCF804 7, 16, 30, 50 A, outside converter module

Options for two-phase field exciters

 Autotransformers 400 V ... 690 V (single-phase)
 The maximum input voltage of 690 V for DCF803-0050 / DCF804-0050.

Higher input voltages require an insulating transformer. An autotransformer is recommended for single-phase DCF803, if the rated field voltage of the motor is lower than 60 % of the rated field AC supply voltage.

- Two different sizes available.

Transformer 3.0x; AC input 400 ... 500 V Transformer 3.1x; AC input 525 ... 690 V

7 A - 57 A autotransformers. The autotransformer is selected according to the customer specification of the AC field supply voltage.

Note: In the standard design the field exciter is connected to the main supply.

Typing a different voltage into the AC FIELD SUPPLY (DC DriveSize) the wiring is automatically changed to external field supply terminals.

Safety circuits

Ordering STO and SS1 safety circuits according ordering guide page 48.

Interfaces

Fieldbus

Adapter for several fieldbus systems available (e.g. Profibus, Modbus, etc.)

I/O digital connection board

- SDCS-IOB-23 is the standard equipment for a DCS 800-A. Control voltage for relay outputs max. 230 V_{AC} Digital input voltage 230 V_{AC}
- Changing to SDCS-IOB-21 (option) Control voltage for relay outputs max. 230 $\rm V_{AC}$ Digital input voltage 24 / 48 $\rm V_{DC}$
- Changing to SDCS-IOB-22 (option) Control voltage for relay outputs max. 230 V_{AC} Digital input voltage 115 V_{AC}

RDIO / RAIO I/O Extension modules

This plug-in option offers two additional relay outputs. They can be used, for example, in a Master-Follower application for interlocking functions. All the relays can be programmed to on/off by parameter. Alternatively, fieldbus can be used to control any external components in the system.

RDIO-01 Digital extension module

- 3 x Digital Input
- 2 x Digital Output (as relay)
- RAIO-01 Analog extension module
 - 2 x Analog Input
 - 2 x Analog Output
 - 2 x Temperature measurement

AIMA Extension socket

I/O channel to AIMA-01 board together with SDCS-COM-8 board

DC Transducer

Additional measurement devices for customer signals

- PT 100 measurement device (230 $\rm V_{AC}$ supply is needed)
- PTC measurement device (Custorapid 230 V_{AC} supply is needed)
- DC-DC transducer (0 ... 10 V \rightarrow 4 ... 20 mA; 24 V_{DC} supply is needed)
- − DC-DC transducer (-10 ... +10 V → 4 ... 20 mA; 24 V_{DC} supply is needed)

Branching unit NDBU-95

The NDBU-95 is available in the armature converter cabinet, if no DCF803 / 804 and not in combination with 3-phase field exciter (DCS800-F0x) is used.

Separately the NDBU-95 is available in a 400 mm cabinet.

Other accessories

Anticondensation heater of cabinet

- 50 W heater per cabinet to prevent condensation. Supplied by 230 V_{AC} from customer via terminals (X19).

Lighting of the cabinet

– LED lighting, including door contact. Supplied by 230 $V_{\rm AC}$ / 115 $V_{\rm AC}$ from customer via terminals (X19).


Interface to external UPS

– Separate 230 $\rm V_{AC}$ input terminal to supply all necessary components for serial communication (including monitoring network [DW], branching unit NDBU), if the DCS800-A cabinet is switched off.

230 V UPS performed by customer.

Plug socket

– The plug socket is wired to 230 $\rm V_{\rm AC}$ customer terminal (X19) and the housing is according to German standard.

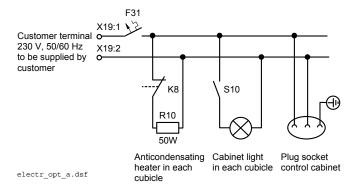

Latching function

 Interface relays K11, K12 for local I/O control (ON, RUN, START, STOP)

Residual current measurement with transformer used for earthed (TN ,TT) networks.

Earth fault detection includes a zero measuring current transformer T1 connected to the mains of the drive. The monitoring operates on the current summation principle and a converter fault can be enabled in case of an earth fault (not possible for isolated mains network).

The transformer is available for 20 ... 2000 A.

The transformer is available for 2050 \dots 3000 A in combination with a circuit breaker.

Insulation monitor IRDH275-4 or IDRH375-4 (A90) earth

fault detection for isolated (IT) networks. An insulation monitor device can be used to continuously measure the insulation status in an unearthed network. The insulation monitor is installed between mains and protective earth (PE). If the insulation resistance is below adjusted values output relays are activated.

For detection of earth faults in both AC and DC circuits. Available for converter ratings 903 ... 5200 A. (25 ... 1000 A on request).

The monitor can be mounted inside the cabinet or at the door. For redundant measurement 275 B type is an option.

Galvanic isolation necessary if there is any customer requirement and rated voltage from 790 V and higher (applicable for 2050 A \dots 5200 A_{nc}).

DCS800-A enclosed converters measure the actual voltage by means of high ohmic resistors. This measurement is according the IEC standard (2 Mohm for voltages starting at 790 V).

The option galvanic isolation is a complete isolation of this voltage measurement channels.

This isolation is performed a by transformer for the AC voltage and a galvanically isolated transducer for the DC voltage. This option could also be required for 12-pulse serial/ sequential above 2 x 345 $V_{\rm AC}.$

Motor fan starter

Only one starter is possible in the standard design.

- D1 size (0020 ... 0140) 0.63 A ... 6.3 A
- D2/D3 size (0230 ... 0520) 0.63 A ... 12.5 A

- **D4 ... D7 size (0680 ... 5200)** 6.30 A ... 25A

For overload and short-circuit protection of an external AC (fan) motor such as a motor cooling fan. Available ratings are 0.63 ... 25 A, 400V, 500 V, 600 V, 690 V. The starter output is supplied by AC mains voltage or auxiliary voltage. There is no transformer included.

A second starter requires an additional cabinet DCA680.

=> Do not forget to fill in the current and voltage into DC DriveSize!


Note: In the standard design the motor fan is connected to the main supply.

Typing a different voltage into the SUPPLY VOLT (DC DriveSize) the wiring is automatically changed to external fan supply terminals.

Location of 3-phase exciter DCS800-A0x-1900 ... 5200 (D6/D7)

Unit type	DC I	Power	Size
		loss	
525 V	[A]	[kW]	
DCS800-F01-0020-05-C	16	0.58	D1
DCS800-F02-0025-05-C	22	0.58	
DCS800-F01-0045-05-C	40	0.65	
DCS800-F02-0050-05-C	45	0.65	
DCS800-F01-0065-05-C	57	0.72	
DCS800-F02-0075-05-C	67	0.72	
DCS800-F01-0090-05-C	84	0.85	
DCS800-F02-0100-05-C	92	0.85	
DCS800-F01-0180-05-C	160	1.40	D2
DCS800-F02-0200-05-C	180	1.40	
DCS800-F01-0315-05-C	285	1.81	D3
DCS800-F02-0350-05-C	300	1.81	
			:

DC I IDC I continuous (IdN)

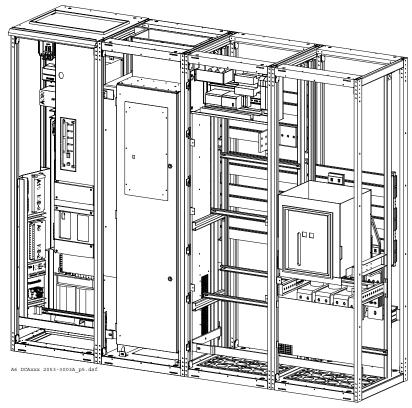

Electrical options of Enclosed converter DCS800-A-2050 - 3000

Option three phase field exciters assembled in armature circuit enclosed converter DCS800-A0x-1900 ... 5200

Field supply (DCS800-S0x-0020 ... 0350 converter modules, 230 ... 500 V AC + overvoltage protection) Field exciters integrated in enclosed converters are

available as packages. The packages includes all necessary parts (e.g. overvoltage protection DCF506, line reactor). Autotransformers for field supply assembled in an enclosed converter are excluded.

- All 3-phase field exciters have to be ordered separately.
- 3-phase field exciter (DCS800-F0x ... 0350 units) can be integrated in an armature cabinet together with converter units size D6/D7 (1900 ... 5200). More than 285 A / 300 A excitation are available in separate cabinets (s. chap. DCS800-A2x 3-phase field exciters in a separate cabinet).


In order to get a complete field supply following additional components have to be considered.

Auto- and insulating transformers

An autotransformer is used to have a suitable supply voltage level for a field exciter and to reduce the voltage ripple. For each 3-phase field exciter an autotransformer is dimensioned individually.

Placing the transformer inside the cabinet depends on the size of the transformer. For dimensioning please contact ABB. Higher input voltages (> 600 V / 690 V) require an insulating transformer.

Single line diagram DCS800-A-1900 (D6) ... 5200 (D7) including field supply

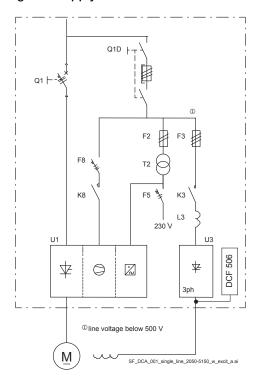

Single line diagram 1900 ... 5200 units with 3-phase field

DCA630 Incomings

Incoming Supply Sections for Line-ups DCA63x

Incomings DCA63x are described in options for converters. These cabinets must only be selected if the drive system consists of group drives from 20 up to 2000 A since these converters are supplied by horizontal busbars.

In the incoming supply section (DCA63x) only busbars are used. The connection to the AC supply can be made by cables or busbars. The cable / busbar entry is at the bottom of the incoming supply section.

Cable or busbar connection for 1000 A and 2000 A is standard.

Cable connection for 3000 A and 4000 A is on request, busbar connection is standard.

The cabinets standard protection class is IP21.

Basic design

Rated voltage: Rated frequency: Rated current: Short circuit ratings: idyn= 105 kA (peak) 400 V, 500 V, 600 V, 690 V 50 Hz or 60 Hz 1000 A, 2000 A, 3000 A, 4000 A 50 kA (1 sec.)

Note: AC horizontal busbars for 4000 A are not available. The 4000 A incoming supply section must be located in the middle of the line-up.

Cabinet Modifications for Incoming Supply Sections DCA630, 631, 632

CE mark

Requires options for EMC regulation and cable marking.

- EMC procedure according to part list check see section DCS800-A Mechanical options
- Marking of conductors see section DCS800-A Mechanical options
- Standard: (not sufficient for CE mark): see section DCS800-A Mechanical options
- Class A2 Plus: Special Marking according to EN60204-1 see section DCS800-A Mechanical options
- Class B1: Special Marking see section DCS800-A Mechanical options

EMC filters in separate EMC-cabinets next to incoming cabinet (DCA640)

- 400 ... 500 $\rm V_{AC}$, 320 ... 600 $\rm A_{AC}$
- 600 ... 690 V_{AC}, 600 ... 2500 A_{AC}
 Please select size of filters according to sum of all rated converter currents minus 10 %. The current mentioned above is the nominal current (Irms) on the line side.
- Instead of EMC filters a dedicated transformer can be used.

Bottom plate with conductive sleeves

Bottom plate are equipped with conductive sleeves which provide simple cable screen connection.

Insulation monitor IDRH 275-4 (A90) earth fault detection for isolated (IT) networks

An insulation monitoring device can be used to continuously measure the insulation status in an unearthed network. The insulation monitor is installed between mains and protective earth (PE). If the insulation resistance is below adjusted values output relays are activated. This option includes a 230 V transformer.

For detection of earth faults in both DC and AC circuits. The insulation monitor can be mounted inside the cabinet or at the door (DCA630, 631, 632).

AC current measurement

- 3-phase (meters and current transformers) All three phases are monitored by means of current transformers and meters. Location of the meters is in the door of the incoming supply section.

AC voltage measurement

- Meter and a switch
- All three phases are monitored by means of a switch and a meter. Location of the switch and the meter is in the door in the incoming supply section. No transformers are used.
- With voltage transformers Voltage transformers are included for AC voltages above 660 V.

Arc detecting

 An arc detecting relay is used to supervise the AC bus bars. The type TVOC can handle up to 9 detectors.



Arc detecting

- Detecting elements with fibre optic

Decting element

- Overcurrent relay for arc detecting. An overcurrent relay is used in combination with an arc detecting relay to eliminate false trips. The overcurrent relay can use the current transformers used by the measurement circuits. For exam-



Current transformers

ple if an AC current measurement is used there is no need for extra current transformers for the overcurrent relay.

- If no AC current measurement is used, three current transformers are needed for the overcurrent relay.
- Location in seperate 400 mm cabinet for DCA631 and DCA 632

Anticondensation heater of incoming section

- 50 W heater to prevent condensation. Supplied by 230 $V_{_{\!A\!C}}$ from customer via terminals (X19)

Branching unit NDBU-95

The branching unit for DriveWindow and channel 0 optical networks can be located inside the incoming supply DCA630, 631, 632 (max. 2).

- NDBU-95
- NPSM-01 24 V_{DC} power supply is required

Lighting of the cabinet

– LED lighting, including door contact. Supplied by 230 $V_{_{\!A\!C}}\,/$ 115 V_{AC} from customer via terminals (X19).

End panel left or right

Isolation switch option (for DCA631)

- option for insulation switch
- Electrical interlocking It is possible to have an interlocking between isolating switch and earthing switch. Therefore the isolating switch needs an interlocking coil.

Circuit breaker option (for DCA632)

The circuit breaker is equipped with

- Overcurrent detection
- Undervoltage detection
- Auxiliary contacts (2 NC, 2 NO)

Earthing switch

available for 1000 A, 2000 A, 3000 A supply

 
- Switch
 - An earthing switch can be used to ground the AC busbars to earth for safety reasons when work must be done in the line-up.
- Electrical interlocking It is possible to have an electrical interlocking between an earthing switch and a supply side isolating switch or circuit breaker. Therefore the earthing switch needs an interlocking coil.




Earthing switch




Interlocking coil



Incoming DCA630 (without switch)

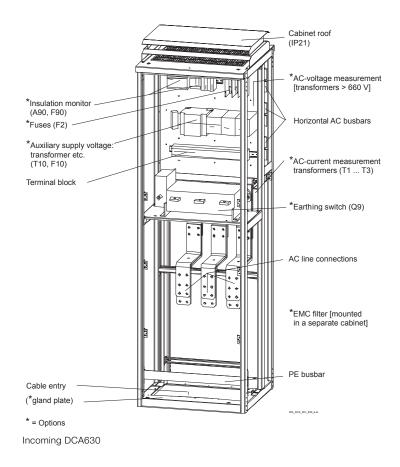



Single line diagram Incoming DCA630

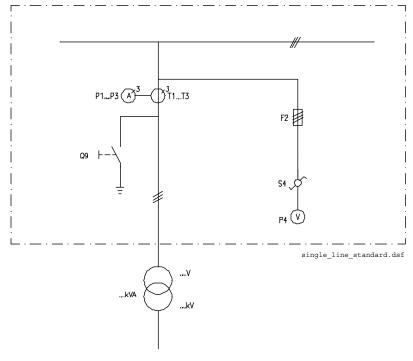

- Note 1: Dimensions see table 2, section Dimensions Converter cabinet
- Note 2: Available in 1000 A, 2000 A, 3000 A and 4000 A AC

Incoming DCA631 (isolation switch)

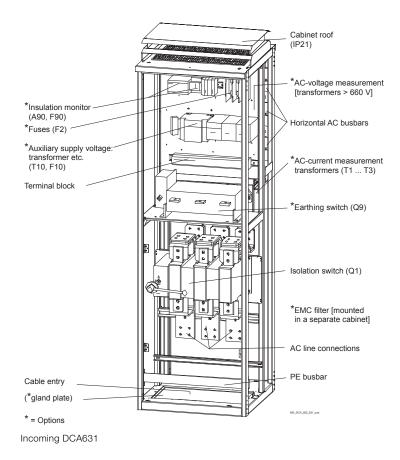


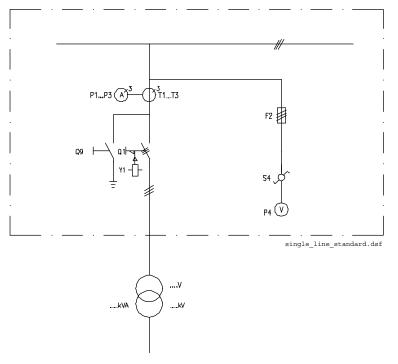

- Note 1: Dimensions see table 2, section Dimensions Converter cabinet
- Note 2: Available in 1000 A, 2000 A and 3000 A - AC


Single line diagram Incoming DCA631

Incoming DCA632 (circuit breaker)

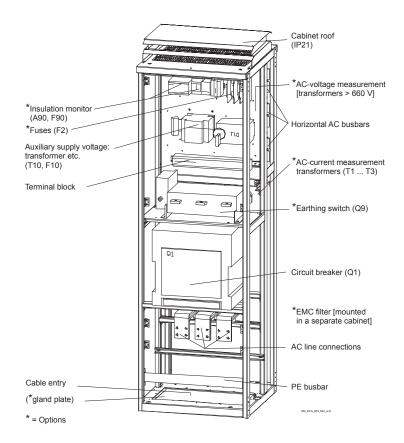


Incoming DCA632

Single line diagram Incoming DCA632

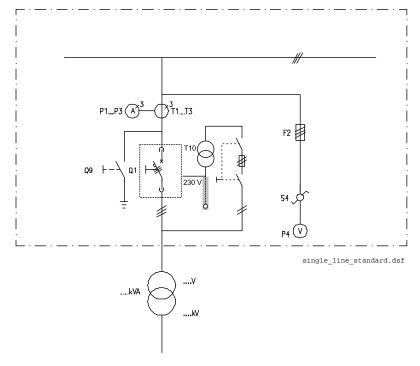


- Note 1: Dimensions see table 2, section Dimensions Converter cabinet
- Note 2: Available in 1000 A, 2000 A, 3000 A and 4000 A AC

Incoming DCA635 (without switch and options)

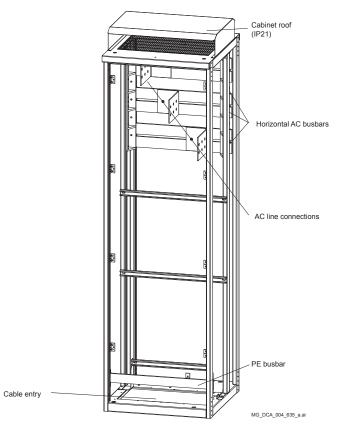

Incoming DCA635

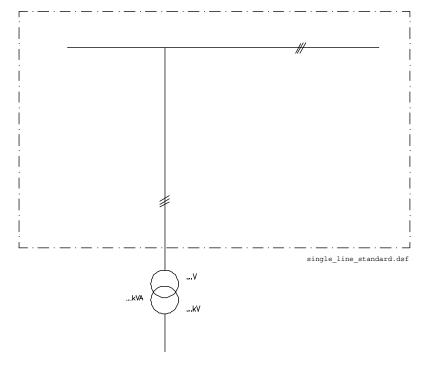

- Note 1: Dimensions see table 2, section Dimensions Converter cabinet
- Note 2: Available in 1000 A, 2000 A and 3000 A - AC

Single line diagram Incoming DCA635

DCS800-A2x 3-phase field exciters in a separate cabinet

DCS800-A2x

These converters are intended to supply high inductive loads like motor fields or chokes. They are equiped with three phase DCS800-S01 or DCS800-S02 converter modules plus DCF506 over voltage protection.


Options

Auto- and insulating transformers

An autotransformer is used to have a suitable supply voltage level for a field exciter and to reduce voltage ripple. For each 3-phase field exciter an autotransformer is dimensioned individually.

For dimensioning please contact ABB Automation Products GmbH, Ladenburg, Germany.

Higher input voltages (> 600 V / 690 V) require an insulating transformer.

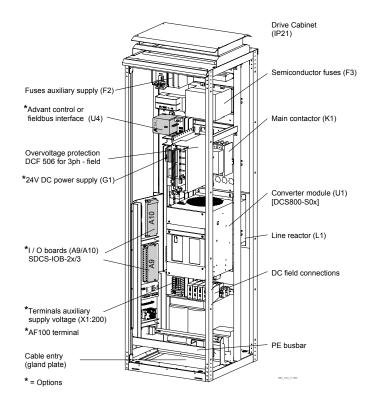

Q1 K1 F2 K1 F2 F2 F3 F4 V1 K8 230V $CA62x_single_line.dsf$ Field exciter in a separate cabinet

Basic equipment

Degree of protection IP 21 Converter module U1 Line reactor L1 Transformer T2 only if required Overvolt. protect. DCF506 I/O board SDCS-IOB-2x I/O board SDCS-IOB-3 Fuses auxiliary supply F2 Auxiliary relays K8, K15, K16 Isolation switch Q1 Main contactor K1

Single line diagram of Field exciter DCAx2x

DCS800-A Door layout

Panels and Metering

Control panel in the door

- DCS800 control panel is always mounted on converter module inside the cabinet as standard
- Control panel socket on cabinet door for DCS800 control panel is an option

Meters in the door

- Analog meters Armature current meter - analog output drive Armature voltage meter - DC motor connection - Third meter
- The third meter is connected to AO1 of the converter (e.g. excitation current)

Buttons in the door

- Emergency stop Stop category 1 Safety category accoding to EN 954 B
- Electrical disconnect (coast stop) Stop category 0

Function opens all main contactors of the line-up and blocks the firing pulses of each converter allowing the motors to coast stop.

Note: Only one of the buttons, emergency stop or electrical disconnect, can be chosen at the same time.

Insulation monitor IDRH 375-4 (A90) earth fault detection for isolated (IT) networks.

An insulation monitoring device can be used to continuously measure the insulation status in an unearthed network. The insulation monitor is installed between mains and protective earth (PE). If the insulation resistance is below adjusted values output relays are activated. Type IDRH 375 is used for door mounting.

For detection of earth faults in both DC and AC circuits. Available for converter ratings 900 ... 5200 A, size D5 ... D7 and incomings (DCA630, 631, 632).



Armature voltage

The handle provides lockout and isolates the drive section from power

DCS800 Control Panel Door layout

DCA650 Overriding control

Fieldbus adapter modules

- R fieldbus adapter modules are available for different serial communications for control purposes
 - PROFIBUS-DP
 - DeviceNet
 - CANopen
 - ControlNet
 - Modbus
 - Ethernet

The adapters are located direct on the converter module.



Fieldbus adapter modules

To ensure serial communication during auxiliary supply failure the option 'Interface to external UPS' (230 V) is available.

Advant controller and S800 I/O System

The S800 I/O system consists of the control module (FCI, AC 800M), digital and analog I/O modules. The control module has a connection to several different bus systems and optical channels to connect the drives. The modules are mountable on mounting rails (DIN).

Note: see S800 User Guide (Doc no. 3BSE008878)

AF 100 field bus interface FCI

Within this AF 100 interface up to 12 drives can be connected.

Advant controller AC 800M

Powerful controller with several fieldbus interfaces. Drives can be connected with the optical module bus or optical Drive Bus (Cl 858) or via Profibus (Cl 851).

The above mentioned control modules can also handle up to 12/24 I/O modules.

 
Digital inputs and outputs 8 channels, input voltages from 24 V ... 250 V Analog inputs and outputs (12 bit resolution) 8 channels

Engineering Tool for Individual Programming

The Advant controller (AC 800M) are programmable controllers using Contol $^{\rm IT}$ Control Builder.


 Graphical editor for creating and modifying program diagrams
 Function-oriented engineering
 Windows-based application programming
 Online editing
 Constant and parameter value changes
 Connection changes
 Deleting/

Inserting function blocks or tasks • Program downloading to AC 800M • Temporary change of input terminal values • Displaying actual values from terminals



DCA650 - Control cabinet


- S800 option in a control cabinet:
 - CI810 (FCI)
 - PM864 (AC 800M)
 - +24 V power supply internal
 - NDBU-95 branching unit
 - Full range S800 I/O modules
 - AF 100 connection
 - Clusters extended and compact socket horizontal located
 - Clusters extended socket vertical located
 - Cabinet widths: 600, 800 mm

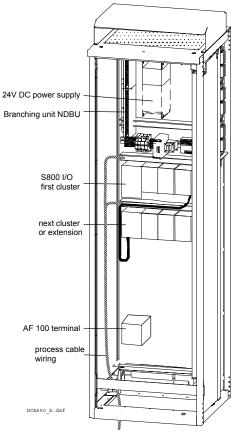

DCA650 cabinet


The DCA650 control cabinet is designed to control several drives assembled in one line-up. To control processes with many input and output signals the S800 I/O's can be included. The design is splitted in two different layouts:

 Horizontal clusters: This layout is recommend for short clusters with compact sockets. The process terminal are located at the side panel.



DCA650 control cabinet with horizotal clusters

Vertical clusters: This layout is recommended for long clusters with extended sockets normally without process terminals.

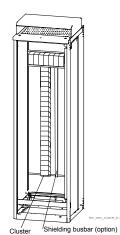

DCA650 control cabinet with vertical clusters

The standard design of this control cabinet takes care of the amount of control cables and EMC requirements (shielded connection) which limits the amount of S800 I/O modules.

S800 I/O, horizontal location

The upper area is reserved for power supply, fuses and other control circuits.

The lower area is prepared for maximum three clusters. The amount of S800 sockets depends on the cabinet size.

	600 mm	800 mm
	2 extended sockets +	4 extended sockets +
Possible layouts	advant controller	advant controller
per cluster	4 compact sockets +	8 compact sockets +
	advant controller	advant controller
Process /control	6 wholes D = 55 mm	6 wholes D = 55 mm
cable entry	2 slots 250 mm x 20 mm	2 slots 250 mm x 20 mm

Instead of an advant controller one extended or two compact sockets can be used.

The control cables are fixed to the side panel.

The process terminals are an option and also located at the side panel.

Maximum amount of process terminals:

250 terminals without the horizontal busbar option

140 terminals in combination with the horizontal busbar option because the back panel is moved to the front (e.g. group drive).

S800 I/O, vertical location

This option is only possible together with extended sockets. The AC 800M controller must be located in the top cluster and connected via TB 820 interface

The upper area is reserved for power supply, fuses and AC 800M clusters (+Drive Bus module).

The lower area is prepared for clusters and for the process cable wiring. The amount of S800 clusters depends on the cabinet size.

	600 mm	800 mm
	1 cluster	2 clusters
	7 extended sockets +	7 extended sockets +
	TB 820 Modul bus interf.	TB 820 Modul bus interf.
	1 cluster	1 cluster
Possible layouts	7 extended sockets +	7 extended sockets +
	TB 820 Modul bus interf. +	TB 820 Modul bus interf. +
	process terminals	process terminals
		1 cluster
		7 extended sockets +
		advant controller +
		2 process cable ducts
Process /control	6 wholes D = 55 mm	6 wholes D = 55 mm
cable entry	2 slots 250 mm x 20 mm	2 slots 250 mm x 20 mm

The amount of process terminals is limited to 180 Attention: The combination with the horizontal busbar option is not possible. So the cabinet must be located at the end of the line-up.

Process terminals


- The need of process terminals depends on:
- customer requirements
- selected sockets
- selected control voltage

Extended sockets

Extended sockets can supply the process with 24 V control voltage and analog supply voltage.

Therefore these sockets give the advantage to avoid process terminals in case of 24 V digital signals and analog circuits.


For 115 V and 230 V control circuit - process terminals are needed in every case.

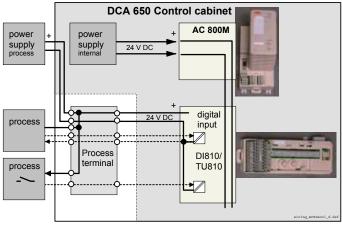

Wiring extended socket

Compact sockets

Compact sockets have smaller size, but process terminals are recommended.

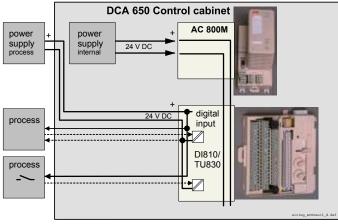

Wiring compact socket

The process terminal option includes:

- circuit diagrams
- wiring from the sockets to the process terminals
- input terminals for the process power supply
- marking of the process terminals in the same order as sockets

example: socket A1 -> terminals X A1:1, 2, 3 ...

Options

Process power supply

On request.

This power supply is needed to supply all process devices outside the cabinet. The rated power and rated voltage of the active process devices must be considered.

Shielding busbar

Shielding busbar is an option and used for small shielded control and process cables.

The cable shielding of the control and process cables must be connected.

Shielding of very thick cables should be connected at the cable entry.

Note: see Installation manual doc.no 3ADW000091.

Small cable can also be connected at a shielding busbar located in parallel to the terminals.

Other mechanical options

see chapter 3

- Horizontal busbars
- EMC bottom plate
- Cable marking A2 plus

DCS800-A Unit data

Environmental conditions

230 to 1000 V acc. to IEC 60038
± 10 % continuous; ± 15 % short-time *
50 Hz or 60 Hz
50 Hz ± 2 %; 60 Hz ± 2 %
50 Hz ± 5 Hz; 60 Hz ± 5 Hz
17 % / s

* = 0.5 to 30 cycles.

Please note: Special consideration must be taken for voltage deviation in regenerative mode.

Degree of protection	
Converter module and	
options (line chokes, fuse	
holder, field supply unit, etc.):	IP 00
Enclosed converters:	IP 20/21/31/41
Paint finish	
Converter module:	RAL 9002
Enclosed converter:	light grey RAL 7035

Sound pressure level

Size	Sound pressure level	Vibration			
	as module	enclosed conv.	as module		
D1	55 dBA	68 dBA			
D2	55 dBA	72 dBA			
D3	60 dBA	78 dBA	0.5 g, 5 55 Hz		
D4	66 70 dBA,	77 dBA			
	depending on fan				
D5	73 dBA	78 dBA	1 mm, 2 9 Hz		
D6	75 dBA	73 dBA	0.3 g, 9 200 Hz		
D7	82 dBA	80 dBA			

Environmental limit values

Permissible cooling air temperature:

- at converter module air inlet:	0 to +55°C
with rated DC current:	0 to +40°C
with different DC current:	+30 to +55°C
- Options:	0 to +40°C
Relative humidity (at 5 to +40°C):	5 to 95 %, no condensation
Relative humidity (at 0 to +5°C):	5 to 50 %, no condensation
Change of the ambient temp .:	< 0.5°C / minute
Storage temperature:	-40 to +55°C
Transport temperature:	-40 to +70°C
Pollution degree (IEC 60664-1,	2
IEC 60439-1):	
Site elevation	
< 1000 m above M.S.L.:	100 %, without current reduction
> 1000 m above M.S.L.:	with current reduction

North American Standards

In North America the system components fulfil the requirements of the table below.

Rated supply	Standards	.,
voltage	Converter module	Enclosed converter
to 600 V	UL 508 C	UL/CSA types: on
	Power Conversion Equipment	request
	CSA C 22.2 No. 14-95	
	Industrial Control Equipment,	
	Industrial Products	
	Available for converter modules	
	including field exciter units. Types	
	with UL mark:	
	 see UL Listing www.ul.com / 	
	certificate no. E196914	
	 or on request 	
> 600 V to	EN / IEC xxxxx see table below.	EN / IEC types: on
1000 V	Available for converter modules	request (for details
	including field exciter units.	see table below)

Regulatory compliance

The converter module and enclosed converter components are designed for use in industrial environments. In EEA countries, the components fulfil the requirements of the EU directives, see table below.

European union direct	tive Manufacturer's assurance	Harmonized standards					
		Converter module	Enclosed converter				
Machinery Directive							
98/37/EEC	Declaration of Incorporation	EN 60204-1	EN 60204-1				
93/68/EEC		[IEC 60204-1]	[IEC 60204-1]				
Low Voltage Directive							
73/23/EEC	Declaration of Conformity	EN 60146-1-1	EN 60204-1				
93/68/EEC		[IEC 60146-1-1]	[IEC 60204-1]				
		EN 61800-5-1	EN 61800-5-1				
		(EN 50178 [IEC])	EN 60439-1				
		see additional	[IEC 60439-1]				
		IEC 60664					
EMC Directive							
89/336/EEC	Declaration of Conformity	EN 61800-3 ①	EN 61800-3 ①				
93/68/EEC	(Provided that all installation instructions	[IEC 61800-3]	[IEC 61800-3]				
	concerning cable selection, cabling and EMC	① in accordance with 3ADW000032	1 in accordance with 3ADW000032 /				
	filters or dedicated transformer are followed.)		3ADW000091				

DCS800-A Enclosed Converter unit types

Unit type				current	DCIV	current	int. field	Power	Frame	
								current	loss	size
		100 %	1	100 %	1	1	200 %			
	[A]	15 min [A]	60 sec. [A]	[A]	120 sec. [A]	[A]	10 sec. [A]	[A]	[kW]	
400 V / 525 V			<u> </u>	U N	<u> </u>	e u	<u> </u>	e u	[]	
DCS800-A01-0020-04/05-D	18	17	25	16	25	14	28	6	<0.58	D1
DCS800-A02-0025-04/05-D DCS800-A01-0045-04/05-D	22 40	21 35	32 52	20 32	31 48	18 31	35 62	6 6	<0.58 <0.65	-
DCS800-A02-0050-04/05-D	45	40	59	37	56	36	72	6	<0.65	
DCS800-A01-0065-04/05-D	60	46	69	43	64	43	86	6	<0.72	
DCS800-A02-0075-04/05-D DCS800-A01-0125-04/05-D	67 115	53 87	80 130	50 83	75 123	50 83	100 166	6 6	<0.72 <1.00	
DCS800-A02-0140-04/05-D	125	95	142	91	136	91	186	6	<1.00	
DCS800-A01-0230-04/05-D	200	140	210	130	195	120	248	15	<1.51	D2
DCS800-A02-0260-04/05-D DCS800-A01-0315-04/05-D	230 285	159 219	239 329	150 211	225 316	132 192	264 384	15 20	<1.51 <1.89	D3
DCS800-A02-0350-04/05-D	300	228	342	222	333	200	400	20	<1.89	00
DCS800-A01-0470-04/05-D	400	308	462	290	435	275	550	20	<2.57	
DCS800-A02-0520-04/05-D	450	345	517	330 427	495	308	616	20	<2.57	D4
DCS800-A01-0610-04/05-D DCS800-A02-0680-04/05-D	540 600	432	648 720	475	641 712	391 434	781 868	25 25	<3.01 <3.01	D4
DCS800-A01-0740-04/05-D	680	551	826	537	806	488	977	25	<3.65	
DCS800-A02-0820-04/05-D	750	607	911	593	889	539	1077	25	<3.65	
DCS800-A01-0900-04/05-D	810	620	931	596	894	547	1094	25	<4.80	-
DCS800-A02-1000-04/05-D 400 V / 525 V	900	689	1034	662	994	608	1215	25	<4.80	
DCS800-A0x-1200-04/05-D	1140	843	1265	820	1230	731	1461	25 ⑤	<7.64	D5
DCS800-A0x-1200T-04/05-D	1140	1095	1643 1709	1055	1583	912	1824	25 5	<7.64	
DCS800-A0x-1500-04/05-D DCS800-A0x-2000-04/05-D	1425 1850	1140 1368	2052	1048 1259	1573	1048 1259	2097 2518	25 25 5	<10.34 <10.62	•
DCS800-A0x-2050-05-D 3	1950	1550	2325	1480	2220	1450	2900	20 0		D6 @
DCS800-A01-2500-04/05-D 3	2450	1980	2970	1880	2820	1920	3840		<10.20	
DCS800-A02-2500-04/05-D ③ DCS800-A01-3000-04/05-D	2450	2000	3000 3525	1930	2895	1790	3580		<11.20	
DCS800-A01-3000-04/05-D	3000 3000	2350 2330	3495	2220 2250	3330 3375	2280 2080	4560 4160		<11.90 <13.70	
DCS800-A0x-3300-04/05-D 1	3300	2300	3450	2250	3375	2130	4260		<17.20	D7 7
DCS800-A0x-4000-04/05-D 2	4000	2800	4200	2730	4095	2600	5200		<18.00	
DCS800-A0x-5200-04/05-D @	5100 @		5775	3750	5625	3650	7300		<23.50	
DCS800-A0x-6600-04/05PD 2 DCS800-A0x-8000-04/05PD 2	6200 7600	4370 5320	6555 7980	4275 5187	6412 7780	4047 4940	8094 9880		<34.40 <36.00	DIP @
DCS800-A0x-10400-04/05PD @		7315	10971	7125	10687	6935	13870		<47.00	
600 V / 690 V	000	474	0.00	150	000	150	004		1.01	Do
DCS800-A01-0290-06-D DCS800-A02-0320-06-D	220 240	174 190	260 285	152 166	228 249	152 166	304 332		<1.81 <1.81	D3
DCS800-A01-0590-06-D	370	290	435	258	387	258	516		<2.47	D4
DCS800-A02-0650-06-D	400	313	469	279	418	279	558		<2.47	_
DCS800-A0x-0900-06/07-D	855	650	974	565	847	565	1129	25 6	<7.20	D5
DCS800-A0x-1500-06/07-D DCS800-A01-2000-06/07-D	1425	1140 1368	1709 2052	1048 1259	1573 1889	1048 1259	2097 2518	25 25 5	<10.34 <10.62	
DCS800-A0x-2050-06/07-D 3	1950	1520	2280	1450	2175	1430	2860	20 0	<10.70	D6 @
DCS800-A01-2500-06/07-D 3	2450	1940	2910	1840	2760	1880	3760		<11.70	
DCS800-A02-2500-06/07-D 3 DCS800-A01-3000-06/07-D	2450 3000	1940 2530	2910 3795	1870 2410	2805 3615	1740 2430	3480 4860		<12.80	
DCS800-A01-3000-06/07-D	3000	2270	3405	2190	3285	2030	4060		<13.10 <14.50	
DCS800-A0x-3300-06/07-D ①	3300	2360	3540	2310	3465	2180	4360		<17.90	D7 ⑦
DCS800-A0x-4000-06/07-D @	4000	3000	4500	2850	4275	2900	5800		<20.10	
DCS800-A0x-4800-06/07-D 2 DCS800-A0x-6600-06/07PD 2	4700 @ 6200	4484	5400 6726	3500 4389	5250 6583	3600 4142	7200 8284		<23.70 <35.70	D7P @
DCS800-A0x-8000-06/07PD @	7600	5700	8550	5415	8122	5510	11020		<40.20	Dri U
DCS800-A0x-9600-06/07PD 2	9000	6840	10260	6650	9975	6840	13680		<47.30	
800 V DCS800-A0x-1900-08-D ②	1900	1500	2250	1430	2145	1400	2800		<9.90	D6 ©
DCS800-A01-2500-08-D @	2500	1920	2880	1820	2730	1860	3720		<11.00	000
DCS800-A02-2500-08-D @	2500	1910	2865	1850	2775	1710	3420		<11.50	
DCS800-A01-3000-08-D @	3000	2500	3750	2400	3600	2400	4800		<12.50	
DCS800-A02-3000-08-D 2 DCS800-A0x-3300-08-D 2	3000 3300	2250 2350	3375 3525	2160 2300	3240 3450	2000	4000		<13.90 <18.10	
DCS800-A0x-3300-08-D @	4000	2950	4425	2800	4200	2800	5600		<20.30	DIW
DCS800-A0x-4800-08-D 2	4700 ④	3600	5400	3500	5250	3500	7000		<23.90	
DCS800-A0x-6600-08PD @	6200	4465	6697	4370	6555	4123	8246			D7P ⑦
DCS800-A0x-8000-08PD 2 DCS800-A0x-9600-08PD 2	7600 9000	5605 6840	8407 10260	5320 6650	7980 9975	5320 6650	10640		<40.50 <46.50	
990 V		0040	10200	.0000	5515	.0000	10000			
DCS800-A0x-2050-10-D @	2050	1500	2250	1450	2175	1350	2700		<15.10	D7 ⑦
		1050	2275	1800	2700 3525	1700 2300	3400 4600		<18.50 <22.80	-
DCS800-A0x-2600-10-D 2	2600	1850				· Z.3U()	·40U()		· 2 80</td <td>÷.</td>	÷.
DCS800-A0x-2600-10-D @ DCS800-A0x-3300-10-D @	2600 3300	2450	3675	2350						1
DCS800-A0x-2600-10-D @ DCS800-A0x-3300-10-D @ DCS800-A0x-4000-10-D @	2600			2350 2800 3420	4200 5130	2750 3230	5500 6460		<23.50	D7P ⑦
DCS800-A0x-2600-10-D 2 DCS800-A0x-3300-10-D 2 DCS800-A0x-4000-10-D 2 DCS800-A0x-5200-10PD 2 DCS800-A0x-6600-10PD 2	2600 3300 4000 4900 6200	2450 2850 3515 4655	3675 4275 5272 6982	2800 3420 4465	4200 5130 6697	2750 3230 4370	5500 6460 8740		<23.50 <36.80 <45.60	D7P ⑦
DCS800-A0x-2600-10-D 2 DCS800-A0x-3300-10-D 2 DCS800-A0x-4000-10-D 2 DCS800-A0x-5200-10PD 2 DCS800-A0x-5600-10PD 2 DCS800-A0x-8600-10PD 2	2600 3300 4000 4900 6200 7600	2450 2850 3515 4655 5415	3675 4275 5272	2800 3420	4200 5130	2750 3230	5500 6460		<23.50 <36.80	D7P ⑦
DCS800-A0x-2600-10-D 2 DCS800-A0x-3300-10-D 2 DCS800-A0x-4000-10-D 2 DCS800-A0x-5200-10PD 2 DCS800-A0x-6600-10PD 2 DCS800-A0x-6600-10PD 2 DCS800-A0x-8000-10PD 2 1200 V	2600 3300 4000 4900 6200 7600 ON RE	2450 2850 3515 4655 5415 QUEST	3675 4275 5272 6982 8122	2800 3420 4465 5320	4200 5130 6697 7980	2750 3230 4370	5500 6460 8740		<23.50 <36.80 <45.60 <46.80	D7P ⑦
DCS800-A0x-2600-10-D @ DCS800-A0x-3300-10-D @ DCS800-A0x-4000-10-D @ DCS800-A0x-5200-10PD @ DCS800-A0x-6600-10PD @ DCS800-A0x-8000-10PD @	2600 3300 4000 6200 7600 ON RE 2600 3300	2450 2850 3515 4655 5415	3675 4275 5272 6982 8122 2850 3585	2800 3420 4465 5320 1830 2310	4200 5130 6697	2750 3230 4370 5225 1700 2310	5500 6460 8740 10450		<23.50 <36.80 <45.60	D7P ⑦ D7 ⑦

Table 1: DCS800-A types

x=1 \Rightarrow 2-Q converter

x= $2 \Rightarrow 4$ -Q converter

 $\mathbf{P} \Rightarrow$ hard parallel (two conv. mod. in parallel)

Voltage class: (example: DCS800-A0x-0025-04y-D) $\textbf{12} \Rightarrow 1200 \text{V}$

* Ratings are valid for IP 21; for IP 31 and IP 41 the current derating is calculated by DriveSize ① = Air circuit breaker on request

@ = Air circuit breaker not available @ = Reduced current due to standard air circuit breaker. Larger air circuit breakers are available on request (4) with air exit IP20 \Rightarrow plus 100 A


© FEX425 internal field exciter as option; three-phase or single phase, separate supply max. Sol V_{AC} (© Requires 3-phase aux. fan supply 3 x 400 V or 3 x 525 V, 50 Hz or 3 x 460 V, 60 Hz

 \oslash Requires 3-phase aux. fan supply 3 x 400 V, 50 Hz or 3 x 460 V, 60 Hz

DCS800-A enclosed converters are suitable for three-phase supply voltages from: 230 ... 990 (1200) V_{AC} 50 or 60 Hz

Select the DCS800-A type from Table 1, according to the nominal supply voltage and the rated DC current.

Load cycles

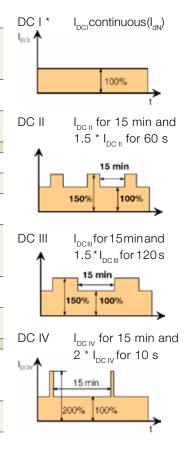

Enclosed 3-phase Field exciters

Unit type	DC I	^o ower oss	Size
525 V	[A]	[kW]	
DCS800-A21-0020-05-D	16	0.58	D1
DCS800-A22-0025-05-D	22	0.58	
DCS800-A21-0045-05-D	40	0.65	
DCS800-A22-0050-05-D	45	0.65	
DCS800-A21-0065-05-D	57	0.72	
DCS800-A22-0075-05-D	67	0.72	
DCS800-A21-0090-05-D	84	0.85	
DCS800-A22-0100-05-D	92	0.85	
DCS800-A21-0180-05-D	160	1.40	D2
DCS800-A22-0200-05-D	180	1.40	1
DCS800-A21-0315-05-D	285	1.89	D3
DCS800-A22-0350-05-D	300	1.89	
DCS800-A21-0405-05-D	340	2.40	1
DCS800-A22-0450-05-D	380	2.40	
DCS800-A21-0610-05-D	520	3.00	D4
DCS800-A22-0680-05-D	520	3.00	

Dimensions converter cabinet

	Single	drive				Group				
		Depth					Depth			Weight
	1		2	3	[kg]	1		2	3	0
DC-Converter, Size D1	0100		e size-		0.00	0100	-Fram			100
DCS800-A0x-0020-04/05-D	2120	600	600	<u>;</u>	220	2120	600	600	<u>;</u> -	190+z
DCS800-A0x-0025-04/05-D	2120	600	600	-	220	2120	600	600	<u>-</u>	190+z
DCS800-A0x-0045-04/05-D	2120		600	-	230	2120	600	600	<u>.</u>	200+z
DCS800-A0x-0050-04/05-D	2120	600	600		230	2120	600	600	ļ	200+z
DCS800-A0x-0065-04/05-D		600	600	-	230	2120	600	600	<u>.</u>	200+z
DCS800-A0x-0075-04/05-D	2120	600	600	-	230	2120	600	600	<u>.</u>	200+z
DCS800-A0x-0125-04/05-D	2120	600	600	-	250	2120	600	600	<u>.</u> -	220+z
DCS800-A0x-0140-04/05-D	2120	600	600	-	250	2120	600	600	-	220+z
DC-Converter, Size D2/D3				-	0.50					
DCS800-A0x-0200-04/05-D		600	600	-	250	2120	600	600	-	220+z
DCS800-A0x-0250-04/05-D	2120	600	600	-	250	2120	600	600	<u>;</u> -	220+z
DCS800-A0x-0315-04/05-D	2120	600	600	;-	300	2120	600	600	<u>.</u>	270+z
DCS800-A0x-0350-04/05-D	2120	600	600	-	300	2120	600	600	-	270+z
DCS800-A0x-0470-04/05-D		600	800	-	310	2120	600	800	<u>-</u>	280+z
DCS800-A0x-0520-04/05-D	2120	600	800	-	310	2120	600	800	-	280+z
DC-Converter, Size D4										
DCS800-A0x-0610-04/05-D		600	800	-	360	2120	600	800	-	330+z
DCS800-A0x-0680-04/05-D	2120	600	800	-	360	2120	600	800	-	330+z
DCS800-A0x-0740-04/05-D	2120	600	800	-	360	2120	600	800	-	330+z
DCS800-A0x-0820-04/05-D	2120	600	800	-	360	2120	600	800	-	330+z
DCS800-A0x-0900-04/05-D	2120	600	800	-	360	2120	600	800	-	330+z
DCS800-A0x-1000-04/05-D	2120	600	800	-	360	2120	600	800	-	330+z
DC-Converter, Size D5										
DCS800-A0x-0900-06/07-D	2120	600	1400	-	620	2120	600	1400	-	590+z
DCS800-A0x-1200-04/05-D	2120	600	1400	-	640	2120	600	1400	-	610+z
DCS800-A0x-1500-04/05/06/07-D		600	1400	-	720		600	1400	-	690+z
DCS800-A0x-2000-04/05/06/07-D 6	2120	600	1400	-	740	2120	600	1400	-	710+z
DC-Converter, Size D6										
DCS800-A0x-1900-08-D ④	2120	600	-	2000	850				•	
DCS800-A0x-2050-05/06/07-D ®	2120	600	2400	-	1100	1				
DCS800-A0x-2500-04/05/06/07-D ®	2120	600	2400	-	1100	1				
DCS800-A0x-2500-08-D ④	2120	600	-	2000	850	1				
DCS800-A0x-3000-04/05/06/07-D ®		600	2400	-	1250	1				
DCS800-A0x-3000-08-D ④		600	-	2000	950	on rec	quest			
DC-Converter, Size D7										
DCS800-A0x-2050-10-D ④	2120	600	-	2100	790					
DCS800-A0x-2600-10/12-D @		600	·	2100	850	1				
DCS800-A0x-3300-04/05/6/07/08/10/12-D ④	2120	600	-	2100	950	1				
DCS800-A0x-4000-04/05/06/07/08/10/12-D @		600	·	2700			••••••	••••••	••••••	••••••
DCS800-A0x-4000-04/03/00/07/08/10/12-D @	2120	600	1	2700 (+				
DCS800-A0x-5200-04/05-D ④	2120		-	2700 (-				
DC-Converter, Size D7P	2120	000	-	2700 0	1200					
DCS800-A0x-5200-10PD	2120	600	-	3600	1430	not av	ailable			
DCS800-A0x-6600-04/05/06/07/08/10PD	2120			3600	1630	-				
				4800 @		-				
DCS800-A0x-8000-04/05/06/07/08/10PD DCS800-A0x-9600-06/07/08PD	2120 2120			4800 (÷				
		600				-				
DCS800-A0x-10400-04/05PD	2120	000	-	4800 @	2140		-	:		1
Incoming Supply Sections		1	1	1	1	0100	600	600	600	200
DCA63u-1000-04/05/06/07-D						2120	600	600	600	300
DCA63u-2000-4/5/6/7-D						2120	600	600	600	320
DCA63u-3000-4/5/6/7-D @	not av	ailable	•			2120	600		800	340
DCA63u-4000-4/5/6/7-D @						2120	600	1000	1000	380
Busbar joining cabinet ©						0100	000	0000		00
						2120	600	200	-	30+z

Falluala			
Fan type	Air volume		Converter
	freely		size
	blowi	ng	
	[m³/h	_	
		60 Hz	
2x CN2B2	320	360	D1
			D2
	<u> </u>		D3
4x CN2B2	640	720	D3
	<u> </u>		0405 - 0520
W2E200	925	1030	D4
(230 V)			0610 - 0820
W2E200	925	1030	D4
(115 V)			0610 - 0820
W2E250	1860	1975	D4
(230 V)			0900 - 1000
	1835	1940	D4
(115 V)			0900 - 1000
R2E 250	*********	750	D5 *
GR28C		1600	D6 *
400 V / 500 V			**
50 Hz or			
460 V, 60 Hz			
GR35C	4200	4500	D7 *
400 V, 50 Hz			**
460 V, 60 Hz			

* air outlet as air duct interface available ** Fans according new ErP high efficency compliance. Fans are designed for typical Aux supply 400 V, 500 V, 50 Hz and 460 V, 60 Hz. Other aux supply for fans on request.

Table 2: Dimensions of the DCS800-A series.

 $x=1 \Rightarrow 2-Q$ converter $\mathsf{u}{=}\mathbf{0} \Rightarrow \text{incoming without switch}$ x= $2 \Rightarrow 4$ -Q converter u=1 \Rightarrow incoming with insulation switch $u=2 \Rightarrow$ incoming with circuit breaker $P \Rightarrow$ hard parallel (two conv. mod. in parallel) $u=5 \Rightarrow$ incoming without options


Notes:

All dimensions are in mm

Please add for each end panel 15 mm and for a door (without buttons) 20 mm


- 1 Height is including detachable hood (120 mm)
- 2 with circuit breaker or contactor
- 3 without circuit breaker or contactor
- \circledast DCS800-A with AC supply voltage 3 x 800 V ... 1200 V or current \geq 3300 A are generally without circuit breaker.
- ^⑤ Max length of a shipping split is 3.40 m. If the line-up width is longer than 3.40 m busbar joining cabinets are required.
- (6) at 600 V (6) and 690 V (7) only available as 2-Q converter
- ⑦ z: Weight for busbars: 1000 A / 2000 A = 35 kg/m; 3000 A = 70 kg/m
- [®] The air circuit breaker stands out of the line-up's front.
- Thus 78 mm have to be added to the total depth of the line-up. Listed width for cable connection
- reduced width for busbar connection on request DCA632 rated current as IEC rating
- 3000 A UL type on request

Voltage class:	(example: DCS800-A0x	-0025- 04 y-D)	
04 ⇒ 400 V	05 ⇒ 500/525 V	06 ⇒ 600 V	07 ⇒ 690 V
08 ⇒ 800 V	$10 \Rightarrow 990 V$	12 ⇒ 1200 V	

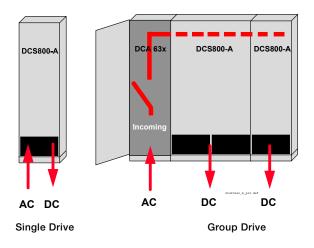


DCS800-A Basic circuit diagrams

Basic diagram without electrical options

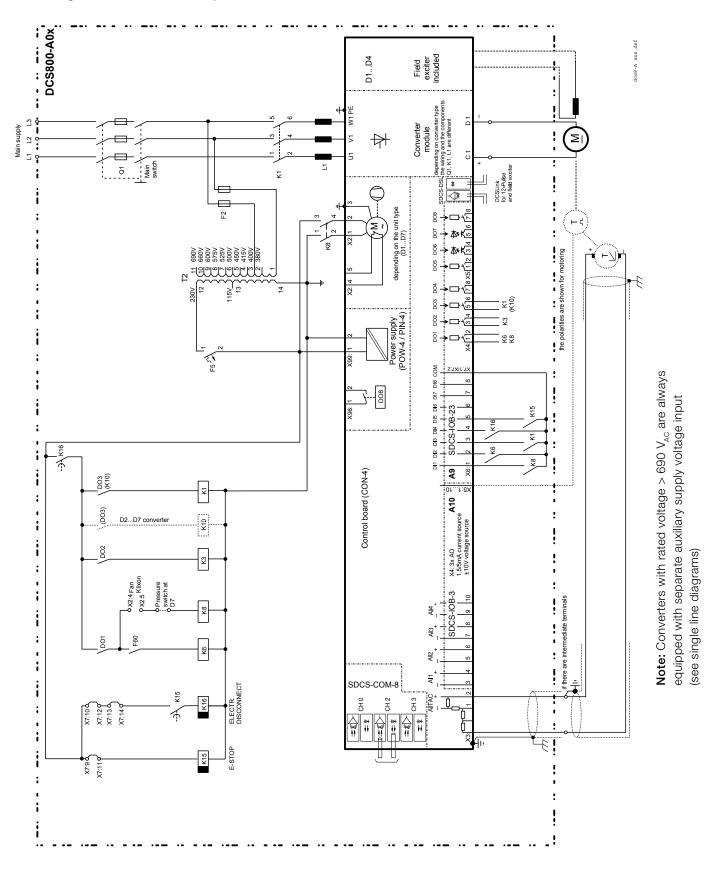

DCS800-A Enclosed Converters Technical catalog e e | 3ADW000198R0501 45

Basic diagram with electrical options

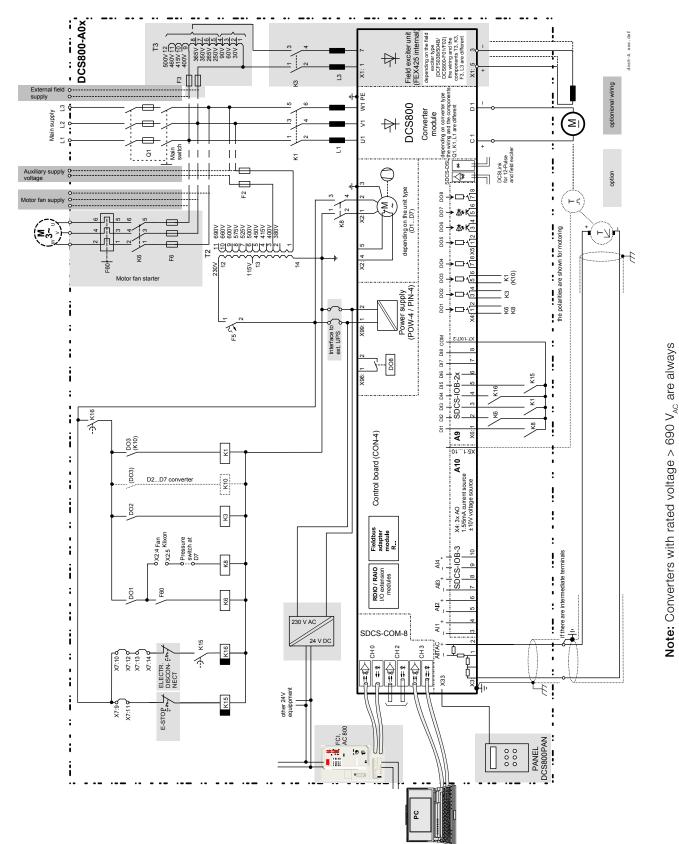

equipped with separate auxiliary-, fan- and field exciter supply

voltage input (see single line diagrams)

Basic diagram with electrical options

Dimensioning DriveSize

Quality dimensioning

DriveSize is a PC program for helping the user to select an optimal converter and options, especially in those cases where a straightforward selection from a catalog is not possible. Documents about the dimensioning based on actual load.

The default values make DriveSize simple to use, but the user is provided with many options for drive selection. The shortcut keys make drive selection easy while still honouring the relatively complicated rules.

A manual selection mode is also supported.


DriveSize is currently used by more than 1000 engineers globally.

DriveSize is for drive system components

- DCS converter modules
- DCS enclosed converters
- Group drives (line-ups)
- Drive options

DriveSize features

- Select an drive unit, incoming unit
- Calculate duty load cycles for converters
- Supply dimensioning results in graphical and numerical format
- Print and save the results

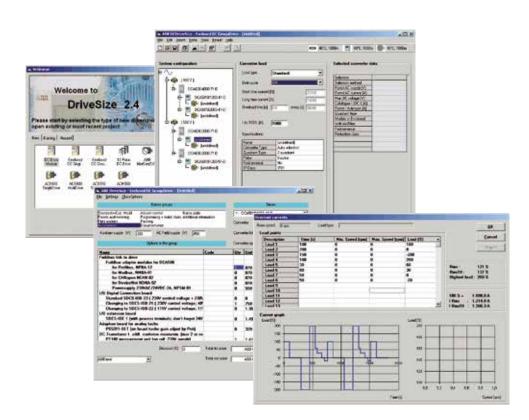

DCS800-A Safety option ordering

DCS800-A0X Cabinet with Contactor, AC Breaker or DC Breaker

ABB offers following options to help the system integrator to fulfill customer's safety regulations

Exclusion of liability

ABB is not responsible for the implementation, verification and validation of the overall safety system. It is the responsibility of the system integrator (or other party) who is responsible for the overall system and system safety.

The system integrator (or other responsible party) must make sure that the entire implementation complies with all relevant standards, directives and local electrical code, and that the system is tested, verified and validated correctly.

Coast Stop Function (non safety related) K16 timer + Electrical Stop function (non safety related) K15 timer

Option Stop Category 0


Option 1: +S951 STO (please check if below options are needed)

Description: Safe Torque OFF (STO) function prescribed in IEC/EN60204-1, Stop Category 0 (Uncontrolled Stop) and compliant with Functional Safety Standard.

	compliant wi	In Functional Salety Standar	u.	
	Stop Function:	Safe Torque OFF (STO) (IEC	C/EN61800-5-2:2007)	
	Response time:	500 ms or less (from input	to the terminal to Safe Torque OFF)	
	Safety integrity level (SIL):	2		Safety \ \->
	Category:	3		
	Performance level (PL):	PL-d (if Main Contactor (AC	C), High Speed DC Breaker or	
		Sace E-Max (ACB) is used))	Figure 1: STO manual restart
	Pollution degree:	max. 2		
	Hardware:	A14 STO safety relay		
Option 1.1+S952:	STO plus automatic start	function !		
	ATTENTION - AUTOMATIC	START		CH Reset
	According to IEC/EN 6020	4-1 part 9.2.5.4.2 and 10.8.	3 it is not allowed to restart	Safety / -> DCS800
	automatically after emerge	ncy stop. Therefore the mac	hine control has to disable the	HSDCB
	automatic start after emerg	gency stop.		
	Hardware	Automatic start circuit;	basic option 1 (+S951) required	Figure 2: STO automtic restart SF_DCx_022_whey-option_a a
			not in combination with option 1.4 (+	-S955)
_				
Option 1.2+S953	E-STOP cat 0 button in cal	·	basic option 1 (+S951) required	
Option 1.3+S954	•	ation lamp in cabinet door;	basic option 1 (+S951) required	
Option 1.4+S955	STO Reset button in door;		basic option 1 (+S951) required	
			not in combination with option 1.1 (-	,
Option 1.5+S956	STO mechanically coupled	motors;	basic option 1 (+S951) in each drive	required
Option 1.9+S957	SIO plus duplicating for up	o to 50 drives (e.g. for rollert	ables)	

Safe Torque OFF (STO) function prescribed in IEC/EN60204-1, Stop Category 0 (Uncontrolled Stop) and compliant with Functional Safety Standard.


Total number of Drives up to:	Needed Pluscode ordering for +S957
	None
8	1 x +S957
	2 x +S957
20	3 x +S957
26	4 x +S957
32	5 x +S957
38	6 x +S957
44	7 x +S957
50	8 x +S957

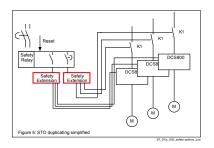

Option Stop Category 1 Option 2.x: Time based Safe Stop 1 (SS1) function prescribed in IEC/EN60204-1, Stop Category 1 (ramped stop) and compliant with functional Safety Standard			
	compliant with functional a		
Option 2.1+S961	Ramped Stop time level 1 10 s	C+1 Reset C+1 Image: C-1 [Safety] 1' 1' Image: C-1 [Safety] 1' 1' Image: C-1	
Option 2.2+S962	Ramped Stop time level 3 30 s		
Option 2.3+S963	Ramped Stop time level 30 300	S	
		Figure 4: SS1 menual restart	
		Hgure 4: Ssr1 manual restart IF_DCx_BLashey-ethna_s.a	
	Stop Function:	$P_{0}(r) = \frac{1}{2} \left(\frac{1}{2} \left(\frac{1}{2} \right) \left(\frac{1}{2} \left(\frac{1}{2} \right) \left$	
	•	Safe Stop 1 (SS1) (IEC/EN61800-5-2:2007)	
	Response time:	60 ms or less from input to the terminal to trigger the 0 to 300 s (as set by Safety timer relay) for ramped stop and additionally 500 ms or less (from input to the terminal to Safe Torque OFF)	
	Safety integrity level (SIL):	2	
	Category:	3	
	Performance level (PL):	PL-d (if Main Contactor (AC) or High Speed DC Breaker is used) and PL-c (if Sace E-Max	
		(ACB) is used)	
	Pollution degree:	max. 2	
	Hardware:	A15 SS1 safety timer relais;	
		basic STO option 1 (+S951) required (A14 safety relais)	
Option 2.4+S964	automatic start and comp ATTENTION - AUTOMATIC According to IEC/EN 6020 allowed to restart automat Therefore the machine cor emergency stop.	4-1 part 9.2.5.4.2 and 10.8.3 it is not ically after emergency stop. trol has to disable the automatic start after	
	Hardware:	Automatic start circuit;	
		basic option 2.x (+S961 or +S962 or +S963) required	
		not in combination with option 2.6 (+S966)	
Option 2.5 +S965	E-stop cat 1 push button i	n cabinet Door	
_		basic option 2.x (+S961 or +S962 or +S963) required	
└ Option 2.6 +S966	SS1 reset button in cabine	t door; not in combination with option 2.4 (+S964)	
_		basic option 2.x (+S961 or +S962 or +S963) required	
Option 2.7 +S967	0	e; basic option 2.x (+S961 or +S962 or +S963) required	
Option 2.8 +S968	SS1 common for multiple		
	Hardware:	A15.2 safety contact multplier; basic option 2.x (+S961 or +S962 or +S963) required Option SS1 common (+S968) requires option STO (+S951)	
		in each individual drive. The interface between individual	

in each individual drive. The interface between individual drive and SS1 circuit X95 bus is used.

Total number of Drives up to:	Needed Pluscode ordering for +S968
1	None
8	1 x +S968
14	2 x +S968
20	3 x +S968
26	4 x +S968
32	5 x +S968
38	6 x +S968
44	7 x +S968
50	8 x +S968

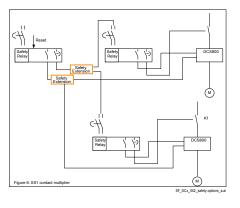

No DCS800-A Safety Option

 \Box Customer specified safety function

Description: Circuit diagrams and components according Customer specification

Type Code (Ordering Code)

When ordering your DCS800-A or external field exciter, please specify the type code according to the type code tables.

Type code table for DCS800-A0x drives cabinets


	DCS8	00-A02	2-0680-0)5 -	DBN	١
DC DRIVES Product family S800 = DCS800 converter Type S0 = 3-phase converter module R0 = Rebuik kit A0 = Enclosed converter E0 = Panel mounted converter		•		•		
Bridge type 1 = Single hråge 2-Q 2 = Double bråge 4-Q Rated DC current 0680 = 680 ADC (IP00 module current) Rated AC voltage 04 = 230400 VAC 05 = 230500 VAC 05 = 230500 VAC 07 = 315809 VAC			ō			
08 = 380800 VAC 10 = 460980 VAC 12 = 5401280 VAC Power connection (D7) - = Standard D106 L = on the light R = on the light P = hard parallel configuration	1	s é				
Cabinet type D = ABB Drive cabinet DE = EMC protected ABB Drive cabinet						
Cabling B = Bottom entry / exit T = Top entry / exit AC-connection		0				
AC-CONNECTION N = No horizontal busbars / single drive 1 = 1000 A horizontal busbars / group drive 2 = 2000 A horizontal busbars / group drive 3 = 3000 A horizontal busbars / group drive	V				DCx_type_code_	c.daf

Type code table for DCS800-A2x 3-phase field exciters in a separate cabinet


	DCS800 - A2	2 - 0100 - 05 - D	BN
DC DRIVES CABINET			
DCS800			
Section type		ø	
22 = 4-Q Field converter Module type related to modul current IP00 e.g. 0075 = 75 A		*	
Rated AC voltage [V] 4 = 230400V 5 = 415500V			
Cabinet type D = ABB Drive cabinet DE = EMC protected ABB Drive cabinet		9	
AC-connection N = No horizontal busbars / single drive 1 = 1000 A horizontal busbars / group drive 2 = 2000 A horizontal busbars / group drive 3 = 3000 A horizontal busbars / group drive		•	đef

Type code table for a DCS800-F0x 3-phase field exciter in the armature cabinet 1900 A (D6) ... 5200 A (D7)


Type code table for DCA63x incoming cabinets

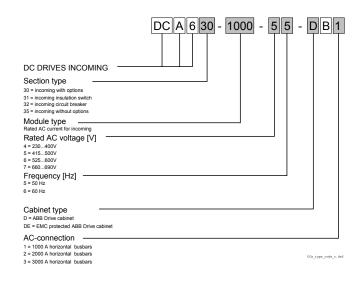

Note: Order control cabinet with: DCA650 Order empty cabinet with: DCA680

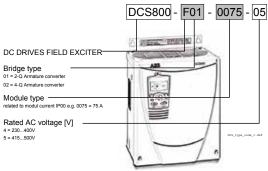

Type code table for DCF80x 2-phase field exciters (up to 50 A) in the armature cabinet

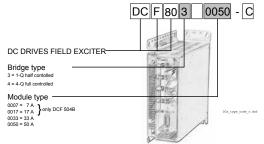


DCS family



DCS550-S modules The compact drive for machinery application

 20 ... 1,000 A_{DC} 0 ... 610 V_{DC} 230 ... 525 V_{AC} IP00





20	 5,200 A _{DC}
0	 1,160 V _{DC}
230	 1,000 V _{AC}

230 ... I, IP00



DCT880 Thyristor power controller Controlling electro-

thermal processes

16 ... 4,160 A_{DC} 14 kW... 5 MW 230 ... 690 (1200) V_{AC}



DCS800-E series Pre-assembled drive-kits

20	 2,000 A _{DC}
0	 700 V _{DC}
230	 600 V _{AC}
IP00	



DCS800-R Rebuild Kit Digital control-kit for existing powerstacks

20	 20,000 A _{DC}
0	 1,160 V _{DC}
230	 1,200 V _{AC}
IP00	

- Compact
- Robust design
- Adaptive and winder program
- High field exciter current
- Compact
- Highest power ability
- Simple operation
- Comfortable assistants, e.g. for commissioning or fault tracing
- Scalable to all applications
- Free programmable by means of integrated IEC61131-PLC
- Resistive and inductive loads, infrared heaters
- Phase angle, full wave burst and half wave mode
 U, I, P, I² control
- Clear text display with USB port
- Load monitoring
- For all typical load configurations star, delta, open delta, single phase, and multitap
- Reduces energy costs by power optimizer function
- DCS800 module with all necessary accessories mounted and fully cabled on a panel
- Very fast installation and commissioning
- Squeezes shut-down-times in revamp projects to a minimum
- Fits into Rittal cabinets
- Compact version up to 450 A and Vario version up to 2,000 A
- Proven long life components are re-used, such as power stacks, (main) contactors, cabinets and cabling / busbars, cooling systems
- Use of up-to-date communication facilities
- Increase of production and quality
- Very cost-effective solution
- Open Rebuild Kits for nearly all existing DC drives
- tailor-made solutions for...
 - BBC PxD
- BBC SZxD
- ASEA TYRAK
 other manufacturers

Contact us

ABB Automation Products GmbH Motors and Drives Wallstadter Straße 59 68526 Ladenburg Germany Phone +49 (0) 6203 71 0 Fax +49 (0) 6203 71 7609 dc-drives@de.abb.com www.abb.com/dc-drives

