### **ABB Solutions**

# Yų.

# **Product Configurator Instruction Manual**







### Introduction

The ABB Low Voltage Products Configurator and Submittal Generation tool provides you the ability to select and configure both simple and complex products. The objective of this tool is to make it easy for you to select, price, and generate submittals for our products.

This application is supported by the Low Voltage Drive web team. If you need assistance, or would like to provide suggestions on how we can improve the tool, please send an e-mail to abb-drives.support@us.abb.com.

# Signing in

- 1. Go to http://www.abb-drives.com.
- 2. Sign-in with your abb-drives.com user name and password. This is required to use the Configurator.
- 3. Once you have signed in, click




to enter the Configurator.

Sign-in with your Configurator user name and password.
 Note: this is usually different than the abb-drives user name and password

#### Note:

• If you do not have a user name and password, you can request one by clicking New User Registration .

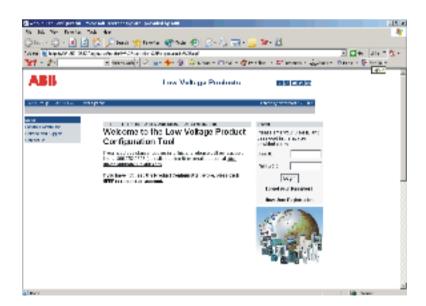




# **Navigating the Configurator**

### For a new project

- 1. Click on Projects and Creste New from left menu to begin a new project.
- 2. Click on the icon or link on the page to enter the configurator.



Click on any of the product families to continue the configuring process.
 Note: You can navigate back to previous pages by either clicking one of the links in the upper part of the screen (see below).

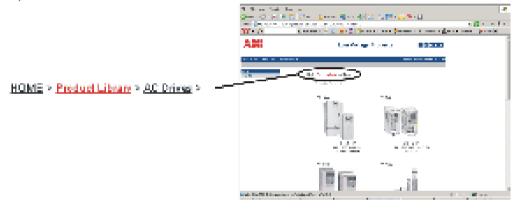

### For an existing project

- 1. Click on Projects and Load Existing from left menu to access a previous project.
- 2. Go to page 11 for further instructions.

### **General navigation information**


- 1. At any time you can click on User Options.
- 2. From here you can Log Off or edit your personal information.





# **Finding Drive Information**

1. Once you have selected a product family, enter your selections into the table.

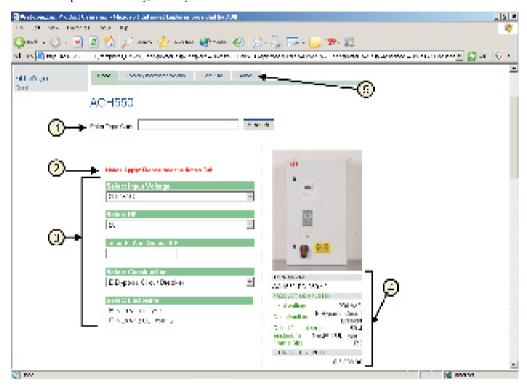


- Catalog Number Entry- if you know the catalog number, or part of a catalog number, enter it here.
- Notes- if the selections you make create any additional notes, this text will appear. To read the notes, click Notes at the top of the page to view the notes.
- Product Data Entry- select product attribute to "build" a catalog number. Note that the selections you make may limit the range of other selections to prevent users from building invalid configurations. If you find yourself unable to select the options you want, click to reset your selections and start over.
- **Details-** shows you what selections you have made. Any additional selections required to complete a valid catalog number are displayed in red text.
- Menu Tabs- add options to the drive as well as view notes are specific to the drive you have "built".



# Finding Drive Information (cont.)

2. Click on the tabs at the top of the page to add factory installed options, select field kits, or view important notes.

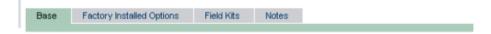

### **The Catalog Number**

The catalog number can be found below the picture in the right column.

Note: The catalog number will change as you make selections.




#### **Product Price**

The drive price can be found at the bottom of the right column.

Note: It will only appear after a valid catalog number has been configured.



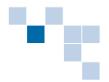

# **Adding Additional Drive Information**

At anytime you can add options to the drive you are building by clicking on the Foctory Installed Options or Field Kts .

### **Factory Installed Options**



1. Select from the list of options.

#### Notes:

- It is recommended that selections are made from the top down.
- Selections you make may limit the range of other selections to prevent users from building invalid configurations.
- If you make an incorrect selection that removes desired selections, click Reset. However, when you do this, it resets the selections for the whole product. You will have to re-enter the base product information.
- 2. As you make selections, the details of the drive will be modified.


  Note: Factory Installed options are listed as plus [+] codes in the catalog number. They are also reflected in the price.
- 3. Once you have added all the factory installed options needed, simply click on another tab to continue. Your selections are saved as soon as you select them.

#### Field Kits

- 1. Select from the list of options.
- 2. As you make selections, they will be listed in the selection details.

#### Notes:

- Kits are detailed in the list in the right column and are totaled separately from the list price.
- Selections are displayed in the order they appear in the left column, not in the order selected.
- 3. Once you have added all the field kits needed, simply click on another tab to continue. Your selections are saved as soon as you select them.

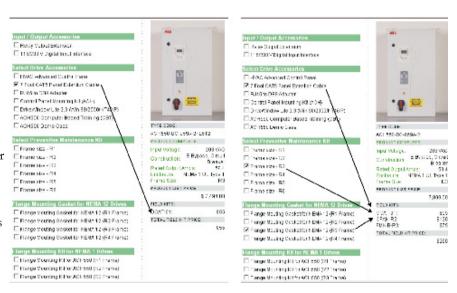




# **Creating a Project**

1. Once you have selected the correct drive, click Add to Project to add the drive to your project.




2. The following screen will appear:

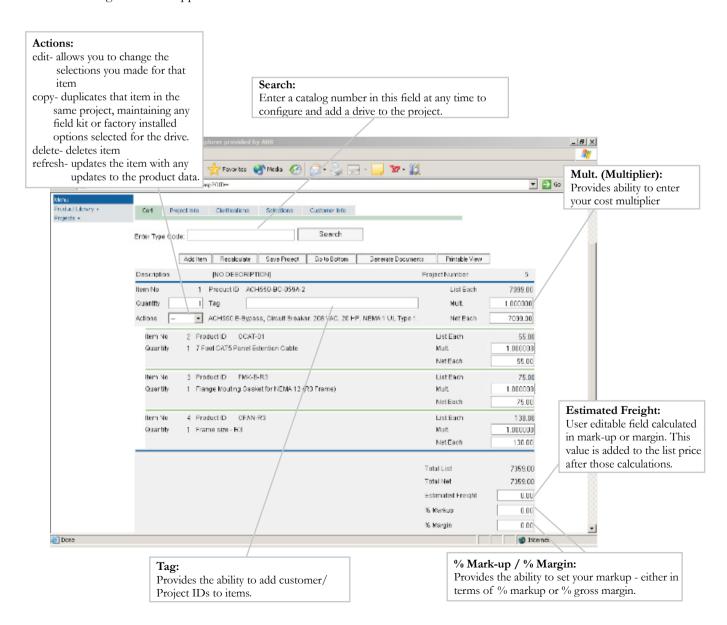



# **Creating a Project** (cont.)

- 3. From here you can also perform a variety of tasks:
- Add Item- returns you to the configurator to build and add another drive.
- Recalculate- refreshes the price after changing the quantity or other data.
- Save project- saves the project for future use.
- **Go to bottom-** goes to the bottom of the page for easy access to project pricing information.
- Generate Documents- allows you to generate a full submittal or submittal schedule.
- 6 Printable view- shows the cart in a printer friendly view.

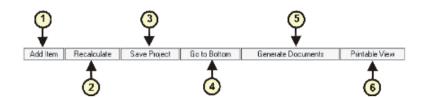

4. In addition, you can also enter specifics about each project.




1 Cart-

view the bill of material for this project. This is also the screen that starts the submittal generation process.



2 Project Info-


identifies and distinguishes one project from another. The project name, Customer ID, name, and company are displayed when trying to retrieve projects. This information is also used to populate information in the project submittal.

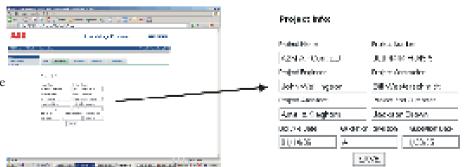




# **Creating a Project** (cont.)

3 Clarifications- add up to ten (10) clarifications or exceptions to the project.

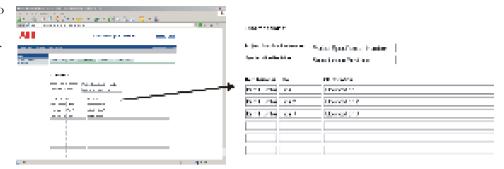

Selections- add additional documents to the project's submittal.

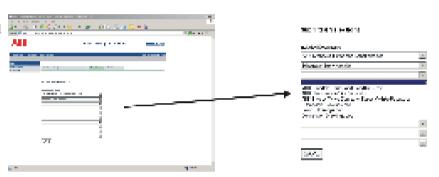

Customer Info- allows you to enter billing and shipping addresses. Also allows you to save, load, and update customer addresses.

**Note:** See more specific information on this section on the next page.





# **Creating a Project** (cont.)

#### **Customer Information for a new address**

- 1. Enter the billing information.
- 2. Click Save as New Address
- 3. If billing address is the same as the shipping address, click If billing address is different from the shipping address, enter shipping information.

#### Notes:

- Shipping address is not saved with the billing address for future use.
- Only the billing address is saved.
- The last addresses displayed on the screen is used for the submittal.
- 4.. Click Save Billing and Shipping info

#### John Drawe John Drowe company A2M Air 3400 Sunnyside Drive 6466 Burnyside Dilve Jackson Jackson County United States Trail Country United States Treat

### **Customer Information for an existing address**

- 1. Click Load Address .
- 2. Enter any changes or updates if necessary.
- 3. Click Update Existing Address

# browse to the address Click on any name to view, delete, or update address



### **Deleting customer information**

- 1. Click Load Address .
- 2. Click Delete Address .

Save as New Arthress   Load Arthress   III		Ipdale Daching Address  Illia Fo Address		7)	
Billing Address: Frz Yune	Last None		Shipping Address: Fiel Note:	Last Name	
John	Drawe		John	Drowe	
Company			Commony		
A2MAr			A2M Ar		
Authors			Address		
:416 Sunnyside Drive			6466 Burnyside Dilve		
5			a		
Olly	streamovnee	Ду Соос	uty	Solicefrownee	2 to Coole
Jackson	WY	45062	Jackson	WY	45082
County United States	-		County United States	•	
frei			fred		
3			e		

A R C D E F G H I J K L M N O P Q R S T U V W X Y Z



# **Retrieving a Project**

- 1. Click Load Existing from the dropdown menu on the left.
- 2. This provides the ability to view all of the projects you have created.


Notes:

- Projects from the previous 60 days will be displayed.
- You can view project created previous to this by changing the start date.

**Copy:** Duplicate the project. **Delete:** Delete the project.

**Edit:** Add or delete drives or other information within the project. Changes are automatically made to the price. This is also the screen to begin the submittal generation process.

**New Revision:** Create a revision of the project. **View:** Display an uneditable version of the project.

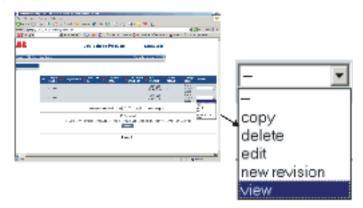

### **Generating a Submittal**

1. Once you have filled in all your specifics for the project, click Generate Documents to create the submittal.

2. Generation of the submittal document will begin.

**Note:** The submittal files can be quite large and therefore take a while to load, please be patient.



3. Once the submittal has been created, you can either download or e-mail it to another individual. **Note:** The submittal is generated as a .doc file.



Clicking this will download the submittal to a desired storage location.

Download



Clicking this will e-mail the submittal to any desired person. You will be able to enter the name, e-mail address, subject, and a short message

Note: Once you click Send , please wait for the confirmation. (see below)







# **Getting Help**

If you need further assistance, please contact the Low Voltage Drives web team in one of the following ways:

### By E-mail:


abb-drives.support@us.abb.com


### By Phone:

(800)752-0696 (option 6)


### By Mail:

ABB Inc. Webmaster Low Voltage Drives 16250 W. Glendale Drive New Berlin, WI 53151

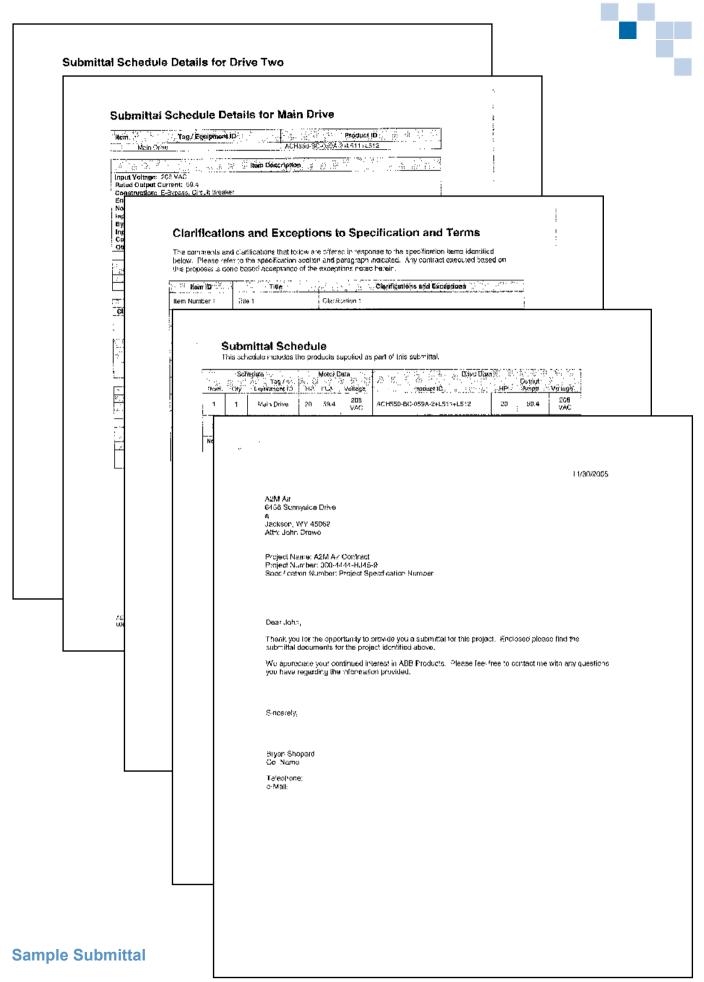

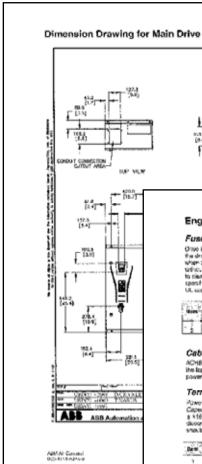



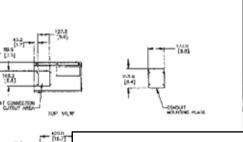

#### **Engineering Data and Ratings Tables**

#### Fuses

Once hout fuses are provided to deconnect the orive from power in the event that a component fails in the draw's power should. Since fast acting but as provided, the hand's power should. Since fast acting but if the drive input fuses blow, the motor can be writtened to a Bysach state of the control of the writtened to a Bysach state of the control of the writtened to a Bysach to favor drive output but the drive. The orive's election occurs of the same fails of the same state of the Same state

The first of the contract of t	Complifications ratings 12 to 12
ACHSO-BCOCRAC-LSTI-US 2	Ange (800V)
2 ACHSO-BC-0284G+LS11+LS12	

#### Cable Entries

ACH850 UH drives are configured for wiring ancess from the bottom only on ontil mounted usets and from the top only on floor mounted units. All local, three apparatolly estable constant are required, and for in pall power, one for octous power to the indicer and one for content signals.

#### Terminal Sizes

Power and motor coule terminal dises are shown in the Submittle Schedule Dessile and in the Wire Size Capacities of Power Ferminals Tall a 116, because a finishes. The refer discourse is well as 116, because of index is a motor summary should be applied when highering.

Dett	Calbiog Supper
,	PORSONE GRAD PORTINGER
z	ACHSSO-U-5-31A-2

#### Heat Dissipation Requ

ACHS50 drives are set-cooled. The materials. The Submittel Schedule host disputed his the hot or or the heat must be removed from t

,		
Reco	Catalog Number	ė.
1	ACHESO 20-664A	-
	ACHECOLAL COLL C	

#### Dimensions and Weigi

The differences and wagnts of the Dimensions and Weights Fable. I additional datast Dimension draw

AQMAII Consort 000-61/16-PJ/16-B


#### Product Overview

#### ACH550 Description

It is ACMS50 series is a microgrossistor avead Pates Writin Modelated (PVM) edjornate speed AC drive. The ACMS50 drive many accuracy of septiatrated microgrossism control and educated ICEN cover switching technology to deter high portor hance centrol of AC motors for a wide range of hVMC applications.

YHII dilives ranging from 1 to 560 HP, the ACHSSS series features a universal full graphic intertace titul. Tapadra'i ta the operative in picke English phraces, greatly simplifying cell up, operation, and fault diagnosis. The ACHSSS is also programmable in for neen other ranguages.

Each ACHIGO drive comes equipped with unextensive library of pre-programmed HVAC application macros which, at a boach of a button, allow repot configuration of injust, corpute, and performance prunnelses for specific TiMAC approximates for insurance connected and all in order states plans. The ACHIGO sprice con handle the injust demanding commercials applications in an efficient, dependable, and committee names.

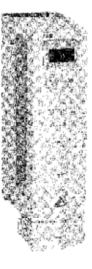

APM ACCOUNT 000-H19-H15-B

### Sample Submittal (cont.)





ABB Inc.
Low Voltage Drives
16250 W. Glendale Drive
New Berlin, WI 53151
Telephone (800) 752-0696
Fax (262) 785-0397
Internet http://www.abb.us/drives

