


INSTALLATION INSTRUCTION

Electronic fuse monitor OFS_







OS32...160G, OS200...1250_ + OFS


OS200...1250_ OS200...1250_

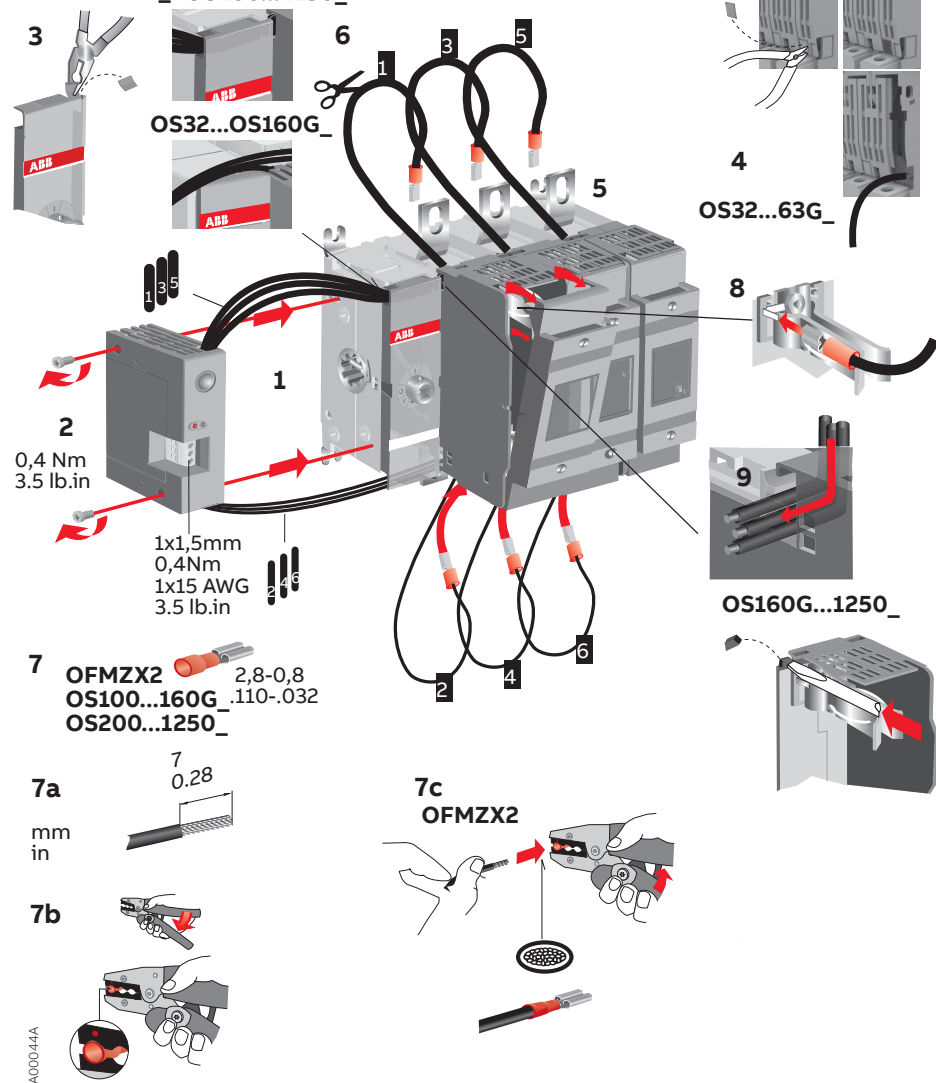





OFS_

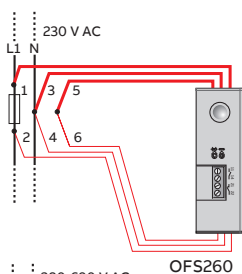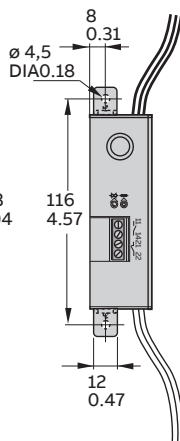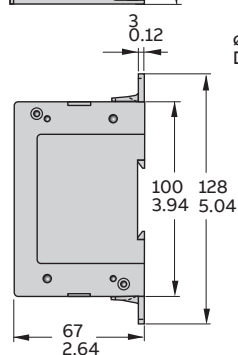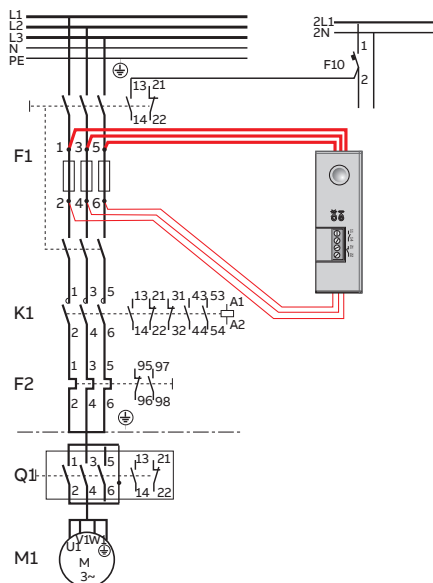


OFS260

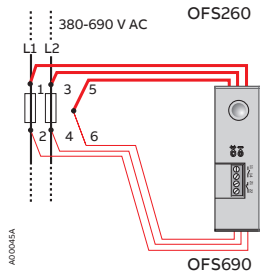

OFS690

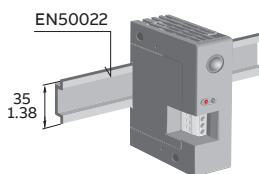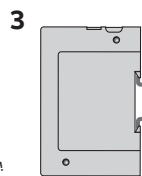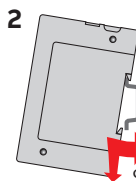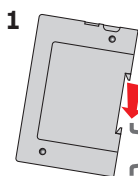

Remove

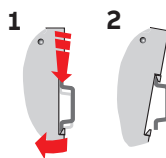



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage