



—
INSTALLATION INSTRUCTION

Terminal clamps

OZXM1, OZXM2

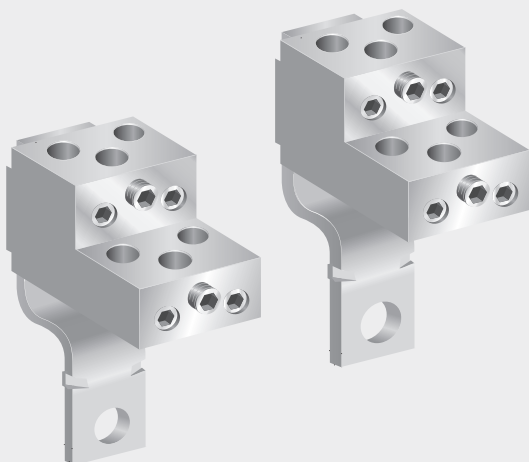

OZXM1, OZXM2

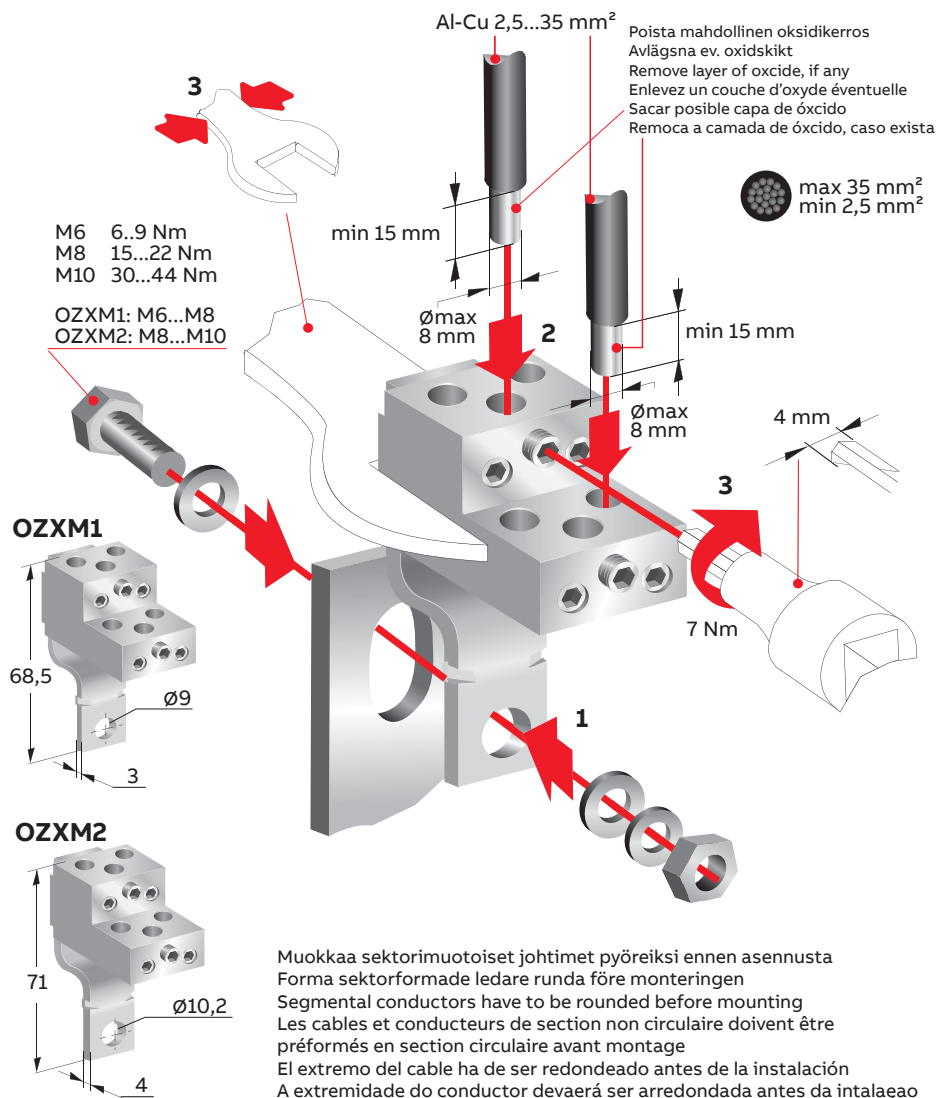



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage