

SACE Emax 2

Separatori di fase - E2.2-E4.2-E6.2



Phase barriers - E2.2-E4.2-E6.2

Trennwände zwischen den Phasen - E2.2-E4.2-E6.2

Séparateurs de phase - E2.2-E4.2-E6.2

Separadores de fase - E2.2-E4.2-E6.2

E2.2-E4.2-E6.2

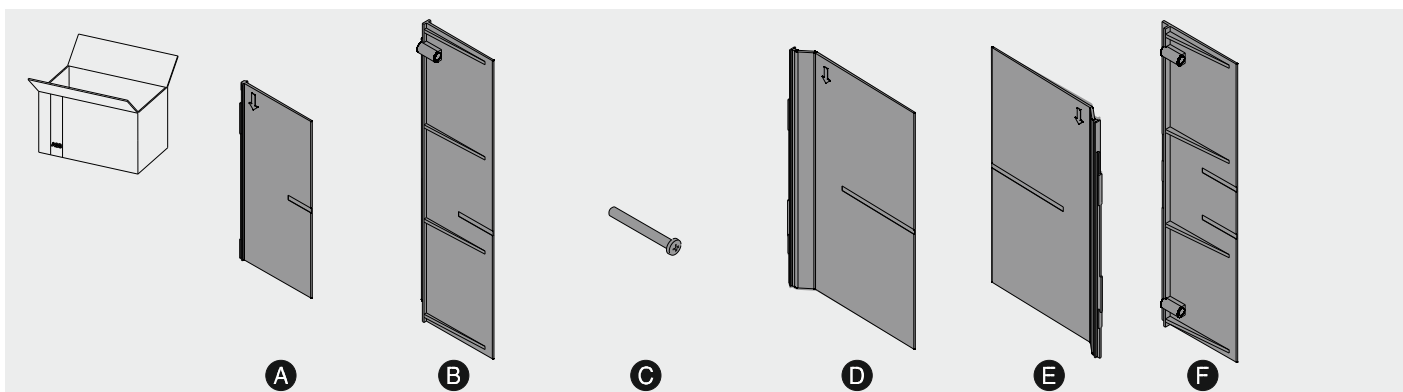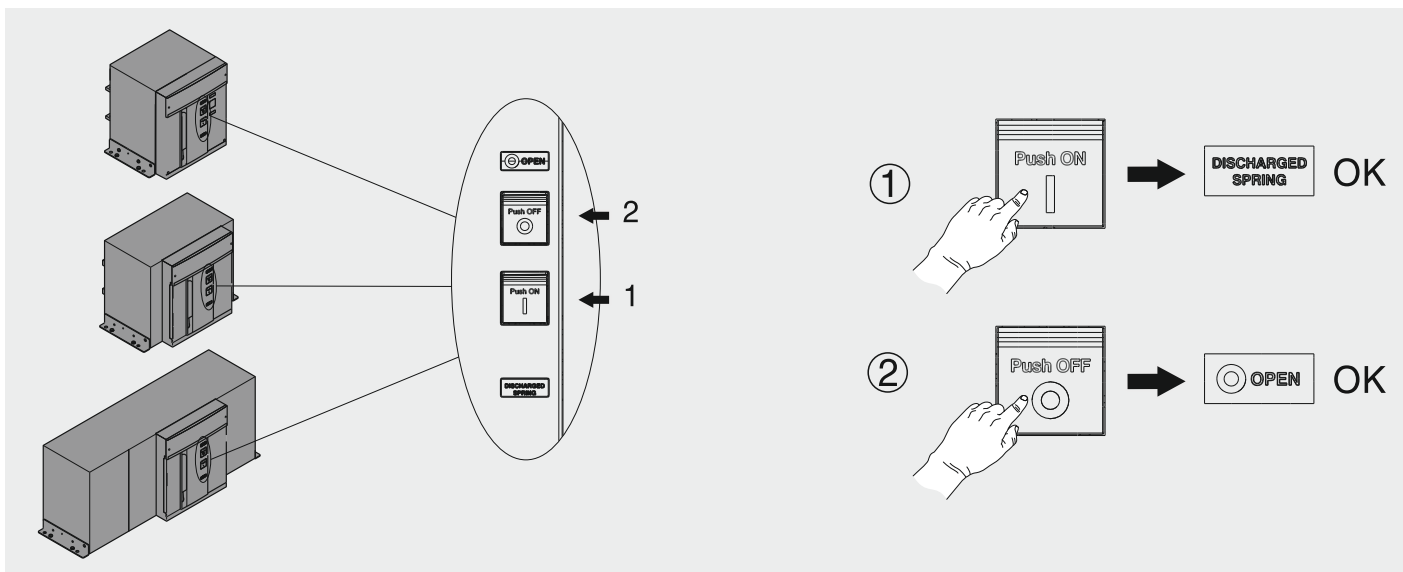


E2.2 E4.2 E6.2 IEC-UL						
	A		B		C	
	3p	4p	3p	4p	3p	4p
F	2	3*	-	-	-	-
W	-	-	2	3*	4	6*

E4.2-A 3200 - E4.2-A 3600 3p F UL							
C		D		E		F	
3p	4p	3p	4p	3p	4p	3p	4p
-	-	1	2	1	2	-	-
4	6	-	-	-	-	2	3

* For E4.2-E (IEC and UL): Only 2 pieces of item A and B and only 4 pieces of item C.


1

E2.2 F-E4.2 F

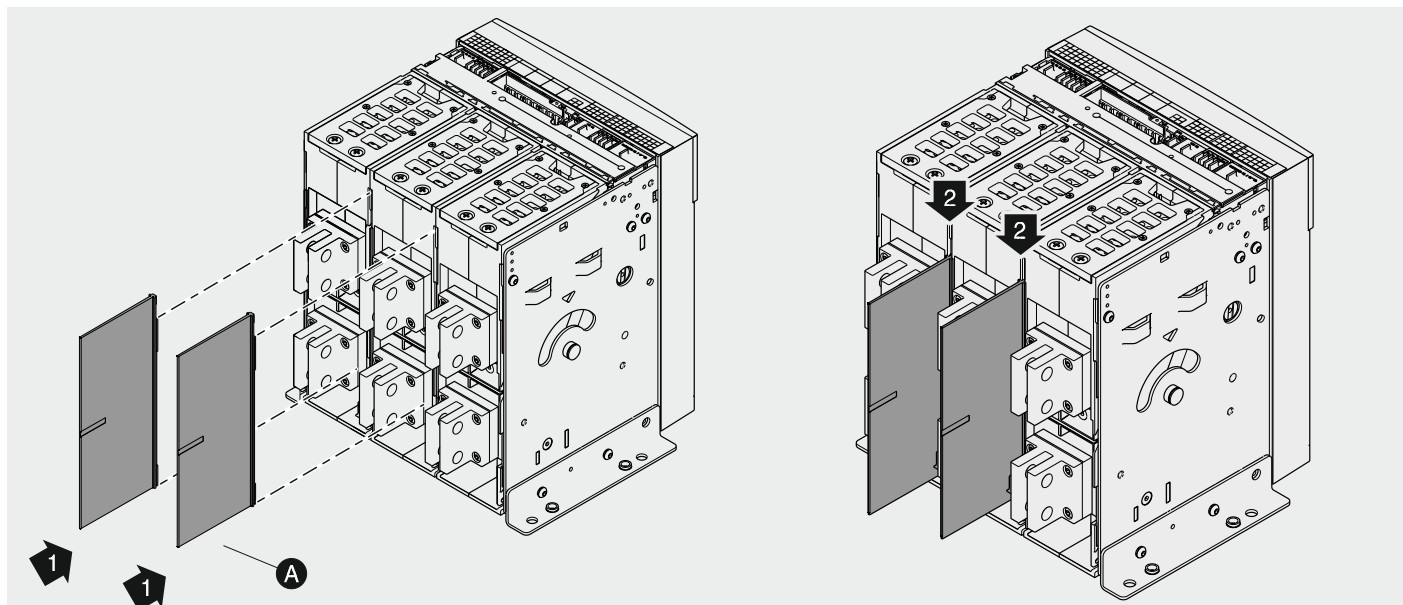


2

E6.2 F

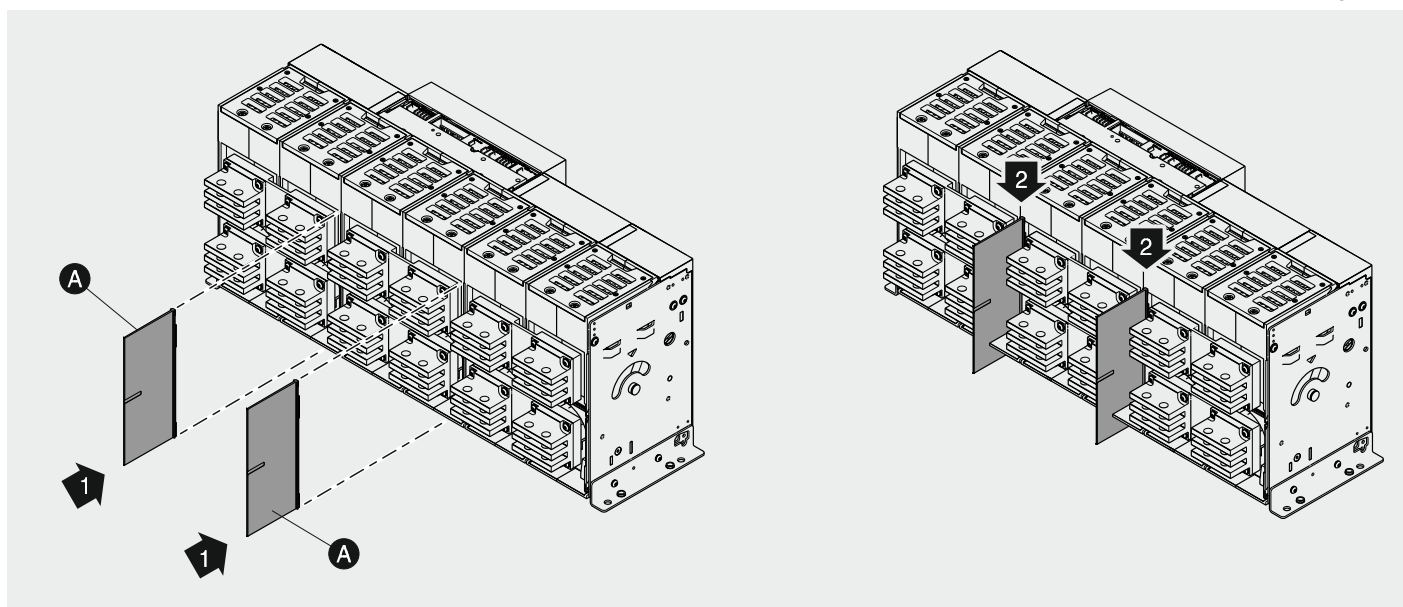


3

E2.2 W -E4.2 W

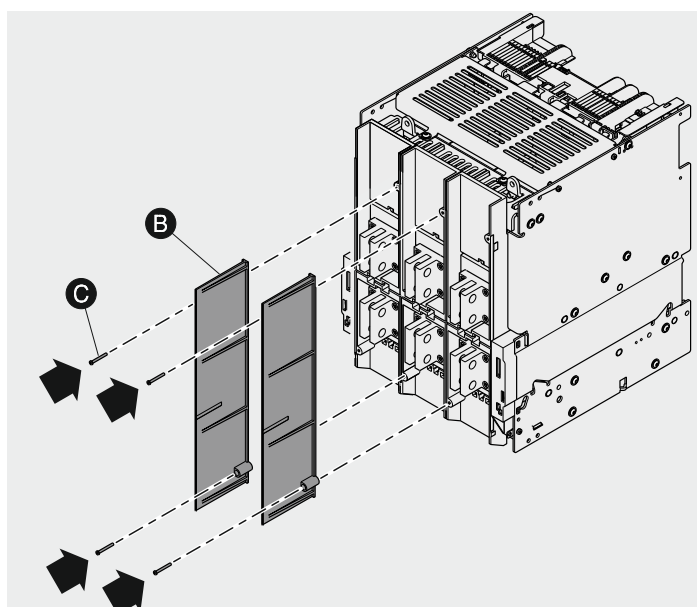


4

E6.2 W

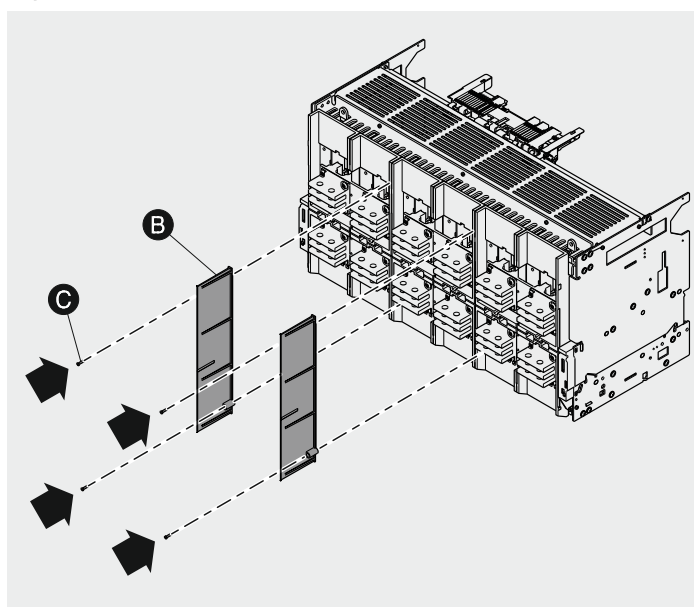


EXAMPLE FOR E4.2-A 3200A

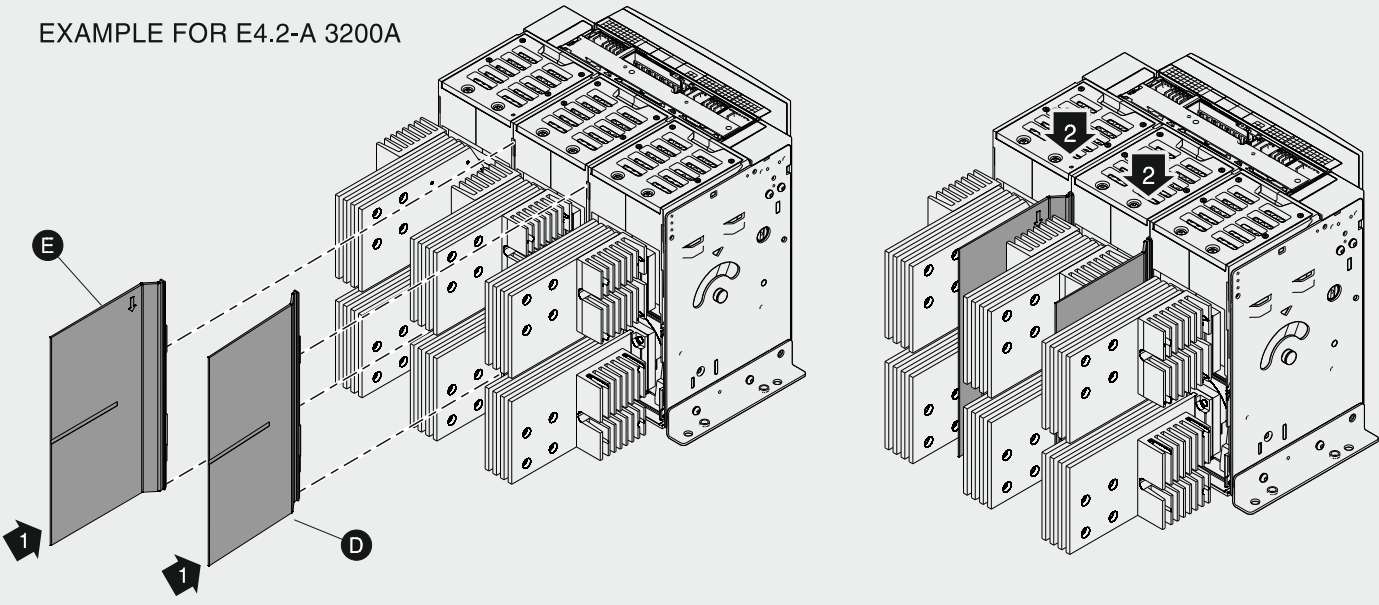

	F1	F2
3p	1	1
4p N sx*	1	2
4p N dx*	2	1



Vedi fig. 8 per configurazione neutro
See fig.8 for neutral configuration
Siehe Abb. 8 für konfiguration nulleiter
Voir fig.8 pour configuration neutre
Véase fig.8 para configuración neutro

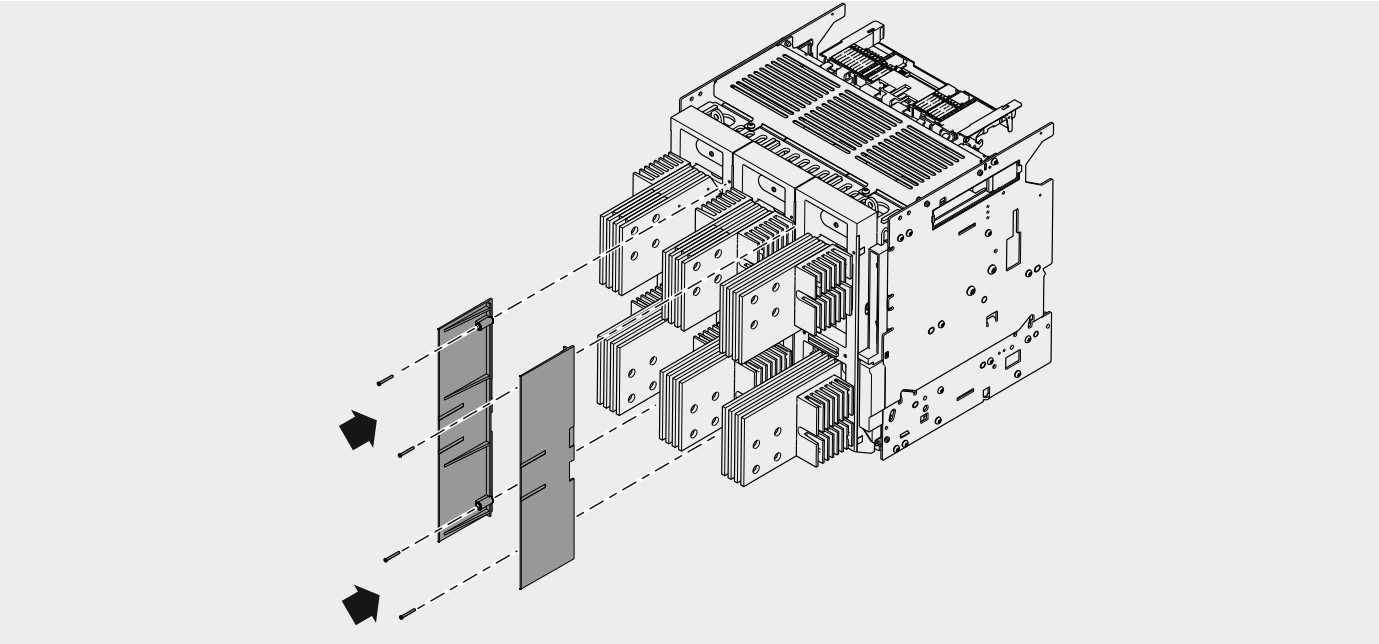

HEAT SINK:


E4.2 3200A ———

E4.2 3600A - - - - -

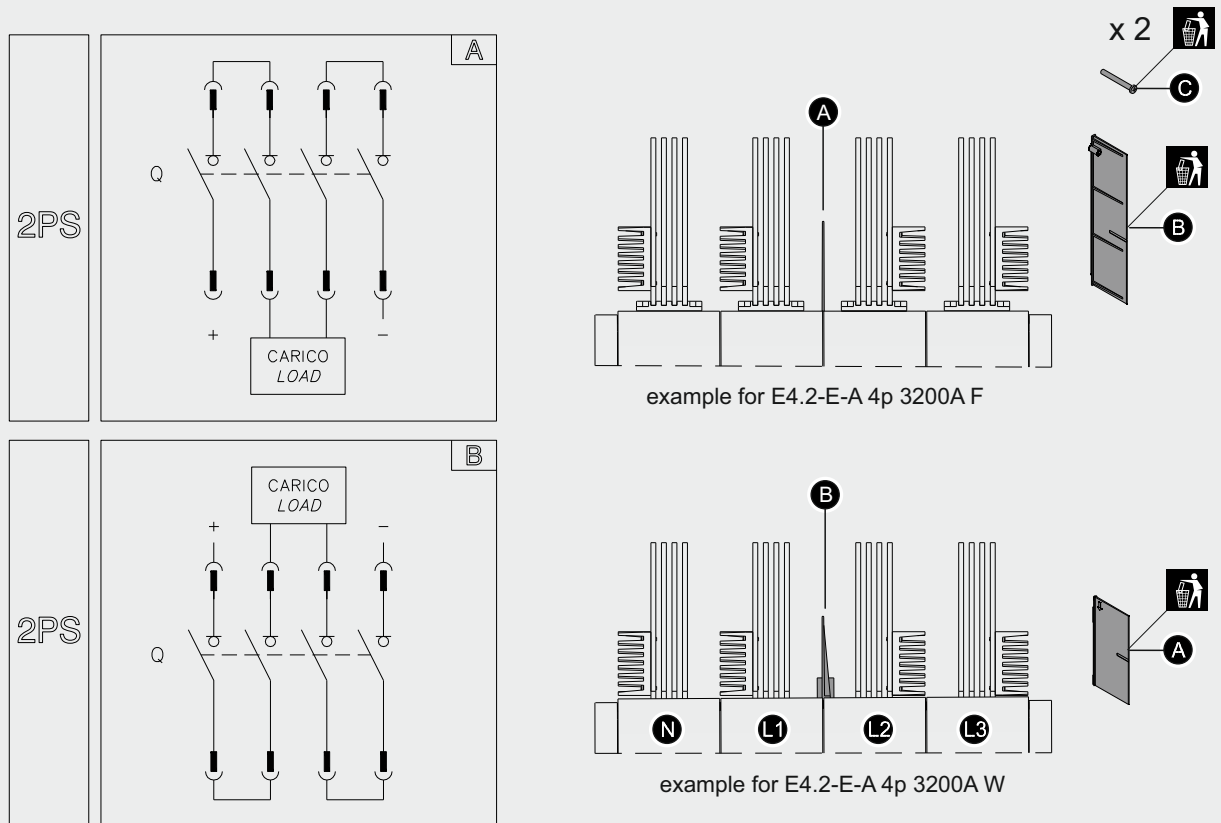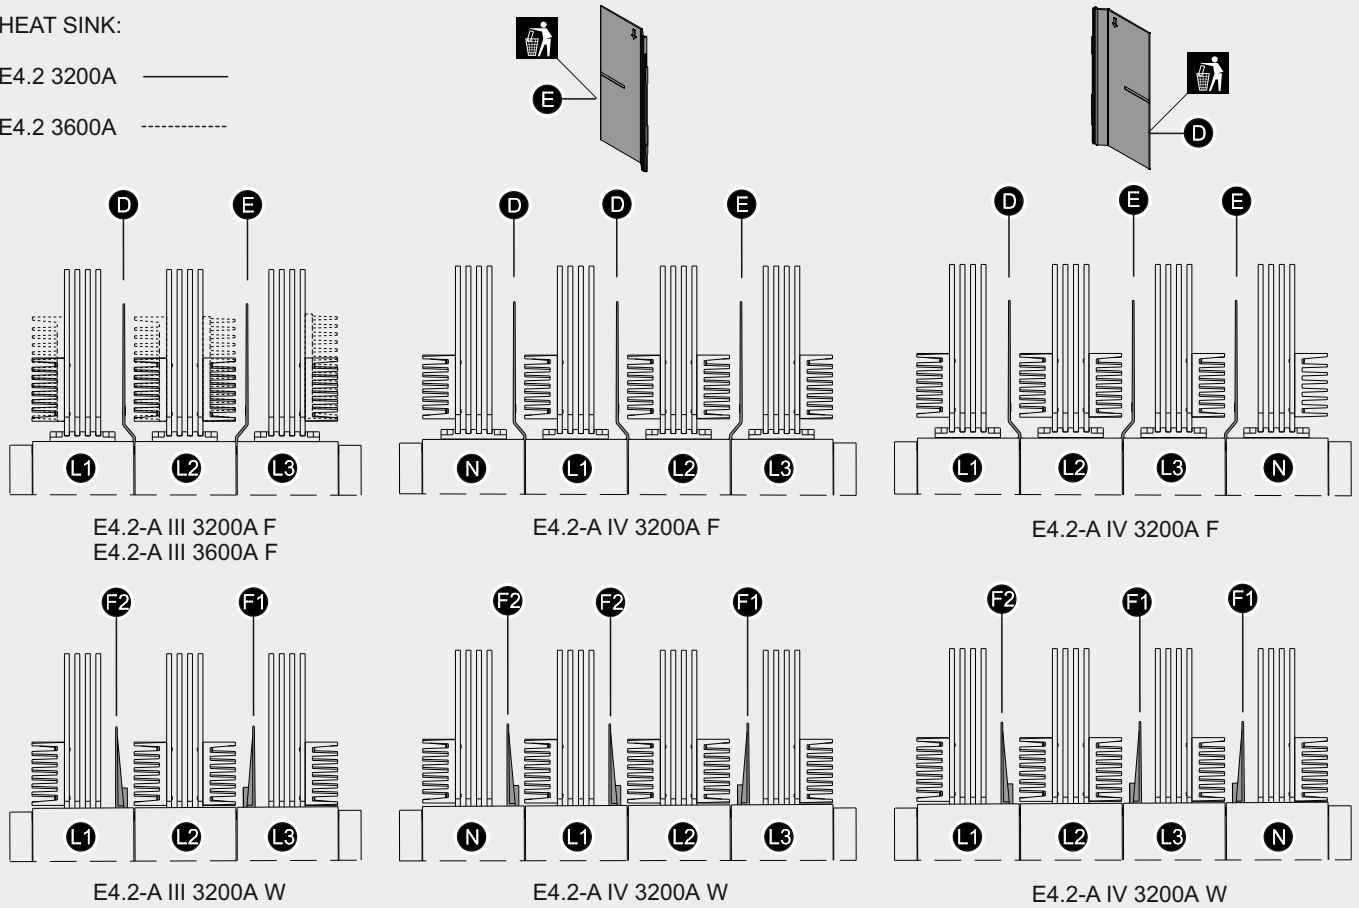

Example for E4.2-E-A 3200A F-W

	A mm / inch	B mm / inch
E2.2 F - E4.2 F - E6.2 F	71 / 2.8	2,5 / 0.1
E2.2 W - E4.2 W - E6.2 W	49 / 1.93	2,5 / 0.1

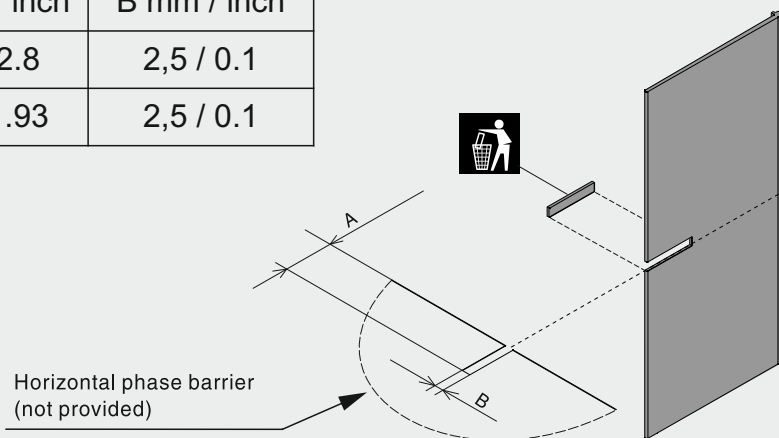

For more information please contact:

ABB S.p.A.
Via Pescaria, 5
24123 Bergamo - Italy
Phone: +39 035 395 111