



SACE Tmax XT

Cable Operator Handle XT1-XT2-XT3-XT4-XT5-XT6
Poignée d'opérateur de câble XT1-XT2-XT3-XT4-XT5-XT6
Kabelbetreiber XT1-XT2-XT3-XT4-XT5-XT6
Kabelexploitant Handvat XT1-XT2-XT3-XT4-XT5-XT6
Maniglia a cavo XT1-XT2-XT3-XT4-XT5-XT6
Manija del operador del cable XT1-XT2-XT3-XT4-XT5-XT6
Manipulo do operador de cabo XT1-XT2-XT3-XT4-XT5-XT6
Uchwył kablowy operatora XT1-XT2-XT3-XT4-XT5-XT6
电缆操作手柄 XT1-XT2-XT3-XT4-XT5-XT6

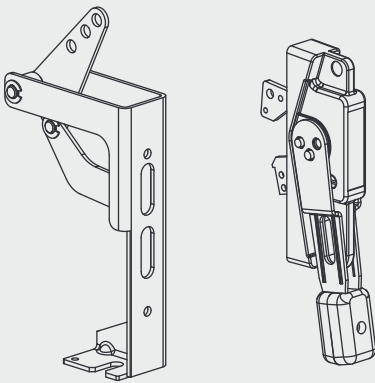


Tools
Outils
Werkzeug
Herramienta
Utensile
Ferramentas
Gereedschap
Narzędzia
工具

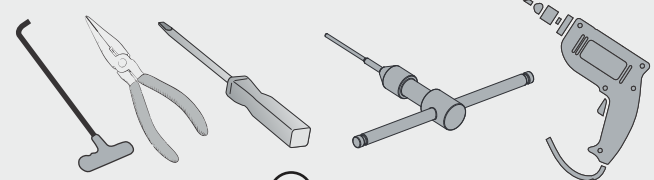

#3/16
#5/16

#8-32 in #27 (9/64in)

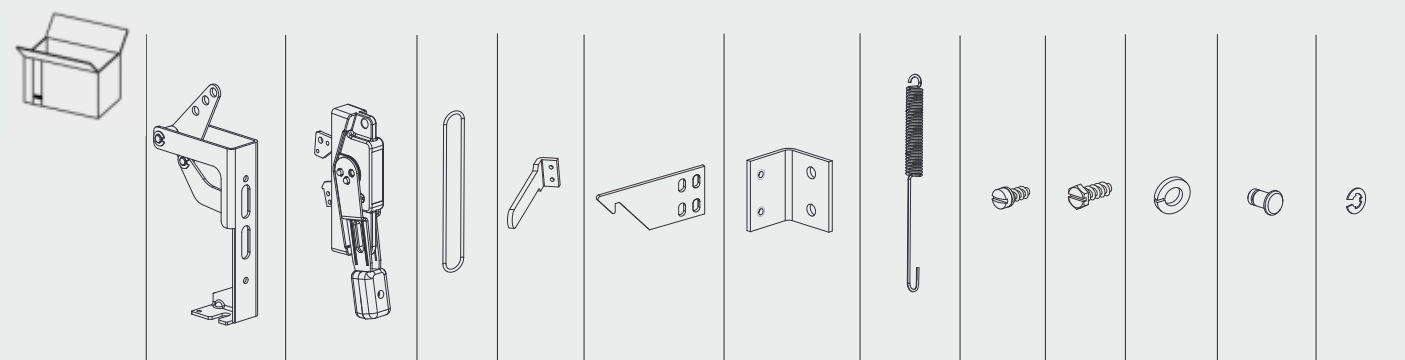

	1	1	1	1	1	1	1	6	2	2	1	1
NEMA 1,3R,12,13 Handle Cat.No			NEMA 4/4X Handle Cat.No			Handle Length						
1SDA115552R1			1SDA115554R1			6"						
1SDA115553R1			1SDA115555R1			10"						


Maximum Dimensions in Inches

Enclosure Depth	36" Cable			48" Cable		
	E*	F	G	E*	F	G
8	13.5	4.0	15.0	25.5	16.0	27.0
10	13.0	5.0	14.8	25.0	17.0	26.8
12	12.8	6.0	14.5	24.8	17.0	26.5
16	10.5	4.5	14.2	22.5	16.5	26.2
18	8.5	3.5	12.6	20.5	15.5	24.6
20	—	0.5	10.0	22.0	15.0	24.0
24	—	—	—	19.5	14.0	22.0




* Maximum E dimension only if F = 4.5".




To determine maximum mounting dimensions for 60-inch through 120-inch-long operating cables, add the respective additional lengths to the 48-inch cable maximum dimensions. (For example, add 12 inches to E, F, and G dimensions for 60-inch cable length.)




Circuit Breaker Mounting-Zone Dimensions

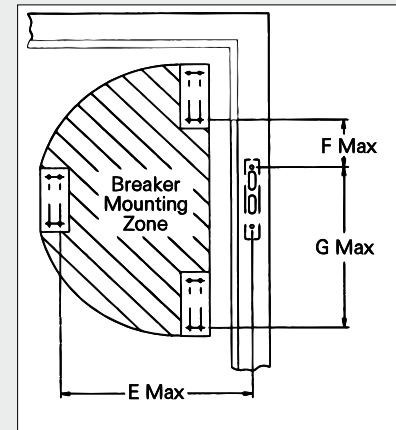

When cable is installed, the minimum cable bend radius should not be less than 3 inches. The minimum cable bending requirement must be met to ensure a safe operating environment.

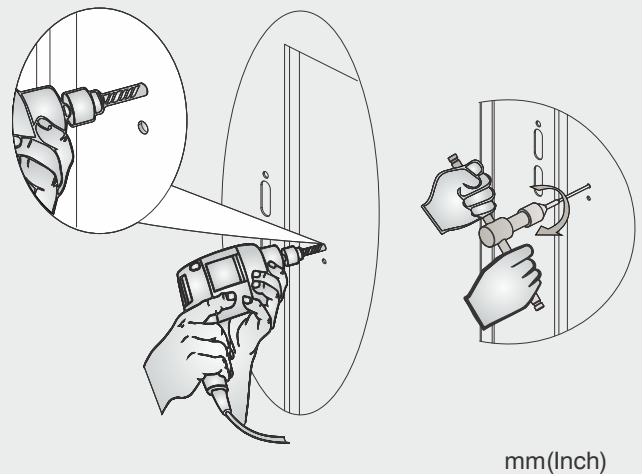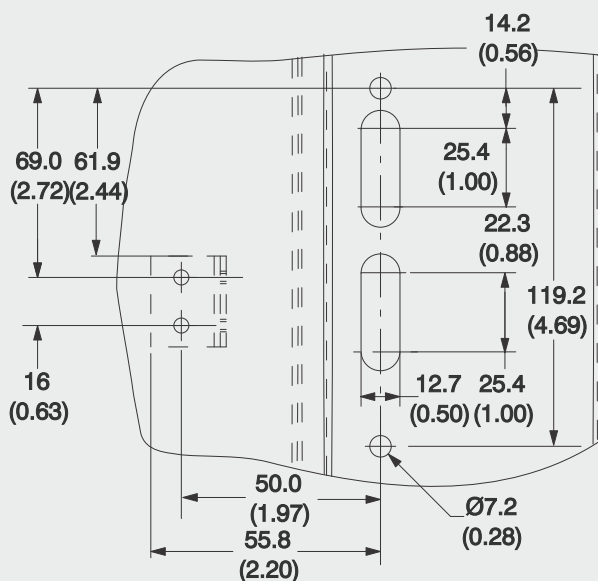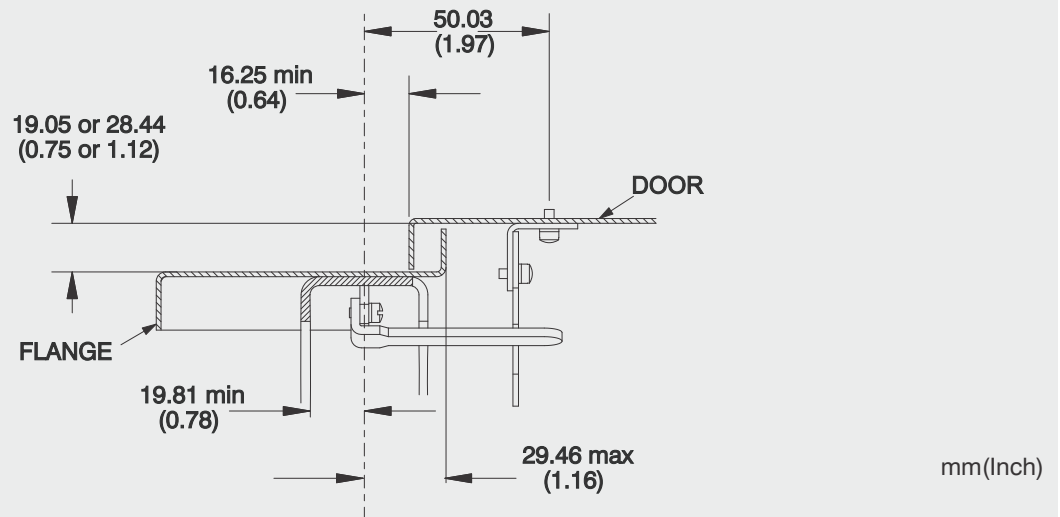


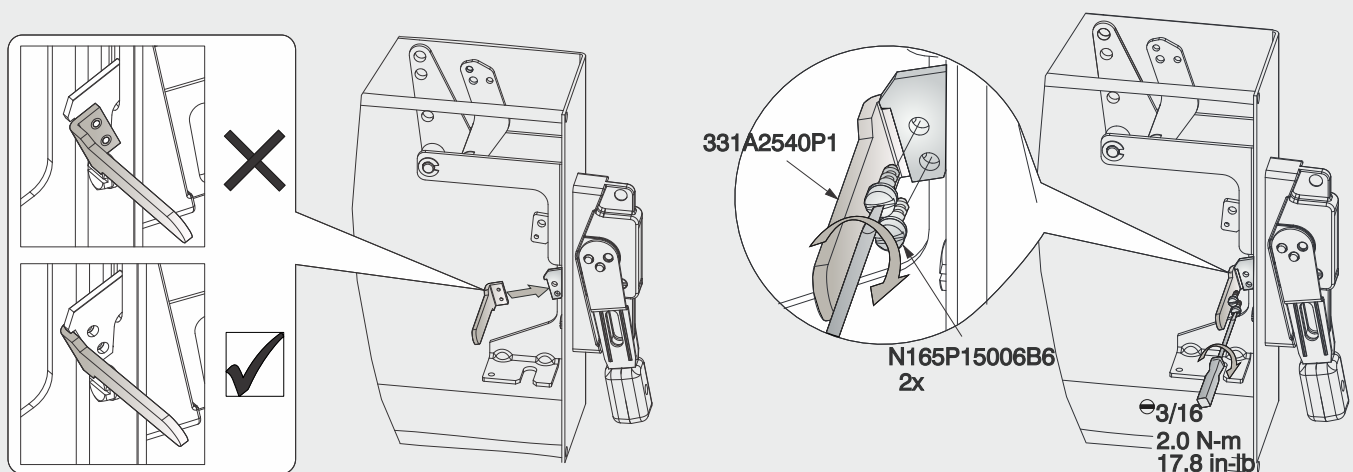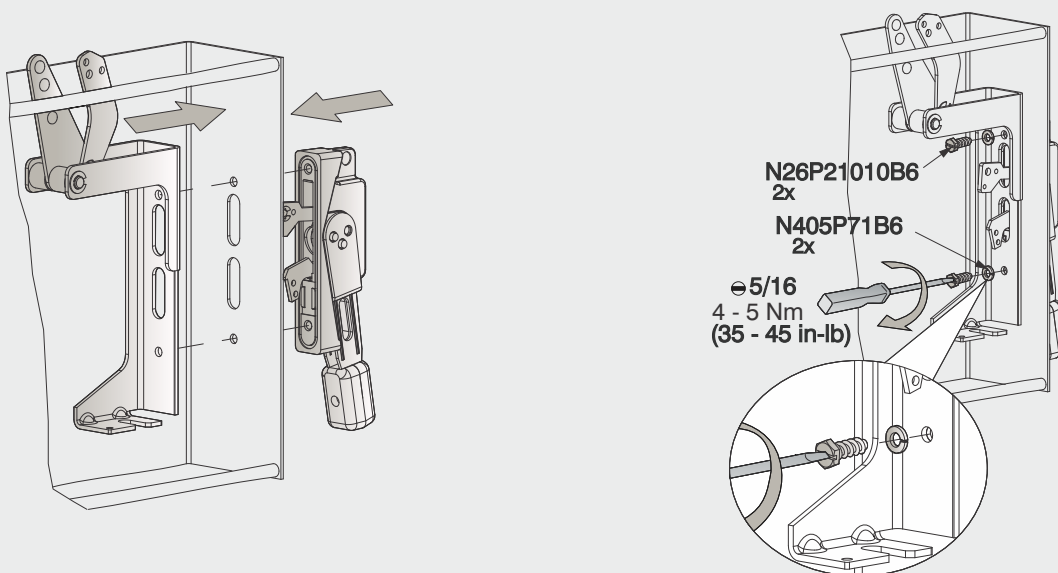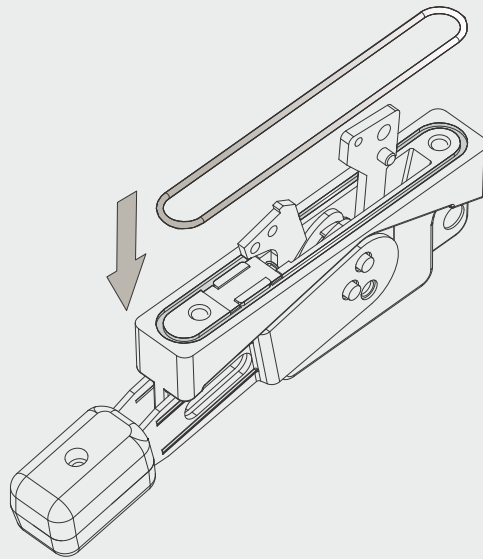

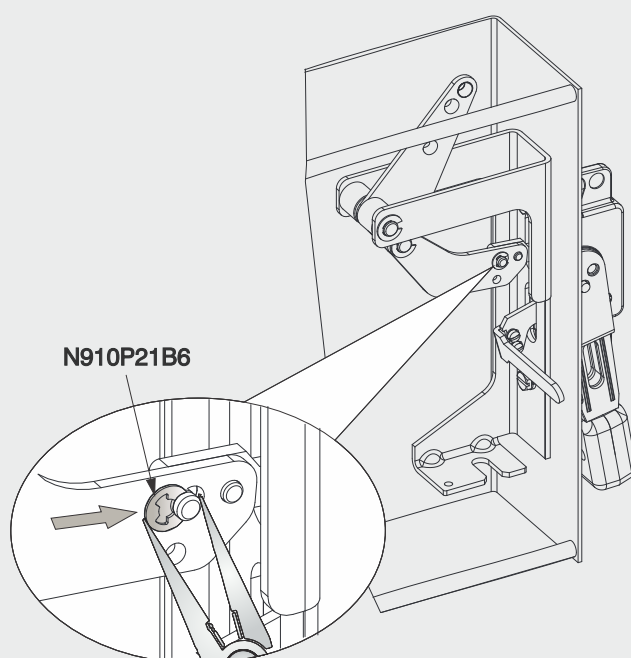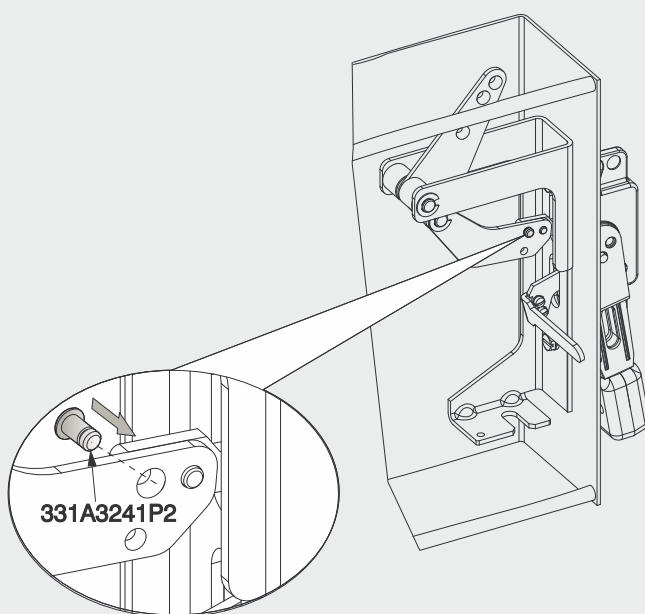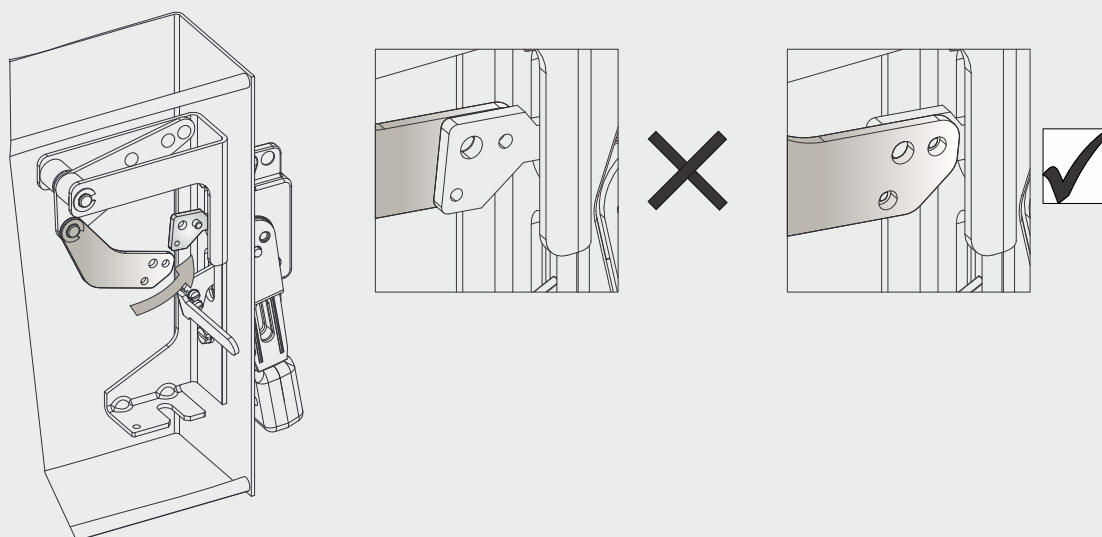


7

331A2566P1

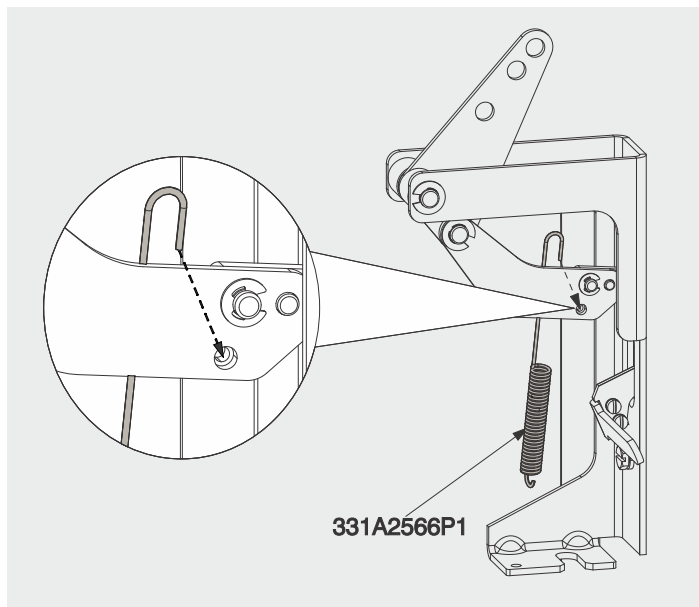


8

331A2566P1

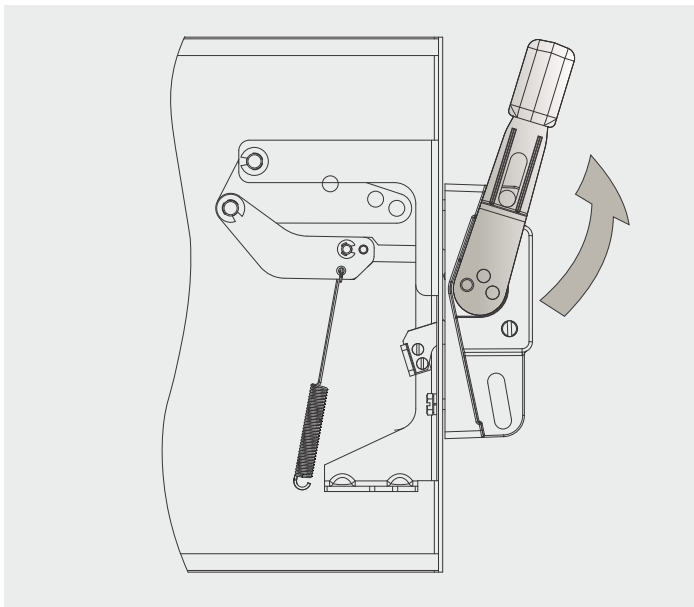


9

331A2566P1

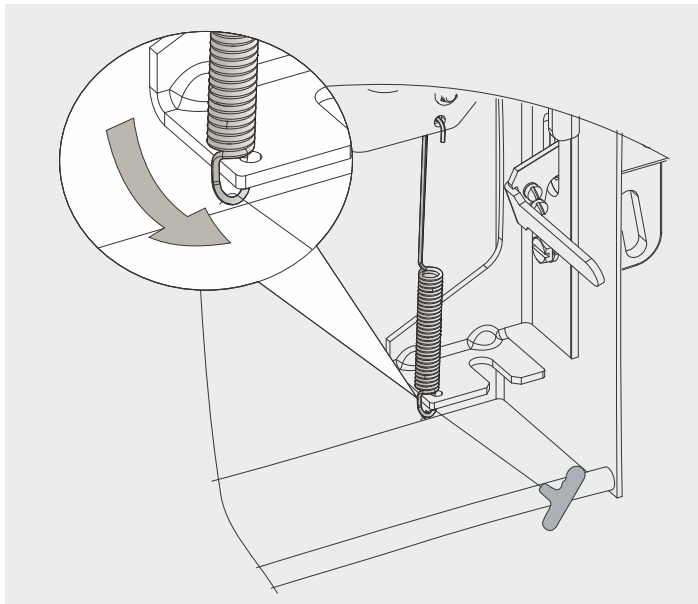


10

331A2566P1


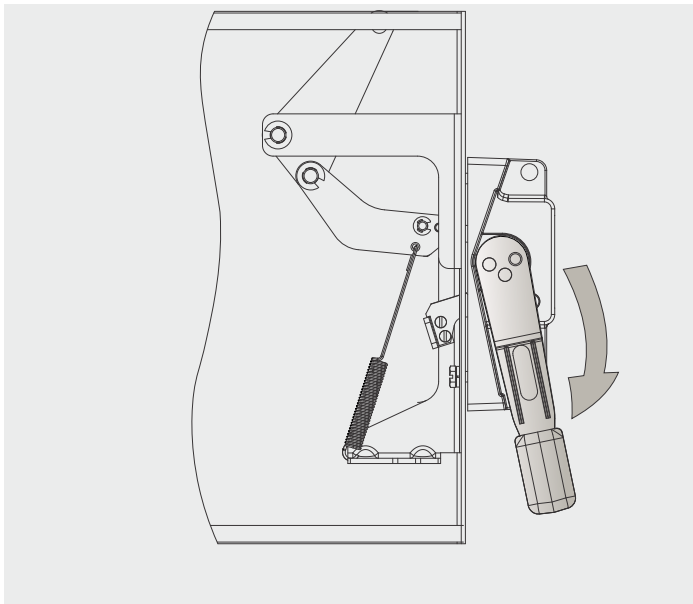


11

331A2552P1/ N165P15006B6


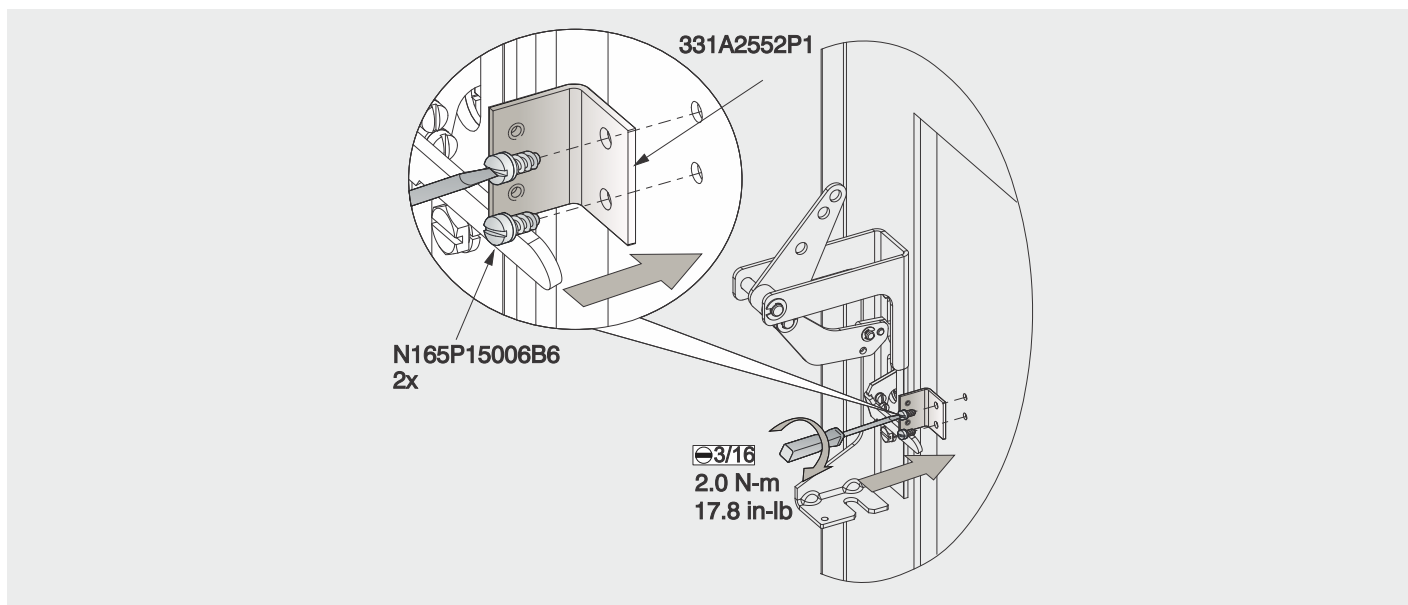



12A

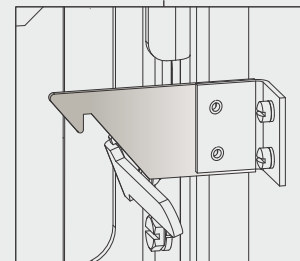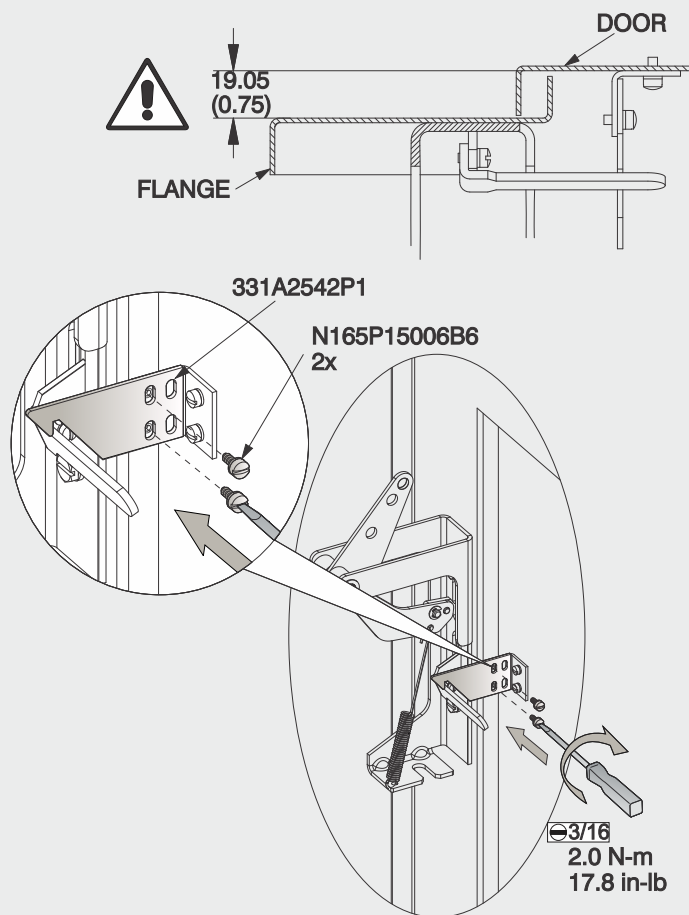

OR


12B

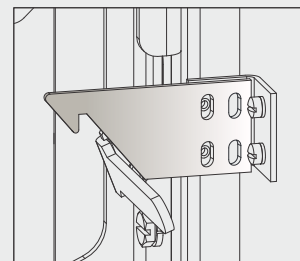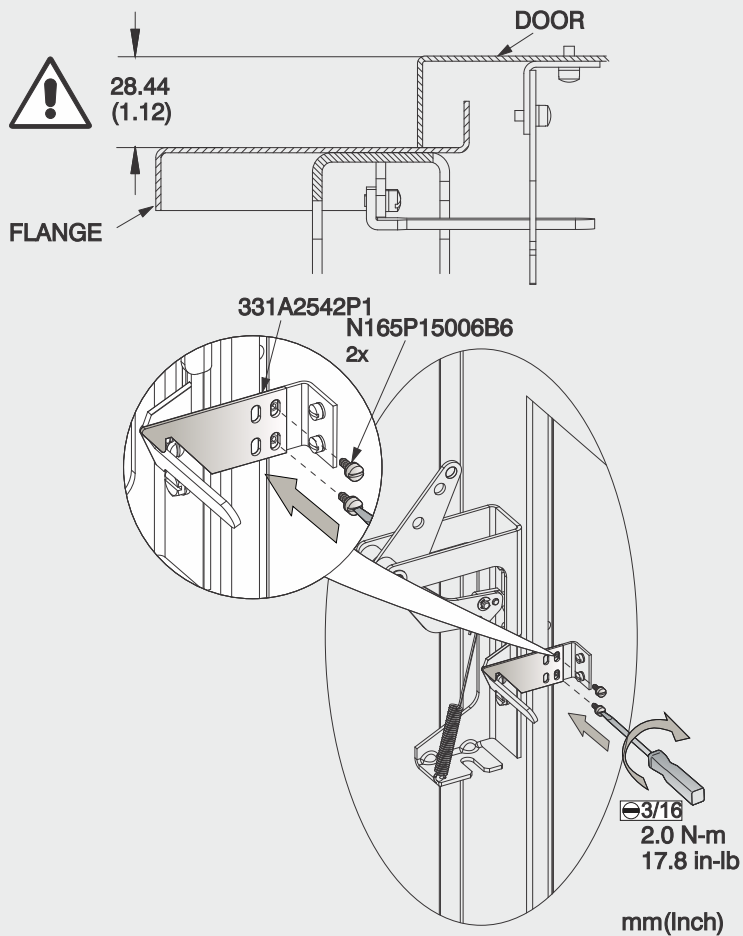

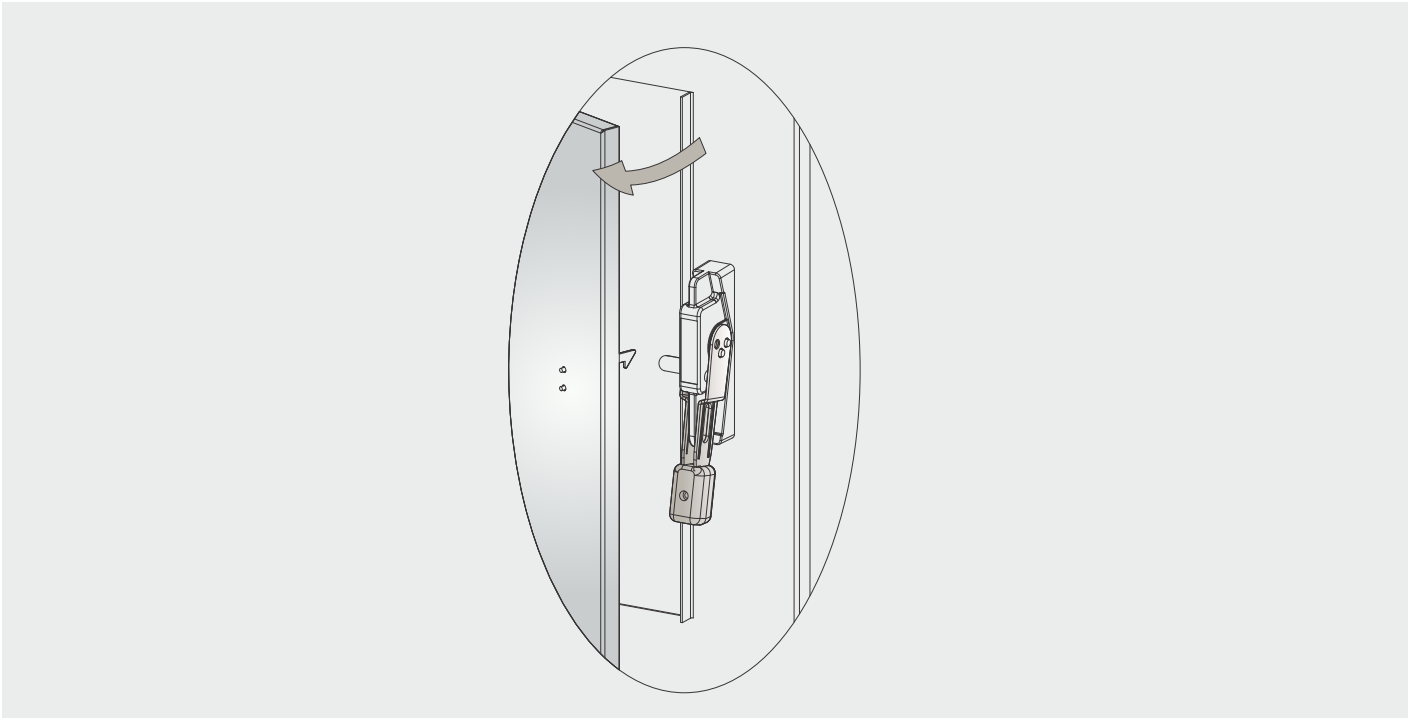


14

FINAL ASSEMBLING

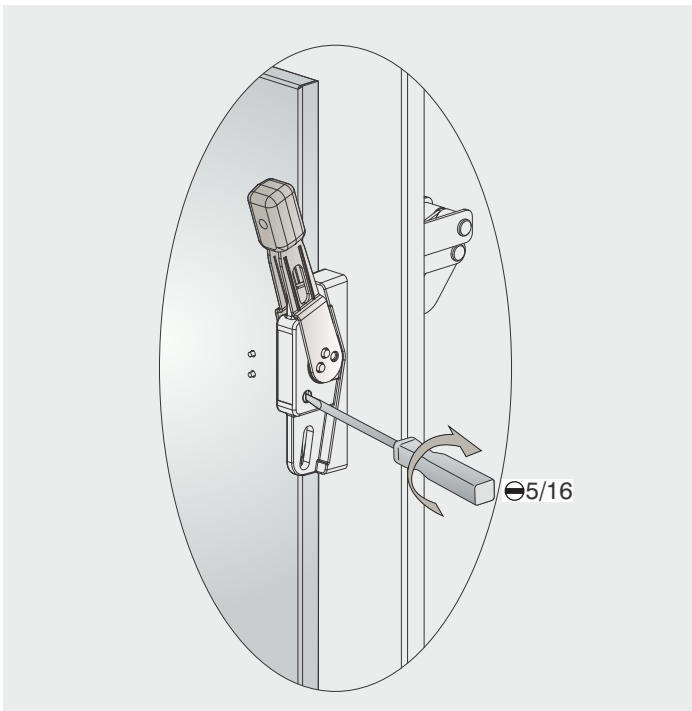

15

FINAL ASSEMBLING

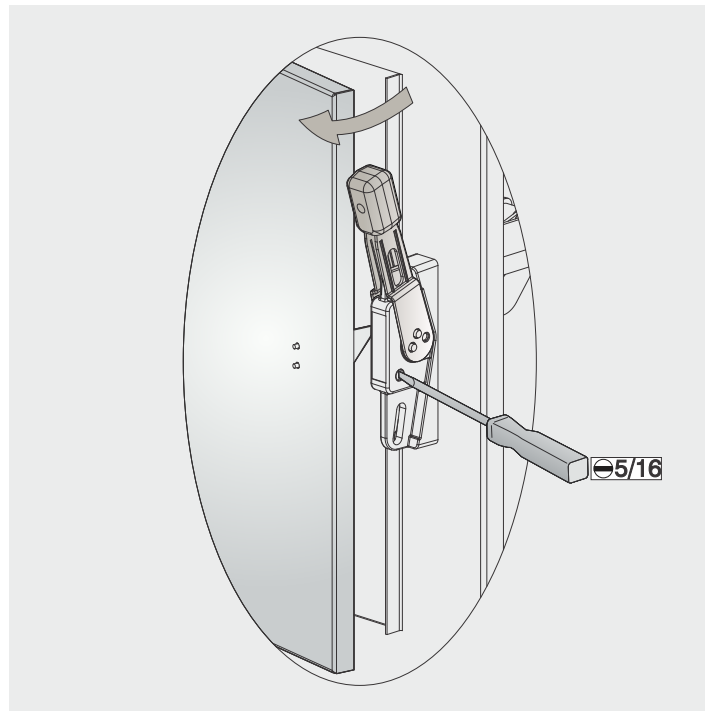

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation operation or maintenance.