

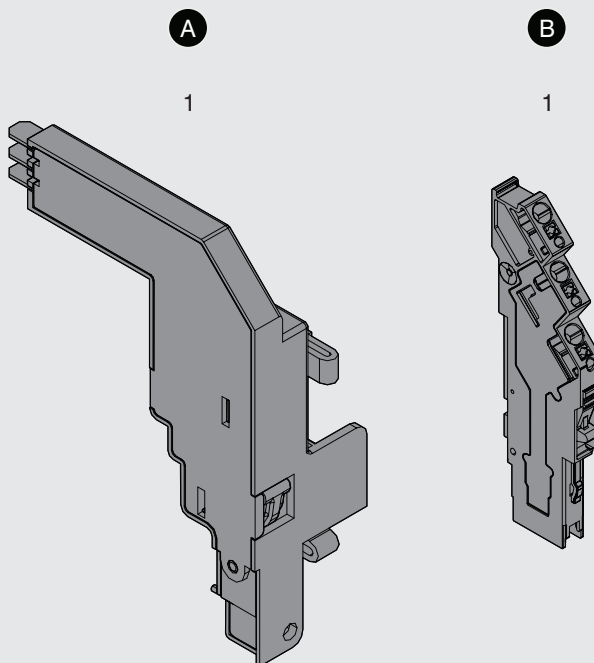
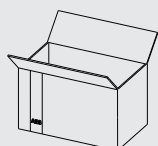
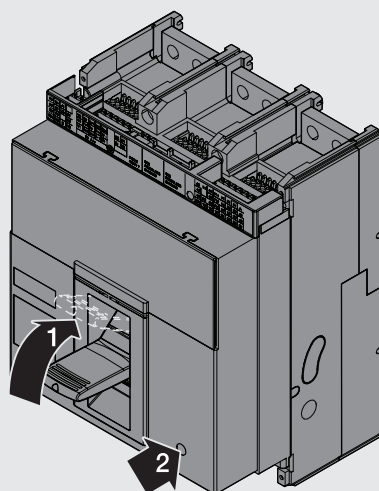




SACE Tmax XT

Contatto di segnalazione stato della bobina di apertura YO2/YU - XT7
Contact for signaling state of opening coil YO2/YU - XT7
Meldekontakt Zustand der Ausschaltspule YO2/YU - XT7
Contact de signalisation état de la bobine d'ouverture YO2/YU - XT7
Contacto de señalización estado de la bobina de apertura YO2/YU - XT7
跳闸线圈 YO2/YU - XT7 的状态信号触点


XT7

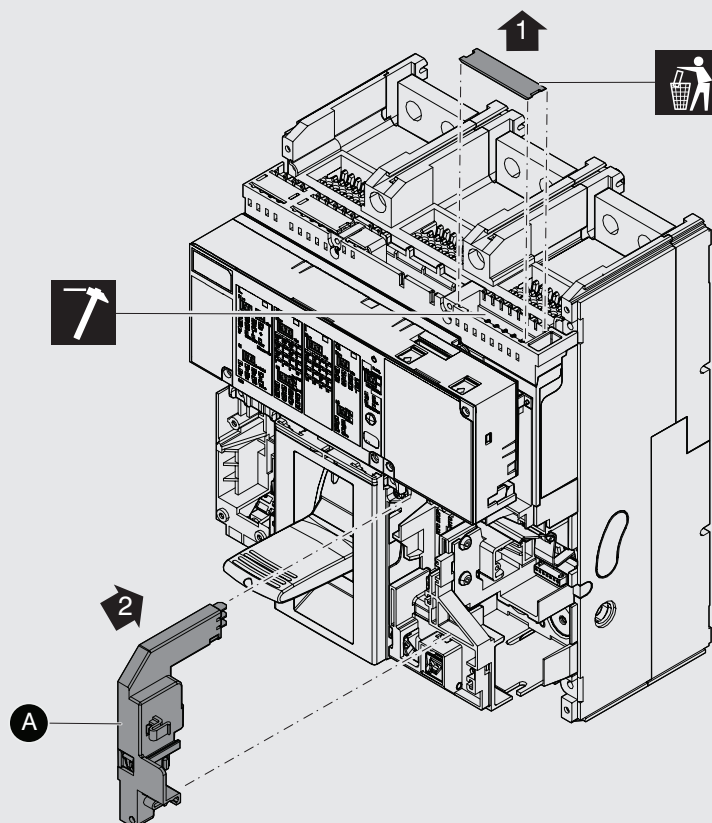

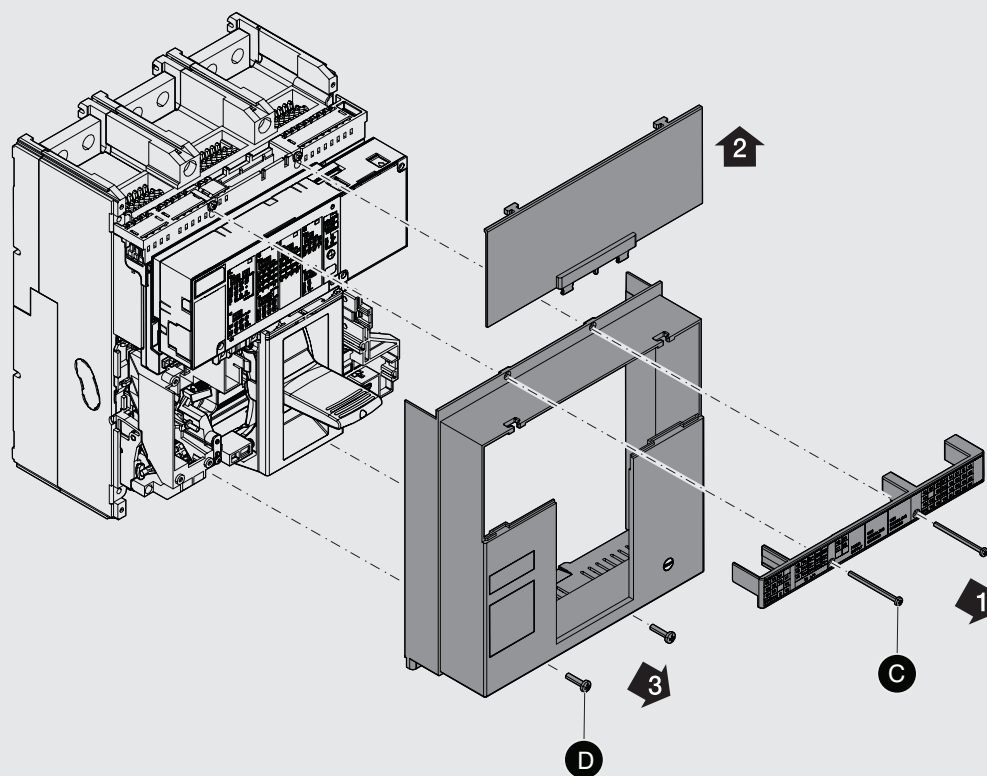


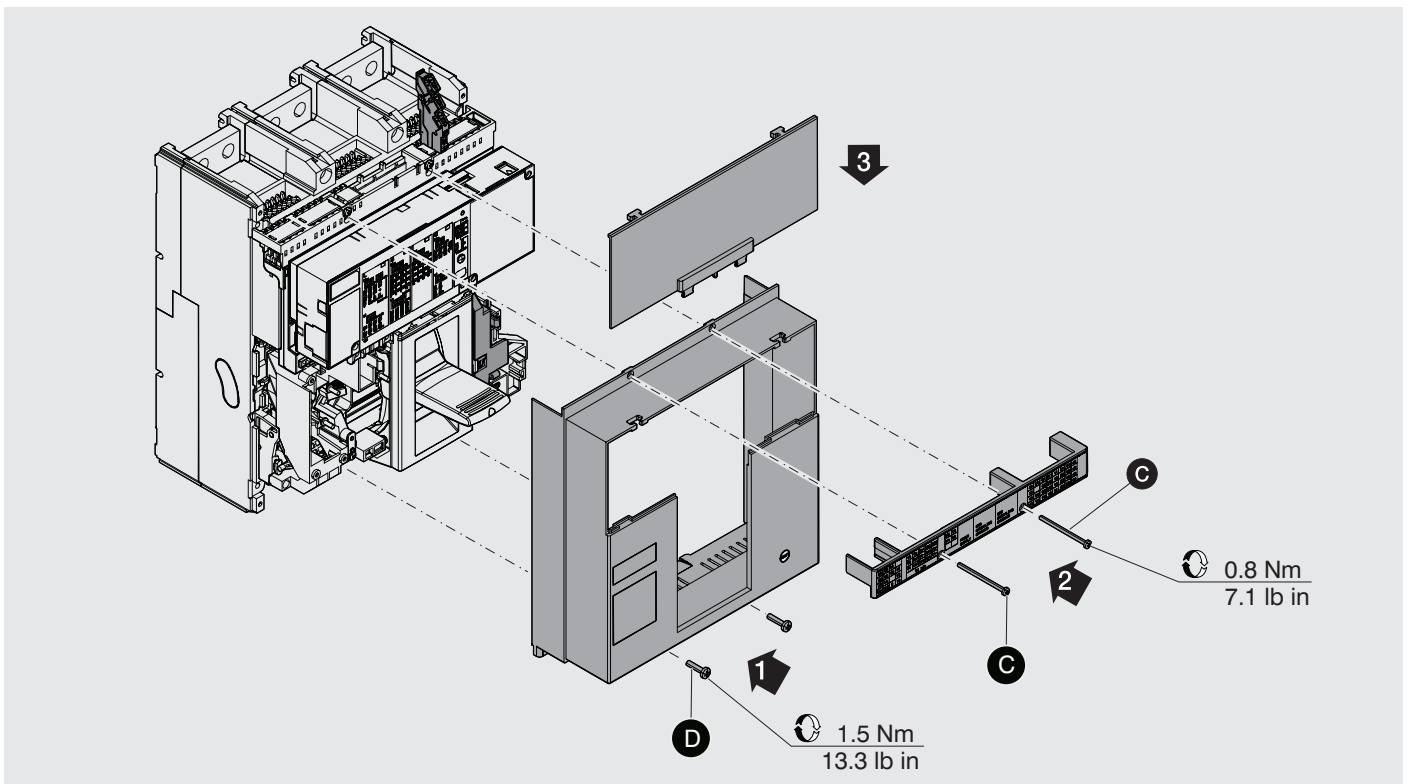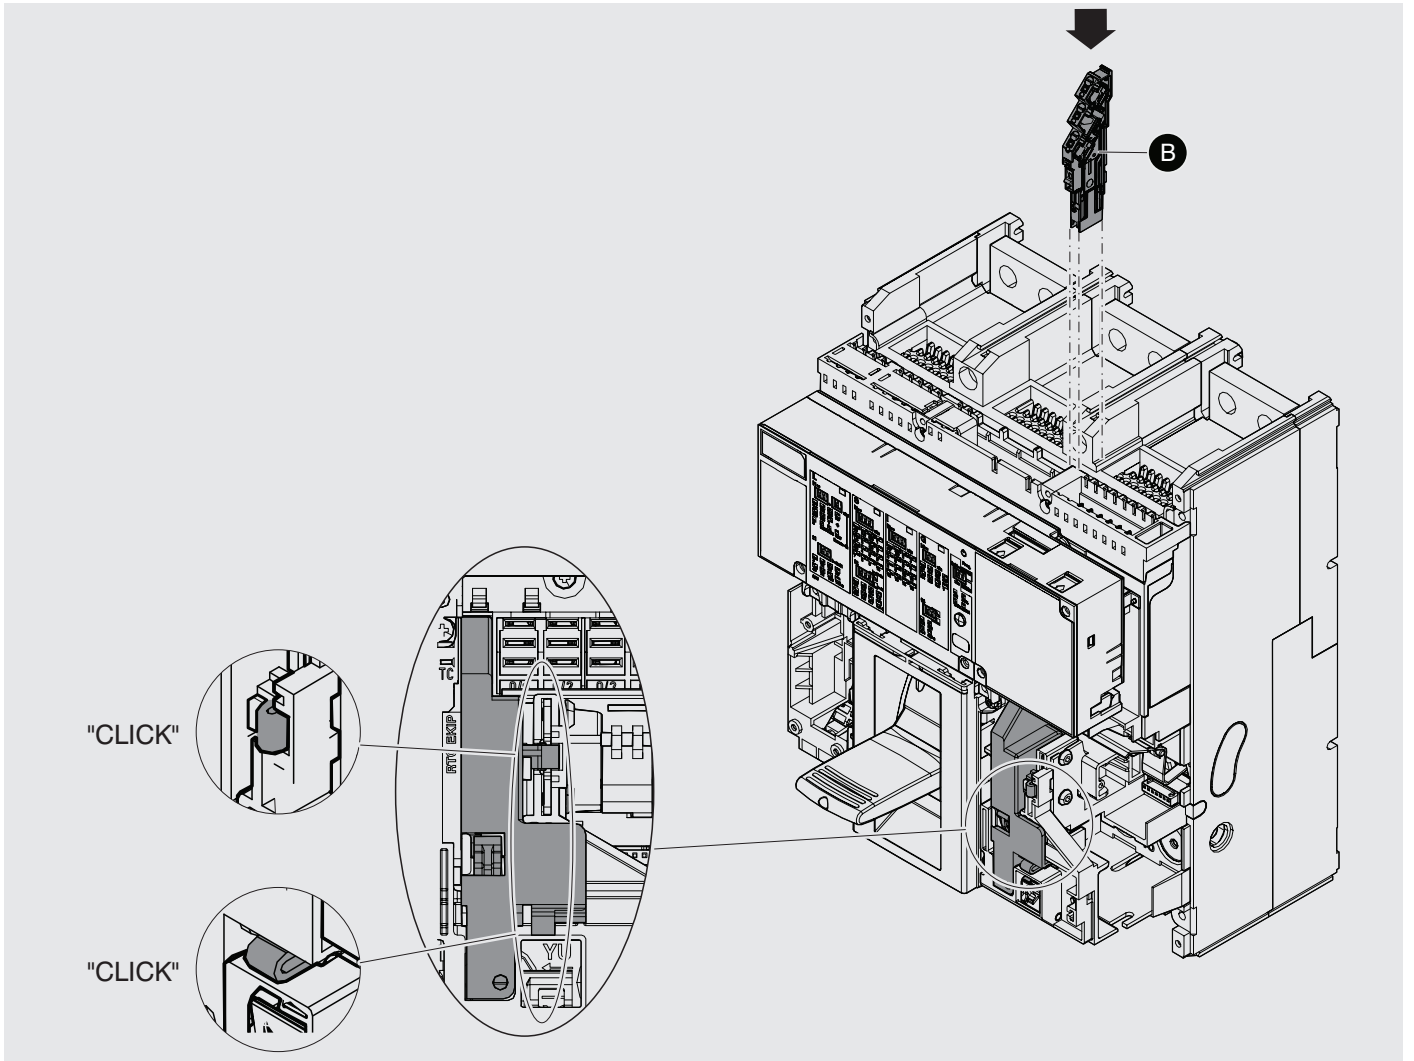

5

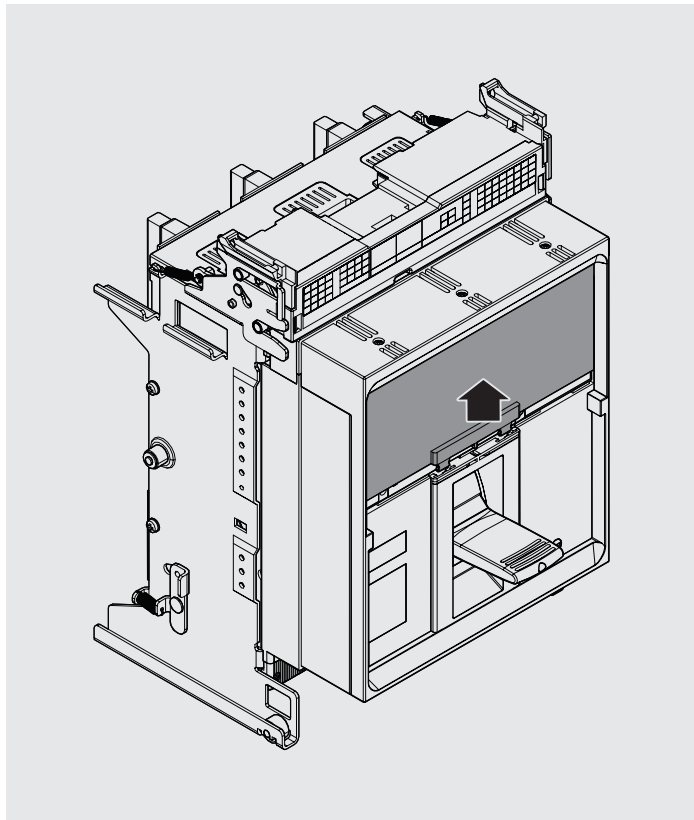


W 6

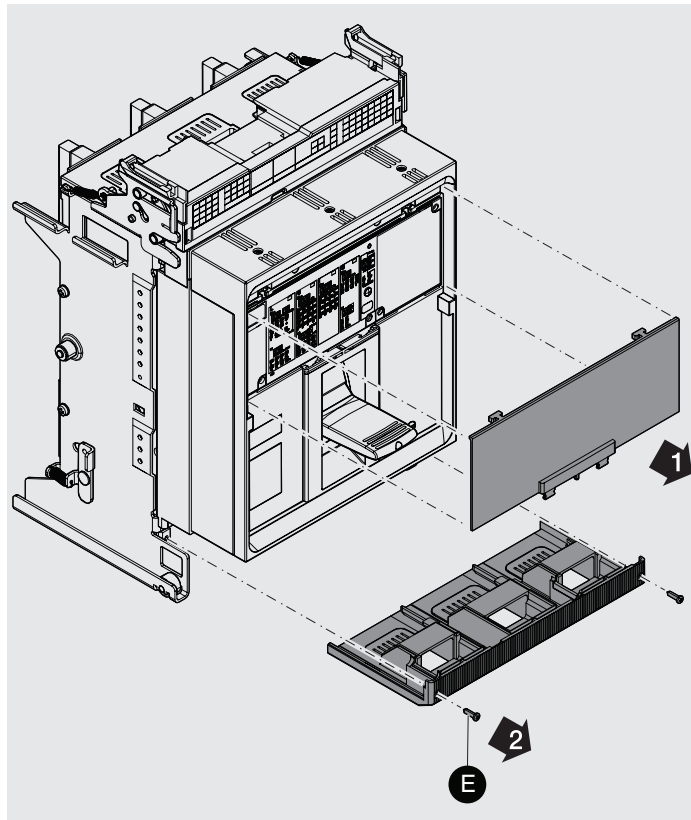


W



7



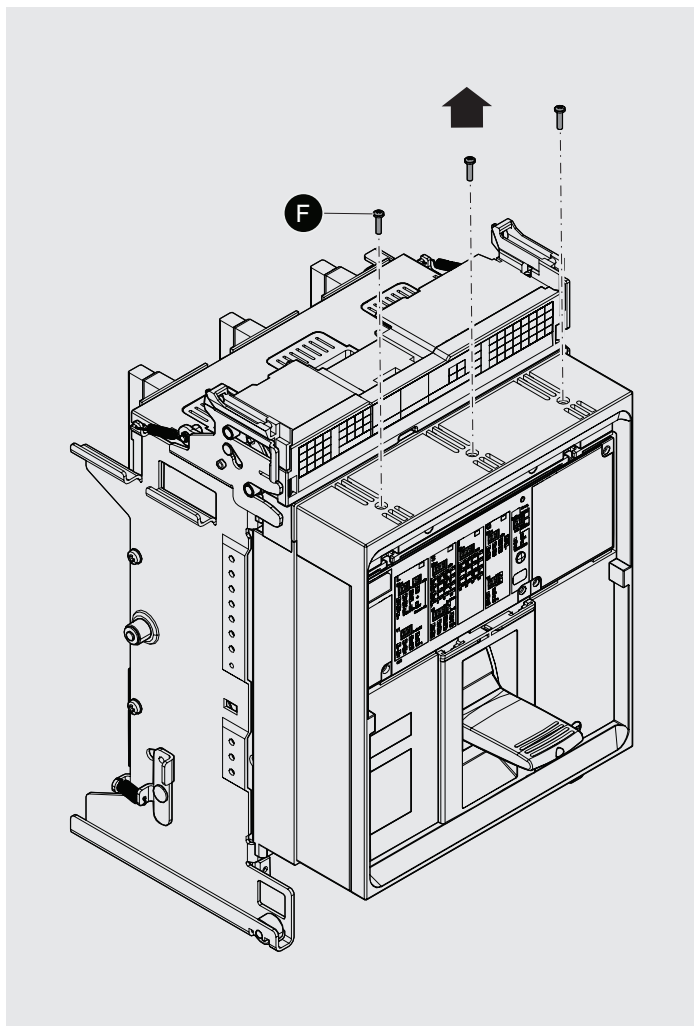


W 8

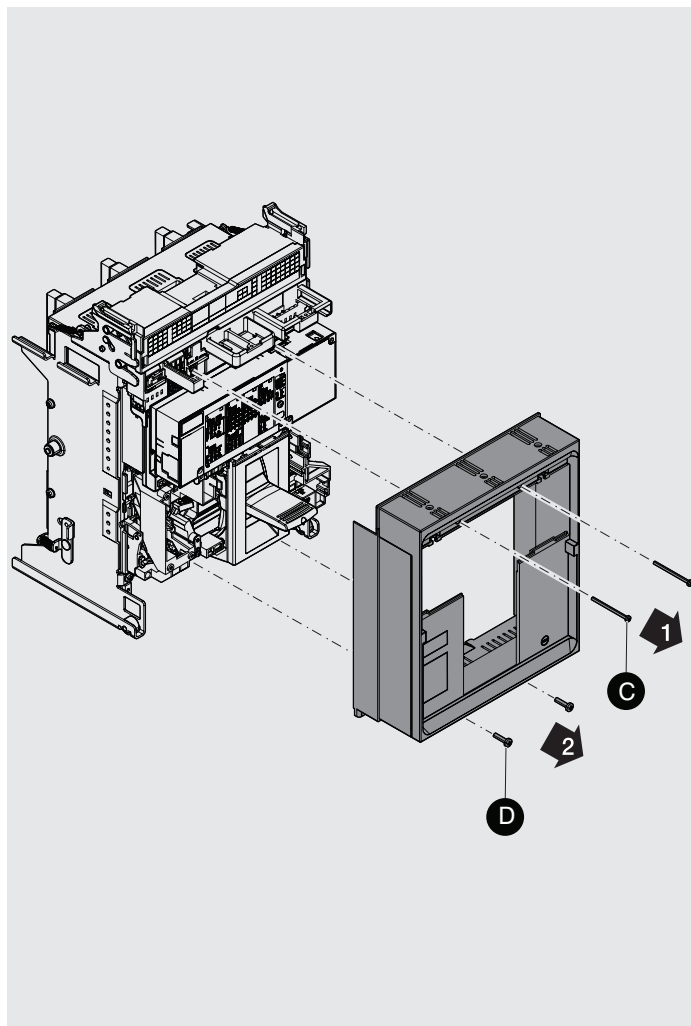



W

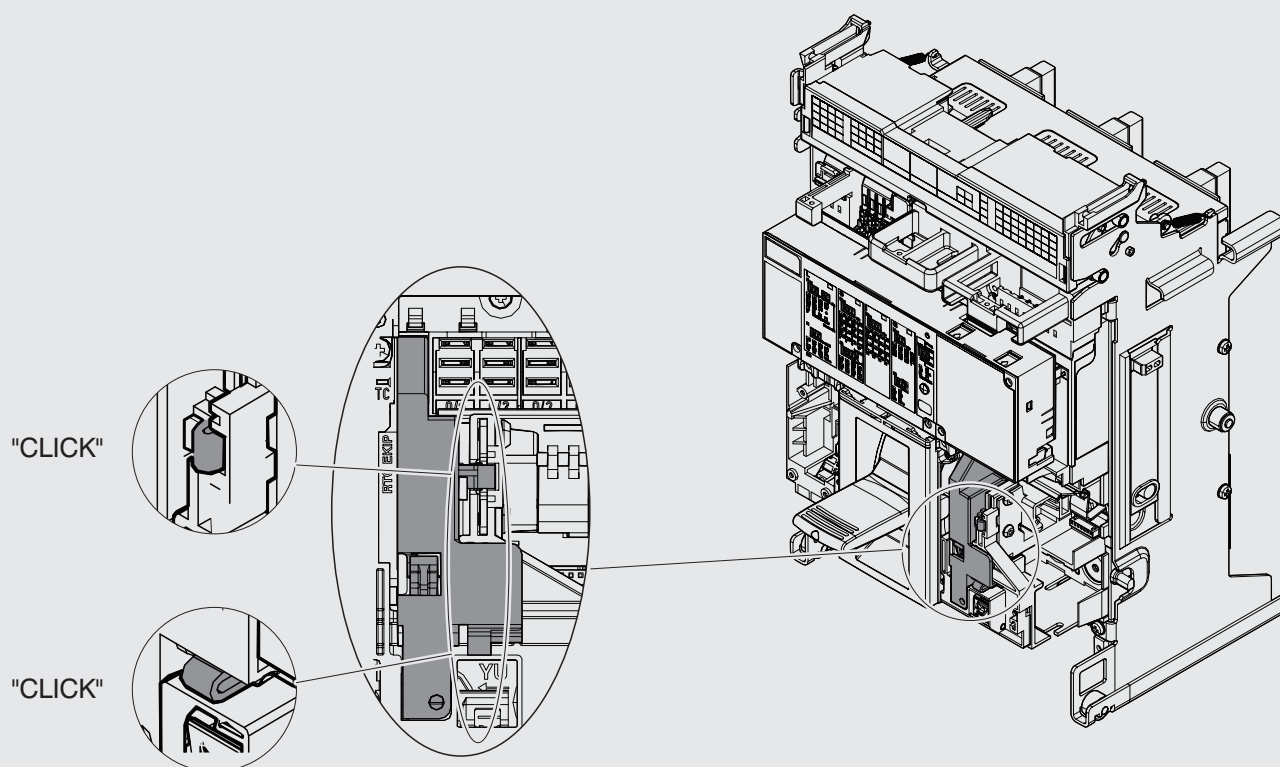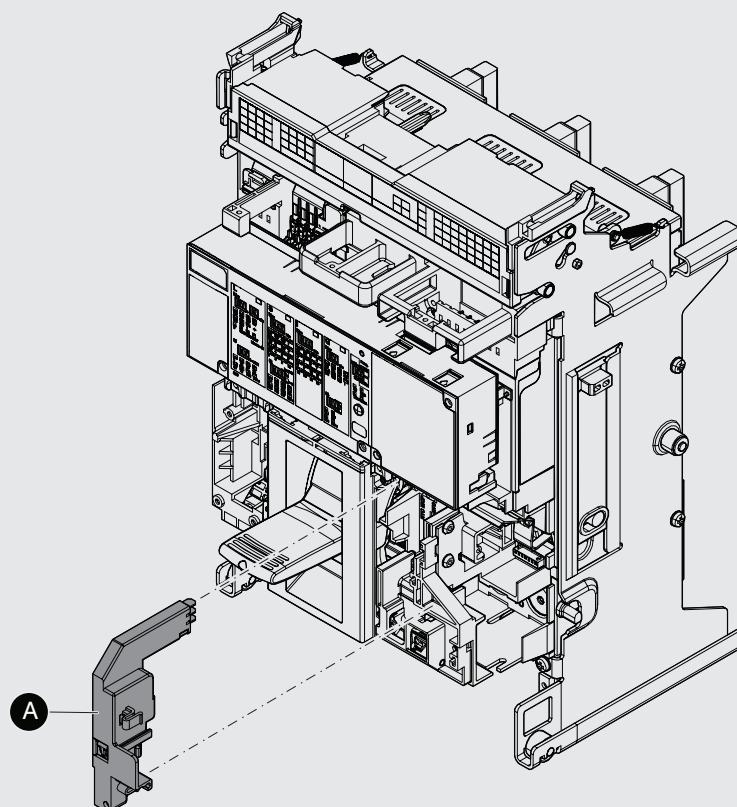

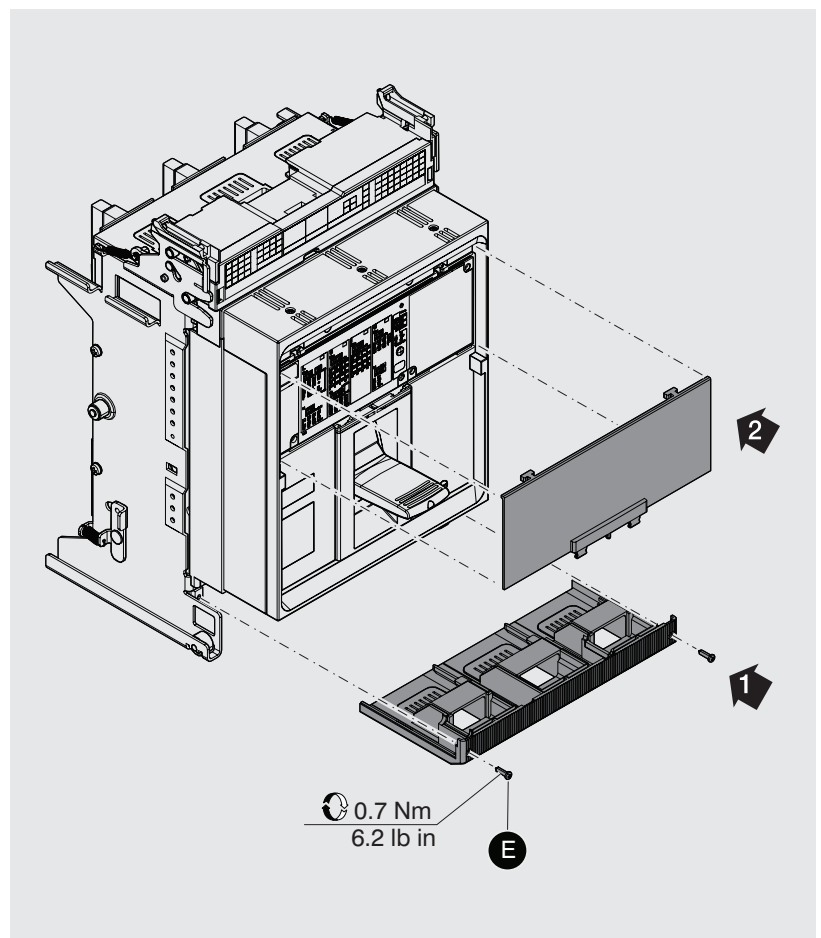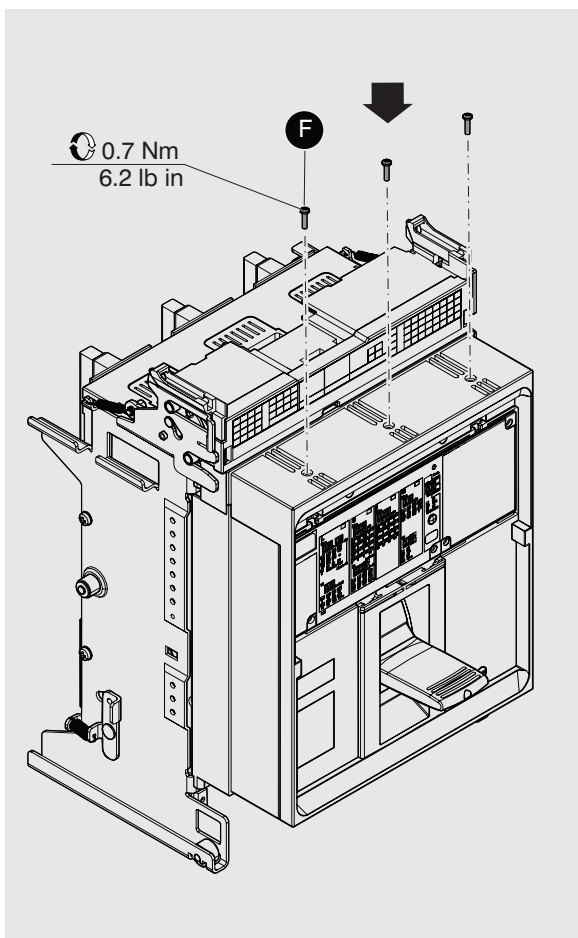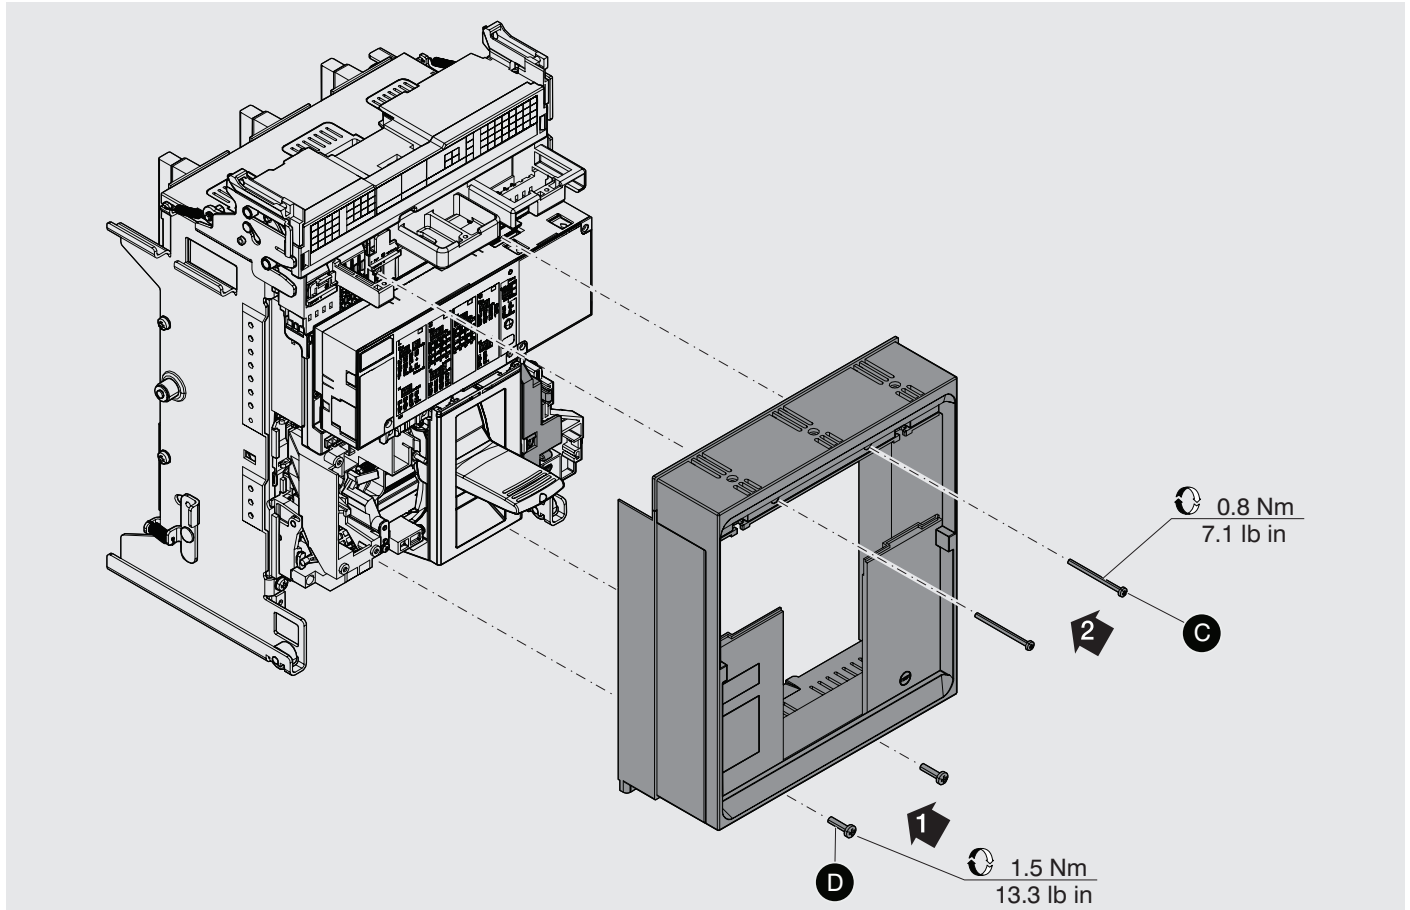

ESECUZIONE
FISSA
FIXED
VERSION


95	15	37	47	V3	Vn	Ge+	Szi	Ne-	24Vdc	K2	W4					25	D1	C11	11	21	31	41
96	16	38	48	V2	Rct	Ge-	Szo	Ne+	ONLY	K1	W3					26		C13	12	22	32	42
98	18			V1	Gzo	Szc	Gzi	Rca								28	Y2	C12	14	24	34	44
S51	SY	S4/1	S4/2	Trip Unit I/O				EKIP Supply				Module	Module			S52	YU Y02	Y0	Q1	Q2	Q3	Q4

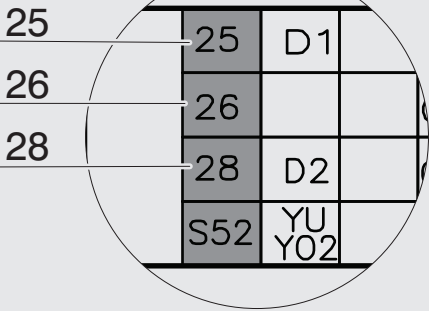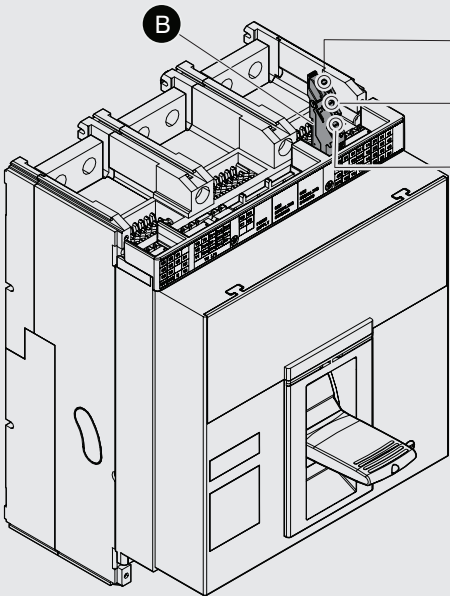

F

ESECUZIONE
ESTRAIBILE
WITHDRAWABLE
VERSION

95	35	15	37	R1	47	V3	Vn	Ge+	Szi	VERSION						Ne-	45	D1	C1	C11	11	21	31	41		
96	36	16	U1	38	R2	48	V2	Rct	Ge-	Szo				W3	K1	24Vdc	Ne+	46	26	C3	C13	12	22	32	42	
98	38	18	U2				V1	Gzo	Szc	Gzi				W4	K2	ONLY	Rca	48	28	2	C2	C12	14	24	34	44
S51	S33	M	YR	S4/1	S4/2	Trip Unit I/O		Module	Module				EKIP	Supply	YU	RTC	YU	YC	Y0	Q1	Q2	Q3	Q4			

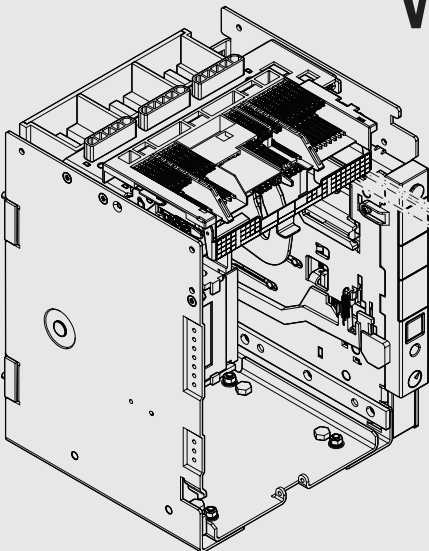

W

