
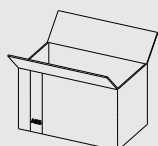


SACE Tmax XT


AUE - Contatti anticipati all'apertura XT7.
AUE - Early making auxiliary contacts XT7.
AUE - Verfrüht kontakte für das Ausschaltung XT7.
AUE - Contact anticipé permettant la ouverture XT7.
AUE - Contacto temprano para el disparo XT7.
AUE - 跳闸之前的触点 XT7.

XT7

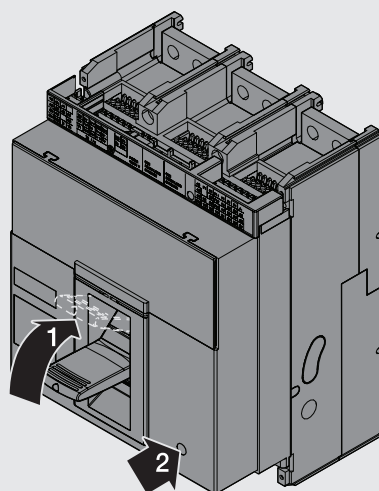

A

1

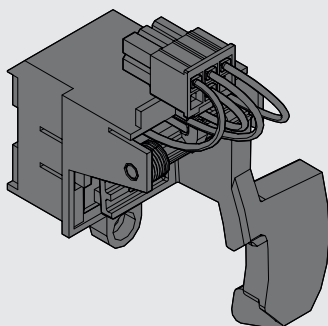


B


1





C

  
2






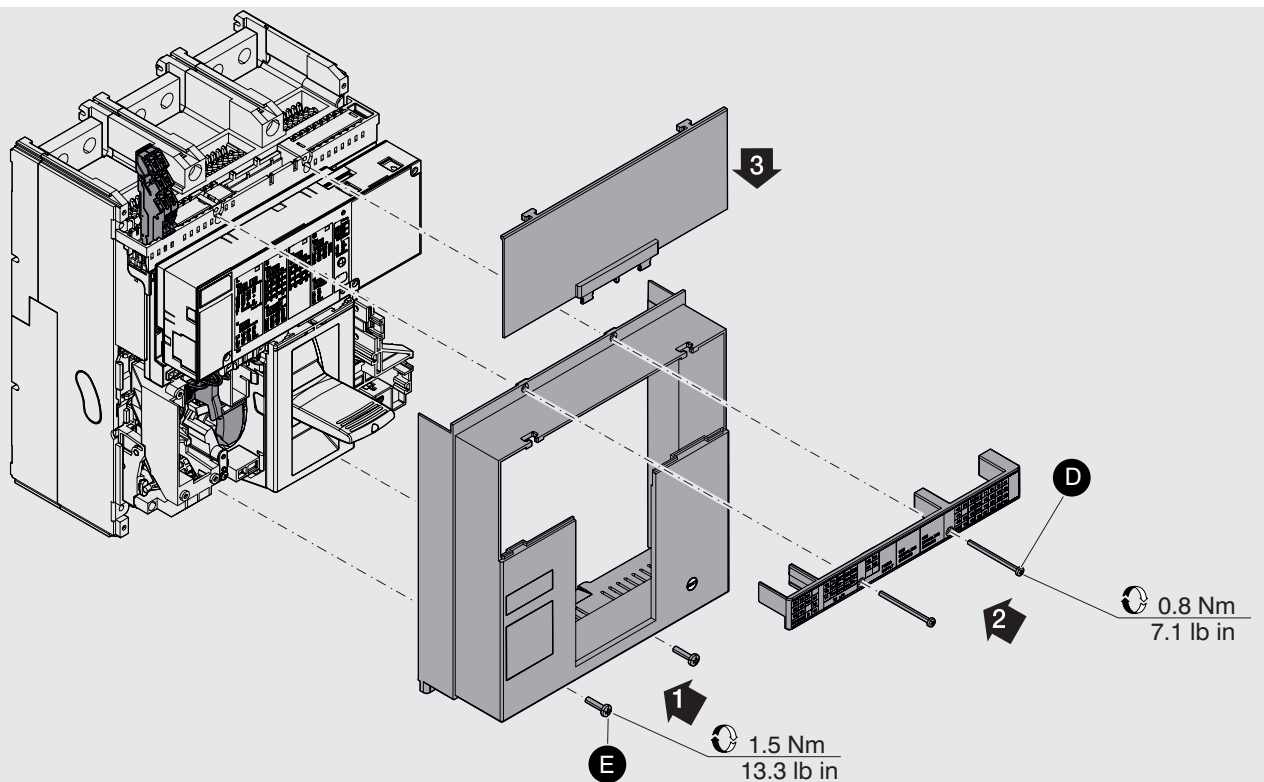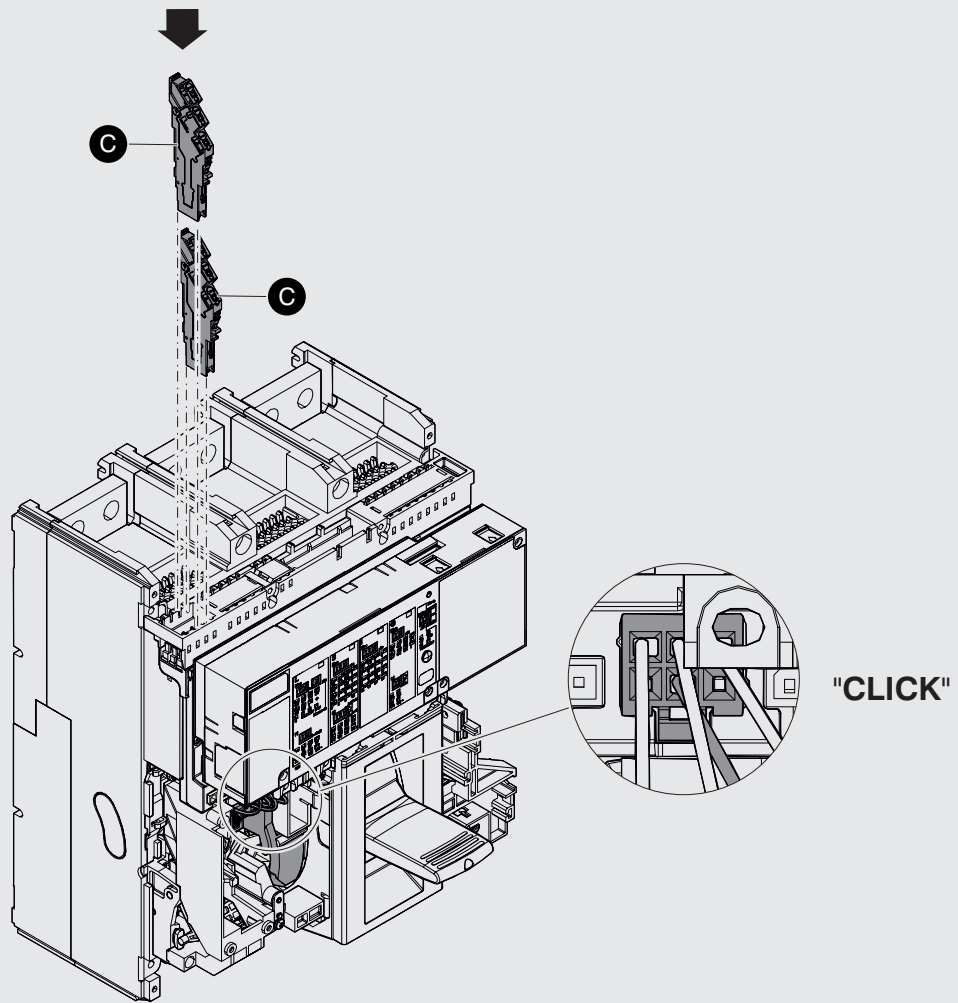


6

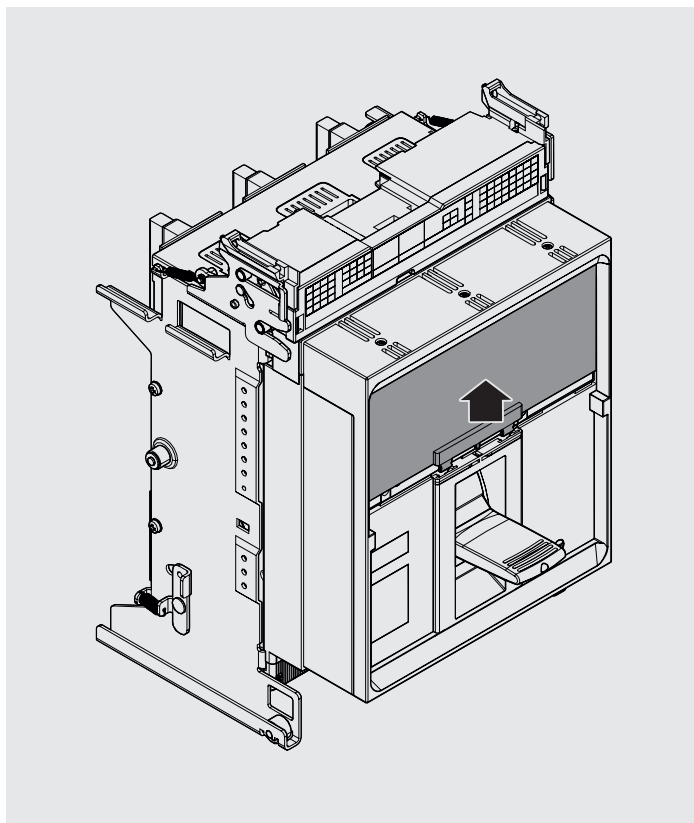

W 7

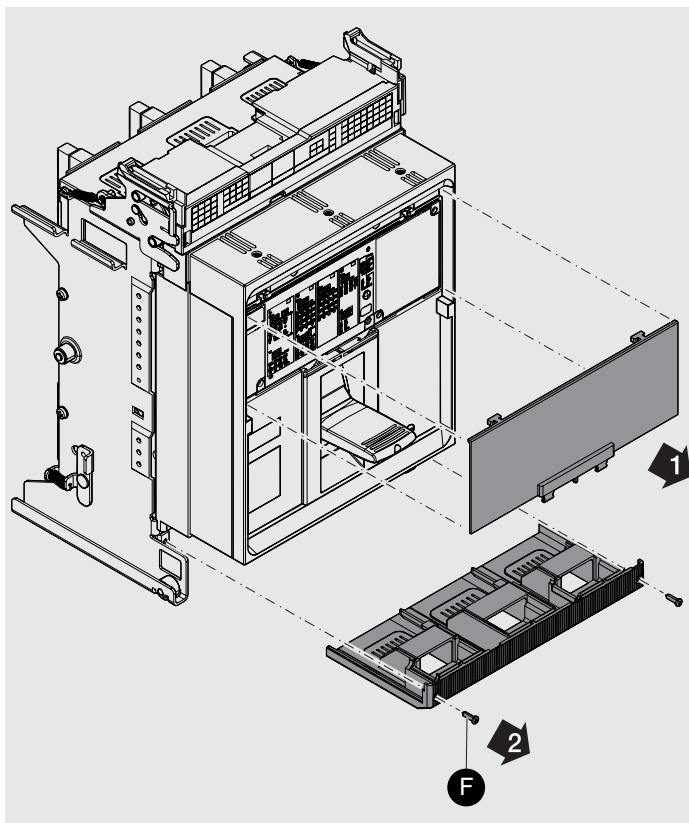

8

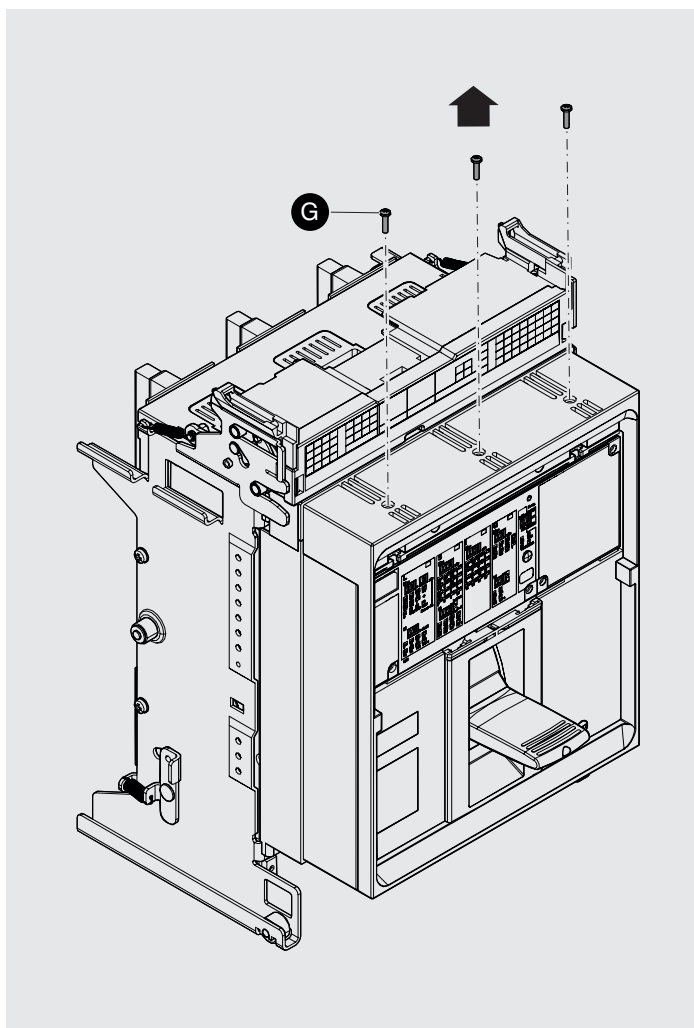

W 9

