




## **GEJ-7202 Information Label**

## **CR360L Lighting Contactor**
 
## 30 Ampere

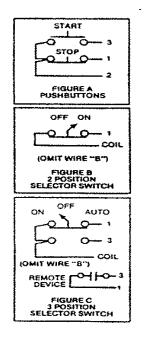

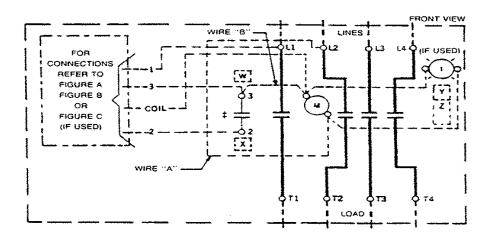



M-LINE CONTACTOR

I-INDICATING LIGHT

Use 75°C, copper conductors only, for field wiring. Torque line and load terminals to 20 lb-in.

FOR SEPARATE CONTROL-Omit wire "A" and connect control source to coil and to 1 on control device.

NOTE: Refer to the National Electrical Code. Additional control circuit overcurrent protection may be required.

3-PHASE RATINGS APPLY TO 2-PHASE FORMS.

COIL (Order 15D21G plus coil suffix number per table below)

60 Hz .	115- 120V	200- 208V	230- 240V	I	460- 480V	575- 600V
50 Hz	110V		220V	380V	440V	550V
Coil Suffix	002	023	003	064	004	005

The following accessory kits may be installed on this device.

AUX CONTACT CR305X100A, B. C, D, E
CONTROL CIRCUIT FUSE CR305X141A, B, C, D

For CSA-GND KIT
'½-IN CONDUIT 55-213403G001
'¾-IN CONDUIT 55-213403G002

EXTR	A AUXILIA	RY CONT	ACTS				
Final Suffix	Contact Location. See Diagram						
Letter Of CR Number	w	×	ţΥ	tΖ			
A (Or None)							
8							
С		AF.					
Q		*					
E				-11-			
F	*	7					
G	<b></b>	<del>*</del>					
H	*	<del>₹</del>		-11-			
J	1-11-		<b>⊣</b> ⊢	}			
‡Z	No Holding Interlock						

† Not available when Control Circuit Fuse Kit is used.

These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to your local ABB Sales Office.