

#### **GEH3483**

# **Neutral Kit**

TNIJ61\*, TNIJ62\*, TNIJA62\*. TNIJ63\*, TNIJ64\*, TNIJ66\*



Hazards of electrical shock or burn! Turn off power before working inside this equipment.

#### **Used with:**

NEMA 4/4X, 5 and 12 Switches

### **Description:**

The TNIJ Neutral kits are UL listed for use as insulated groundable neutrals.

Each kit provides the neutral strap assembly, mounted copper and aluminum lugs, necessary mounting hardware and a bonding screw.

The factory-supplied lugs are field-replaceable with crimp connectors. For a list of the replacement connectors, see the Switch Rating Label.

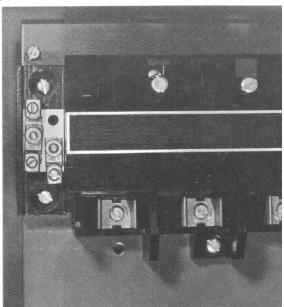


Fig. 1 TNIJ61\* Installed
TNIJ61 - Use in 30Amp Fusible and No-Fuse
Switches

The TNIJ61\* mounts as shown in Fig. 1. Mounting and bonding screw holes are provided in the inner plate next to the switch base.

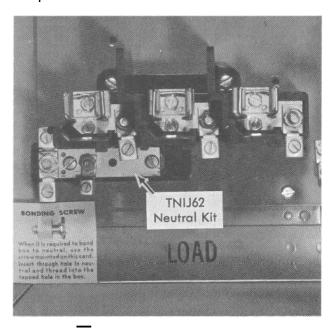


Fig.2 TNIJ62\* Installed

## TNIJ62 - Use in 60Amp Fusible Switches only

The TNIJ62\* mounts on the fuse base as shown in Fig. 2.

**Note:** The fiber washers which hold the mounting screws to the neutral strap must remain in place when installing the neutral strap. **Do not remove the fiber washers.** 

**Note:** \* - Applicable for UL Recognized catalog numbers with UR suffix also.

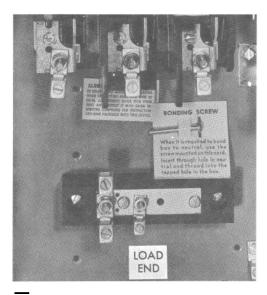


Fig.3 TNIJA62\* Installed

# TNIJA62\* - Use in 60Amp No-Fuse Switches only

The TNIJA62\* mounts as shown in Fig. 3. Mounting holes are provided at the load end of the inner plate.

### **TERMINAL TIGHTENING INFORMATION**

TIGHTENING TORUE FOR SLOTTED HEAD SCREWS	
WIRE SIZE	TORQUE (IN-LBS)
14-10	35
8	40
6-4	45
3-1/0	50

# **TIGHTENING TORQUE FOR INTERNAL SOCKET HEAD SCREWS**

SOCKET SIZE	TORQUE
ACROSS FLATS	(IN. LBS.)
1/8	45
5/32	100
3/16	120
7/32	150
1/4	200
5/16	275
3/8	375
1/2	500

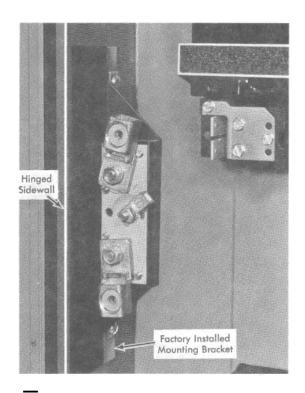


Fig.4 Typical 100-600A Kit Installed

- TNIJ63\* Use in 100Amp Fusible and No-Fuse **Switches**
- TNIJ64\* Use in 200Amp Fusible and No-Fuse **Switches**
- TNIJ66\* Use in 400 & 600Amp Fusible and **No-Fuse Switches**

The 100Amp through 600Amp Neutral kits mount to the hinged sidewall of the switch enclosures, as shown in figure 4. A bracket is provided in each switch to which the neutral kit is mounted.

Note: \* - Applicable for UL Recognized catalog numbers with UR suffix also.

ABB Inc.

electrification.us.abb.com