

GEH4617 INSTALLATION INSTRUCTIONS

R-Class Fuse Kit

TRK12A/TRK16SA



Hazards of electrical shock or burn! Turn off power before working inside this equipment.

Used with:

600Vac NEMA 4/4X, 12 Safety Switches

Instructions

1. Remove and discard the Load End Fuse Clips from the Load Base Assembly
2. Attach the Fuse Clip and Bracket assembly to the Load Base by inserting Drive Rivet with screw driver or similar tool as shown in Figure 2.

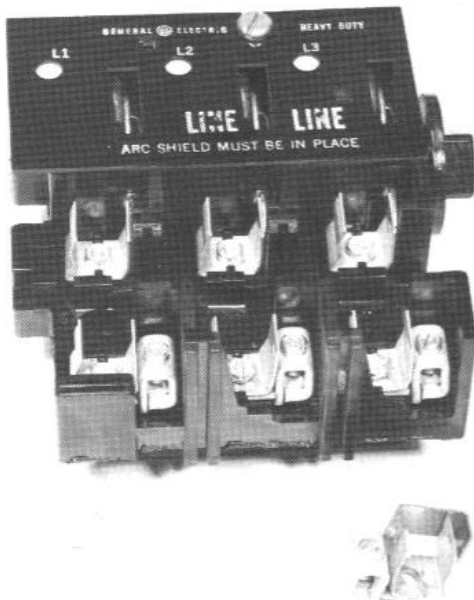


Figure 1

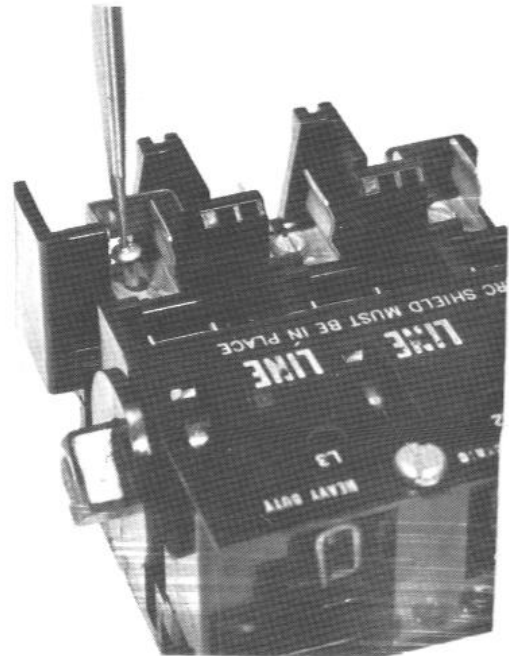


Figure 2