

GEH-4616 INSTALLATION INSTRUCTIONS

R-Class Fuse Kit

TRK22A/TRK26A/TPBRK12A TPBRK16A/TPBRK22A/TPBRK26A




Hazards of electrical shock or burn! Turn off power before working inside this equipment.

Used with:

60 Amp Heavy Duty Safety Switches

Instructions

- 1. Remove and discard the Fuse Clips from the Load Base Assembly.
- Fuse Clip and Bracket Assembly must be positioned in place and assembled to Load Base with one way screw as shown in Figure 2.
- 3. For satisfactory performance torque requirements for screw should be 22 to 32 in-lbs.

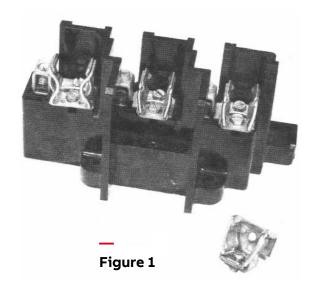

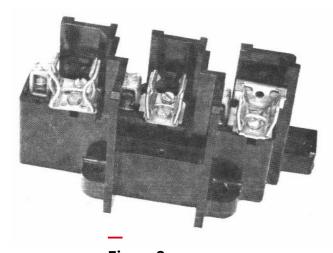


Figure 2