

Catalog No. Qty

TRK66A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, loosen clamp screw and move the clamp away from the top of the fuse clip. Insert rejector in the center hole in the side of the fuse clip. Push rejector through both sides of the fuse clip.


⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

15QC920042M0201_Rev C, GEJ5153 Dec 2023

ABB

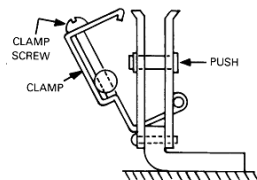

Catalog No. Qty

TRK66A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, loosen clamp screw and move the clamp away from the top of the fuse clip. Insert rejector in the center hole in the side of the fuse clip. Push rejector through both sides of the fuse clip.


⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

15QC920042M0201_Rev C, GEJ5153 Dec 2023

ABB

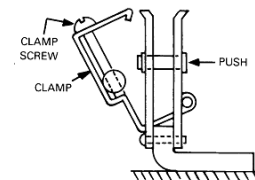

Catalog No. Qty

TRK66A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, loosen clamp screw and move the clamp away from the top of the fuse clip. Insert rejector in the center hole in the side of the fuse clip. Push rejector through both sides of the fuse clip.


⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

15QC920042M0201_Rev C, GEJ5153 Dec 2023

ABB

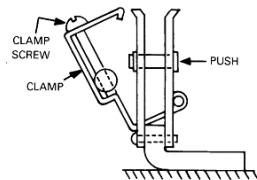

Catalog No. Qty

TRK66A 1 R-Class Fuse Kit

For Rejecting Fuses Other Than Class “R”

INSTALLATION INSTRUCTIONS:

Using the fuse clips on the load side of the fuse, loosen clamp screw and move the clamp away from the top of the fuse clip. Insert rejector in the center hole in the side of the fuse clip. Push rejector through both sides of the fuse clip.

⚠ CAUTION: Turn off power before working inside this equipment.

Note: For two pole devices omit third rejector.

ABB Inc. 305 Gregson Drive Cary, NC 27511
electrification.us.abb.com

15QC920042M0201_Rev C, GEJ5153 Dec 2023

ABB

