


## Technical Reference Manual

### ABB-free@home®

Sensor/dimming actuator, 1/1gang; 2/1gang, wireless

SDA-F-1.1.1-WL

SDA-F-2.1.1-WL

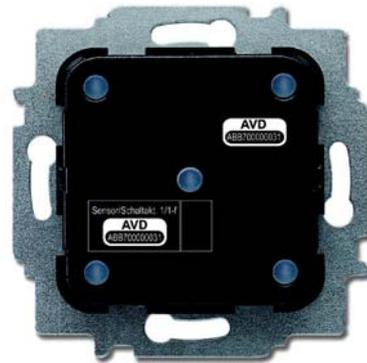

|     |   |    |
|-----|---|----|
| 1   | Information on the manual .....                                 | 3  |
| 2   | Safety.....   | 4  |
| 2.1 | Information and symbols used.....                               | 4  |
| 2.2 | Intended use.....   | 5  |
| 2.3 | Improper use .....  | 5  |
| 2.4 | Target group / Qualifications of personnel.....                 | 5  |
| 2.5 | Safety instructions .....                                       | 6  |
| 2.6 | Environment .....   | 7  |
| 3   | Setup and function .....  | 8  |
| 3.1 | Scope of supply .....   | 9  |
| 3.2 | Overview of types.....  | 9  |
| 3.3 | Functions.....  | 9  |
| 3.4 | Device overview .....   | 10 |
| 4   | Technical data.....   | 11 |
| 4.1 | Types of load.....  | 12 |
| 4.2 | Dimensional drawings .....                                      | 13 |
| 5   | Connection and installation.....                                | 14 |
| 5.1 | Planning instructions .....                                     | 14 |
| 5.2 | Safety instructions .....                                       | 14 |
| 5.3 | Circuit diagrams.....   | 15 |
| 5.4 | Installation .....  | 16 |
| 6   | Commissioning .....   | 18 |
| 6.1 | Coupling of wireless devices with the System Access Point ..... | 19 |
| 6.2 | Allocation of devices and definition of channels .....          | 21 |
| 6.3 | Setting options per channel.....                                | 26 |
| 6.4 | Links .....   | 30 |
| 7   | Update .....  | 33 |
| 8   | Operation .....   | 33 |
| 9   | Maintenance .....   | 33 |
| 9.1 | Cleaning .....  | 33 |
| 9.2 | Diagnosis of faults .....                                       | 34 |
| 10  | Notes.....  | 35 |
| 11  | Index .....   | 36 |

## 1 Information on the manual

Please read this manual carefully and observe the information it contains. This will assist you in preventing injuries and damage to property, and ensure both reliable operation and a long service life for the device.

Please keep this manual in a safe place.

If you pass the device on, also pass on this manual along with it.

ABB accepts no liability for any failure to observe the instructions in this manual.

If you require additional information or have questions about the device, please contact ABB or visit our Internet site at:

[www.abb.com/freeathome](http://www.abb.com/freeathome)

## 2 Safety

The device has been constructed according to the latest valid regulations governing technology and is operationally reliable. It has been tested and left the factory in a technically safe and reliable state.

However, residual hazards remain. Read and adhere to the safety instructions to prevent hazards of this kind.

ABB accepts no liability for any failure to observe the safety instructions.

### 2.1 Information and symbols used

The following Instructions point to particular hazards involved in the use of the device or provide practical instructions:



#### **Danger**

Risk of death / serious damage to health

- The respective warning symbol in connection with the signal word "Danger" indicates an imminently threatening danger which leads to death or serious (irreversible) injuries.



#### **Warning**

Serious damage to health

- The respective warning symbol in connection with the signal word "Warning" indicates a threatening danger which can lead to death or serious (irreversible) injuries.



#### **Caution**

Damage to health

- The respective warning symbol in connection with the signal word "Caution" indicates a danger which can lead to minor (reversible) injuries.



#### **Attention**

Damage to property

- This symbol in connection with the signal word "Attention" indicates a situation which could cause damage to the product itself or to objects in its surroundings.



#### **NOTE**

This symbol in connection with the word "Note" indicates useful tips and recommendations for the efficient handling of the product.



This symbol alerts to electric voltage.

## 2.2 Intended use

This device is a sensor/actuator unit for decentralized flush-mounted installation.

The device is intended for the following:

- Operation according to the listed technical data
- Installation in dry interior rooms and suitable flush-mounted boxes
- Use with the connecting options available on the device

The intended use also includes adherence to all specifications in this manual.

## 2.3 Improper use

Each use not listed in Chapter 2.2 "Intended use" on page 5 is deemed improper use and can lead to personal injury and damage to property.

ABB is not liable for damages caused by use deemed contrary to the intended use of the device. The associated risk is borne exclusively by the user/operator.

The device is not intended for the following:

- Unauthorized structural changes
- Repairs
- Outdoor use
- The use in bathroom areas

## 2.4 Target group / Qualifications of personnel

Installation, commissioning and maintenance of the device must only be carried out by trained and properly qualified electrical installers.

The electrical installer must have read and understood the manual and follow the instructions provided.

The electrical installer must adhere to the valid national regulations in his/her country governing the installation, functional test, repair and maintenance of electrical products.

The electrical installer must be familiar with and correctly apply the "five safety rules" (DIN VDE 0105, EN 50110):

1. Disconnect
2. Secure against being re-connected
3. Ensure there is no voltage
4. Connect to earth and short-circuit
5. Cover or barricade adjacent live parts

## 2.5 Safety instructions



### **Danger - Electric voltage!**

Electric voltage! Risk of death and fire due to electric voltage of 100 ... 240 V. Dangerous currents flow through the body when coming into direct or indirect contact with live components. This can result in electric shock, burns or even death.

- Work on the 100 ... 240 V supply system may only be performed by authorised and qualified electricians.
- Disconnect the mains power supply before installation or dismantling.
- Never use the device with damaged connecting cables.
- Do not open covers firmly bolted to the housing of the device.
- Use the device only in a technically faultless state.
- Do not make changes to or perform repairs on the device, on its components or its accessories.



### **Caution! - Risk of damaging the device due to external factors!**

Moisture and contamination can damage the device.

- Protect the device against humidity, dirt and damage during transport, storage and operation.

## 2.6 Environment



### Consider the protection of the environment!

Used electric and electronic devices must not be disposed of with domestic waste.

- The device contains valuable raw materials which can be recycled. Therefore, dispose of the device at the appropriate collecting depot.

All packaging materials and devices bear the markings and test seals for proper disposal. Always dispose of the packaging material and electric devices and their components via the authorized collecting depots and disposal companies.

The products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance.

(EU Directive 2012/19/EU WEEE and 2011/65/EU RoHS)

(EU REACH ordinance and law for the implementation of the ordinance (EC) No.1907/2006).

### 3 Setup and function

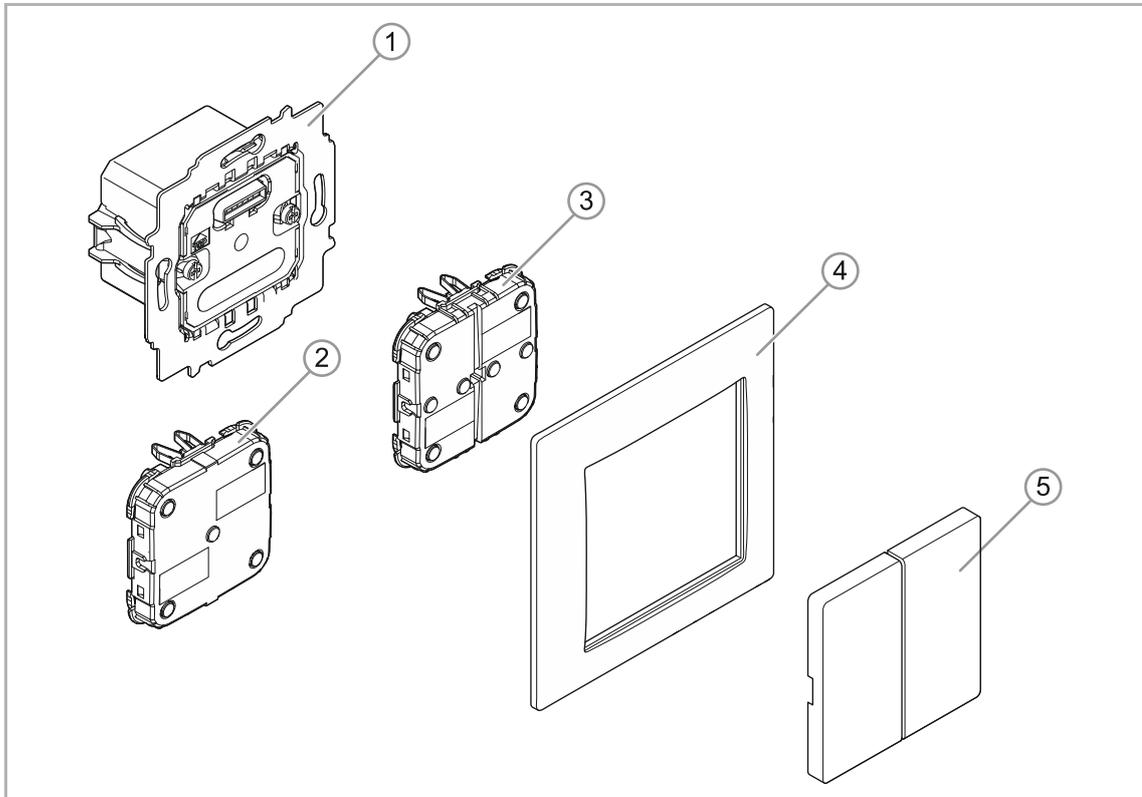


Fig. 1: Product overview

- [1] Flush-mounted insert
- [2] Sensor for sensor/dimming actuator, 1/1-gang
- [3] Sensor for sensor/dimming actuator, 2/1-gang
- [4] Cover frame (not included in scope of delivery)
- [5] Rocker (not included in scope of delivery)

This device is a sensor/dimming actuator unit for decentralized flush-mounted installation. The devices serve both as control element as well as actuator for the activation or dimming of electric loads.

Sensor and actuator are combined in a flush-mounted insert [1]. The sensor and switching channels have been pre-programmed at the point of delivery (button top/bottom: off/on; 2/1gang, via left rocker). However, this pre-configuration can be adjusted as required.

After connecting the load, it can be switched/dimmed directly on the control element.

#### Additional product features:

- Green LEDs as light for orientation and status indication.
- Exchangeable rockers with the corresponding icons

## 3.1 Scope of supply

The scope of supply only contains the flush-mounted insert [1] and the sensor [2 or 3]. It must still be completed with a suitable rocker [5] and a cover frame [4].



### NOTE

- Depending on their use, the rockers can be selected with different printing. Additional information about the switch ranges is available in the electronic catalogue ([www.busch-jaeger-catalogue.com](http://www.busch-jaeger-catalogue.com)).

## 3.2 Overview of types

| Article no.    | Product name                               | Sensor channels   | Actuator channels   | Switching load |
|----------------|--|---|---|----------------|
| SDA-F-1.1.1-WL | Sensor/dimming actuator, 1/1gang, wireless | 1    | 1    | 1 x 180 W      |
| SDA-F-2.1.1-WL | Sensor/dimming actuator, 2/1gang, wireless | 2  | 1  | 1 x 180 W      |

Table 1: Overview of types

## 3.3 Functions

The following table provides an overview of the possible functions and applications of the device:

| Icon of the user interface  | Information               |  |
|---|---------------------------|--|
|  | <b>Name:</b>              | Sensor   |
|   | <b>Type:</b>              | Sensor   |
|   | <b>Made available by:</b> | Sensor/dimming actuator                                |
|   | <b>Function:</b>          | Control element for the control of free@home functions |
|  | <b>Name:</b>              | Dimming actuator                                       |
|   | <b>Type:</b>              | Actuator   |
|   | <b>Made available by:</b> | Sensor/dimming actuator                                |
|   | <b>Function:</b>          | Switches/dims connected loads                          |

Table 2: Overview of functions

### 3.4 Device overview

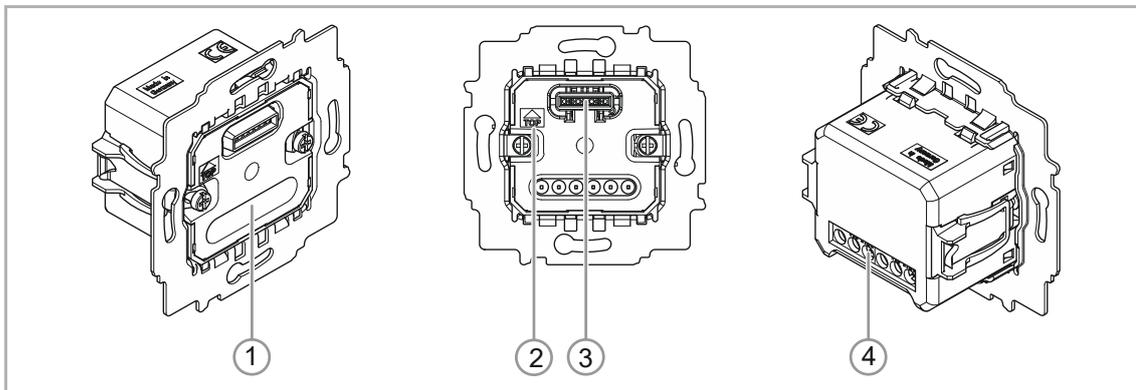


Fig. 2: Overview of devices Sensor/dimming actuator, 1/1gang; 2/1gang, wireless (without sensors)

- [1] Phase sensing L
- [2] Mark TOP
- [3] Connector strip for sensor
- [4] Terminal block

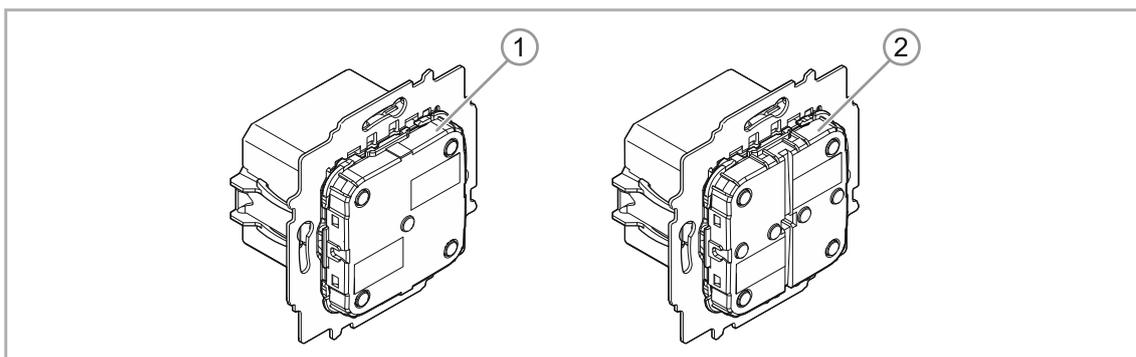


Fig. 3: Sensors

- [1] Sensor for sensor/dimming actuator, 1/1-gang
- [2] Sensor for sensor/dimming actuator, 2/1-gang

## 4 Technical data

| Designation                              |               | Value   |
|--|---------------|---|
| Operating voltage                        |               | 230 V AC, 50/60 Hz  |
| Connection                               |               | L, N (option), inputs and outputs non-floating<br>Screw-type terminal:<br>2 x 2.5 mm <sup>2</sup> rigid;<br>2 x 1.5 mm <sup>2</sup> flexible        |
| Claw                                     |               | With protective cover and reset (removable)   |
| Transmission protocol                    |               | free@home wireless  |
| Transmission frequency                   |               | 2.400 - 2.483 GHz   |
| Maximum transmission power WL (wireless) |               | < 15 dBm  |
| Power consumption                        |               | < 1 W   |
| Nominal load                             | Conventional: | <ul style="list-style-type: none"> <li>▪ 2-wire 20 - 180 W</li> <li>▪ 3-wire 10 - 180 W</li> </ul>  |
|  | LEDi/CFLi:    | <ul style="list-style-type: none"> <li>▪ 2-wire and 3-wire: typ. 2 - 80 W</li> </ul> Limitations at reduced loads in 2-wire operation are possible! |
| Protection type                          |               | IP20  |
| Ambient temperature                      |               | -5°C - +45°C  |
| Storage temperature                      |               | -20°C - +70°C   |

Table 3: Technical data

#### 4.1 Types of load

|   |
|---|
|  |
|  |
|  |
|  |
| <b>CFLi</b>   |
| <b>LEDi</b>   |

Table 4: Types of load

- Optimised for retrofit LED lamps (LEDi)
- Low-voltage halogen lamps with conventional transformers according to IEC 61558.

4.2 Dimensional drawings



**NOTE**

All dimensions are specified in mm. All device types listed in this manual have the same dimensions.

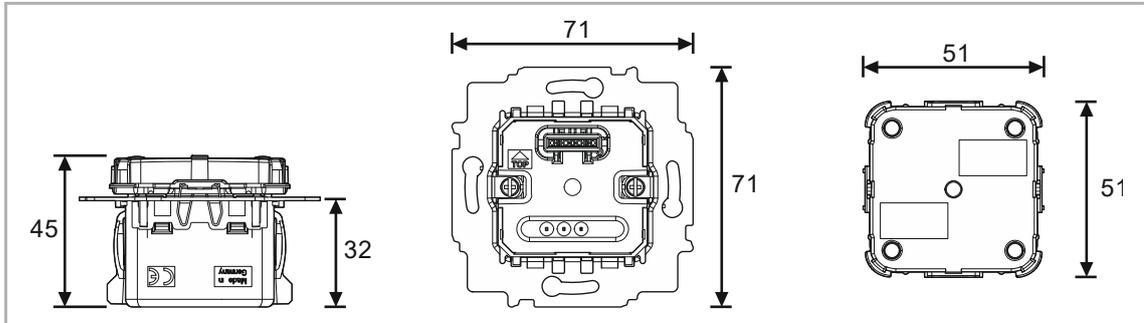


Fig. 4: Dimensions of all described device types (all dimensions in mm)

## 5 Connection and installation

### 5.1 Planning instructions



#### NOTE

Planning and application instructions for the system are available in system manual for ABB-free@home®. This can be downloaded via [www.abb.com/freeathome](http://www.abb.com/freeathome).



#### NOTE

Transmitter and receiver communicate via radio control. The transmission range depends on the structural conditions. Walls and ceilings, especially steel reinforcements or metal claddings, reduce the transmission range. The distance of components to each other and to other transmitters that also emit high-frequency signals (e.g. computers, audio and video systems) should be at least 1 m.

### 5.2 Safety instructions



#### Danger - Electric voltage!

Install the device only if you have the necessary electrical engineering knowledge and experience.

- Incorrect installation endangers your life and that of the users of the electrical system.
- Incorrect installation can cause serious damage to property, e.g. due to fire.

The minimum necessary expert knowledge and requirements for the installation are as follows:

- Apply the "five safety rules" (DIN VDE 0105, EN 50110):
  1. Disconnect
  2. Secure against being re-connected
  3. Ensure there is no voltage
  4. Connect to earth and short-circuit
  5. Cover or barricade adjacent live parts.
- Use suitable personal protective clothing.
- Use only suitable tools and measuring devices.
- Check the type of supply network (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective earthing, necessary additional measures, etc.).
- Observe the correct polarity.

5.3 Circuit diagrams

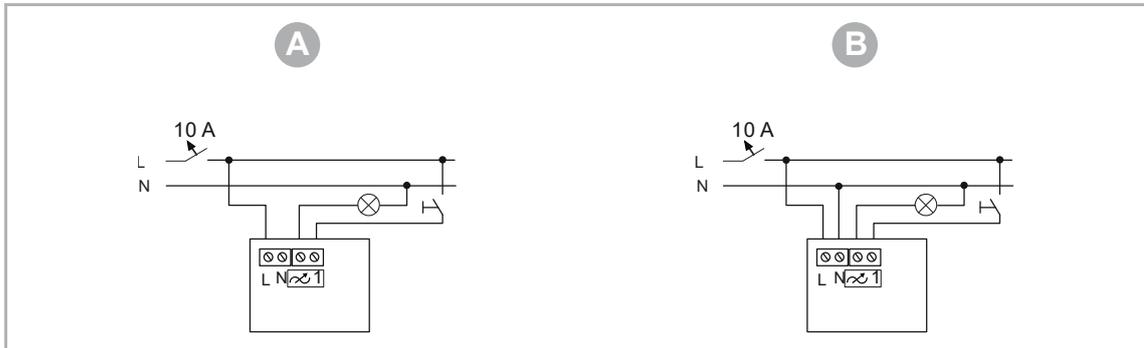


Fig. 5: Electrical connection

[A] With 2-wire operation SDA-F-2.1.1-WL

[B] With 3-wire operation SDA-F-1.1.1-WL

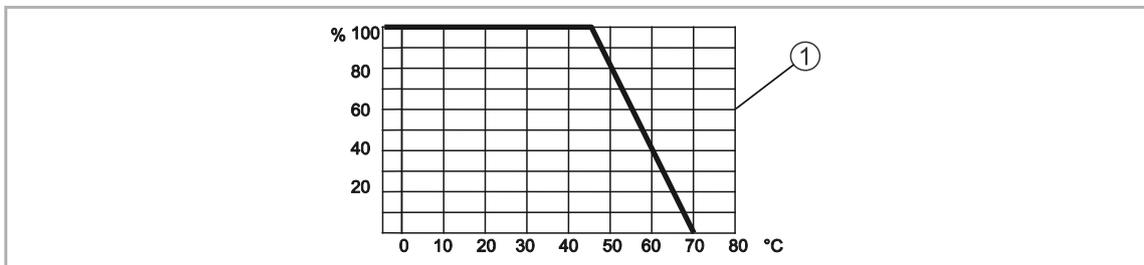


Fig. 6: Derating

[1] Derating curve

- Operation with isolating transformer networks with a connected load of  $\leq 10$  kVA is not admissible!
- Maximum admissible connected load: 100% =  $-5^{\circ}\text{C}$  to  $45^{\circ}\text{C}$  operating temperature (see derating curve [1]: % = nominal power;  $^{\circ}\text{C}$  = ambient temperature)

5.4 Installation



**NOTE**

The devices have been prepared for installing in flush-mounted boxes in connection with the corresponding mounting plate. The device insert has already been inserted in the mounting plate.

To install the device, perform the following steps:

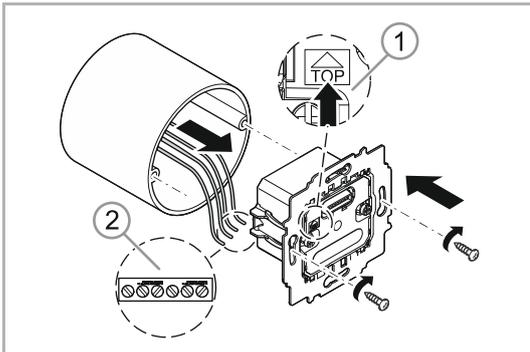


Fig. 7: Connection and installation



**NOTE**

The sensor must be pulled off the flush-mounted insert before mounting!

1. Turn the device into the correct installation position [1].
2. Connect the 230 V power cord to the bottom terminal block [2].



**NOTE**

Observe correct wiring!

**Observe the Chapter 5.3 “Circuit diagrams” on page 15.**

3. Insert the device into the flush-mounted box and screw it on.
4. Attach the cover (rocker; example shows only a 1gang rocker) to the sensor.

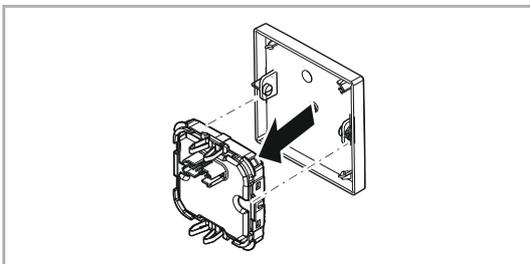


Fig. 8: Mounting the cover

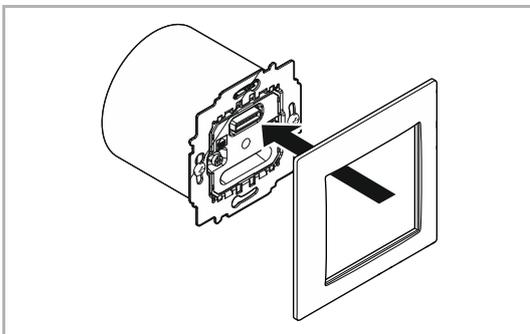


Fig. 9: Mounting the cover frame

5. Mount the cover frame.

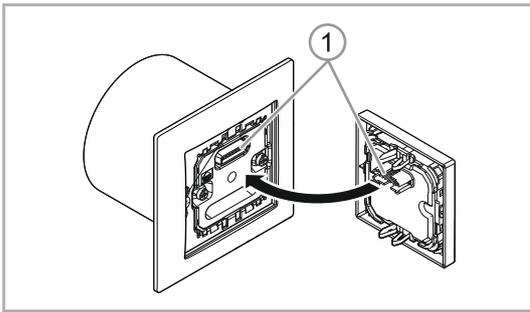


Fig. 10: Mounting the sensor

6. Attach the cover (with mounted sensor) to the flush-mounted insert.

**Observe the correct position of the sensor connection [1].**

## 6 Commissioning

Commissioning of the device is always carried out via the Web-based surface of the System Access Point. It is assumed that the basic commissioning steps of the overall system have already been carried out. Knowledge about the Web-based commissioning software of the System Access Point is assumed.

The System Access Point establishes the connection between the free@home participants and the smartphone, tablet or PC. The System Access Point is used to identify and program the participants during commissioning.

When energized, a device that has not been programmed is in programming mode for 30 minutes and can be logged into the system. Programmed devices share information about their type and supported functions with the System Access Point.

During initial commissioning all devices are given a universal name (Sensor/switch actuator 1/1gang, etc.). The installer must change this name within the commissioning process to a name practical and specific for the system (in case of an actuator, e.g. to "Living room ceiling light").

The devices must be parameterised for the use of additional functions.



### NOTE

General information about commissioning and parameterization is available in the technical reference manual and the online Help of the System Access Point.

## 6.1 Coupling of wireless devices with the System Access Point

free@home wireless devices must first be coupled with the System Access Point before they can be used in a project. The devices exchange a security key during the coupling process.

Communication between devices is carried out encrypted after coupling and they are firmly connected with the System Access Point. Coupled devices cannot be connected with a different System Access Point. They must first be reset to the factory settings.

Carry out the following steps to couple one or several devices with the system:

1. Install the free@home wireless device(s).
2. Use your smartphone, tablet or PC to call up the user interface of the System Access Point that is ready for use.
3. Switch on the mains power supply of the free@home wireless devices.

The devices are now in programming mode for 30 minutes.

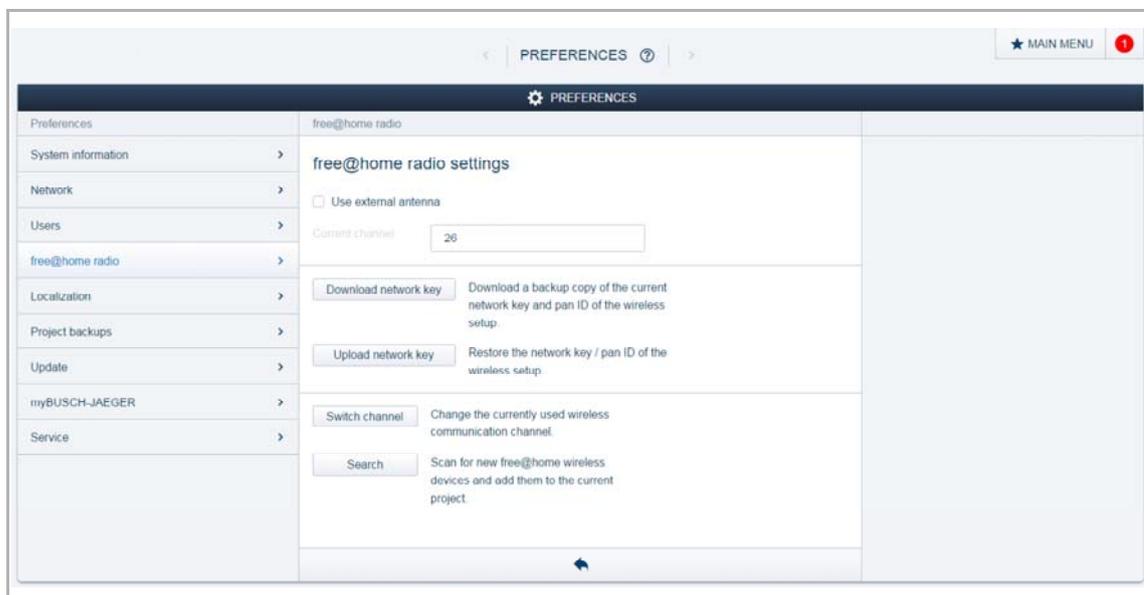


Fig 11: Coupling wireless devices with the System Access Point

4. In the user interface of the System Access Point select "System settings" > "free@home-Wireless settings" > "Search".

The System Access Point consecutively scans all free@home wireless devices. Devices that are in programming mode are integrated automatically into the system. The scanning process ends 10 minutes after the last device has been integrated.

Integrated devices are listed in the "Device list" of the user interface.

5. Use the serial numbers to check whether all installed devices have been found. If a device has not been found, reset it to the factory settings and start a new scanning process.

Possible reasons for not finding devices:

- The device is not in programming mode.
- The 30-minute programming time has expired.
- The device has already been coupled with a different system.

### Resetting the wireless device to the factory settings

1. De-energize the free@home wireless device.
2. Keep the button at the bottom left pressed.
3. Re-energize the device.

The LED flashes slowly for 10 seconds, then fast for 5 seconds and then goes out.

The factory settings are restored and the device can now be programmed again.



#### **NOTE**

Devices which are already in factory settings are not reset again. The LED remains out in step 3.

### 6.2 Allocation of devices and definition of channels

The devices connected to the system must be identified, i.e. they are allocated to a room according to their function and are given a practical name.



The allocation is made via the allocation function of the Web-based user interface of the System Access Point.

### 6.2.1 Add device

1. In the "Add devices" bar select the desired application and pull it via drag-and-drop into the floor plan.

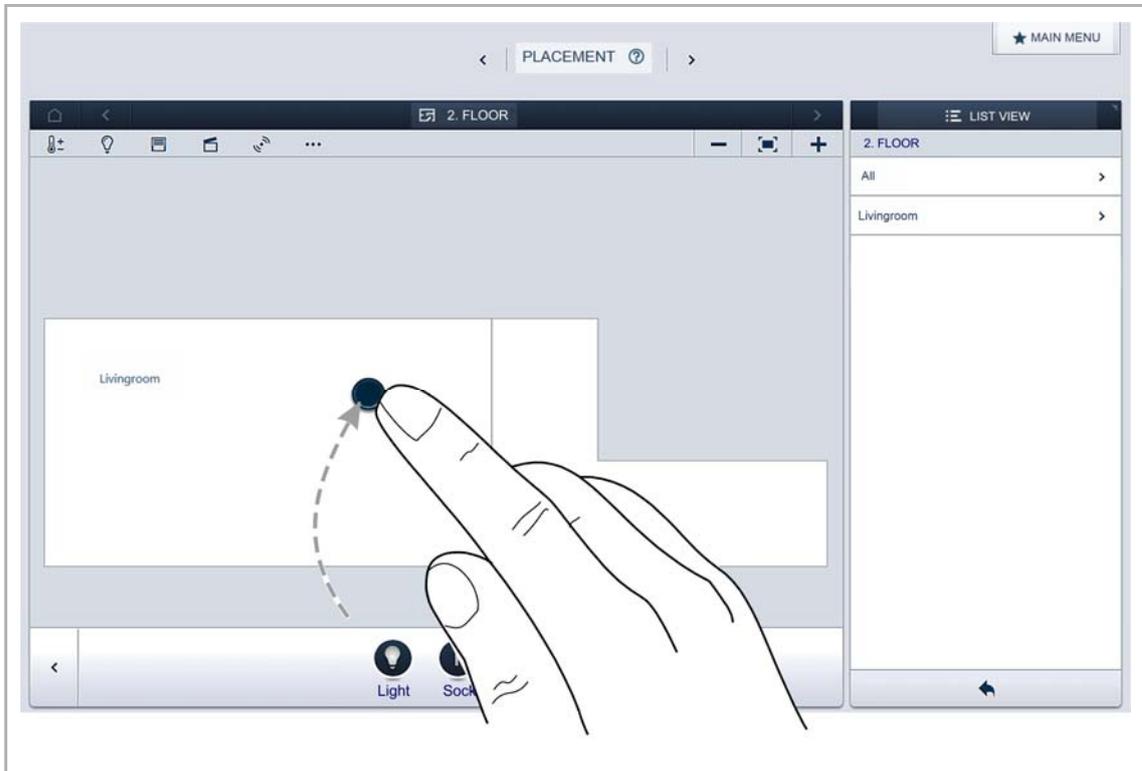


Fig. 12: Dragging the application from the add bar

A pop-up window opens which lists all the devices that are connected to the bus and suitable for the selected application (e.g. all blind actuators, if the blind application has been selected).

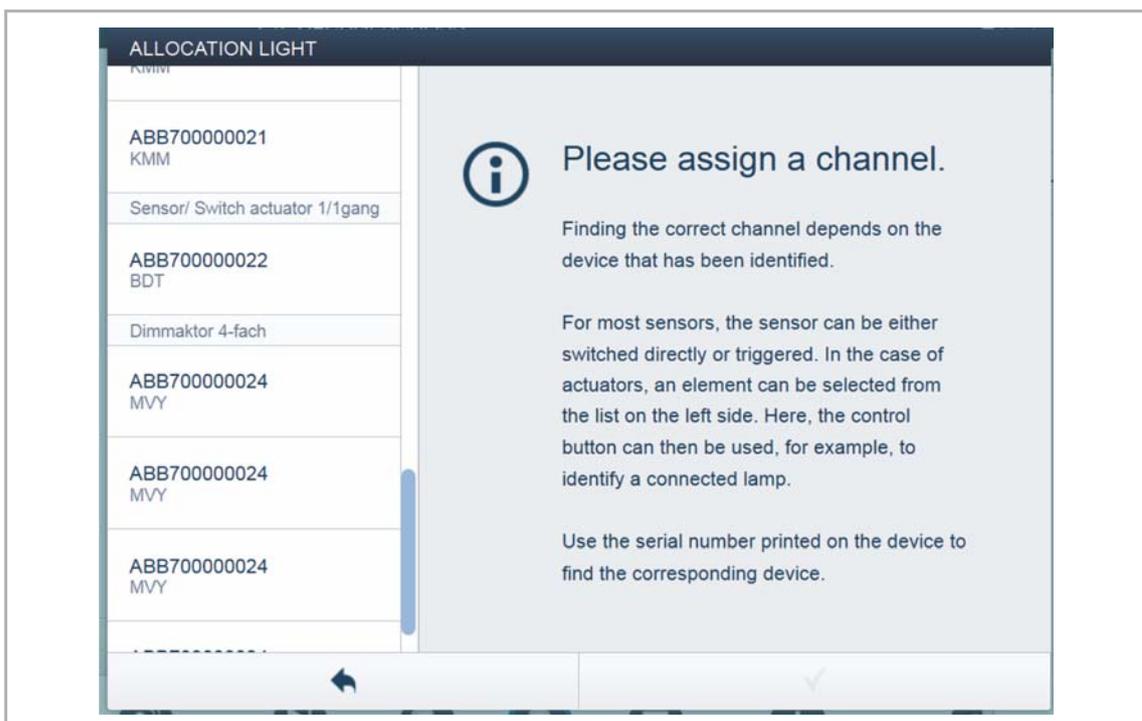


Fig. 13: Pop-up window with the suitable devices

## Identification

The device can be identified via the serial number or via switching.

### Identification via serial number

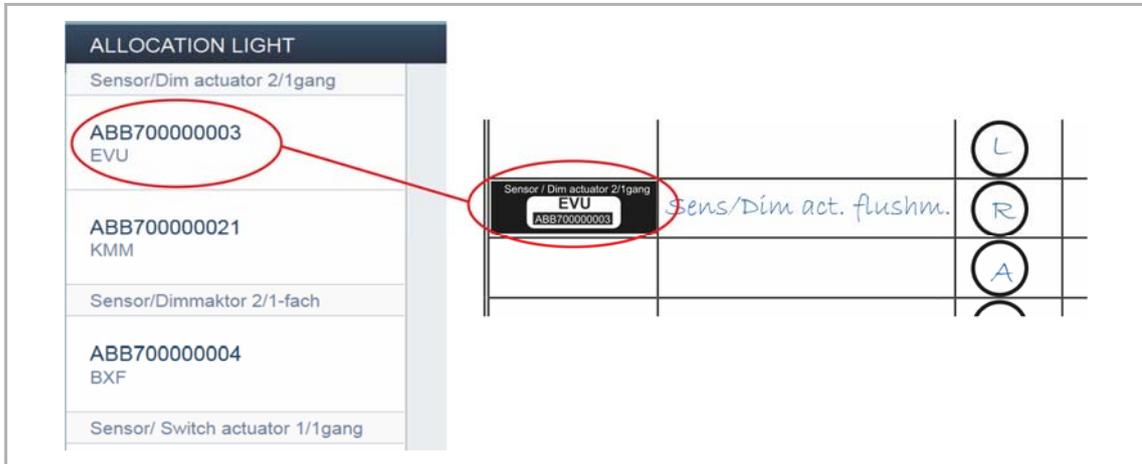


Fig. 14: Identification via serial number

- Compare the serial number and the short ID of the identification label, which is glued on the device plan, with the numbers and IDs in the list. This is how the searched for device and possibly the searched for channel are identified.

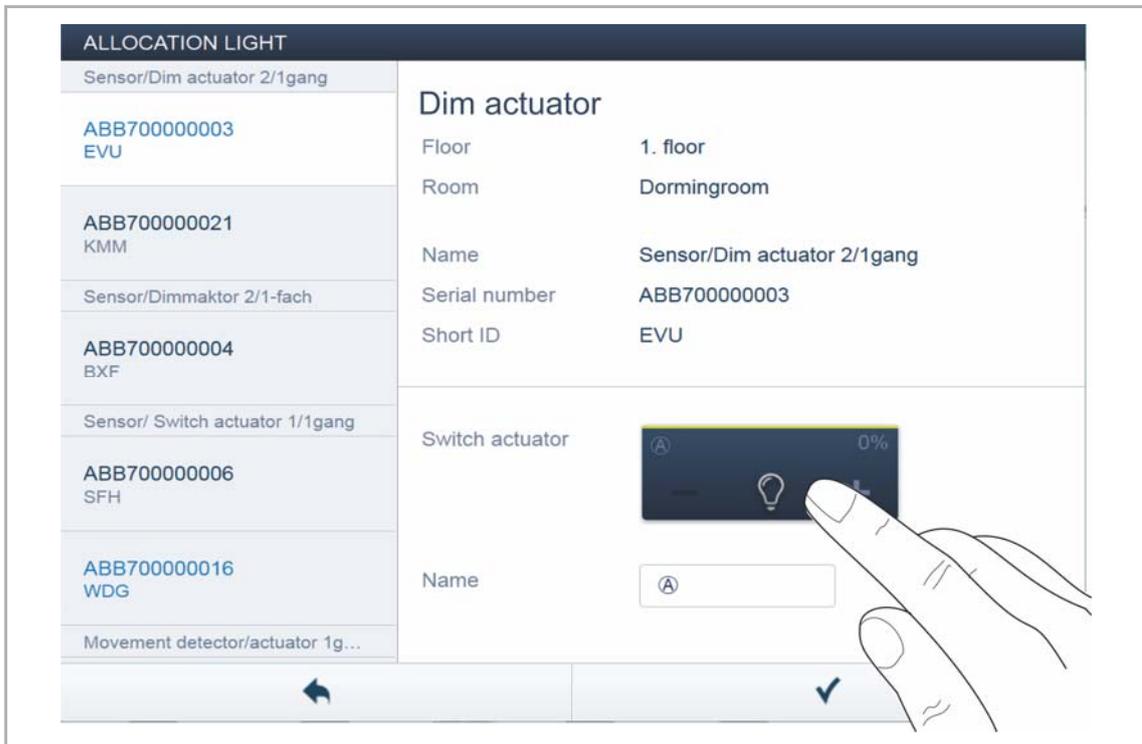
**Identification via switching (only suitable for actuators)**

Fig. 15: Identification via switching

1. Select a device and a channel from the list.
2. Press the button in the detailed view of the device.  
The connected load is switched.
3. Repeat the last two steps until you have located the searched for device.

## Specifying a name

Fig. 16: Specifying a name

3. Enter a name that is easy to understand and under which the application is to be displayed later, (e.g. "Ceiling light").
4. Press the tick at the bottom right.

This takes over the entry.



### NOTE

When selecting a sensor/dimming actuator unit, an icon each for the switch actuator and the sensor is displayed automatically in the working area.



### NOTE

The settings of the device can be adjusted via the Web-based user interface of the System Access Point.

For pre-programmed devices (sensor/dimming actuator unit) the default settings can be adjusted. This allows the channel selection to be influenced. For these settings, however, a fitter access is partly necessary (see online Help of the System Access Point). The parameter settings remain as described above.

### 6.3 Setting options per channel

General settings and special parameter settings must be made for each channel.



The settings are made via the allocation function of the Web-based user interface of the System Access Point.

#### Select device

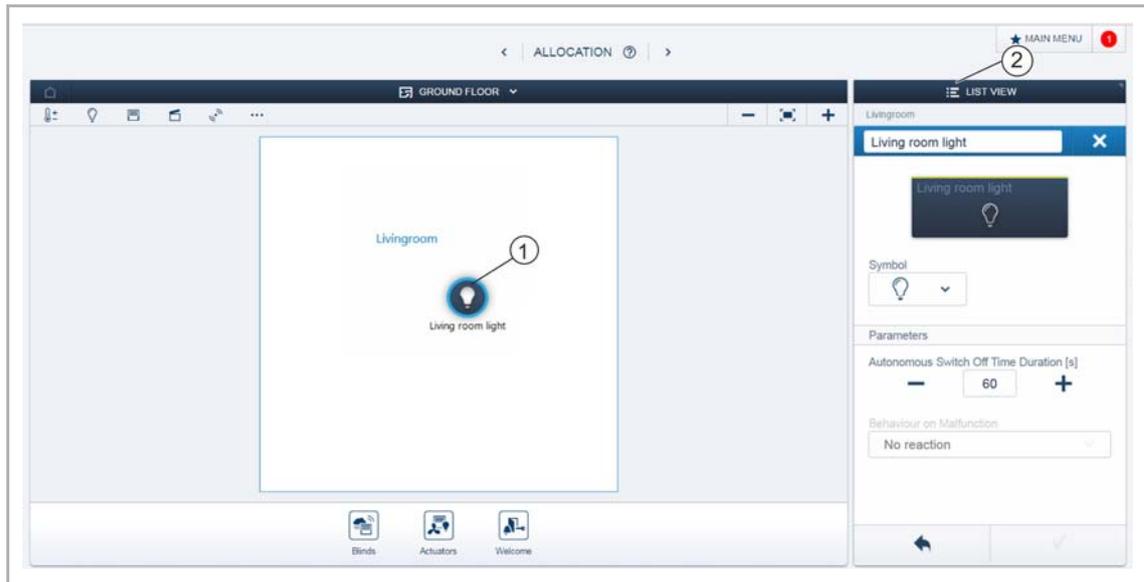


Fig. 17: Select device

1. Select the device icon [1] in the floor plan of the working area view.

All setting options for the respective channel are displayed in the list view [2]. For rockers (sensors) the corresponding rocker must be selected.

The following settings are available.

## Parameter settings of 1/1gang sensor/dimming actuator

### Actuator settings

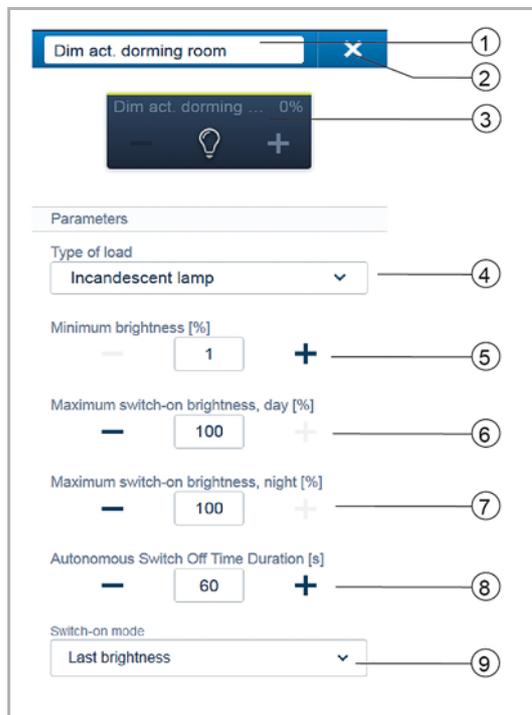


Fig. 18: Actuator settings

- [1] Changing the name
- [2] Deleting the channel
- [3] Switching of the actuator via the button.  
Dimming the actuator via the -/+ buttons
- [4] Setting of the load connected to the actuator.  
Selecting the function:
  - Automatic load detection
  - Inductive load
  - Dimmable LED/KLL
  - Incandescent lamp
- [5] Setting the minimum brightness in % via the -/+ buttons
- [6] Setting the maximum switch-on brightness during the day in % via the -/+ buttons
- [7] Setting the maximum switch-on brightness during the night in % via the -/+ buttons
- [8] Setting the switch-off delay in seconds
  - The -/+ buttons can be used to specify, for example, how long the light remains switched on after the actuator has deactivated the load.
- [9] Setting the switch-on mode
  - The parameter specifies whether the lamp switches on with the previously set brightness or always with maximum brightness.

### Sensor settings

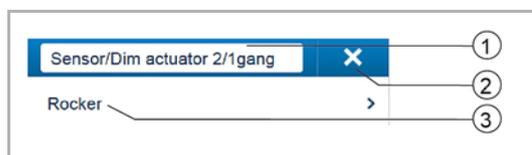


Fig. 19: Sensor settings

- [1] Changing the name
- [2] Deleting the channel
- [3] Selecting the rocker in the list view

## Rocker settings

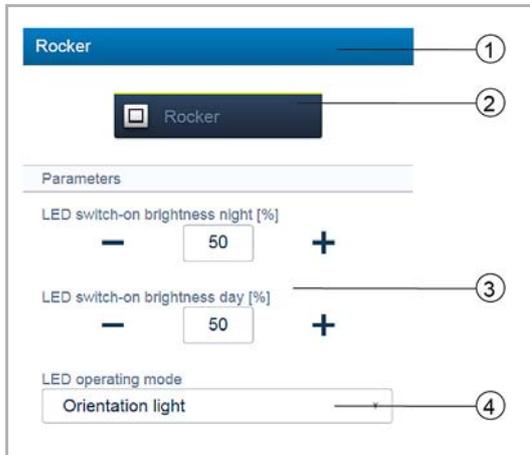


Fig. 20: Rocker settings

- [1] Changing the name
- [2] Switching of the sensor via the button
- [3] Setting the LED night/day switch-on brightness in % via the -/+ buttons
  - The parameter specifies how strong the LED lights up percentage wise during night/day.

### NOTE

The parameter only functions when a time profile with the application "LED day/night switchover" is available. The device (channel) must be linked with this application.



Icon of the application

- [4] Selecting the LED operating mode:
  - Light for orientation: LED lights up permanently
  - Status display: LED lights up during actuation

The following parameter is available immediately for pre-programmed devices. For all other devices it becomes available only after being linked with an actuator. The setting in the list view is then made via the linking function of the Web-based user interface of the System Access Point.



Fig. 21: Rocker setting after linking with actuator

- [5] Selecting the function:
  - Control element
  - Dimming sensor
  - Staircase light sensor
  - Force-position sensor On/Off
  - Blind sensor
  - Blind force-position
  - Scene sensor (is visible only when the "Scene sensor" has been selected.  
Long press of the button: "Overwrite scene"/"Retain scene")

### **Parameter settings of 2/1gang sensor/dimming actuator**

#### **Actuator settings**

As for 1/1gang.

#### **Sensor settings**

As for 1/1gang. However, two rockers (left and right rocker) are displayed in the list view.

#### **Rocker settings**

As for 1/1gang. However, the settings are made for two rockers (left rocker and right rocker).

## 6.4 Links

The sensor/dimming actuator units created via the allocation function can now be linked with each other. This allows simple ON/OFF circuits or two-way circuits to be implemented.



The linking in the list view is made via the linking function of the Web-based user interface of the System Access Point.



### NOTE

For pre-programmed devices (dimming actuator units) a link is automatically established between actuator and sensor, since they are combined in the one device.

### 6.4.1 Linking actuator and sensor

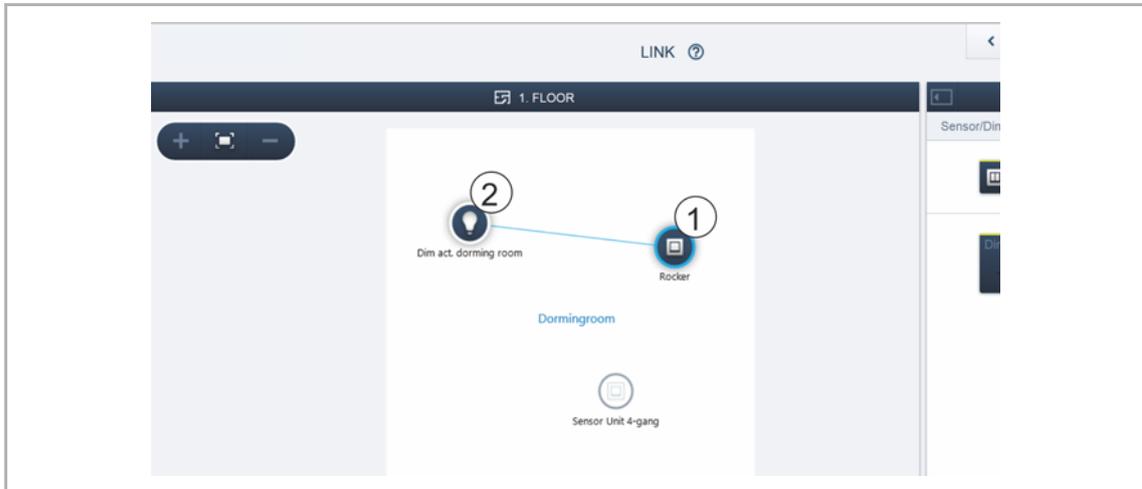


Fig. 22: Linking actuator and sensor

1. On the working area select the sensor [1] that is to be linked with the actuator.
2. Select the actuator [2] that is to be served by the sensor.
3. Press the tick at the bottom right to take over the entries.

A blue connecting line indicates the link between the two devices. The configuration is now transmitted automatically to the devices. The transmission can, depending on the number of affected devices, take a number of seconds. During the transmission a progress bar is displayed around the devices affected.

## 6.4.2 Linking an actuator with an additional sensor



Fig. 23: Linking an actuator with an additional sensor

1. On the working area select the second sensor [1] that is to be linked with the actuator.
2. Select the actuator [2] that is to be served by the sensor.
3. Press the arrow at the bottom right to take over the entries.

An additional blue connecting line indicates the link between the two devices. After the transmission of the configuration the sensor can be operated directly locally.

## 7 Update

A firmware update is carried out via the Web-based user interface of the System Access Point.

## 8 Operation

Operation is carried out by pressing the individual rockers. Their function is fixed via the assigned application or its pre-programming and its parameter settings.

Extensive applications are available for the rockers (control buttons).



### NOTE

The scope of delivery contains only the electronic insert. It must still be completed with a suitable rocker and a cover frame.

Additional information about the switch ranges is available in the electronic catalogue ([www.busch-jaeger-catalogue.com](http://www.busch-jaeger-catalogue.com)).

## 9 Maintenance

The device is maintenance-free. In case of damage, e.g. during transport or storage), do not perform repairs. Once the device is opened, the warranty is void.

Access to the device must be guaranteed for operation, testing, inspection, maintenance and repairs (according to DIN VDE 0100-520).

### 9.1 Cleaning



#### Caution! - Risk of damaging the device!

- When spraying on cleaning agents, these can enter the device through crevices.
  - Do not spray cleaning agents directly onto the device.
- Aggressive cleaning agents can damage the surface of the device.
  - Never use caustic agents, abrasive agents or solvents.

Clean dirty devices with a soft dry cloth.

- If this is insufficient, the cloth can be moistened slightly with a soap solution.

## 9.2 Diagnosis of faults

If the device does not function correctly, the L leading edge control can be measured via the phase sensor (L) and determined whether the device carries current after being connected. If it carries current, the cause of the fault is not the electronic insert.

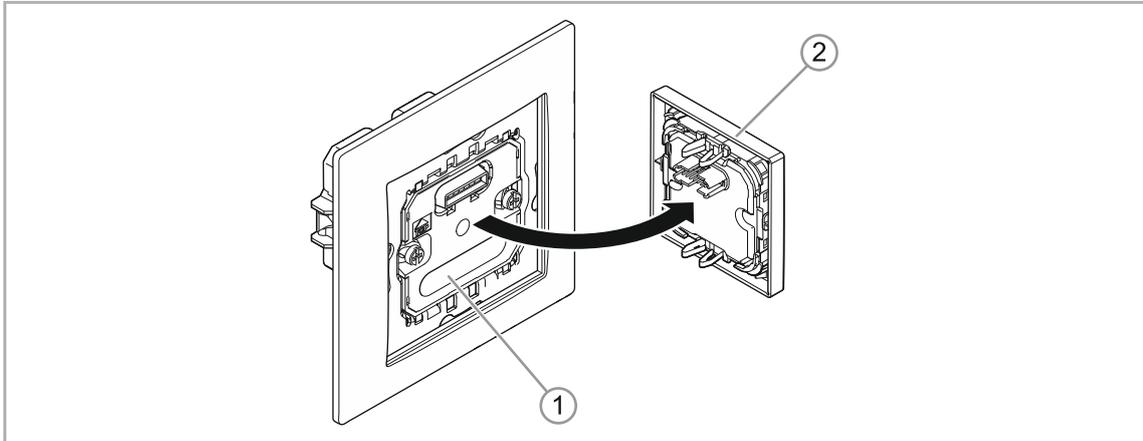


Fig. 24: Phase sensing L

1. Pull off the rocker and the sensor [2].
2. Feed the probe of the ammeter into the phase sensor L [1].

The measuring device indicates whether the device carries current.

## 10 Notes

## 11 Index

|  |        |
|--|--------|
| <b>A</b>                               |        |
| Actuator .....                         | 9      |
| Add device .....                       | 22     |
| Allocation of devices .....            | 21     |
| <b>C</b>                               |        |
| Circuit diagrams .....                 | 15, 16 |
| Cleaning .....                         | 33     |
| Commissioning .....                    | 18     |
| Connection and installation .....      | 14     |
| <b>D</b>                               |        |
| Device overview .....                  | 10     |
| Diagnosis of faults .....              | 34     |
| Dimensional drawings .....             | 13     |
| <b>E</b>                               |        |
| Environment .....                      | 7      |
| <b>F</b>                               |        |
| Firmware update .....                  | 33     |
| Functions .....                        | 9      |
| <b>I</b>                               |        |
| Identification .....                   | 23     |
| Identification label .....             | 23     |
| Improper use .....                     | 5      |
| Information and symbols used .....     | 4      |
| Information on the manual .....        | 3      |
| Installation .....                     | 16     |
| Intended use .....                     | 5      |
| <b>L</b>                               |        |
| LED .....                              | 8      |
| Liability .....                        | 3      |
| Links .....                            | 30     |
| actuator .....                         | 31     |
| Additional sensors .....               | 32     |
| sensor .....                           | 31     |
| <b>M</b>                               |        |
| Maintenance .....                      | 33     |
| <b>N</b>                               |        |
| Notes .....                            | 35     |
| <b>O</b>                               |        |
| Operation .....                        | 33     |
| Overview of types .....                | 9      |
| <b>P</b>                               |        |
| Parameter settings                     |        |
| Sensor/dimming actuator, 1/1gang ..... | 27     |
| Sensor/dimming actuator, 2/1gang ..... | 29     |
| Planning instructions .....            | 14     |
| Protection type .....                  | 11     |
| <b>Q</b>                               |        |
| Qualification of personnel .....       | 5      |
| <b>S</b>                               |        |
| Safety .....                           | 4      |
| Safety instructions .....              | 6, 14  |
| Scope of supply .....                  | 9      |
| Select device .....                    | 26     |
| Sensor .....                           | 9      |
| Serial number .....                    | 23     |
| Setup and function .....               | 8      |
| Specifying a name .....                | 25     |
| System Access Point .....              | 18     |
| Coupling with wireless devices .....   | 19     |
| <b>T</b>                               |        |
| Target group .....                     | 5      |
| Technical data .....                   | 11     |
| Temperature                            |        |
| ambient .....                          | 11     |
| storage .....                          | 11     |
| Types of load .....                    | 12     |
| <b>U</b>                               |        |
| Update .....                           | 33     |
| <b>W</b>                               |        |
| Wireless device                        |        |
| Factory settings .....                 | 20     |



A member of the ABB Group

**Busch-Jaeger Elektro GmbH**

PO box  
58505 Lüdenscheid

Freisenbergstraße 2  
58513 Lüdenscheid

**www.BUSCH-JAEGER.com**

info.bje@de.abb.com

**Central sales service:**

Tel.: +49 2351 956-1600

Fax: +49 2351 956-1700

**Notice**

We reserve the right to make technical changes at all times as well as changes to the contents of this document without prior notice. The detailed specifications agreed upon apply for orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB

Copyright© 2016 Busch-Jaeger

Elektro GmbH

All rights reserved