

ASENNUSOHJE
INSTALLATIONSANVISNING
INSTALLASJONSANVISNING
INSTALLATION INSTRUCTION
UZSTĀDĪŠANAS INSTRUKCIJA
INSTALIAVIMO INSTRUKCIJA
РУКОВОДСТВО ПО МОНТАЖУ
INSTRUKCJA INSTALACJI
PAIGALDUSJUHEND




FIM 1000

FIM 1010



FIM 1020

FIM 1030

MERKKIVALO
SIGNALLAMPA
SIGNALLYS
SIGNAL LIGHT
SIGNALINIS ĮRENGINYS
SIGNALGAISMA
ПРЕДУПРЕЖДАЮЩАЯ
СИГНАЛИЗАЦИЯ
LAMPKA SYGNALIZACYJNA

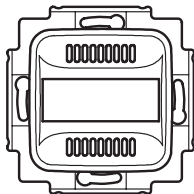

Käyttöjännite; Driftsspänning; Driftspenning Operating voltage; Darbinė įtampa; Darba spriegums; Рабочее напряжение; Napięcie pracy; Toitepinge	9,5 - 28Vac / 9,5 - 35 Vdc
Virrankulutus; Strömförbrukning; Strømfor- bruk; Current consumption; Srovės sąnaudos; Strāvas patēriņš; Потребляемый ток; Pobór prądu; Voolutarve	60 mA ac / 30 mA dc
Kotelointiluokka; Kapslingsklass; Tetthets- klasse; Protection class; Saugumo klasė; Aizsardzības klase; Класс защиты; Stopień ochrony; Kaitseaste	IP20
Käyttölämpötila; Drifttemperatur; Drift- temperatur; Operating temperature; Darbinė temperatūra; Darba temperatūra; Диапазон рабочих температур; Temperatura pracy; Kasutustemperatuur	5 °C - 40 °C

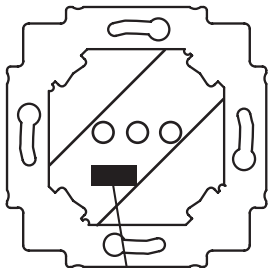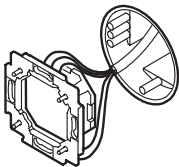

NC NC

1	2	3	4
---	---	---	---

24 V ac/dc

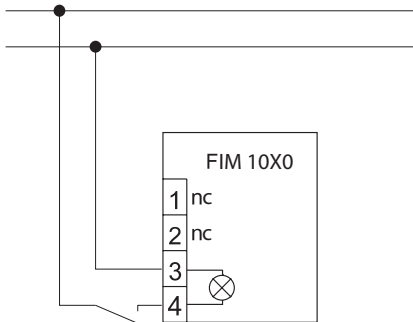


ABB Oy, Asennustuotteet
P.O. Box 16
FIN-06101 PORVOO
FINLAND

INT.TEL. + 358 102211
INT.FAX. + 358 102254255
www.abb.fi/asennustuotteet



CT11.040/ Doc.: 410942D