

# ControlMaster CMF

Fieldmount universal controller / indicator

Spare parts and upgrade kits

Measurement made easy



CMF310 sales



CMF160 sales



Service



## Introduction

This parts list contains:

- an exploded diagram of the ControlMaster CMF fieldmount universal controller / indicator for easy identification of spare parts
- details of product upgrade kits that are designed to add extra features and functionality to the controller / indicator
- information on accessories, packaging and manuals available



Parts identification (see Figure 1)

Item	Description	Part number
1	Membrane overlay (indicator)	CM40/0178
	Membrane overlay (controller)	CM40/0179
2	Controller door assembly (ABB)	CM40/0712
	Controller door assembly (blank)	CM40/0713
	Indicator door assembly (ABB)	CM40/0714
	Indicator door assembly (blank)	CM40/0715
3	Display / Processor board assembly (controller)	CM40/0720
	Display / Processor board assembly (indicator)	CM40/0719
4	Function key support	CM30/0120
5	Function key 1	CM30/0706
6	Display lid	CM40/0102
7	Screw	B12406
8	Terminal cover	CM40/0068
9	Battery	B12792
10	Function key 2	CM30/0707
11	Function key 2 (not available on indicator version)	
12	Switch extender	CM40/0116
13	RS485 MODBUS communications module	CM40/0722
	Ethernet communications module	CM40/0726
14	Mainboard assembly	CM40/0721
15	Case seal	AX400/0118
16	Case assembly (includes Item 15)	CM40/0065
17	Weathershield	CM40/0702
18	Screw	B12407
19	Panel clamp screw	CM40/0080
20	Case flange	SM500/0102
21	Panel clamp	CM40/0117
22	Panel seal	CM40/0107
23	Standard gland assembly	CM40/0703
24	Small gland assembly	CM40/0704
25	Ethernet gland assembly	SM500/0709
26	Analog output + relay board	CM40/0723
27	Analog input module	CM40/0724
28	Analog input module	

\* Includes item 1

Upgrade kits

Description	Part number
Function key 1 upgrade kit	CM30/0706
Function key 2 upgrade kit	CM30/0707
Controller door assembly (ABB) spares kit	CM40/0712
Controller door assembly (blank) spares kit	CM40/0713
Indicator door assembly (ABB) spares kit	CM40/0714
Indicator door assembly (blank) spares kit	CM40/0715
Display / processor board assembly (indicator)	CM40/0719
Display / processor board assembly (controller)	CM40/0720
Mainboard assembly upgrade kit	CM40/0721
RS485 MODBUS upgrade kit	CM40/0722
Analog output + relays assembly upgrade Kit	CM40/0723
Analog input module upgrade kit	CM40/0724
Ethernet communications upgrade kit	CM40/0726

Accessories

Description	Part number
Ethernet gland assembly	SM500/0709
Pipe-mount kit	CM40/0700
Wall / Panel-mount kit	CM40/0701
Weathershield kit	CM40/0702
Standard gland assembly	CM40/0703
Small gland assembly	CM40/0704
Standard gland pack	CM40/0705
Ethernet gland pack	CM40/0706
ConfigPilot PC configuration kit	CM30/0715

Miscellaneous

Manuals

Language	Part number		
	Controller	Indicator	Controller & Indicator
English	IM/CM/ED-EN	IM/CM/I-EN	IM/CM/C-EN
German	IM/CM/ED-DE	IM/CM/I-DE	IM/CM/C-DE
French	IM/CM/ED-FR	IM/CM/I-FR	IM/CM/C-FR
Italian	IM/CM/ED-IT	IM/CM/I-IT	IM/CM/C-IT
Spanish	IM/CM/ED-ES	IM/CM/I-ES	IM/CM/C-ES

---

## **ABB Measurement & Analytics**

For your local ABB contact, visit:  
**[www.abb.com/contacts](http://www.abb.com/contacts)**

For more product information, visit:  
**[www.abb.com/measurement](http://www.abb.com/measurement)**

---

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

©ABB 2023  
All rights reserved.