
ABB industrial drives

Installation guide

Vibration dampers for ACS880-01 drives (frames R4 and R5, option +C131)


Installation instruction


- 1. Attach the cable entry box to the drive frame. For instructions, see the assembly drawing in the cable entry box or *ACS880-01 Hardware manual* (3AUA0000078093 [English]).
- 2. Mark the locations of the damper mounting holes to the wall around the drive mounting holes. For the locations, see the dimension drawing of the dampers on the next page and the dimension drawings of the drive in the hardware manual.
- 3. Install the vibration dampers to the wall with four M5 screws. Tightening torque: 5 N·m.
- 4. Start M6×20 screws into the center holes in the dampers.
- 5. Lift the drive onto the screws.
- 6. Tighten the screws with a tightening torque of 7...9 N⋅m.

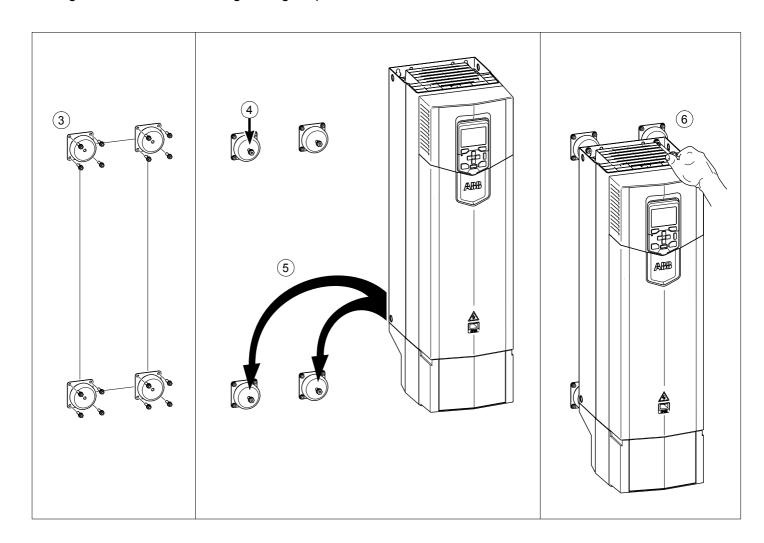

Dimension drawing

The dimensions are in millimeters.

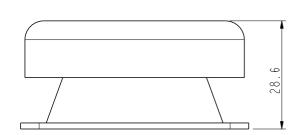

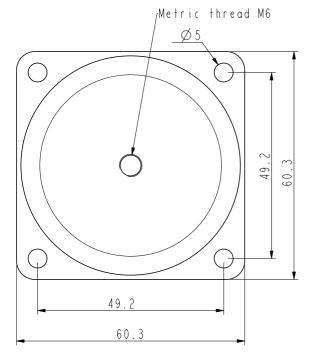

Weight: 4 ×182 g = 800 g (mounting screws included)