

GEH-3471 INSTALLATION INSTRUCTIONS

Semi dust-tight Door Gasket Kits

Door Gaskets




Hazards of electrical shock or burn! Turn off

power before working inside this equipment.

Used with:

All NEMA 1&3R Switches/Can replace existing Gasket on all NEMA 5, 12, 4/4X

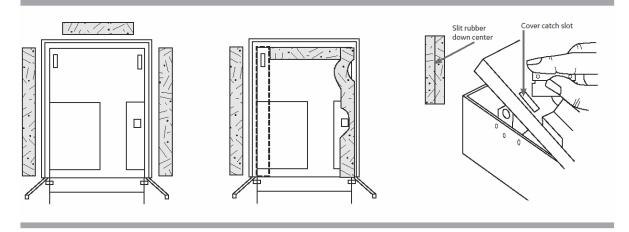

Step 1

ABB Inc.

Cut rubber into three lengths.

Step 2

- Peel tape from length • of rubber.
- Press adhesive side firmly against cover.
- Repeat for each length.

Note: On 200A, 400A and 600A Heavy Duty devices, bend rubber to cover slot in cover. Press rubber between latch and edge of box.

If you have 200A, 400A and 600A Outdoor Switches (Side Swing) use the remaining length of rubber for the fourth side of your cover.

305 Greason Drive Carv. NC 27511. electrification.us.abb.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB Inc. does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

Step 3

We reserve all rights in this document and

in the subject matter and illustrations

consent of ABB Inc. Copyright© 2019 ABB

All rights reserved

contained therein. Any reproduction or

utilization of its contents - in whole or in

parts - is forbidden without prior written

From outside of cover, carefully spilt rubber in the center of all slots. (Use sharp knife or razor blade).

