
Voltage monitoring relays CM-ESS.M For single-phase AC/DC voltages

The CM-ESS.M is an electronic voltage monitoring relay that provides reliable monitoring of voltages as well as detection of phase loss.

All devices are available with two different terminal versions. You can choose between the proven screw connection technology (double-chamber cage connecting terminals) and the completely tool-free Easy Connect Technology (push-in terminals).

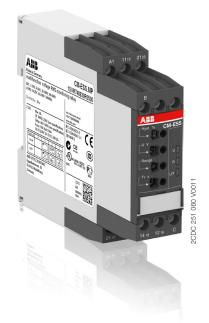

Characteristics

- Monitoring of DC and AC voltages (3-600 V)
- TRMS measuring principle
- One device includes 4 measuring ranges
- Over- or undervoltage monitoring configurable
- Open- or closed-circuit principle configurable
- Latching function configurable
- Hysteresis adjustable (3-30 %)
- Tripping delay T_V adjustable (0 s; 0.1-30 s)
- Precise adjustment by front-face operating controls
- Screw connection technology or Easy Connect Technology available
- Housing material for highest fire protection classification UL 94 V-0
- Tool-free mounting on DIN rail as well as demounting
- 2 c/o (SPDT) contacts
- 22.5 mm (0.89 in) width
- 3 LEDs for status indication

Approvals

€ UL 508, CAN/CSA C22.2 No.14

(I) GL

[H[EAC

CCC ©

RMRS

Marks

CE CE

∧ RCM

Order data

Voltage monitoring relays

Type	Rated control supply voltage	Connection technology	Measuring ranges	Order code
CM-ESS.MP	24-240 V AC/DC	:	3-30 V, 6-60 V, 30-300 V, 60-600 V	
CM-ESS.MS		Screw type terminals		1SVR730830R0500

Accessories


Туре	Description	Order code
ADP.01	Adapter for screw mounting	1SVR430029R0100
MAR.12	Marker label for devices with DIP switches	1SVR730006R0000
COV.11	Sealable transparent cover	1SVR730005R0100



Connection technology

Maintenance free Easy Connect Technology with push-in terminals

Type designation CM-xxS.yyP

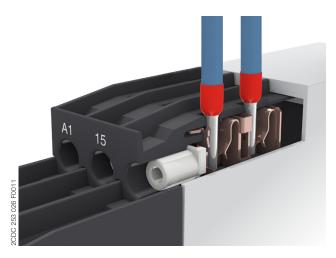


Push-in terminals

- Tool-free connection of rigid and flexible wires with wire end ferrule
- Easy connection of flexible wires without wire end ferrule by opening the terminals
- No retightening necessary
- One operation lever for opening both connecting terminals
- For triggering the lever and disconnecting of wires you can use the same tool (Screwdriver according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 Ø 4.5 mm (0.177 in))
- Constant spring force on terminal point independent of the applied wire type, wire size or ambient conditions (e. g. vibrations or temperature changes)
- Opening for testing the electrical contacting
- Gas-tight

Approved screw connection technology with double-chamber cage connecting terminals

Type designation CM-xxS.yyS

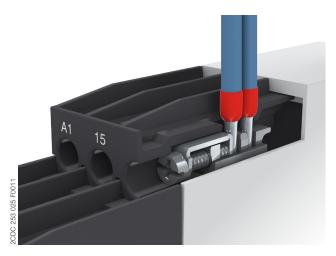


Double-chamber cage connecting terminals

- Terminal spaces for different wire sizes
- One screw for opening and closing of both cages
- Pozidrive screws for pan- or crosshead screwdrivers according to DIN ISO 2380-1 Form A 0.8 x 4 mm (0.0315 x 0.157 in), DIN ISO 8764-1 PZ1 Ø 4.5 mm (0.177 in)

Both the Easy Connect Technology with push-in terminals and screw connection technology with double-chamber cage connecting terminals have the same connection geometry as well as terminal position.

Functions

Operating controls

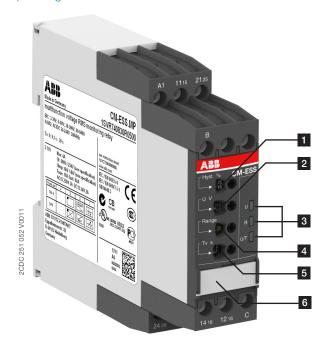

- 1 Adjustment of the hysteresis
- 2 Adjustment of the threshold value
- 3 Indication of operational states

U/T: LED green - control supply voltage

R: LED yellow - relay status

U: LED red - over- / undervoltage

- 4 Adjustment of the measuring range
- 5 Adjustment of the tripping delay T_V
- 6 DIP switches (see DIP switch functions)

Application

The multifunctional voltage monitoring relays CM-ESS.M are designed for use in single-phase AC and/or DC systems for over- or undervoltage monitoring as well as detection of phase loss. The devices operate over an universal range of supply voltages, provide an adjustable tripping delay and work according to the open- or closed-circuit principle.

Operating mode

The CM-ESS.2 have 2 c/o (SPDT) contacts and include 4 measuring ranges: 3-30 V, 6-60 V, 30-300 V and 60-600 V. The units are adjusted with front-face operating controls. The selection of over- \frown or undercurrent monitoring \frown open- or closed-circuit principle \frown and latching function ON \frown or OFF \frown is made with DIP switches. Potentiometers, with direct reading scale, allow the adjustment of the threshold value U, the hysteresis % and the tripping delay T_V . The hysteresis % is adjustable within a range of 3 to 30 % of the threshold value and the tripping delay T_V over a range of instantaneous to a 30 s delay. Timing is displayed by a flashing green LED labelled U/T.

Function diagrams

Overvoltage monitoring without latching

Open-circuit principle open

The voltage to be monitored (measured value) is applied to terminals B-C. The control supply voltage applied to terminals A1-A2 is displayed by the glowing green LED.

If the measured value exceeds the adjusted threshold value, the tripping delay T_V starts and the red LED (overvoltage) glows. Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value still exceeds the threshold value minus the adjusted hysteresis, the output relays energize and the yellow LED (relay energized) glows.


If the measured value drops below the threshold value minus the adjusted hysteresis, the output relays de-energize and the red and yellow LEDs turn off. If control supply voltage is interrupted, the green LED turns off.

Closed-circuit principle

The voltage to be monitored (measured value) is applied to terminals B-C. When control supply voltage is applied to terminals A1-A2, the output relays energize and the green and yellow LED (relays energized) glow.

If the measured value exceeds the adjusted threshold value, the tripping delay T_V starts and the red LED glows (overvoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value still exceeds the threshold value minus the adjusted hysteresis, the output relays de-energize and the yellow LED turns off.

If the measured value decreases below the threshold value minus the hysteresis, the output relays re-energize, the yellow LEDs glows and the red LED turns off. If control supply voltage is interrupted, the output relays de-energize and the green and yellow LEDs turn off.

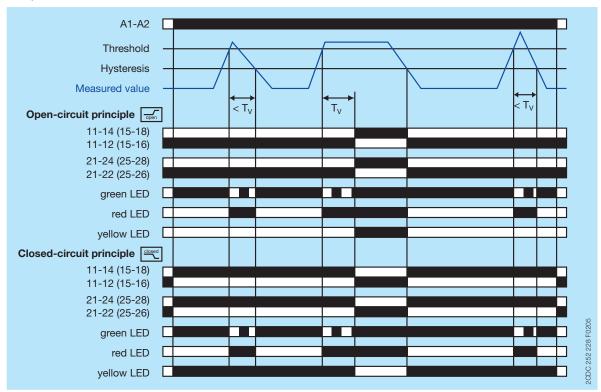

Undervoltage monitoring without latching

Open-circuit principle open

The voltage to be monitored (measured value) is applied to terminals B-C. The control supply voltage applied to terminals A1-A2 is displayed by the glowing green LED.

If the measured value decreases below the adjusted threshold value, the tripping delay T_V starts and the red LED (undervoltage) flashes \square . Timing of T_V is displayed by the flashing \square green LED. When T_V is complete and the measured value is still below the threshold value plus the adjusted hysteresis, the output relays energize and the yellow LED (relay energized) glows.


If the measured value exceeds the threshold value plus the adjusted hysteresis, the output relays de-energize and the red and yellow LEDs turn off. If control supply voltage is interrupted, the green LED turns off.

Closed-circuit principle

The voltage to be monitored (measured value) is applied to terminals B-C. When control supply voltage is applied to terminals A1-A2, the output relays energize and the green and yellow LED (relays energized) glow.

If the measured value decreases below the adjusted threshold value, the tripping delay T_V starts and the red LED flashes Γ (undervoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value is still below the threshold value plus the adjusted hysteresis, the output relays de-energize and the yellow LED turns off.

If the measured value exceeds the threshold value plus the hysteresis, the output relays re-energize, the yellow LED glows and the red LED turns off. If control supply voltage is interrupted, the output relays de-energize and the green and yellow LEDs turn off.

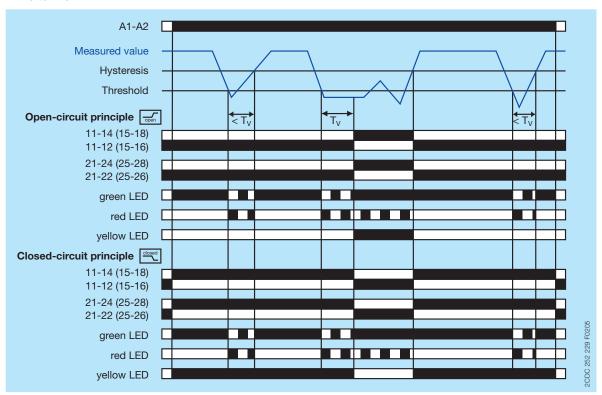

Overvoltage monitoring with latching

Open-circuit principle open

The voltage to be monitored (measured value) is applied to terminals B-C. The control supply voltage applied to terminals A1-A2 is displayed by the glowing green LED.

If the measured value exceeds the adjusted threshold value, the tripping delay T_V starts and the red LED glows (overvoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value still exceeds the threshold value minus the adjusted hysteresis, the output relays energize and the yellow LED (relay energized) flashes Γ


If the measured value decreases below the threshold value minus the hysteresis, the red LED turns off. The output relays remain energized (latching function). If control supply voltage is interrupted (reset), the output relays de-energize and the green and yellow LEDs turn off.

Closed-circuit principle

The voltage to be monitored (measured value) is applied to terminals B-C. When control supply voltage is applied to terminals A1-A2, the output relays energize and the green and yellow LED (relays energized) glow.

If the measured value exceeds the adjusted threshold value, the tripping delay T_V starts and the red LED glows (overvoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value still exceeds the threshold value minus the adjusted hysteresis, the output relays de-energize and the yellow LED flashes Γ

If the measured value decreases below the threshold value minus the hysteresis, the red LED turns off. The output relays remain de-energized (latching function). If control supply voltage is interrupted (reset), the green and yellow LEDs turn off. The output relays energize again when control supply voltage is re-applied.

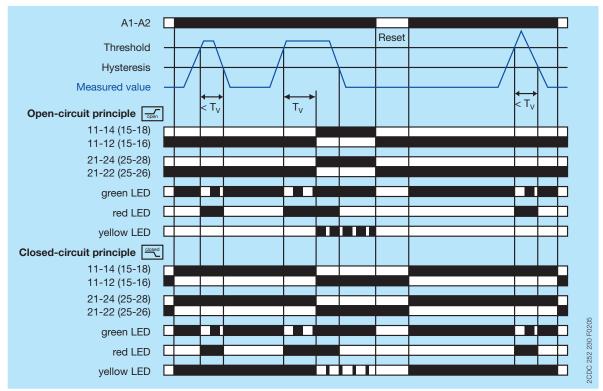

Undervoltage monitoring 🔂 with latching 🌅

Open-circuit principle open

The voltage to be monitored (measured value) is applied to terminals B-C. The control supply voltage applied to terminals A1-A2 is displayed by the glowing green LED.

If the measured value decreases below the adjusted threshold value, the tripping delay T_V starts and the red LED flashes Γ (undervoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value is still below the threshold value plus the adjusted hysteresis, the output relays energize and the yellow LED (relays energized) flashes Γ


If the measured value exceeds the threshold value plus the hysteresis, the red LED turns off. The output relays remain energized (latching function). If control supply voltage is interrupted (reset), the output relays de-energize and the green and yellow LEDs turn off.

Closed-circuit principle


The voltage to be monitored (measured value) is applied to terminals B-C. When control supply voltage is applied to terminals A1-A2, the output relays energize and the green and yellow LED (relays energized) glow.

If the measured value decreases below the adjusted threshold value, the tripping delay T_V starts and the red LED flashes Γ (undervoltage). Timing of T_V is displayed by the flashing Γ green LED. When T_V is complete and the measured value is still below the threshold value plus the adjusted hysteresis, the output relays de-energize and the yellow LED flashes Γ [LL].

If the measured value exceeds the threshold value plus the hysteresis, the red LED turns off. The output relays remain deenergized (latching function). If control supply voltage is interrupted (reset), the green and yellow LEDs turn off. The output relays energize again when control supply voltage is re-applied.

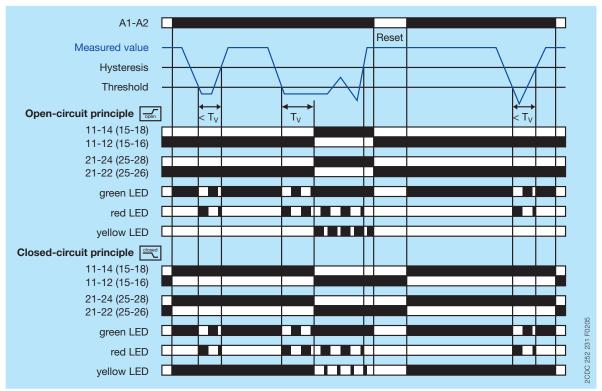

Electrical connection

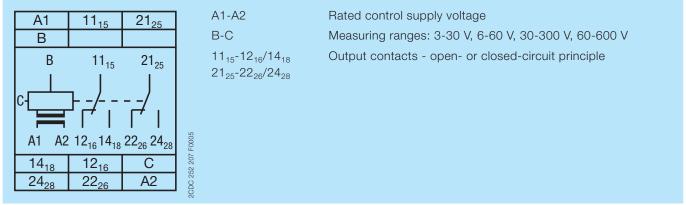

Connection diagram

DIP switches

Position	4	3	2	1		1	ON	Undervoltage monitoring
ON †			closed		252 276 F0005		OFF	Overvoltage monitoring
					252 2	2	ON	Closed-circuit principle
OFF			open	/	SCDC		OFF	Open-circuit principle
						3	ON	Latching function activated
							OFF	Latching function not activated
							OFF = Default	

Technical data

Data at T_a = 25 °C and rated values, unless otherwise indicated

Input circuits

Supply circuit		A1-A2
Rated control supply voltage U _s		24-240 V AC/DC
Rated control supply voltage U _s tolerance		-15+10%
Rated frequency		50/60 Hz
Typical current / power consumption	24 V DC	30 mA / 0.75 W
	115 V AC	17 mA / 1.9 VA
	230 V AC	11 mA / 2.6 VA
Power failure buffering time		20 ms
Transient overvoltage protection		varistors
Measuring circuit		B-C
Monitoring function		over- or undervoltage monitoring configurable
Measuring method		TRMS measuring principle
Measuring inputs	terminal connection	B-C
	measuring range	3-30 V, 6-60 V, 30-300 V, 60-600 V
	input resistance	600 kΩ
	pulse overload capacity t < 1 s	800 V
	continuous capacity	660 V
Threshold value		adjustable within the indicated measuring range
Tolerance of the adjusted threshold value		10% of the range end value
Hysteresis related to the threshold value		3-30 % adjustable
Measuring signal frequency range		DC / 15 Hz - 2 kHz
Rated measuring signal frequency range		DC / 50-60 Hz
Maximum response time	AC	80 ms
	DC	120 ms
Accuracy within the rated control supply voltage tolerand	ce	$\Delta U \leq 0.5\%$
Accuracy within the temperature range		ΔU ≤ 0.06 % / °C
Transient overvoltage protection		varistors
Timing circuit		
Time delay T _V		0 s or 0.1-30 s adjustable
Repeat accuracy (constant parameters)		±0.07% of full scale
Tolerance of the adjusted time delay		-
Accuracy within the rated control supply voltage tolerand	ce	$\Delta t \leq 0.5\%$
Accuracy within the temperature range		Δt ≤ 0.06 % / °C

User interface

Indication of operational states		
Control supply voltage	U/T: green LED	: control supply voltage applied
Measured value	U: red LED	: overvoltage
Relay status	R: yellow LED	: output relay energized, no latching function : relay energized, active latching function : relay de-energized, active latching function

Output circuits

Kind of output 11-12/14		relay, 1st c/o (SPDT) contact
	21-22/24	relay, 2nd c/o (SPDT) contact
Operating principle		open- or closed-circuit principle configurable (open-
		circuit principle: output relays energize if the measured
		value exceeds 🕏 / falls below 🔁 the adjusted
		threshold value, closed-circuit principle: output relays
		de-energize if measured value exeeds 😾 / falls
		below the adjusted threshold value)
Contact material		AgNi
Rated operational voltage U _e		250 V
Minimum switching voltage / Minimum s	24 V / 10 mA	
Maximum switching voltage / Maximum		250 V AC / 4 A AC
Rated operational current I _e	AC-12 (resistive) at 230 V	4 A
	AC-15 (inductive) at 230 V	3 A
	DC-12 (resistive) at 24 V	4 A
	DC-13 (inductive) at 24 V	2 A
AC rating (UL 508)	utilization category (Control Circuit Rating Code)	B 300
	max. rated operational voltage	300 V AC
	max. continuous thermal current at B 300	5 A
	max. making/breaking	3600/360 VA
	apparent power at B 300	
Mechanical lifetime		30 x 10 ⁶ switching cycles
Electrical lifetime	AC-12, 230 V, 4 A	0.1 x 10 ⁶ switching cycles
Maximum fuse rating to achieve	n/c contact	10 A fast-acting
short-circuit protection	n/o contact	10 A fast-acting

General data

MTBF		on request	
Duty time		100 %	
Dimensions (W x H x D)	·	22.5 x 85.6 x 103.7 mm (0.89 x 3.37 x 4.08 in) 97 x 109 x 30 mm (3.82 x 4.29 x 1.18 in)	
	packaging dimensions		
Weight		Screw connection technology	Easy Connect Technology (Push-in)
	Net weightV	0.154 kg (0.340 lb)	0.143 kg (0.315 lb)
	Gross weight	0.176 kg (0.388 lb)	0.165 kg (0.364 lb)
Mounting		DIN rail (IEC/EN 60715) snap-on mounting with	
Mounting position		any	
Material of housing		UL 94 V-0	
Degree of protection	housing	IP50	
	terminals	IP20	

Electrical connection

		Screw connection technology	Easy Connect Technology (Push-in)
Connecting capacity	fine-strand with(out)	1 x 0.5-2.5 mm ²	2 x 0.5-1.5 mm ²
	wire end ferrule	(1 x 18-14 AWG)	(2 x 18-16 AWG)
		2 x 0.5-1.5 mm ²	
		(2 x 18-16 AWG)	
	rigid	1 x 0.5-4 mm ²	2 x 0.5-1.5 mm ²
		(1 x 20-12 AWG)	(2 x 20-16 AWG)
		2 x 0.5-2.5 mm ²	
		(2 x 20-14 AWG)	
Stripping length		8 mm (0.32 in)	•
Tightening torque		0.6 - 0.8 Nm	-
		(7.08 lb.in)	

Environmental data

Ambient temperature ranges		-25+60 °C (-13+140 °F)
	storage	-40+85 °C (-40+185 °F)
Damp heat, cyclic (IEC/EN 60068-2-30)		55 °C, 6 cycles
Vibration, sinusoidal		Class 2
Shock		Class 2

Isolation data

Rated insulation voltage U _i	supply / measuring circuit / output	
	output 1 / output 2	
Rated impulse withstand voltage U _{imp}	supply / measuring circuit / output	
	output 1 / output 2	· ·
Pollution degree		3
Overvoltage category		Ш

Standards / Directives


Standards	IEC/EN 60947-5-1, IEC/EN 60255-27, EN 50178
Low Voltage Directive	2014/35/EU
EMC Directive	2014/30/EU
RoHS Directive	2011/65/EU


Electromagnetic compatibility

Interference immunity to	IEC/EN 61000-6-2	
electrostatic discharge	IEC/EN 61000-4-2	Level 3
radiated, radio-frequency, electromagnetic field	IEC/EN 61000-4-3	1
electrical fast transient / burst	IEC/EN 61000-4-4	Level 3
surge	IEC/EN 61000-4-5	Level 3
conducted disturbances, induced by	IEC/EN 61000-4-6	Level 3
radio-frequency fields		
Interference emission		IEC/EN 61000-6-3
high-frequency radiated	IEC/CISPR 22, EN 55022	Class B
high-frequency conducted	IEC/CISPR 22, EN 55022	Class B


Technical diagrams

Load limit curves

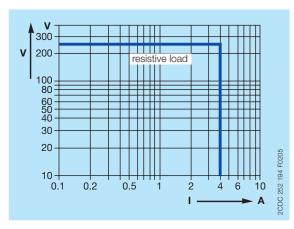

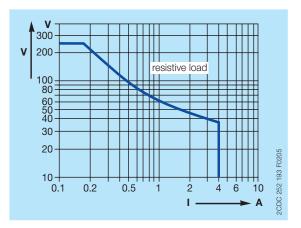


AC load (resistive)

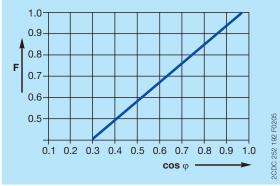

Derating factor F for inductive AC load




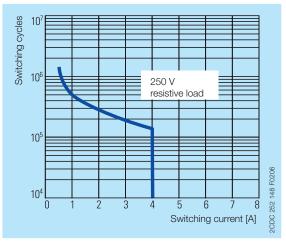

Contact lifetime


Dimensions

in mm and inches

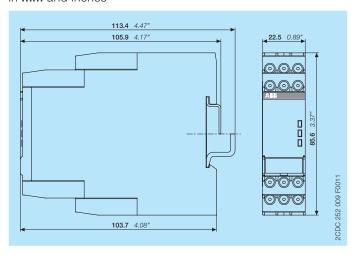


Accessories


in mm and inches

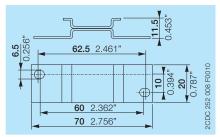

ADP.01 - Adapter for screw mounting

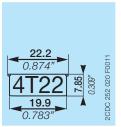

MAR.12 - Marker label for devices with DIP switches

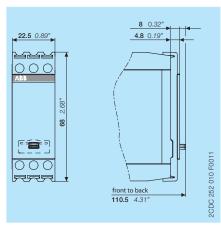

COV.11 - Sealable transparent cover

Further documentation

Document title	Document type	Document number
Electronic products and relays	Technical catalogue	2CDC 110 004 C02xx
CM-ESS.M	Instruction manual	1SVC 730 600 M0000

You can find the documentation on the internet at www.abb.com/lowvoltage

-> Automation, control and protection -> Electronic relays and controls -> Measuring and monitoring relays.

CAD system files

You can find the CAD files for CAD systems at http://abb-control-products.partcommunity.com

-> Low Voltage Products & Systems -> Control Products -> Electronic Relays and Controls.

Contact us

ABB STOTZ-KONTAKT GmbH

P. O. Box 10 16 80

69006 Heidelberg, Germany Phone: +49 (0) 6221 7 01-0 Fax: +49 (0) 6221 7 01-13 25 E-mail: info.desto@de.abb.com

You can find the address of your local sales organisation on the ABB home page http://www.abb.com/contacts -> Low Voltage Products and Systems

Note:

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright© 2016 ABB All rights reserved