


SACE Emax 2

Guide Laterali Parte Mobile E2.2-E4.2-E6.2
Lateral Guides Moving Part E2.2-E4.2-E6.2
Seitenbleche E2.2-E4.2-E6.2
Plaques Laterales E2.2-E4.2-E6.2
Laterales E2.2-E4.2-E6.2


1 - Operazioni preliminari - Preliminary Operations

- Leggere attentamente il documento RH0100003 prima di procedere
- Assicurarsi che l'interruttore sia nella posizione di aperto e molle scariche

- Read carefully the document RH0100003 before proceeding
- Make sure that the circuit-breaker is in open position with the springs discharged

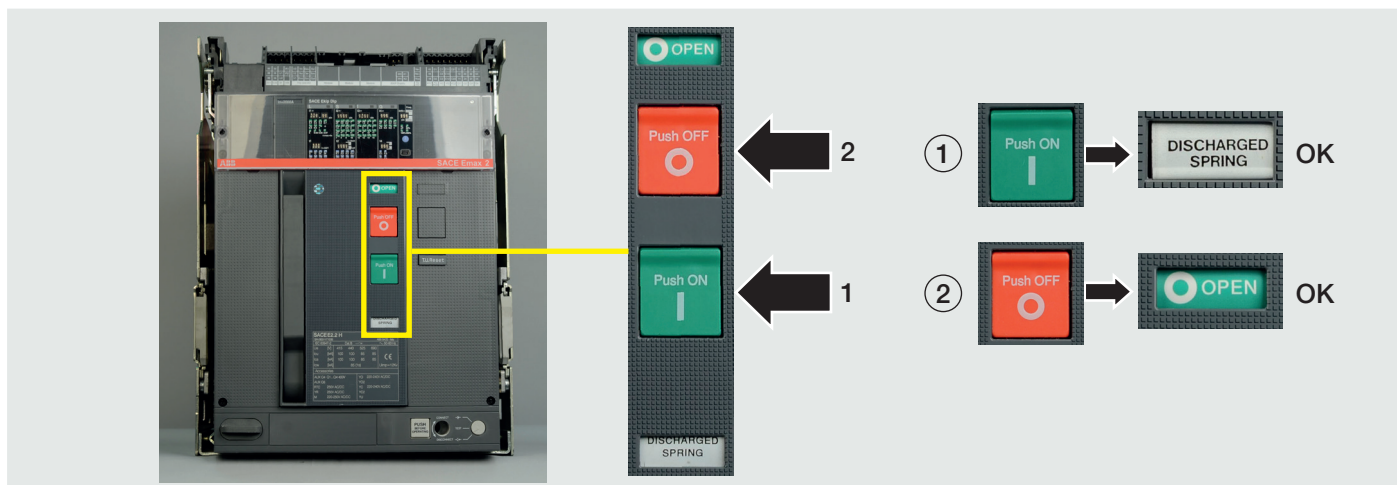



2 - Verifica contenuto kit - Kit content verify

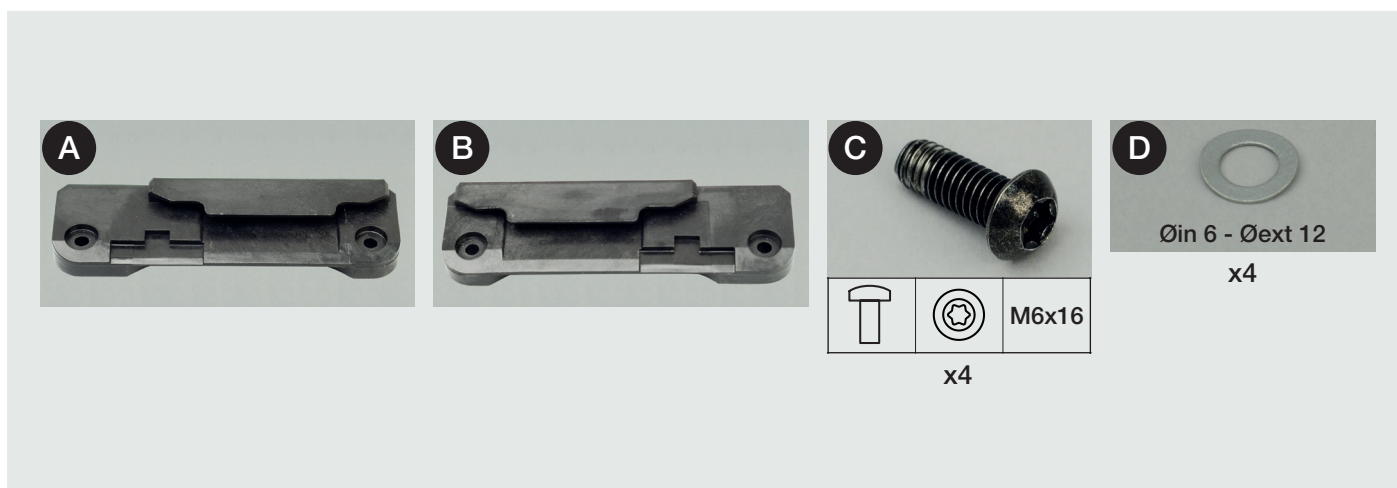

3 - Rimozione guide parte mobile - Removal of guides for moving part

- Svitare le 2 viti e le relative rosette e rimuovere le guide della parte mobile (sinistra e destra) dai fianchi dell'interruttore.



- Unscrew the 2 fixing screws and their washers then remove the guides from the moving part (left and right) from the sides of the circuit-breaker.

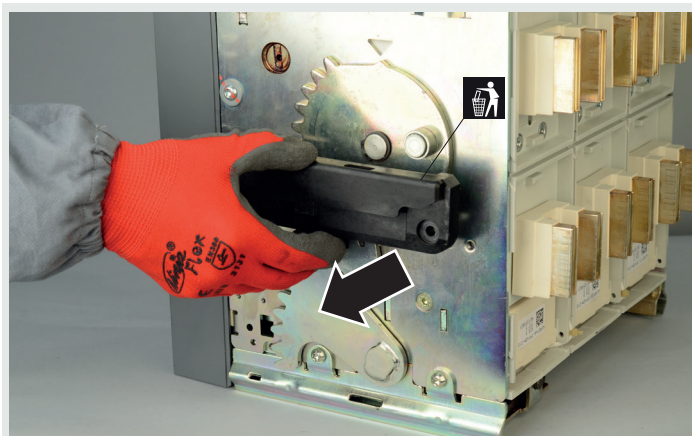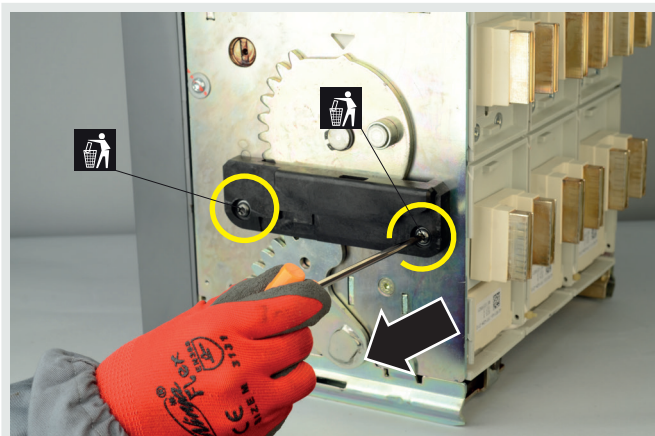

4 - Montaggio guide parte mobile - Assembly of guides for moving part

- Montare le guide della parte mobile A (sinistra) e B (destra) sui fianchi dell'interruttore. Fissare i due supporti con le rispettive viti C e rosette D.

- Assemble guides of moving part A (left) and B (right) onto sides of circuit-breaker. Fasten the two supports with their screws C and washers D.

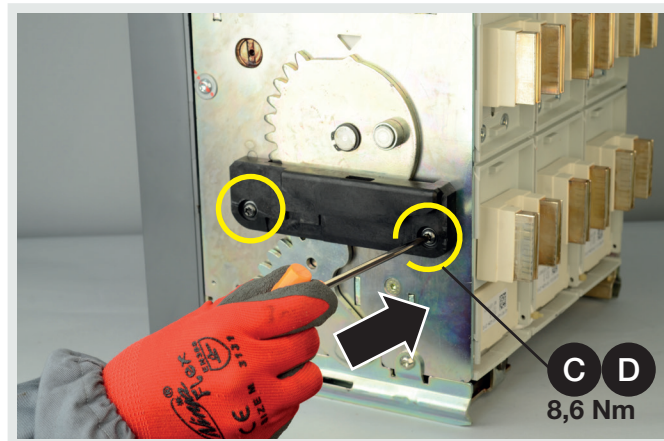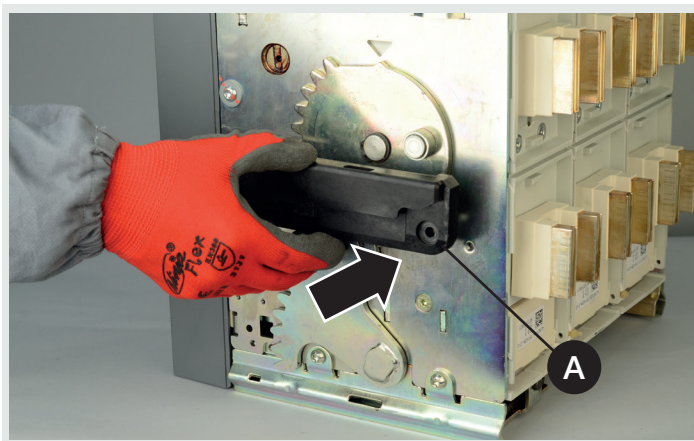

For more information please contact:
ABB S.p.A.
Via Pescaria, 5
24123 Bergamo - Italy
Phone: +39 035 395 111