

DEH44151 INSTALLATION INSTRUCTIONS

# Neutral Kit

TNK400



Hazards of electrical shock or burn! Turn off power before working inside this equipment.

**Used with:**

400 Ampere ABB Double Throw Switches

**Introduction:**

This bulletin provides instructions for installing Neutral lug kit – TNK400.

**Description:**


This neutral kit consists of the following parts:

1. One (1) Neutral assembly
2. Two (2) 1/4-20 X 9/16" mounting screws.

**Mounting Instructions:**

1. Tighten item 2 (Mounting screws) in to mounting hole in the enclosure. Ref. Fig 1.
2. For bonding, bare wire 1/0 CU/AL is to be used to connect small lug in neutral assembly to ground kit (order separately).

**Wire Range:** 2-600MCM CU/AL

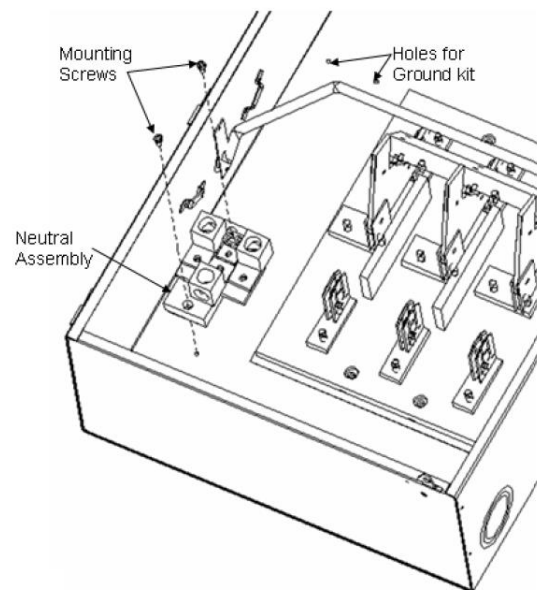

**Figure 1.**