CAUTION:

HIGH CENTER OF GRAVITY - USE CAUTION WHEN MOVING CABINET

ONLY PERSONNEL TRAINED TO MOVE HEAVY EQUIPMENT SHOULD HANDLE THESE BATTERY SYSTEMS.

USE A FORKLIFT OR SIMILAR DEVICE WITH APPROPRIATE LIFTING CAPACITY TO LIFT THE CABINET.

NOTE THE CENTER
OF GRAVITY MEASUREMENT

MOVE SLOWLY WHEN HANDLING. AVOID BOUNCING THE CABINET WHILE MOVING. THE CABINET COULD FALL FORWARD OR SIDEWAYS IF HANDLED ROUGHLY.

CABINET SYSTEMS ARE HEAVY AND COULD WEIGH AS MUCH AS 9,000 LBS PER CABINET OR MORE.

STEPS FOR BATTERY CABINET INSTALLATION PROCEDURE


- 1. TO HELP PREVENT DAMAGE, ALL PANELS FROM ALL BATTERY CABINETS SHOULD BE LABELED TO THEIR PROSPECTIVE CABINET, REMOVED AND PUT ASIDE IN A SAFE LOCATION WHILE MOVING THE CABINETS TO FINAL INSTALL POSITION.
- 2. INSTALL AND ALIGN THE FIRST CABINET, THEN EACH CABINET ADJACENT TO EACH OTHER. REFER TO PAGE 3 FOR PROPER LINE UP.
- 3. ROUTE THE POWER CABLES AS SHOWN ON SHEET 4.
- 4. INSTALL SIDE PANEL ONTO THE OPEN SIDES OF THE BATTERY CABINET. INSTALL THE DOORS AND LOCK WHEN NOT OPEN FOR MAINTENANCE.
- 5. THE CABINET MUST BE ANCHORED TO THE FLOOR FOR SEISMIC SENSITIVE AREAS. AND TO MAINTAIN THE SEISMIC INTEGRITY OF THE BATTERY CABINET. ANCHORING HARDWARE IS NOT INCLUDED. CONTACT INTRAPACK TO PURCHASE ANCHORING HARDWARE

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

> IMPORTANT<

* REVIEW THE DRAWINGS AND READ ALL
INFORMATION BEFORE PROCEEDING WITH MOVING
AND INSTALLING THESE BATTERY CABINETS

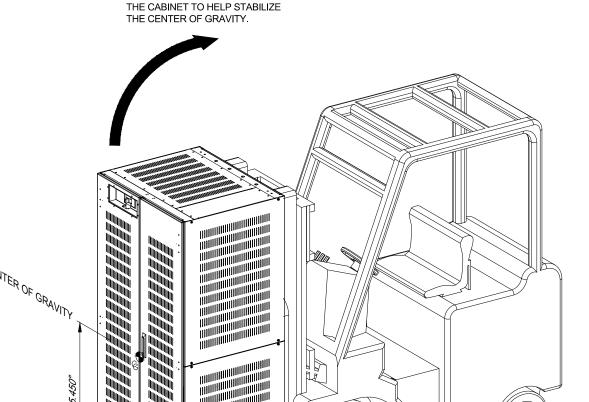

TILT FORKS BACK WHEN MOVING

MOVING A BATTERY CABINET

DO NOT LIFT THE CABINET HIGHER THAN NECESSARY TO CLEAR THE FLOOR WHEN MOVING



THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED.

FROM FLOOR TO CABINET LIFTING POINT IS 3.125"


WHEN LIFTING CABINETS.

SPREAD FORKS AS WIDE AS POSSIBLE

NO. DATE	REVISION DESCRIPTION	I-st-co Doots		SYSTEM WEIGHT: 35, 195 lbs				ADJACENT REMOTE TOP TERMINAL	1
		IntraPack	DALLAS, TX. 75238 PHONE: 214-348-7105	JOB NO.	N/A	DATE:	02/01/2021	BATTERY CABINET SYSTEM	
		WWW.INTRAPACK.COM	EMAIL: SALES@INTRAPACK.COM	QUOTE NO.	IPC20-1020	DRAWN BY:	SM	DRAWING NO.	01
		WWW.INTRAFACK.COM	© INTRAPACK 2020	SCALE:	N.T.S.	APPR. BY:		IP5-280D600-480-7-7D600-AR-JC	6

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

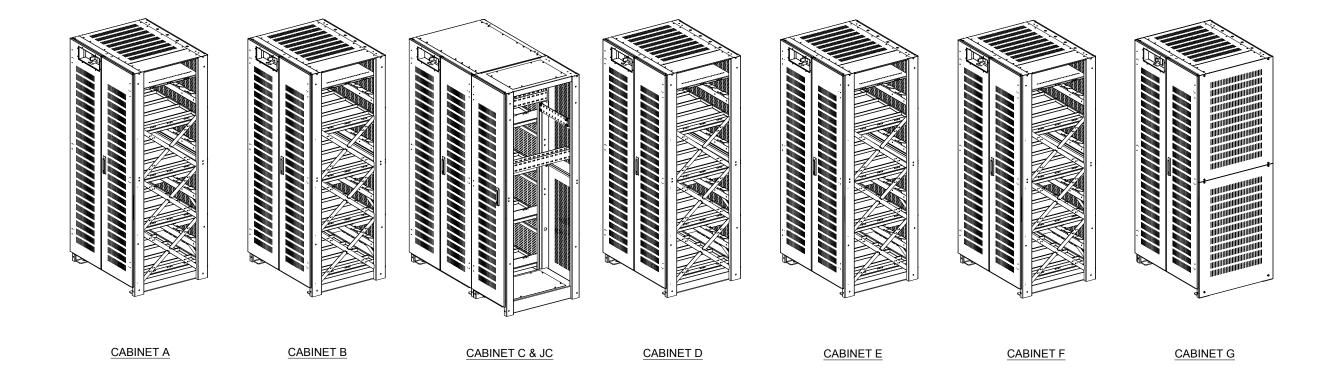

ISOMETRIC BATTERY CABINET VIEW



THE INFORMAT	THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED.									
NO. DATE	REVISION DESCRIPTION		® 10650 MARKISON ROAD	SYSTEM W	EIGHT: 35, 195	blbs		ADJACENT REMOTE TOP TERMINAL	2	
		IntraPack	DALLAS, TX. 75238	JOB NO.	N/A	DATE:	02/01/2021	BATTERY CABINET SYSTEM		
		↑	PHONE: 214-348-7105 EMAIL: SALES@INTRAPACK.COM	QUOTE NO	. IPC20-1020	DRAWN BY:	SM	DRAWING NO.	- OF	
		WWW.INTRAPACK.COM	© INTRAPACK 2020	SCALE:	N.T.S.	APPR. BY:		IP5-280D600-480-7-7D600-AR-JC	6	

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION 286.20" B` .10" 20.00" 5 8.25" REMOVE BATTERY CABINET TOP TO ACCESS CABLE TRAY **TOP VIEW BREAKER ACCESSIBLE** THROUGH DOOR (TYP) 30.91" 1111111111111111111 32 1111111111111111111 111111111111111111 1111111111111111111 111111111111111111 1111111111111111111 !!!!!!!!!!!!!!!!!! CABINET G **CABINET A CABINET B** CABINET C <u>JC</u> CABINET D CABINET E CABINET F FRONT VIEW SIDE VIEW 32.25" Ø.875" **BOTTOM VIEW** MEGAFLEX UPS BATTERY SKU MGF1500-7-4A-ALT THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED. NO. DATE REVISION DESCRIPTION 10650 MARKISON ROAD SYSTEM WEIGHT: 35, 195 lbs ADJACENT REMOTE TOP TERMINAL 3 DALLAS, TX. 75238 **BATTERY CABINET SYSTEM** JOB NO. N/A DATE: 02/01/2021 OF PHONE: 214-348-7105 QUOTE NO. IPC20-1020 DRAWN BY: SM DRAWING NO. EMAIL: SALES@INTRAPACK.COM WWW.INTRAPACK.COM 6 © INTRAPACK 2020 SCALE: N.T.S. APPR. BY: IP5-280D600-480-7-7D600-AR-JC

DC POWER CABLES FROM CJC TO THE UPS PROVIDED BY OTHERS. REFER TO NEC FOR PROPER AWG SIZE

TERMINAL BLOCK TO TERMINAL BLOCK AND TERMINAL BLOCK TO UPS CONTROL WIRING WILL BE 16-20 GA STRANDED, PROVIDED BY OTHERS


POSITIONING OF COMPONENTS ARE FOR ILLUSTRATION PURPOSES AND MAY NOT BE REPRESENTED IN THE EXACT LOCATION INDICATED.

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

GENERAL NOTES:

- ONLY QUALIFIED TECHNICIANS SHOULD PERFORM INSTALLATION OR MAINTENANCE OF THIS BATTERY SYSTEM.
- 2. ALL TOOLS SHOULD BE INSULATED TO PREVENT ELECTRICAL SHOCK.
- OPEN DISCONNECTS BEFORE INSTALLATION OR MAINTENANCE.
- CHECK DC VOLTAGE AT BATTERY OUTPUT AND UPS OUTPUT TO ENSURE PROPER POLARITY BEFORE MAKING FINAL CONNECTIONS.

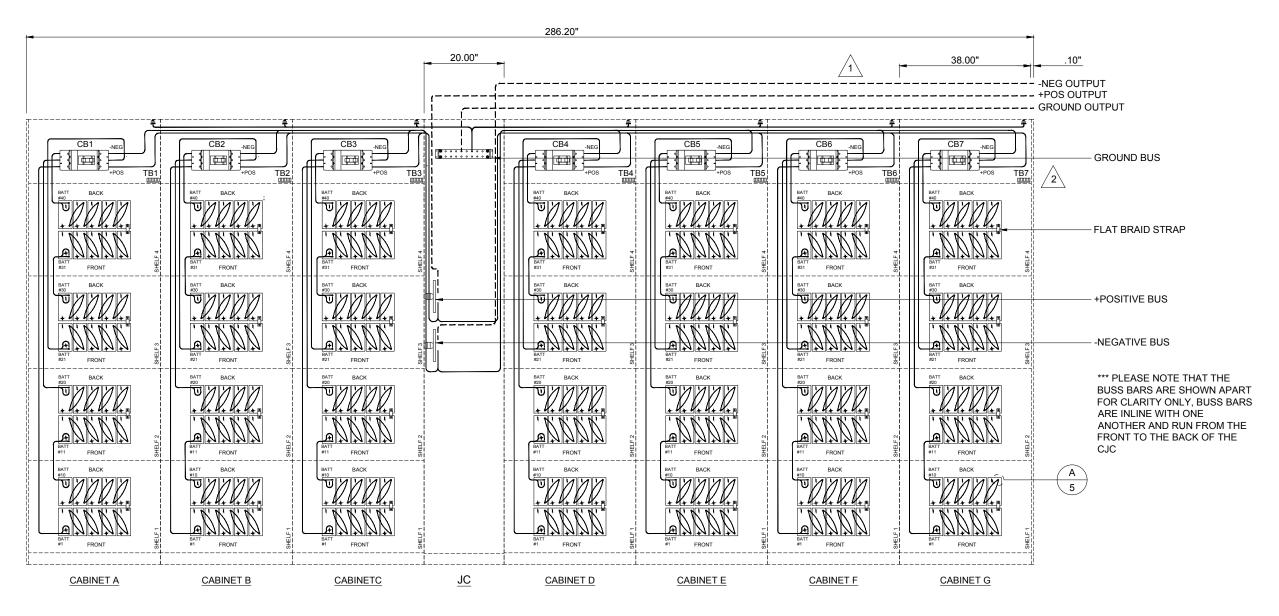

ELECTRICAL ILLUSTRATION

MEGAFLEX UPS BATTERY SKU MGF1500-7-4A-ALT

4

OF

6

TH	E INFORMATIO	ON CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUC	TION IN PART OR WHOLE WITHOU	JT THE WRITTEN PERMISSION OF I	NTRAPACK INDU	JSTRIES INC. IS	PROHIBITED.
NO	DATE	REVISION DESCRIPTION		10650 MARKISON ROAD	SYSTEM WE	EIGHT: 35, 195	lbs
			Intrapack	DALLAS, TX. 75238	JOB NO.	N/A	DATE:
			IIILI AFALN	PHONE: 214-348-7105			

J.	DATE	REVISION DESCRIPTION	
			IntraDac
			IIIIIIarau
			WWW.INTRAPACK.COM


®	10650 MARKISON ROAD
	DALLAS, TX. 75238
	PHONE: 214-348-7105
l	EMAIL: SALES@INTRAPACK.COM
	© INTRAPACK 2020


•	110 11 7 1011 11 10	01111120 1110.10	THOMBITED.						
	SYSTEM WEIGHT: 35, 195 lbs								
JOB NO. N/A DATE: 02/01/2									
1	QUOTE NO.	IPC20-1020	DRAWN BY:	SM					
	SCALE:	N.T.S.	APPR. BY:						


ADJACENT REMOTE TOP TERMINAL **BATTERY CABINET SYSTEM** DRAWING NO. IP5-280D600-480-7-7D600-AR-JC


CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

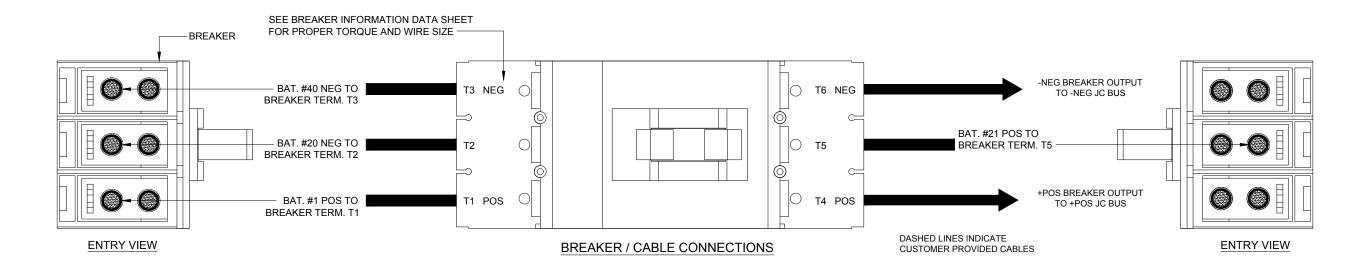

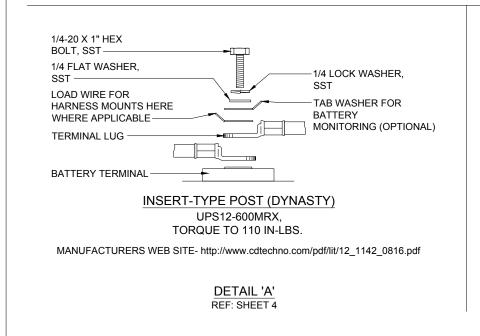

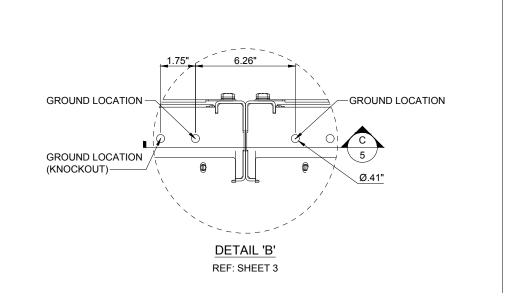

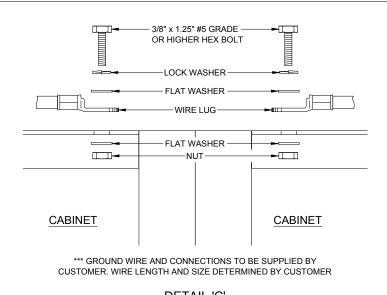

DETAIL 'C'

MEGAFLEX UPS BATTERY SKU MGF1500-7-4A-ALT

THE INFORMATIO	THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED.									
NO. DATE	REVISION DESCRIPTION		® 10650 MARKISON ROAD	SYSTEM WEIGHT: 35, 195 lbs				ADJACENT REMOTE TOP TERMINAL	5	
		IntraPack	DALLAS, TX. 75238	JOB NO.	N/A	DATE:	02/01/2021	BATTERY CABINET SYSTEM	05	
			PHONE: 214-348-7105 EMAIL: SALES@INTRAPACK.COM	QUOTE NO.	IPC20-1020	DRAWN BY:	SM	DRAWING NO.	OF OF	
		_ WWW.INTRAPACK.COM	© INTRAPACK 2020	SCALE:	N.T.S.	APPR. BY:		IP5-280D600-480-7-7D600-AR-JC	6	

ADJACENT BATTERY CABINET SYSTEM:

ALL CABLE HARNESSES ARE PROVIDED IN BOTH THE BATTERY CABINET TO BATTERY CABINET CONNECTION INCLUDING THE BATTERY CABINET CABLE HARNESS TO THE UPS.


ADJACENT REMOTE BATTERY CABINET SYSTEM:

ALL CABLE HARNESSES FROM BATTERY CABINET TO BATTERY CABINET WILL BE PROVIDED. THE BATTERY CABINET TO UPS CABLE HARNESS WILL BE PROVIDED BY THE INSTALLING CONTRACTOR.

REMOTE BATTERY CABINET SYSTEM:

ALL CABLE HARNESSES FROM BATTERY CABINET TO BATTERY CABINET AND BATTERY CABINET TO UPS WILL BE PROVIDED BY THE INSTALLING CONTRACTOR.

CONTROL WIRING ROUTING

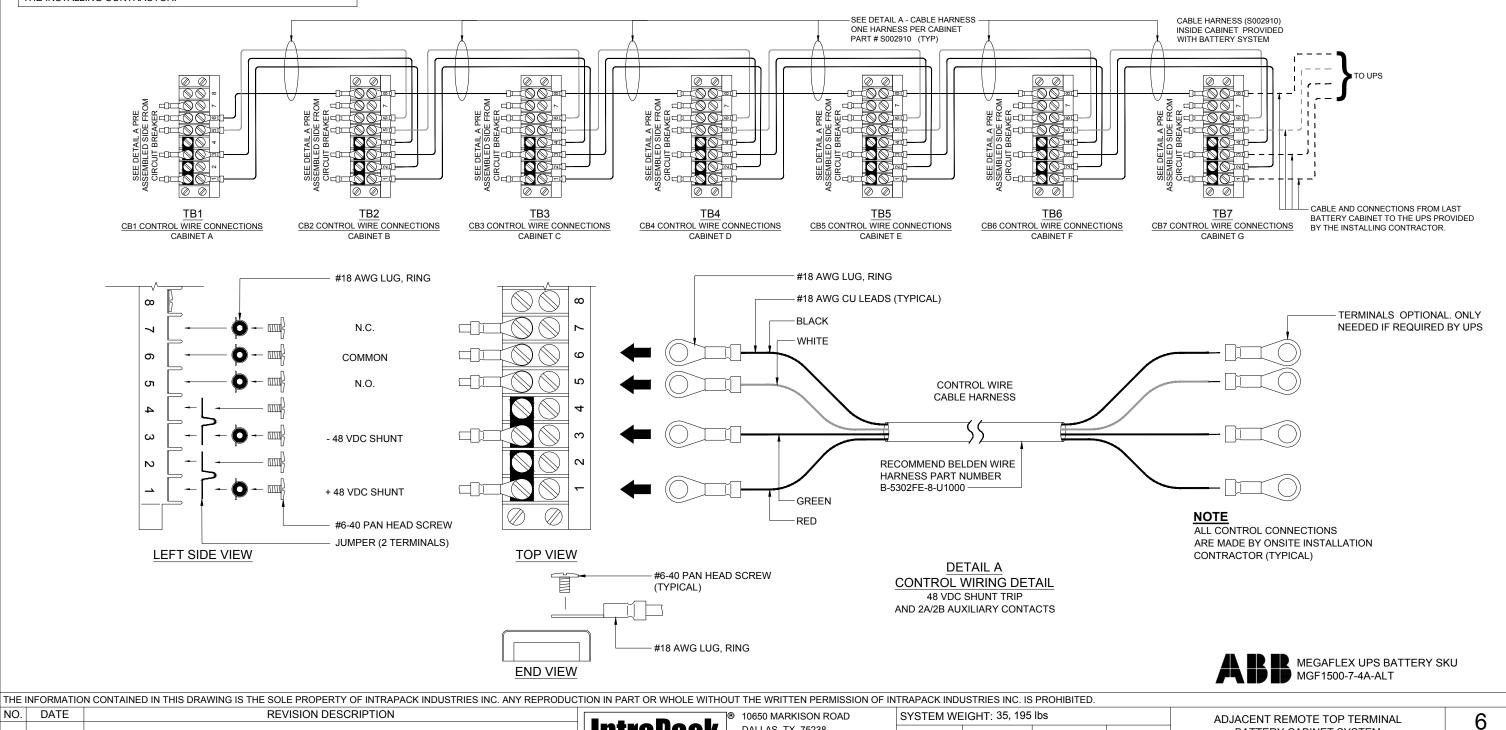

DALLAS, TX. 75238

© INTRAPACK 2020

WWW.INTRAPACK.COM

PHONE: 214-348-7105

EMAIL: SALES@INTRAPACK.COM

JOB NO.

QUOTE NO.

SCALE:

N/A

N.T.S.

IPC20-1020 DRAWN BY:

DATE:

APPR. BY:

02/01/2021

SM

BATTERY CABINET SYSTEM

DRAWING NO.

IP5-280D600-480-7-7D600-AR-JC

OF

6