CAUTION:

HIGH CENTER OF GRAVITY - USE CAUTION WHEN MOVING CABINET

ONLY PERSONNEL TRAINED TO MOVE HEAVY EQUIPMENT SHOULD HANDLE THESE BATTERY SYSTEMS.

USE A FORKLIFT OR SIMILAR DEVICE WITH APPROPRIATE LIFTING CAPACITY TO LIFT THE CABINET.

NOTE THE CENTER
OF GRAVITY MEASUREMENT

MOVE SLOWLY WHEN HANDLING. AVOID BOUNCING THE CABINET WHILE MOVING. THE CABINET COULD FALL FORWARD OR SIDEWAYS IF HANDLED ROUGHLY.

CABINET SYSTEMS ARE HEAVY AND COULD WEIGH AS MUCH AS 9,000 LBS PER CABINET OR MORE.

STEPS FOR BATTERY CABINET INSTALLATION PROCEDURE

- TO HELP PREVENT DAMAGE, ALL PANELS FROM ALL BATTERY CABINETS SHOULD BE LABELED TO THEIR PROSPECTIVE CABINET, REMOVED AND PUT ASIDE IN A SAFE LOCATION WHILE MOVING THE CABINETS TO FINAL INSTALL POSITION.
- 2. INSTALL AND ALIGN THE FIRST CABINET, THEN EACH CABINET ADJACENT TO EACH OTHER. REFER TO PAGE 3 FOR PROPER LINE UP.
- 3. ROUTE THE POWER CABLES AS SHOWN ON SHEET 4.
- 4. INSTALL SIDE PANEL ONTO THE OPEN SIDES OF THE BATTERY CABINET. INSTALL THE DOORS AND LOCK WHEN NOT OPEN FOR MAINTENANCE.
- 5. THE CABINET MUST BE ANCHORED TO THE FLOOR FOR SEISMIC SENSITIVE AREAS. AND TO MAINTAIN THE SEISMIC INTEGRITY OF THE BATTERY CABINET. ANCHORING HARDWARE IS NOT INCLUDED. CONTACT INTRAPACK TO PURCHASE ANCHORING HARDWARE


CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

> IMPORTANT<

* REVIEW THE DRAWINGS AND READ ALL
INFORMATION BEFORE PROCEEDING WITH MOVING
AND INSTALLING THESE BATTERY CABINETS



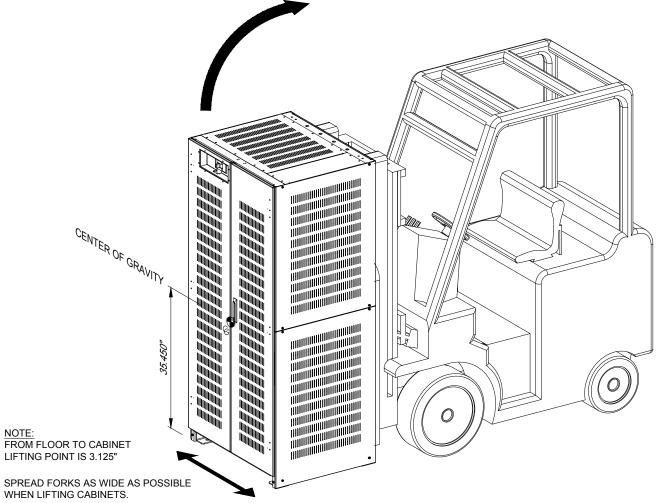

MOVING A BATTERY CABINET DO NOT LIFT THE CABINET HIGHER THAN NECESSARY TO CLEAR THE FLOOR WHEN MOVING




| THE INFORMATION CONTAINED IN THIS D | RAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES | INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT T | THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED. |
|-------------------------------------|---|--|--|
|-------------------------------------|---|--|--|

| NC | DATE | REVISION DESCRIPTION | I-d-t-D-d- | ® 10650 MARKISON ROAD | | IGHT: 40, 180 | lbs | | ADJACENT REMOTE TOP TERMINAL | 1 |
|----|------|----------------------|-------------------|--|-----------|---------------|-----------|------------|-------------------------------|----|
| | | | IntraPack | DALLAS, TX. 75238 PHONE: 214-348-7105 | JOB NO. | N/A | DATE: | 12/02/2020 | BATTERY CABINET SYSTEM | _ |
| | | | WWW.INTRAPACK.COM | EMAIL: SALES@INTRAPACK.COM | QUOTE NO. | IPC20-1023 | DRAWN BY: | SM | DRAWING NO. | 01 |
| | | | | © INTRAPACK 2020 | SCALE: | N.T.S. | APPR. BY: | | IP5-320D600-480-8-8D600-AR-JC | 6 |

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

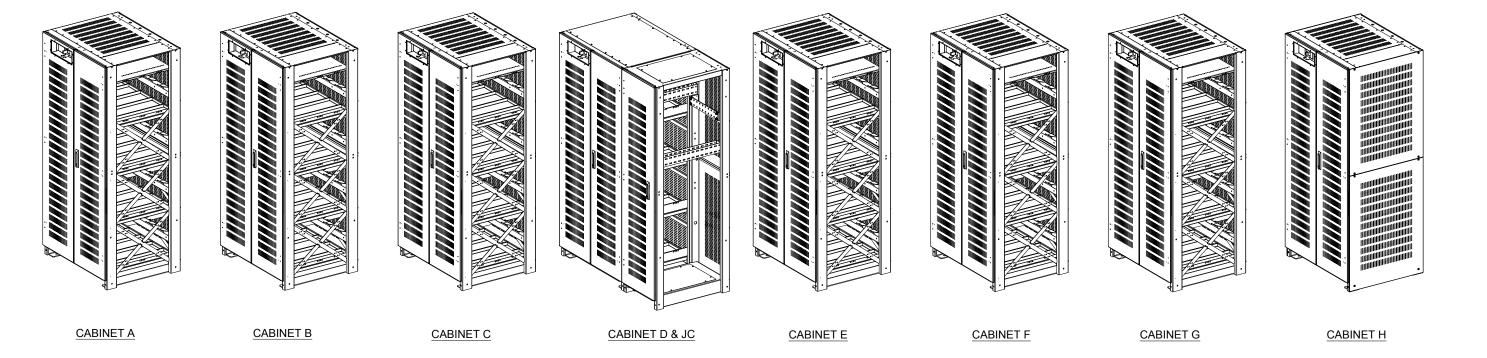

ISOMETRIC BATTERY CABINET VIEW



| THE | THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED. | | | | | | | | | | |
|-----|--|----------------------|-------------------|----------------------------|-----------|----------------|-----------|------------|-------------------------------|----|--|
| NO. | DATE | REVISION DESCRIPTION | | ® 10650 MARKISON ROAD | SYSTEM WE | EIGHT: 40, 180 | lbs | | ADJACENT REMOTE TOP TERMINAL | 2 | |
| | | | IntraPack | DALLAS, TX. 75238 | JOB NO. | N/A | DATE: | 12/02/2020 | BATTERY CABINET SYSTEM | | |
| | | | miciai avn | PHONE: 214-348-7105 | OLIOTE NO | IPC20-1023 | DRAWN BY: | SM | DRAWING NO. | OF | |
| | | | WWW.INTRAPACK.COM | EMAIL: SALES@INTRAPACK.COM | | 11 020-1023 | | OW | | 6 | |
| | | | | © INTRAPACK 2020 | SCALE: | N.T.S. | APPR. BY: | | IP5-320D600-480-8-8D600-AR-JC | | |

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION 324.20" B 38.00" 20.00" 5 / 8.25" 30.91" REMOVE BATTERY CABINET **TOP VIEW** TOP TO ACCESS CABLE TRAY 30.91" BREAKER ACCESSIBLE THROUGH DOOR (TYP) H H. H H H. 111111111111111111111 111111111111111111111 1000101111111111111 1000101100010011 11001100111111111 118811188111111111 1111111111111111111 18111111111111111 1111111111111111111 181111111111111111 11111111111111111111 1111111111111111111 111111111111111111111111111111111111 1111111111111111111 1811111111111111111 118811188111111111 111111111111111111111111111111111111 1111111111111111111 11111111111111111111 111111111111111111 101111111111111111 11111111111111111111 1111111111111111111111 111111111111111111 1111111111111111111 111111111111111111111 111111111111111111 11111111111111111111 111111111111111111 1811111111111111111 100001111001110111 CABINET A CABINET B CABINET C CABINET D <u>JC</u> CABINET E CABINET F **CABINET G** CABINET H SIDE VIEW FRONT VIEW 30.76" Ø.834" **BOTTOM VIEW** MEGAFLEX UPS BATTERY SKU MGF1600-8-4A-ALT THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED. DATE REVISION DESCRIPTION 10650 MARKISON ROAD SYSTEM WEIGHT: 40, 180 lbs ADJACENT REMOTE TOP TERMINAL 3 DALLAS TX 75238 **BATTERY CABINET SYSTEM** JOB NO. N/A DATE: 12/02/2020 OF PHONE: 214-348-7105 QUOTE NO. IPC20-1023 DRAWN BY: SM DRAWING NO. EMAIL: SALES@INTRAPACK.COM WWW.INTRAPACK.COM 6 © INTRAPACK 2020 SCALE: N.T.S. APPR. BY IP5-320D600-480-8-8D600-AR-JC

1

DC POWER CABLES FROM CJC TO THE UPS PROVIDED BY OTHERS. REFER TO NEC FOR PROPER AWG SIZE




TERMINAL BLOCK TO TERMINAL BLOCK AND TERMINAL BLOCK TO UPS CONTROL WIRING WILL BE 16-20 GA STRANDED, PROVIDED BY OTHERS POSITIONING OF COMPONENTS ARE FOR ILLUSTRATION PURPOSES AND MAY NOT BE REPRESENTED IN THE EXACT LOCATION INDICATED.

CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

GENERAL NOTES:

- ONLY QUALIFIED TECHNICIANS SHOULD PERFORM INSTALLATION OR MAINTENANCE OF THIS BATTERY SYSTEM.
- 2. ALL TOOLS SHOULD BE INSULATED TO PREVENT ELECTRICAL SHOCK.
- 3. OPEN DISCONNECTS BEFORE INSTALLATION OR MAINTENANCE.
- CHECK DC VOLTAGE AT BATTERY OUTPUT AND UPS OUTPUT TO ENSURE PROPER POLARITY BEFORE MAKING FINAL CONNECTIONS.

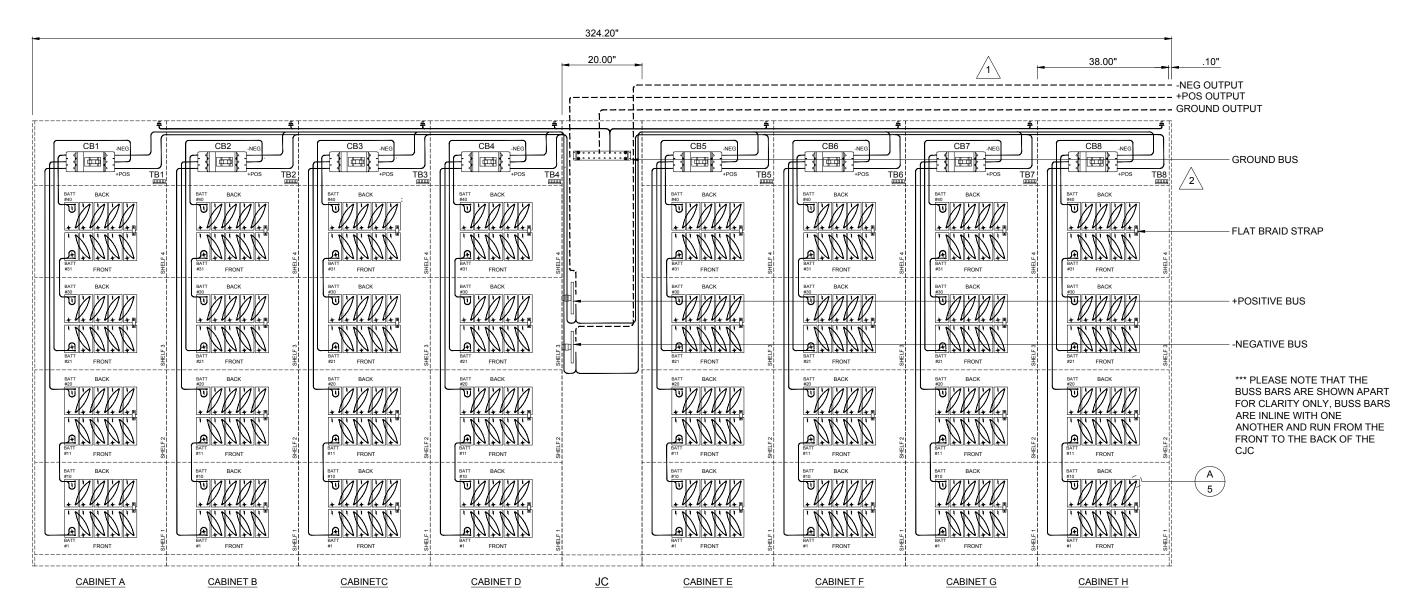


ELECTRICAL ILLUSTRATION


MEGAFLEX UPS BATTERY SKU MGF1600-8-4A-ALT


| THE | THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED. | | | | | | | | | | |
|-----|--|----------------------|-------------------|---|-----------|---------------|-----------|------------|--------------------------------|------|--|
| NO. | DATE | REVISION DESCRIPTION | | ® 10650 MARKISON ROAD | SYSTEM WE | IGHT: 40, 180 | lbs | | ADJACENT REMOTE TOP TERMINAL | 1 | |
| | | | IntraPack | DALLAS, TX. 75238 | JOB NO. | N/A | DATE: | 12/02/2020 | BATTERY CABINET SYSTEM | 7 | |
| | | | mula aon | PHONE: 214-348-7105 EMAIL: SALES@INTRAPACK.COM | QUOTE NO. | IPC20-1023 | DRAWN BY: | SM | DRAWING NO. | - OF | |
| | | | WWW.INTRAPACK.COM | © INTRAPACK 2020 | SCALE: | NTS | APPR. BY: | | IP5-320D600-480-8-8D600-AR-JC | 6 | |
| | | | | ⊎ INTRAFACK 2020 | SCALE. | IN. 1 . O. | AFFR. DI. | | IF 3-320D000-400-0-0D000-AN-3C | | |


CAUTION: HIGH VOLTAGE, RISK OF ELECTRICAL SHOCK

- FOLLOW ALL SAFETY PRECAUTIONS WHEN WORKING ON THIS SYSTEM
- ALWAYS WEAR PROPER SAFETY EQUIPMENT INCLUDING EYE PROTECTION

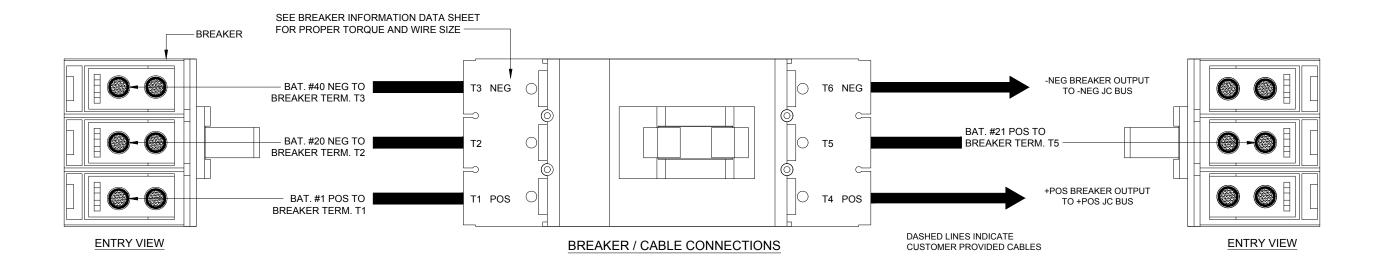

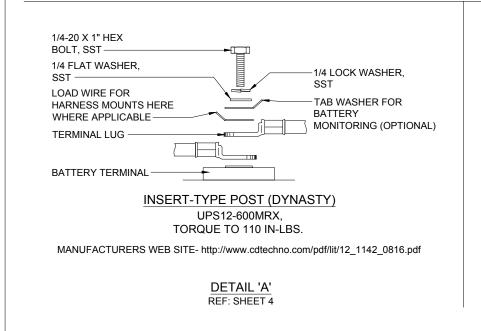

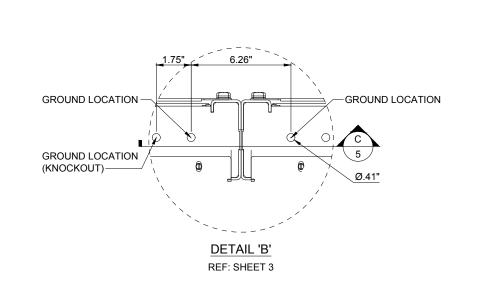

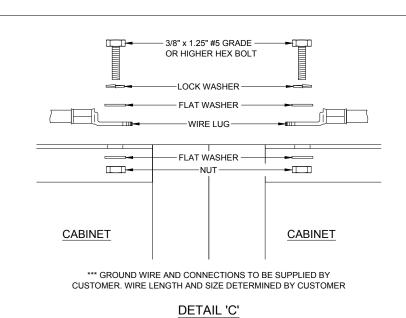

MEGAFLEX UPS BATTERY SKU MGF1600-8-4A-ALT

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF INTRAPACK INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF INTRAPACK INDUSTRIES INC. IS PROHIBITED.

| 111 | THE INCOMPANIES IN THIS DRAWING IS THE SOCIETY OF INTERPRETATION O | | | | | | | | | | |
|-----|--|------|----------------------|-------------------|----------------------------|-----------|----------------|-----------|------------|-------------------------------|----|
| NC |). L | DATE | REVISION DESCRIPTION | | ® 10650 MARKISON ROAD | SYSTEM WE | EIGHT: 40, 180 | lbs | | ADJACENT REMOTE TOP TERMINAL | |
| | | | | IntraPack | DALLAS, TX. 75238 | JOB NO. | NI/A | DATE: | 12/02/2020 | BATTERY CABINET SYSTEM | J |
| | | | | IIILI AF ALR | PHONE: 214-348-7105 | JOB NO. | IN/A | DATE. | 12/02/2020 | BATTERT OABINET OTOTEM | OF |
| - | | | | | | QUOTE NO. | IPC20-1023 | DRAWN BY: | SM | DRAWING NO. | |
| | | | W | WWW.INTRAPACK.COM | EMAIL: SALES@INTRAPACK.COM | | NTO | | | | 6 |
| | | | | | © INTRAPACK 2020 | SCALE: | N.T.S. | APPR. BY: | | IP5-320D600-480-8-8D600-AR-JC | |



ALL CABLE HARNESSES ARE PROVIDED IN BOTH THE BATTERY CABINET TO BATTERY CABINET CONNECTION INCLUDING THE BATTERY CABINET CABLE HARNESS TO THE UPS.

ADJACENT REMOTE BATTERY CABINET SYSTEM:

ALL CABLE HARNESSES FROM BATTERY CABINET TO BATTERY CABINET WILL BE PROVIDED. THE BATTERY CABINET TO UPS CABLE HARNESS WILL BE PROVIDED BY THE INSTALLING CONTRACTOR.


REMOTE BATTERY CABINET SYSTEM:

NO. DATE

REVISION DESCRIPTION

ALL CABLE HARNESSES FROM BATTERY CABINET TO BATTERY CABINET AND BATTERY CABINET TO UPS WILL BE PROVIDED BY THE INSTALLING CONTRACTOR.

CONTROL WIRING ROUTING

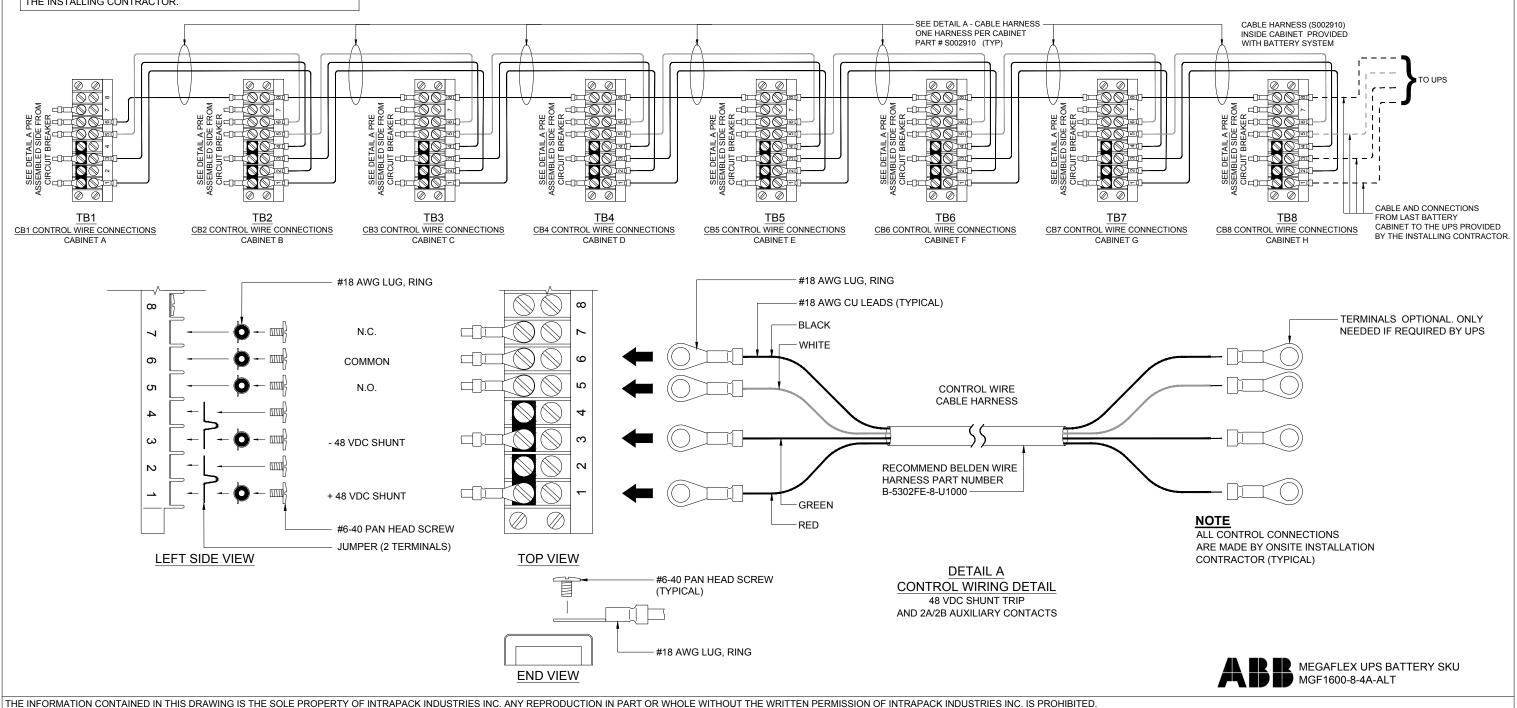

® 10650 MARKISON ROAD

PHONE: 214-348-7105

© INTRAPACK 2020

EMAIL: SALES@INTRAPACK.COM

DALLAS, TX. 75238

WWW.INTRAPACK.COM

SYSTEM WEIGHT: 40, 180 lbs

N/A

N.T.S.

IPC20-1023 DRAWN BY:

DATE:

APPR. BY:

12/02/2020

SM

JOB NO.

QUOTE NO.

SCALE:

ADJACENT REMOTE TOP TERMINAL

BATTERY CABINET SYSTEM

DRAWING NO.

IP5-320D600-480-8-8D600-AR-JC

6

OF

6