


ABB MEASUREMENT & ANALYTICS

# Oxygen measurement made easy

Analyzer portfolio overview

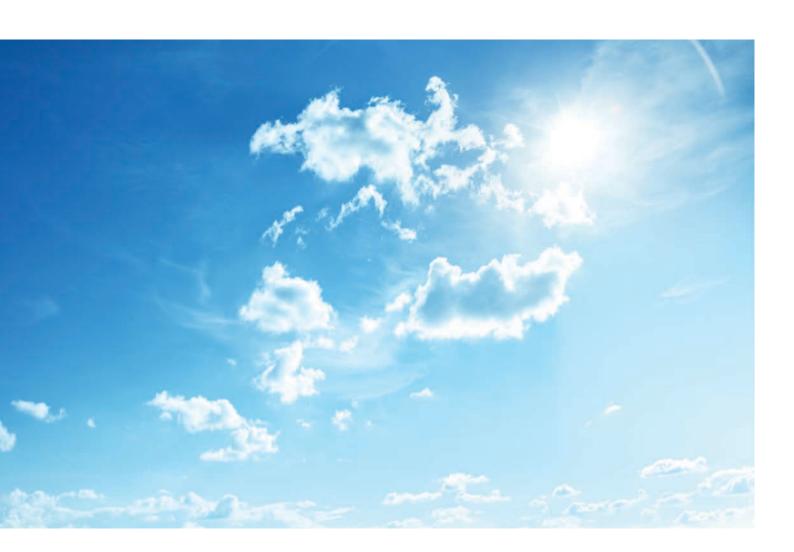

Measurement made easy

Oxygen is the most important gas of our planet; as useful to many industries as it is to nature itself.

It converts combustibles into an energy source. It is used in the synthesis of countless chemicals.

Its oxydizing power can also be a threat to catalysts and industrial assets.

In any case, one needs to know the right oxygen concentration.

ABB has the right analyzer for your oxygen application. Because it is vital!

## **Table of contents**

<b>04</b> -05	Analyzer series and modules
06	AZ Endura series
07	LGR-ICOS™
<b>08</b> -09	Advance Optima and EasyLine
<b>10</b> -11	Process gas chromatographs
<b>12</b> –13	Product selection matrix
14	Service

4 OXYGEN MEASUREMENT MADE EASY ANALYZER PORTFOLIO OVERVIEW ANALYZER SERIES AND MODULES

### **Analyzer series and modules**

# The right technology for your measurement

#### **AZ Endura series**

#### Zirconium dioxide probes

- Robust in-situ oxygen probe
- Ranges: 0 0.01 up to 100 vol% with optional automatic calibration
- Integral transmitter or remote transmitter
- Easy maintenance and filter exchange
- · Long cell life and stability

### Magnos28

#### Paramagnetic detector

- Components: 0,
- Ranges: 0 0.5 vol% up to 100 vol%
- Patented Microwing® offers improved repeatability
- Semi-automatic manufacturing for consistent quality
- Inert materials suitable for corrosive applications
- Fast response (1.3s) for improved process control
- Suppressed ranges (99.5 100 vol%) for purity applications
- SIL declaration available acc. EN 61508 (2010) part 2

#### Magnos27


#### Thermomagnetic detector

- Components: 0,
- Ranges: 0 10 vol% up to 100 vol%
- Reliable measurement for flue gas applications
- Robust cell design ideal for corrosive samples
- $\bullet\,$  Easy to clean even after liquid/acid contamination
- Very popular for cement and metals applications

#### **ZO23**

#### Zirconium dioxide detector

- Components: O<sub>2</sub>
- Trace level measurement for purity applications
- Low influence from flammable gases
- Wide dynamic range for start-up/shut-down operation
- $T_{90}$  response time < 60 sec for alternation of 2 test gases
- Automatic self-check function without test gases

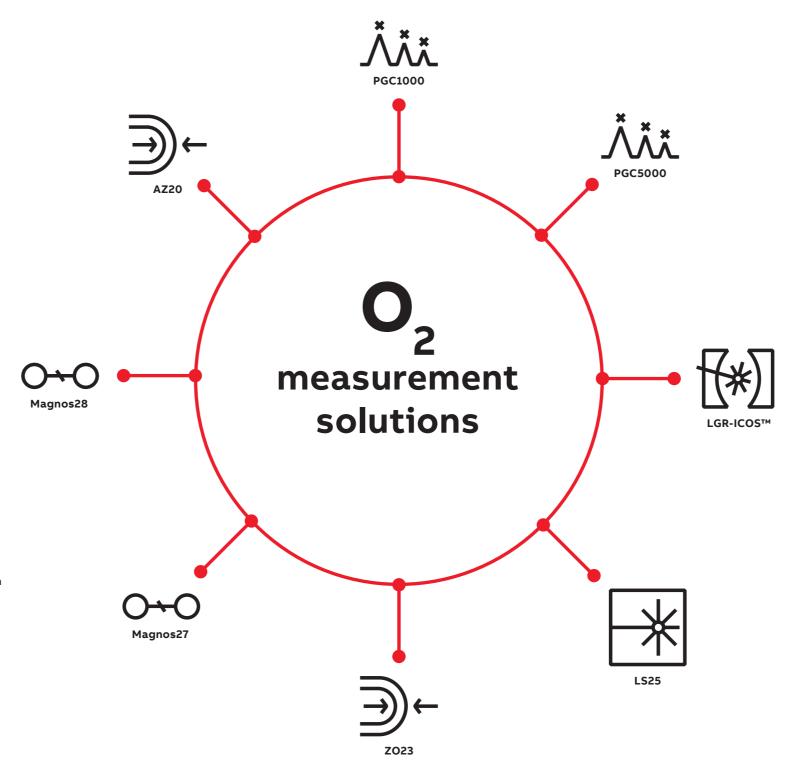

#### PGC1000

#### Online Chromatography

- · Compact design: mounted closer to sample point
- Versatile: capable of a variety of simple vapour applications
- Cost effective: shelterless design and low utility consumption
- Technology leader: highly sensitive TCD
- Serviceable: modular design decreases maintenance and downtime

#### PGC5000

#### **Process Chromatography**

- Flexibility: multiple ovens to controller configuration
- Versatile: liquid and vapour applications, multiple detectors option
- Cost effective: integrated controller oven, supporting capital investment reduction and ensuring system reliability
- Condition monitoring system: complete system diagnostics for rapid troubleshooting and maintenance

### LGR-ICOS™ GLA531/GLA231

#### series

#### ${\bf Patented\ OA\text{-}ICOS\ laser-based\ technology}$

- · High precision and accuracy
- Fast measurement rate and response time
- Multicomponent configurations (CO,  $CO_2$ ,  $H_2O$ )
- 10,000:1 linear dynamic range: 0 5 vol% with a limit of detection down to 0.5 ppm, up to 100 vol% capabilities
- Unique stability without need for recalibration
- No consumables, low maintenance and field serviceable

#### **LS25**

#### Tunable diode laser absorption spectroscopy

- In-situ measurement in harsh conditions: up to 10 bar and 1500  $^{\circ}\text{C}$
- Ranges depending on available optical path length
- $\bullet\,$  Cross duct measurement of all the gases
- Fast response ( $T_{90}$  < 2 sec) for improved
- process control

### **AZ Endura series**

### The combustion gas analyzer

Superior technology and quality from the world leader in zirconia probes for oxygen measurement

Harsh environments demand rugged and robust measurement equipment; solutions that are effective and efficient even in the toughest applications. This is where the Endura AZ series is introduced as the world leader in oxygen measurement. In diverse sectors, from hydrocarbon processing and power generation to process industries, the Endura AZ series will deliver enhanced business and operational benefits.

#### All series features

- · Advanced design and precision manufacturing
- Unique integrated, in-situ auto-calibration system
- · Industry-standard flange configurations
- Advanced transmitters
- Unique cell release and full site-serviceable probe
- HART communication, plus digital and analog output

#### **Measurement Performance**

- 0.01 to 100 % O<sub>2</sub>
- T90 < 10 seconds
- Accuracy < 0.75% or reading
- Drift < 0.2% typical



#### **Specifications AZ20 series**

- General purpose
- From -20 to 800°C process temperature
- Integral or remote transmitter
- Probe length up to 4 m (13 ft)
- Full servicing and maintenance on site



#### **Specifications AZ25 series**

- From 600 to 1400 C process temperature
- Remote transmitter only due to high application temperatures
- Probe lenghts up to 1.25 m (4 ft)
- Variety of probe material options available to ensure application suitability



#### **Specifications AZ30 series**

- ATEX version
- From -20 to 800°C as standard
- Extractive bypass accessory allows use in application temperature of up to 1400°C
- Integral or remote mounted ATEX transmitter
- Probe length up to 4 m (13 ft)

Find out more about the AZ Endura series

### **LGR-ICOS™**

### Laser-based analyzers and solutions

The highest overall performance at a low cost of ownership to address the most critical and challenging applications requiring uninterrupted monitoring and reliable process control.

01 GLA531 series ATEX Zone 1 integration on an off-shore platform



 $LGR-ICOS^{TM}$  laser-based process analyzers perform sensitive, accurate and precise oxygen mesurements in refining, petrochemical, specialty chemical and other industrial facilities. With their highly selective, interference-free and wide dynamic range analytical performance, these analyzers provide very fast, reliable and repeatable results in every application. Where the most challenging of detection capabilities are required for quality assurance, critical process control or the protection of a precious process catalyst, no other laser analyzer can match their performance. LGR-ICOS™ analyzers are simple to use, start up in minutes, require no field calibration and have minimal preventative maintenance requirements.

Every LGR-ICOS™ analyzer uses ABB's patented Off-axis ICOS technology, a fourth-generation cavity enhanced absorption technique. Off-axis ICOS analyzers have many advantages over conventional technologies, including improved sensitivity, precision and selectivity for a wider range of gases, as well as significantly improved alignment and vibration tolerance. The non-critical alignment of the optical bench and sample cell allows for easy service in the field.

#### Patented high-performance technology

- Significantly higher sensitivity compared with conventional laser analyzers
- Higher accuracy and precision enables improved process and quality control
- Wider dynamic range reduces the quantity of analyzers required to measure both low levels and process excursions
- Fast response time allows rapid adjustment to process changes and upset conditions
- Lack of consumables reduces cost-of-ownership and increases reliability and ROI

#### Low cost of ownership

- · Low OPEX provides rapid ROI
- No consumables, columns, carrier gases or liquids, or pre-scrubbers are required
- Simplified sample conditioning reduces system complexity and maintenance cost
- Minimal annual preventive maintenance requirement, estimated at less than 4 hours total for hazardous locations and less than an hour for rackmount analyzers
- Continuous analyzer health status reporting and warnings avoid emergency repairs
- Field-serviceable sample cell and mirror cleaning require no factory repair time

#### **Flexibility**

- Real-time continuous online measurements of multiple gases in a single analyzer
- General purpose uses and options of Hazardous Area Certifications (GLA531 series): North American Class I Division 1 and 2 or ATEX/IECEx Zone 1 and 2
- Industry standard communications including analog 4-20 mA, digital Modbus TCP and Modbus RTU
- Hazloc-approved USB portal access for file download and field serviceability

Find out more about LGR-ICOS™

## **Advance Optima and EasyLine**

### Continuous gas analyzers

Through a wide choice of technologies, AO2000 and EL3000 series analyzer solutions can address everything from simple measuring tasks to complex and flexible systems, including hazardous areas.


The different analyzer platforms give you the opportunity to choose the right solution for the measurement task. This could depend on the place of installation, as well as the interaction that is required from the analyzer. The same high-quality analyzer modules can be integrated in all platforms.

#### AO2000 series

#### Flexible, multi-analyzer system

- Up to 10 different analyzer technologies
- Up to 4 different analyzers for O<sub>2</sub> measurement
- Up to 6 different components simultaneously
- Up to 4 analyzers in one system
- 2 different housing types
- · Optional integrated gas feed unit
- Different interface options: Digital I/Os, AOs, Modbus. Profibus. Ethernet. OPC
- · Auto calibration option
- Remote operation

#### Find out more about the AO2000 series

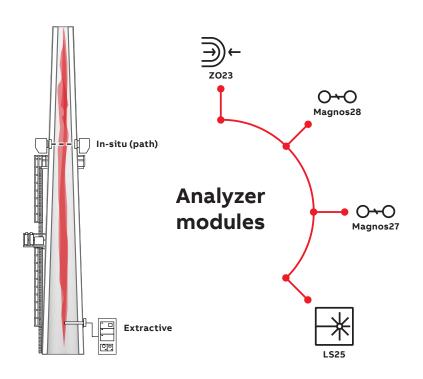

#### EL3000 series

#### Compact, easy analyzer system

- Up to 8 different analyzer technologies
- Up to 3 different analyzers for O<sub>2</sub> measurement
- Up to 5 different components simultaneously
- Up to 2 analyzers in one housing
- · 2 different housing types
- · Optional integrated gas feed unit
- Different interface options: Digital I/Os, AOs, Modbus, Profibus, Ethernet
- · Auto calibration option
- · Intuitive operation

Find out more about the EL3000 series

#### EL3060 series

#### Compact, easy hazardous area analyzer system

- · Certified for Zone 1 installation
- · Certified acc. IECEx, ATEX, EAC, NEPSI, TIIS, KCs
- Ex-d housing for analyzer modules
- Ex-e housing for customer cabling
- Magnos28 for O<sub>2</sub> measurement with SIL2
- Up to 4 different analyzer technologies
- · Up to 5 components simultaneously
- Different interface options:Digital I/Os, AOs, Modbus, Profibus, Ethernet
- · Auto calibration option
- Intuitive operation

Find out more about the EL3060 series



01 Continuous gas analyzers AO2000, EL3000 and EL3060

#### **ZO23**

#### Extractive; zirconium dioxide technology

#### Measurement principle

- Potentiometric measurement
- Zirconium dioxide cell

#### Measurement range

- Min. 0 1 ppm
- Max. 0 250,000 ppm
- 4 measuring ranges

#### T<sub>90</sub> response time

- $T_{90}$ < 60 sec for the alternation of 2 test gases in the measuring range of 10 ppm
  - sample gas flow rate = 8 l/h
  - electronic  $T_{q_0}$ -time = 3 sec

#### Magnos28

### Extractive; paramagnetic/magnetomechanic design

#### Measurement principle

- Paramagnetic behaviour of oxygen
- · Magnetomechanical oxygen module

#### Measurement range

- Min. 0 0,5 vol%
- Max. 0 100 vol%
  - 4 measuring ranges
- with suppressed zero-point:
  - max. 1:200, e.g. 99.5 100 vol%

#### T<sub>90</sub> response time

•  $T_{90}$  < 3 sec at a sample gas flow = 90 l/h

#### Magnos27

### Extractive; paramagnetic/thermomagnetic design

#### Measurement principle

- Paramagnetic behaviour of oxygen
- Heavy-duty thermomagnetic module

#### Measurement range

- Min. 0 3 vol%
- Max. 0 100 vol%
- 4 measuring ranges

#### T., time

•  $T_{90}$  = 10 to 22 sec, depending on sample gas flow

#### **LS25**

#### In-situ; laser-based technology

#### Measurement principle

Single-line tunable diode laser absorption spectroscopy

#### Measurement range

- Min. 0 1 vol%
- Max. 0 100 vol%
  - -1 measuring range
- max. 10 bar, 1500°C

#### Response time

• Less than 2 seconds without signal averaging

### Process gas chromatographs

Process measurements can be accomplished with different technologies depending on the requirements and process gas chromatography is a powerful analytical method for these measurements.

The key principles of this analytical method are separation and measurement. These two features greatly provide the expected quality and accuracy of each measured component in the analysis. ABB's process gas chromatographs can be optimized for each application with a wide variety of hardware options, including columns, detectors, and valves, to provide the lowest detection limit and best repeatability possible for each measured component. An additional benefit to using this technique is the large number of components that can be measured simultaneously without interference. All of these features and benefits make our Process Gas Chromatographs a very flexible and capable analytical process solution for industrial applications.

#### **PGC1000**

The PGC1000 is ideal for measuring light hydrocarbon gases in locations where minimal space is available and a simple, reliable, low cost measurement is required.

The PGC1000 is a shelterless field-mounted GC capable of measurements of C1 through C9+, inerts, H<sub>2</sub>S and O<sub>2</sub> in various hydrocarbon processing industry (HPI) streams. This analyzer is an excellent choice for most gas processing industry applications because its integral stream



selector allows sampling of up to four (4) different streams. Up to two of these sample streams can be designated as the "calibration/validation sample".

The PGC1000 is designed to retain historical data. This data can be used for audit trails, maintenance, and troubleshooting to verify chromatograph operation over time and provide a limited data backup for communication link reliability.

Servicing the PGC1000 requires minimal effort. The modular analytical hardware is easily removed by loosening one bolt.

#### **Specifications**

- Enclosure: CSA Type 4X, IECEx IP56, ATEX Type 4X
- · Area classification:
  - CSA: Explosion-proof: NEC & CEC Class I, Div 1, Grp BCD, T6
- ATEX: Flameproof: II 2G Ex d IIB+H2, T6 Gb
- IECEx: Flameproof: Ex d IIB+H2, T6
- Carrier gas: helium, hydrogen or nitrogen
- · Measuring range
  - Trace oxygen: 30 2000 ppm (cycle time: 330 seconds)
  - % level oxygen: 0.2 20% (cycle time: 330 seconds)
  - (\*) Other components also available
     (light hydrocarbons, CO, H₂S, H₂, H₂O, etc.)
- Repeatability: Defined by application (typically 1% of the measured value)
- Ambient temperature range: 0°F to 130°F (-18°C to 55°C)
- Supply voltage: 12 or 24 VDC; 7 watts nominal
- Communications supported: Two serial digital ports, RS-232, RS-485, or RS-422. One USB MMI (RS-232 or USB). Optional USB hub (host and client) and Ethernet (TCP/IP) ports
- Protocols supported: OPC, Modbus ASCII or RTU, Modbus TCP
- Inputs/outputs: 2 digital inputs (DI)/2 digital outputs (DO); analog outputs externally



01 PGC5000 controller and oven configurations

#### PGC5000

The ABB PGC5000 series process gas chromatograph is based on over 50 years of innovation in online process gas chromatographs. It simplifies gas chromatography and increases reliability. The PGC5000 series has been designed for distributed control across multiple analytical smart ovens for limitless application approaches, offering a flexible platform for installation and a cost-effective alternative to traditional process GCs.

The PGC5000A Master Controller provides all analyzer system control functions for all PGC5000 ovens. The master controller supports up to 4 smart ovens. There are two oven models, PGC5000B and PGC5000C, with a complete line of detectors (TCD, FID, FPD and DBDID) and valves (vapour or liquid injection) to design and produce the best possible analytical measurement.

The PGC5000B has a smaller footprint and is designed for simple applications, while the PGC5000C is 28% larger and targets complex applications requiring multiple detectors. Both oven models have options for airbath or airless design, and an integrated controller.

#### **Specifications**

- Enclosure: IP54 (NEMA 3 Equivalent)
- · Area classification:
- CSA: Class I, Division 2 or Class I, Division 1 with type Y-purge; gas groups B, C, D
- ATEX: Zone 1 II2G, Ex de py IIB+H2 T4 T2 orZone 2 II3G Ex de nA nL IIB+H2 T4 T2
- Carrier gas: helium, hydrogen, nitrogen or argon
- Measuring range
  - O<sub>2</sub> application: > 50 ppm (cycle time: 240 360 seconds)
  - (\*) Other components also available
- Repeatability: Defined by application (typically <u>+</u>1% of the measured value)
- Ambient temperature range: 32°F to 122°F (0°C to 50°C)
- Supply voltage: 100 or 240 VAC
- Communications supported: dual Ethernet ports
- Protocols supported: Modbus TCP/IP or RTU
- Inputs/outputs: 8 analog outputs (AO);
   4 digital outputs (DO)
- Historical data: SD card for 7 days of chromatogram and data storage

Find out more about process gas chromatographs

12 OXYGEN MEASUREMENT MADE EASY ANALYZER PORTFOLIO OVERVIEW PRODUCT SELECTION MATRIX

## **Product selection matrix**

A comprehensive product portfolio of high quality analytical solutions to match your need for oxygen measurement.

				Integration type		Enclosure protection	Hazardous location					Gas types			Sampling			Measurement ranges		
Analyzer Product Line	Analyzer Type	Technology	Additional Measured Components	in-situ	Extractive	IP Rating	General Purpose	ATEX Zone 1	ATEX Zone 2	Class 1 Div 1	Class 1 Div 2	Flammable	Toxic	Corrosive	Max temperature	Max input pressure	Response time	Low ppm	High ppm/low%	low/high %
Combustion gas analyzer (01)	AZ Endura series	Zirconia	no	0		IP66	x	0	0	0	0				800°C, 1400°C		< 10 sec		х	×
Continuous gas analyzers (02, 03)	LS25	Tunable diode laser	yes	0		IP66	х	0	0		0	х	х	х	1500°C	10 bar	< 2 sec		х	×
	Magnos28	Paramagnetic	no		0	o IP20, IP54, IP65	х	0	0		0	х	х	0	50°C	250 hPa	< 3 sec		х	x
	Magnos27	Magnetomechanical	no		0	o IP20, IP54, IP65	х		0		0	х	x	0	50°C	250 hPa	10 sec			x
	Z023	Zirconia	no		0	o IP20, IP54, IP65	x					х			50°C	70 hPa	3 sec	x	х	x
Process gas chromatographs (04, 05)	PGC1000	Chromatography	yes		0	IP56	х	х	х	х	х	х	х	х	*	2 bar	330 sec	х	х	×
	PGC5000	Chromatography	yes		0	IP54	x	х	x	х	х	х	x	х	*	10 bar	240 – 360 sec	x	х	×
LGR-ICOS™ (06)	GLA531 series	Off axis - ICOS (TDL)	yes		0	IP54	х	х	х	х	х	х	x	0	105°C	0.5 bar	10 sec	х	х	×
	GLA231 series	Off axis - ICOS (TDL)	yes		0	IP52	х								40°C	0.5 bar	10 sec	×	х	×

o = Refer to options

<sup>\*</sup>Application dependant; max sample inlet temperature must be below oven temperature



### **Service**

### World-class after-sales support

- Installation & commissioning
- Maintenance
- Troubleshooting
- Advanced digital services
- Training
- Technical support & repairs
- Spare parts & consumables
- Extensions, upgrades and retrofits
- Service agreements
- End-of-life services
- Replacement services

#### **Device management**

Dynamic QR code (DQR)

- Offers access to similar analyzer health data as condition monitoring
- · No network connection required
- Lower investment cost to enable real-time data analysis from ABB expert
- Right information = Rapid fault resolution
- No need for specialist operator knowledge analysis from ABB expert
- \* Only available for continuous gas analyzers



#### **Device health & accuracy**

ABB Ability™ condition monitoring for measurement devices

- Prompts remote expert analysis of health
- Checks by ABB experts: Identify potential issues before device failure
- Performs regularly scheduled on-site or remote health checks of analyzers – no on-site labour required
- Ensures 24/7/365 emissions measuring compliance



### **Augmented reality**

ABB Ability  $^{\mbox{\tiny TM}}$  remote insights for service

- Remote expert support
- Upskill staff
- Reduced travel costs associated with onsite maintenance
- Rapid response







ABB Inc.
Measurement & Analytics

For your local ABB contact, visit:

www.abb.com/contacts

For more product information, visit:

www.abb.com/measurement

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.