

—  
INSTALLATION AND OPERATING INSTRUCTION

# ATS Controller OXCO\_ TruCONTROL





---

# Receiving, handling and storage



## Warning

Indicates a hazardous situation that, if not avoided, could result in death or serious injury or equipment damage.

---

## HAZARD OF EQUIPMENT OVERTURNING

When moving with a fork lift, do not remove the shipping package until the device is in its final location.

**Failure to follow this instruction will result in personal injury or equipment damage.**

## Receiving and handling

Upon receipt, carefully inspect the product for damage that may have occurred during transit. If damage is evident, or there is visible indication of rough handling, immediately file a damage claim with the transportation company, and notify your local ABB sales office.

Do not remove the shipping package until ready to install the product.

## Storage

If the unit will not be placed into service immediately, store the switch on its original package in a clean, dry location. To prevent condensation, maintain a uniform temperature. Store the unit in a temperature controlled building, allowing adequate air circulation and protection from dirt and moisture. Storing the unit outdoors could cause harmful condensation inside the enclosure.

# Read these safety instructions carefully before using this product!

**Danger**

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Wear appropriate personal protective equipment and follow safe electrical work practices.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Disconnect all sources of electrical supply before performing visual inspections, tests, service or maintenance on the equipment. Assume that all circuits are live unless they are completely de-energized, tested, grounded, and tagged. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Turn off switch before removing or making load side connections.
- Always use a properly rated voltage sensing device at all line and load to confirm switch is off.

**Failure to follow these instructions could result in death or serious injury.**



# **Installation and operating instruction**

ATS Controller OXCO\_,  
TruCONTROL

OPERATING INSTRUCTIONS,  
ATS CONTROLLER OXCO\_,  
TRUCONTROL  
CHAPTERS 1–7

INSTALLATION INSTRUCTIONS,  
ATS CONTROLLER OXCO\_,  
TRUCONTROL  
CHAPTERS 8–10

1

2



# Operating instruction

## ATS Controller OXCO\_, TruCONTROL

### 1. Introduction 10

- 1.1 Use of symbols in manual 10
- 1.2 Explanations of abbreviations and terms 11

### 2. Product overview 12

- 2.1 General overview 13
- 2.2 HMI for configuration and operation 14
- 2.3 Feature comparison of ATS controller with HMI 15
- 2.4 Typical applications 18
- 2.5 Description of basic functionality 20
  - 2.5.1 Switching sequence / Automatic 20
  - 2.5.2 Automatic configuration 26
  - 2.5.3 In-phase monitor 26
  - 2.5.4 Powering supply scenarios 26

### 3. Operating 27

- 3.1 LED functionality in HMI 28
- 3.2 Using Level 2 (DIP) control interface HMI 30
  - 3.2.1 Keypad 30
  - 3.2.2 Configuration by DIP-switches 31
- 3.3 Using Level 3 (LCD) control interface HMI 33
  - 3.3.1 Keypad 33
  - 3.3.2 Navigating in menu 33
- 3.4 Using Level 4 (touch) control interface HMI 34
  - 3.4.1 Keypad 34
  - 3.4.2 Navigating in menu 34

## **4. Navigating menu 35**

4.1 Level 3 (LCD) control interface, menu tree	35
4.1.1 Start screens	37
4.1.2 Enter key, main menu	38
4.1.3 Esc key	50
4.2 Level 4 (touch) control interface, menu tree	51
4.2.1 Start Menu	53

## **5. Electronic accessories 70**

5.1 Using Ekip Connect -software	71
5.2 Using Ekip Programming -module	72
5.2.1 Signallings	72
5.3 Auxiliary power supply module	73
5.3.1 Electrical characteristics	73
5.3.2 Signallings	73
5.4 Using Ekip Signalling 2K_-module	74
5.4.1 Electrical characteristics of Ekip Signalling 2K_-module	74
5.4.2 Access from the display / Ekip Signalling 2K_-module	74
5.4.3 Signals and inputs/outputs of Ekip Signalling 2K_-module	78
5.5 Ekip Signalling 10K	79
5.5.1 Connections	81
5.5.2 Wiring	81
5.5.3 Outputs inputs and signals	81
5.5.4 Communication connectors	85
5.5.5 Power supply connectors	85
5.5.6 DIP switch configuration	86
5.5.7 Access via Local Bus	87
5.5.8 Access via Link Bus	89

5.6 Using Ekip Com _ -modules	92
5.6.1 Ekip Com Modbus RTU -module	92
5.6.2 Ekip Com Profibus DP -module	95
5.6.3 Ekip Com DeviceNet -module	99
5.6.4 Ekip Com Modbus TCP -module	103
5.6.5 Ekip Com Profinet -module	107
5.6.6 Ekip Com EtherNet/IP -module	110
5.6.7 Ekip Com Hub -module	114
5.7 Current measurement -modules	118
5.7.1 Rating Plug	118
5.7.2 Current Sensors	118
5.8 Temperature measurement	119
<b>6. Troubleshooting</b>	<b>120</b>
6.1 Alarms	120
6.2 Warnings	122
6.3 Information	123
<b>7. Technical data</b>	<b>124</b>
7.1 Connectors	125
<b>PART 2: Installation instruction</b>	<b>129</b>

# 1. Introduction

This part of the manual describes the basic operation of the ATS Controller OXCO\_ (TruCONTROL) and the available accessories, manufactured by ABB.

## Remark!

Mounting instructions for the ATS Controller OXCO\_ and for the available accessories are situated at the end of the manual; Part 2, chapters 8 and 9.

Dimension drawings are situated also at the end of the manual; Part 2, chapter 10.

## 1.1 Use of symbols in manual



### Danger

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.



### Warning

Indicates a hazardous situation that, if not avoided, could result in death or serious injury or equipment damage.



### Caution

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury. Failure to comply with these instructions may result in product damage.



### Notice

It is used to notify of practices not related to personal injury. Failure to comply with these instructions may result in product damage.

## 1.2 Explanations of abbreviations and terms

### **ATS**

Automatic transfer switches

### **Ekip**

Electronic accessories / Ekip-modules; communication, signaling and connectivity modules

### **HMI**

Control interface (Human Machine Interface), operating and configuration, available in three different level types

### **Level 2**

HMI with DIP-switches

### **Level 3**

HMI with LCD-screen

### **Level 4**

HMI with touch screen

### **OXCO\_**

ATS Controller, type name

### **Programming port**

Only for Ekip Programming -module (USB port)

### **S1**

Source 1, power supply

### **S2**

Source 2, power supply

### **TruCONTROL**

ATS Controller, product name

## 2. Product overview

ATS Controller OXCO\_ TruCONTROL is designed for use in emergency or standby systems to control the switches transferring a load automatically from one source to another.

ATS Controller OXCO\_ (product name TruCONTROL ) is operated by control interface (HMI). HMI is available in three levels: DIP (Level 2), LCD (Level 3) or Touch (Level 4) control interface (HMI). Configuration is also done by HMI. ATS Controller is suitable for all low voltage automatic transfer switch applications.

The control interfaces (HMI) for ATS Controller OXCO\_ are available for different automatic transfer switch applications:

- Delayed transition: I - O - II
- Open transition: I - II
- Closed transition: I - II



Fig. 2.1 ATS Controller OXCO\_ TruCONTROL



Fig. 2.2 The control interfaces (HMI) for ATS Controller TruCONTROL



## 2.1 General overview

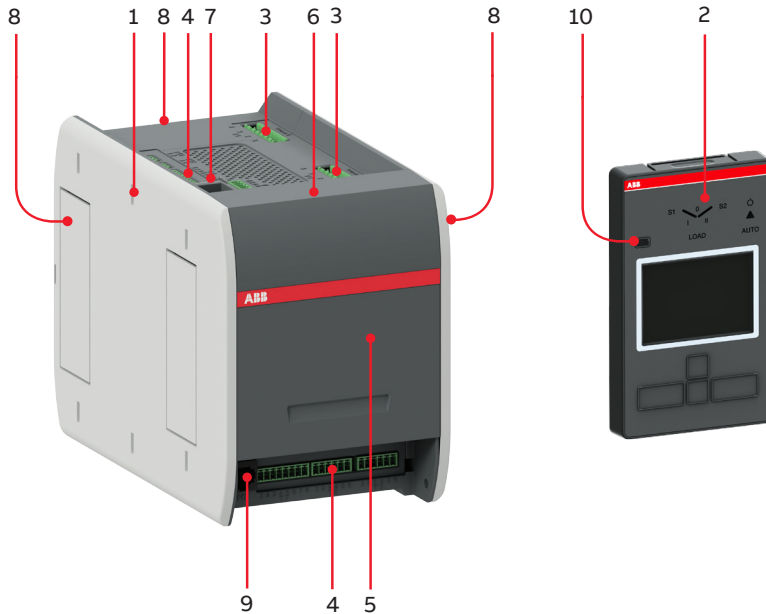


Fig. 2.3 ATS Controller OXCO (product name TruCONTROL) and HMI unit


- 1 ATS Controller OXCO\_TruCONTROL
- 2 HMI unit, three types of control interfaces Level 2 (DIP), Level 3 (LCD) and Level 4 (touch) for configuration and automatic operation
- 3 Terminals for power supply connections
- 4 Terminals for control circuit connections
- 5 Product identification label and Connectors label behind the cover
- 6 Place for connectivity modules (aux power supply, communication and signaling)
- 7 Place for rating plug
- 8 Places available for DIN rail adapters
- 9 Port for HMI (RJ45) connection cable
- 10 Programming port, only for Ekip Programming-module

## 2.2 HMI for configuration and operation

HMI is the control interface (Human Machine Interface), available in three different level types. Level 2 contains the HMI with DIP-switches, Level 3 contains the HMI with LCD-screen and level 4

contains the HMI with touch screen. The HMI is used for configuration and automatic operation, to be order separately.

**Level 2:**  
HMI with  
DIP-switches

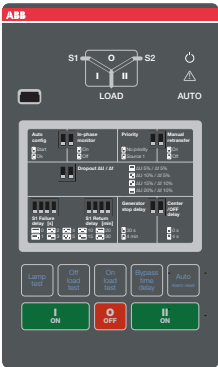

I - O - II

**Level 3:**  
HMI with  
LCD-screen




I - O - II

**Level 4:**  
HMI with  
touch screen



I - O - II

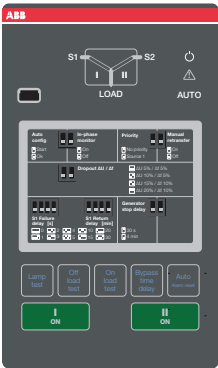

I - II






I - II



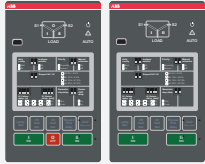
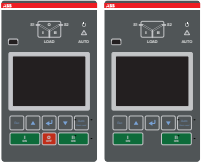
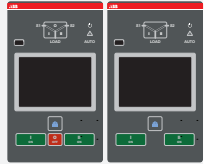
I - II

Fig. 2.4 HMIs available in three Level types: upper pictures; Delayed transition I - O - II and lower pictures; Open and Closed transition I - II



## 2.3 Feature comparison of ATS controller with HMI

Feature comparison	Level 2 controls (DIP)	Level 3 controls (LCD)	Level 4 controls (TOUCH)
			
Rated voltage, three phase	200...480 Vac	200...480 Vac	200...480 Vac
Rated voltage, single phase	200...240 Vac	200...240 Vac	200...240 Vac
Rated frequency	50 / 60 Hz	50 / 60 Hz	50 / 60 Hz
<b>Neutral configuration</b>			
Switched	Yes	Yes	Yes
Overlapping	No	Yes	Yes
<b>Suitable for product type</b>			
Open transition (I - II)	Yes	Yes	Yes
Closed transition (I - II)	Yes	Yes	Yes
Delayed transition (I - O - II)	Yes	Yes	Yes
<b>Voltage and frequency settings</b>			
Pick up Voltage Source 1	Fixed 2% above drop out	85...99%, 101...119%	85...99%, 101...119%
Drop out Voltage Source 1	+/-5, 10, 15, 20%	75...97%, 102...120%	75...97%, 102...120%
Pick up Voltage Source 2	Fixed 2% above drop out	85...99%, 101...119%	85...99%, 101...119%
Drop out Voltage Source 2	+/-5, 10, 15, 20%	75...97%, 102...120%	75...97%, 102...120%
Pick up Frequency Source 1	Fixed 1% above drop out	80,5...99,5%, 100,5...119,5%	80,5...99,5%, 100,5...119,5%
Drop out Frequency Source 1	+/-5, 10%	80...99%, 101...120%	80...99%, 101...120%
Pick up Frequency Source 2	Fixed 1% above drop out	80,5...99,5%, 100,5...119,5%	80,5...99,5%, 100,5...119,5%
Drop out Frequency Source 2	+/-5, 10%	80...99%, 101...120%	80...99%, 101...120%
<b>Voltage Unbalance Setpoints</b>			
Unbalance Drop-out	5...30%	5...30%	5...30%
Unbalance pick-up	3...28%	3...28%	3...28%
Enable	Off/On	Off/On	Off/On
<b>Time delay settings</b>			
Override momentary Source 1 Outage, sec	0, 1, 2, 3, 4, 5, 10, 15, 20, 30	0...60 s when $V_{aux}$ off 0...10 min when $V_{aux}$ on	0...60 s when $V_{aux}$ off 0...10 min when $V_{aux}$ on
Transfer from source 1 to source 2, sec	2 (0...3600 via Ekip Connect)	0...3600	0...3600
Override momentary Source 2 Outage, sec	2 (0...60 via Ekip Connect)	0...60	0...60

Continued on the next page

Feature comparison	Level 2 controls (DIP)	Level 3 controls (LCD)	Level 4 controls (TOUCH)
			
Transfer from source 2 to source 1, min	0, 1, 2, 3, 4, 5, 10, 15, 20, 30	0...120 min	0...120 min
Generator stop delay, min	30 sec or 4 min	0...60 min	0...60 min
Center-OFF delay, sec	0 or 4	0...300	0...300
Pre-transfer delay S1 to S2, sec	No	0...300	0...300
Post-transfer delay S1 to S2, sec	No	0...300	0...300
Pre-transfer delay S2 to S1, sec	No	0...300	0...300
Post-transfer delay S2 to S1, sec	No	0...300	0...300
Elevator Pre-signal delay S1 to S2, sec	No	0...60	0...60
Elevator Post-signal delay S1 to S2, sec	No	0...60	0...60
Elevator Pre-signal delay S2 to S1, sec	No	0...60	0...60
Elevator Post-signal delay S2 to S1, sec	No	0...60	0...60
Load shed delay, sec	No	0...60	0...60
<b>Source failure detections</b>			
No voltage	Yes	Yes	Yes
Undervoltage	Yes	Yes	Yes
Overvoltage	Yes	Yes	Yes
Phase/neutral missing	Yes	Yes	Yes
Voltage unbalance	Yes	Yes	Yes
Invalid frequency	Yes	Yes	Yes
Incorrect phase sequence	Yes	Yes	Yes
<b>Features</b>			
Controls	DIP + keys	LCD + keys	Touch + keys
LED indications for ATS, S1 and S2 status	Yes	Yes	Yes
Open/Closed transition - Standard digital inputs/outputs	0 / 1	1 / 1	2 / 1
Delayed transition - Standard digital inputs/outputs	1 / 1	2 / 1	3 / 1
Programmable digital inputs/outputs	No	Yes	Yes

Continued on the next page

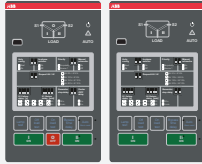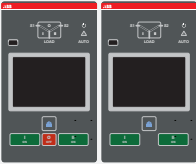Feature comparison	Level 2 controls (DIP)	Level 3 controls (LCD)	Level 4 controls (TOUCH)
			
Auto config (voltage, frequency, phase system)	Yes	Yes	Yes
Source priority	Source 1, No priority	Source 1/2, No priority	Source 1/2, No priority
Manual retransfer	Yes	Yes	Yes
In-phase monitor (synchro check)	Yes	Yes	Yes
Genset exercising: on-load, off-load	Yes	Yes	Yes
In-built power meter module	No	No	Yes
Load shedding	No	Yes	Yes
Real time clock	Yes	Yes	Yes
Event log	Via Ekip Connect		Yes
Predictive maintenance	No	No	Yes
Harmonics measuring	No	Voltage	Voltage, current
<b>Field-mount accessories</b>			
Auxiliary contacts for position indication	Yes	Yes	Yes
Digital input/output modules	No	Yes	Yes
12-24 Vdc aux supply module for controller	No	Yes	Yes
Communication modules	No	Yes	Yes
<b>Connectivity</b>			
Modbus RTU (RS-485) <sup>2)</sup>	No	Yes	Yes
Modbus/TCP <sup>2)</sup>	No	Yes	Yes
Profibus DP <sup>2)</sup>	No	Yes	Yes
ProfiNet <sup>2)</sup>	No	Yes	Yes
DeviceNet <sup>2)</sup>	No	Yes	Yes
Ethernet IP <sup>2)</sup>	No	Yes	Yes
Ekip Com Hub (monitoring via ABB Ability™: EAM)	No	Yes	Yes
<b>For applications</b>			
Mains - Mains	Yes	Yes	Yes
Mains - Generator <sup>1)</sup>	Yes	Yes	Yes

<sup>1)</sup> Contact ABB for applications with smaller than 20 kVA gensets<sup>2)</sup> Includes support for redundant module

Table 2.1 Feature comparison of ATS Controller TruCONTROL with different HMI levels, main features - but not limited to - in the table above

## 2.4 Typical applications

ATS Controller OXCO\_ is used for switches transferring a load automatically from one source to another.

Possible supply phase scenarios are located on following page. In Chapter 4 / Navigating menu / Parameters: Power distribution systems (Level 3 and Level 4), the considerations for supply phase system design are set forth in. Factory setting: 3 phases with neutral.




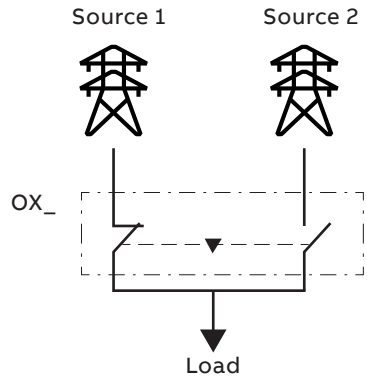


Fig. 2.5 Typical applications of automatic transfer switches

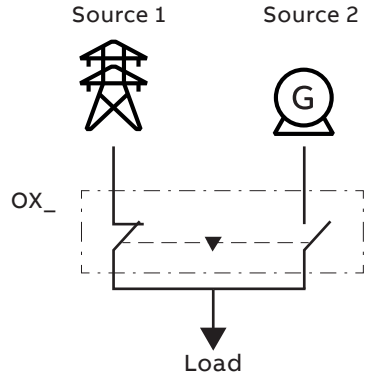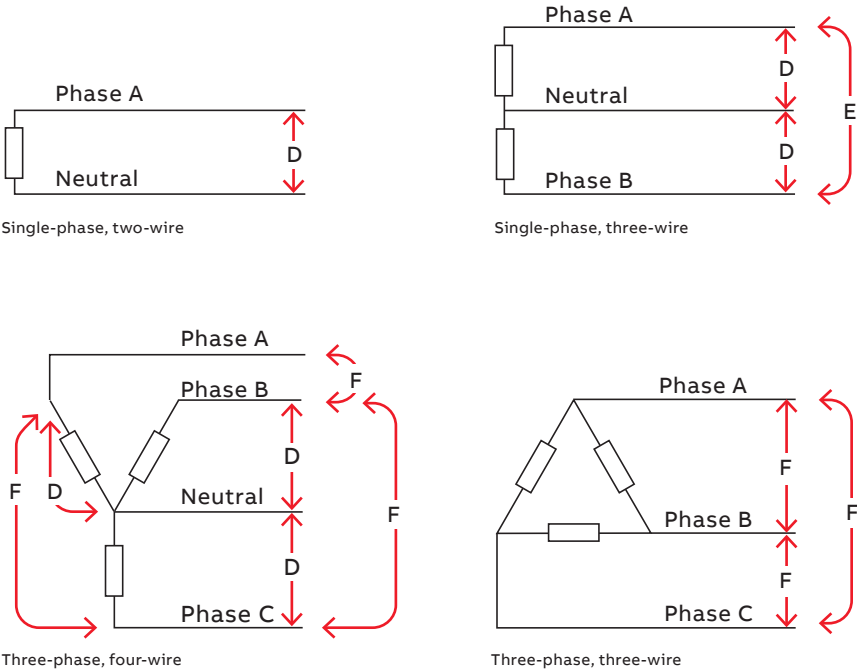

D	E	F
115...277 Vac L-N	200...480 Vac L-L	200...480 Vac L-L

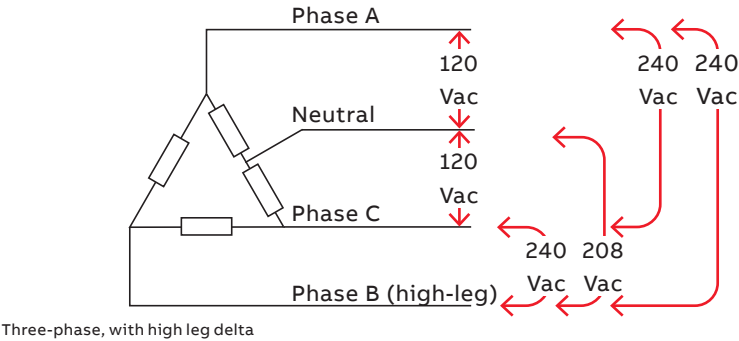

A07482

Fig. 2.6 Possible supply phase scenarios

## 2.5 Description of basic functionality

### 2.5.1 Switching sequence / Automatic

#### 2.5.1.1 Source 1 Priority (Source 2 = Generator)


Switching sequence summary:

- An anomaly occurs on the source 1
- Override momentary S1 outage delay
- Generator start
- Source 2 OK
- Transfer from S1 to S2 delay
- Pre-transfer signal on
- Load shed signal on
- Pre-transfer S1 to S2 delay
- Load shed delay
- Transfer switch to the position O (only with delayed transition I-O-II type and at least one phase exists in source 1)
- Center-Off delay (only with delayed transition I-O-II type, delay is zero when all phases are missing in source 1)
- Transfer switch to the position II (source 2)
- Post-transfer S1 to S2 delay
- Pre-transfer signal off

Retransfer sequence summary:

- The source 1 is restored
- Transfer from S2 to S1 delay
- Pre-transfer signal on
- Pre-transfer S2 to S1 delay
- Transfer switch to the position O (only with delayed transition I-O-II type)
- Center-off delay (only with Delayed transition I - O - II type)
- Transfer switch to the position I (source 1)
- Load shed signal off
- Generator stop delay
- Post-transfer S2 to S1 delay
- Pre-transfer signal off
- Generator stop
- Source 2 off



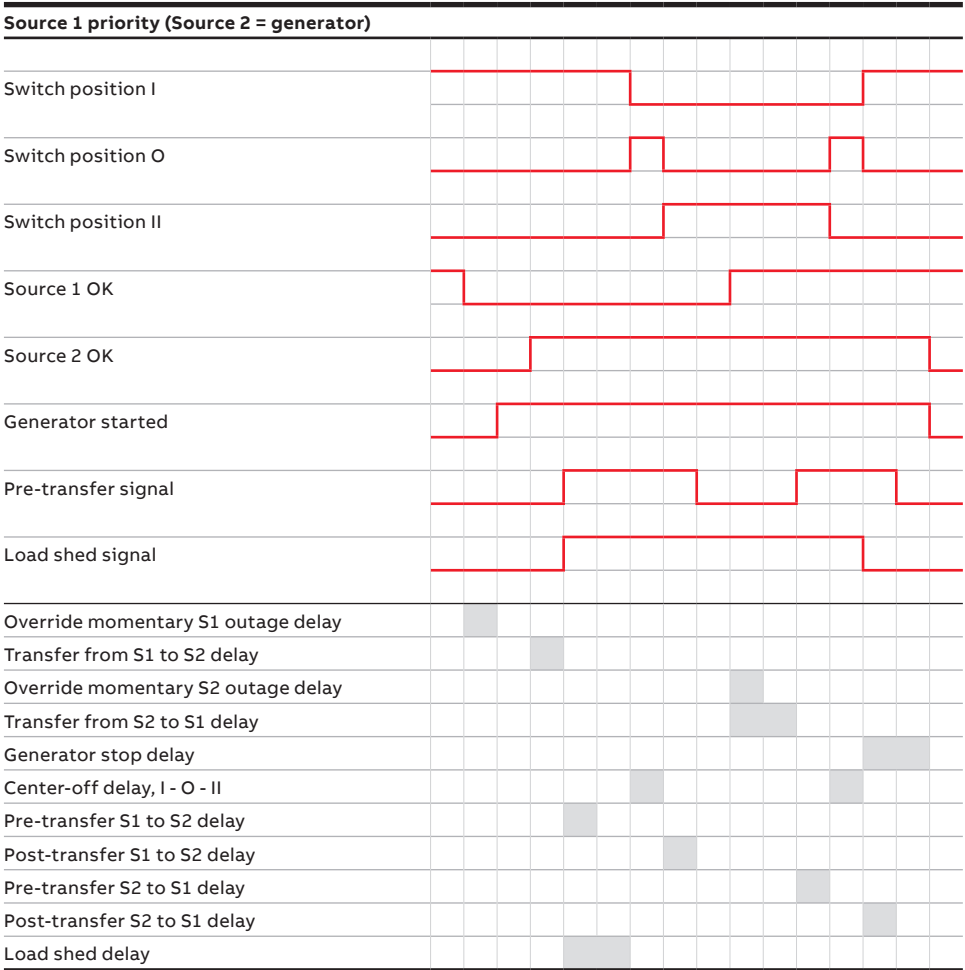

Note: The functionality and sequence of 'Elevator pre- and post-signals' is equivalent to 'Pre- and Post-transfer' features.

Table 2.2 Automatic Switching Sequences, Source 1 Priority (Source 2 = Generator)


### 2.5.1.2 Source 2 Priority (No generator)

Switching sequence summary:

- An anomaly occurs on the source 2
- Override momentary S2 outage delay
- Transfer from S2 to S1 delay
- Pre-transfer signal on
- Load shed signal on
- Pre-transfer S2 to S1 delay
- Load shed delay
- Transfer switch to the position O (only with delayed transition I-O-II type and at least one phase exists in source 2)
- Center-Off delay (only with delayed transition I-O-II type, delay is zero when all phases are missing in source 2)
- Transfer switch to the position I (source 1)
- Post-transfer S2 to S1 delay
- Pre-transfer signal off

Retransfer sequence summary:

- The source 2 is restored
- Transfer from S1 to S2 delay
- Pre-transfer signal on
- Pre-transfer S1 to S2 delay
- Transfer switch to the position O (only with delayed transition I-O-II type)
- Center-off delay (only with Delayed transition I - O - II type)
- Transfer switch to the position II (source 2)
- Load shed signal off
- Post-transfer S1 to S2 delay
- Pre-transfer signal off

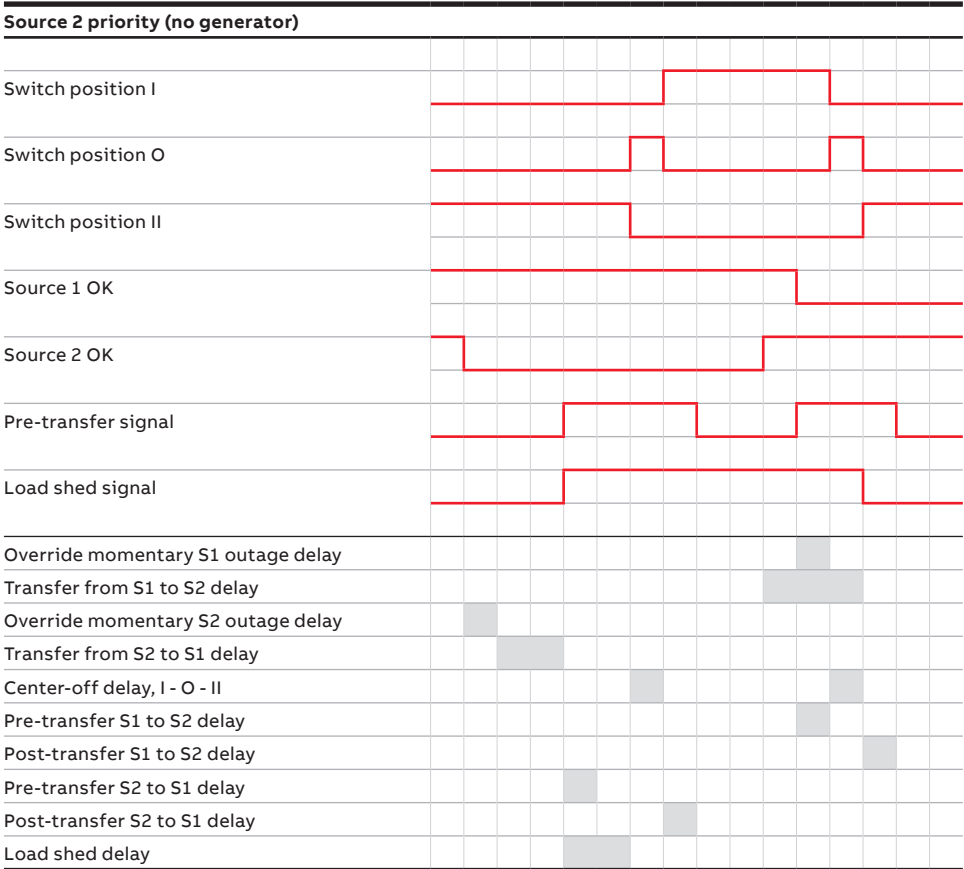

Note: The functionality and sequence of ‘Elevator pre- and post-signals’ is equivalent to ‘Pre- and Post-transfer’ features.

Table 2.3 Automatic Switching Sequences, Source 2 Priority (No generator)


### 2.5.1.3 No source Priority (Generator and load shed usage disabled)

Switching to available source:

- An anomaly occurs on the source 1
- Override momentary S1 outage delay
- Pre-transfer signal on
- Pre-transfer S1 to S2 delay
- Transfer switch to the position O (only with delayed transition I-O-II type and at least one phase exists in source 1)
- Center-Off delay (only with delayed transition I-O-II type, delay is zero when all phases are missing in source 1)
- Transfer switch to the position II (source 2)
- Post-transfer S1 to S2 delay
- Pre-transfer signal off

Retransfer steps following anomaly in the source functioning:

- The source 1 is restored
- An anomaly occurs on the source 2
- Pre-transfer signal on
- Pre-transfer S2 to S1 delay
- Transfer switch to the position O (only with delayed transition I-O-II type and at least one phase exists in source 2)
- Center-Off delay (only with delayed transition I-O-II type, delay is zero when all phases are missing in source 2)
- Transfer switch to the position I (source 1)
- Post-transfer S2 to S1 delay
- Pre-transfer signal off

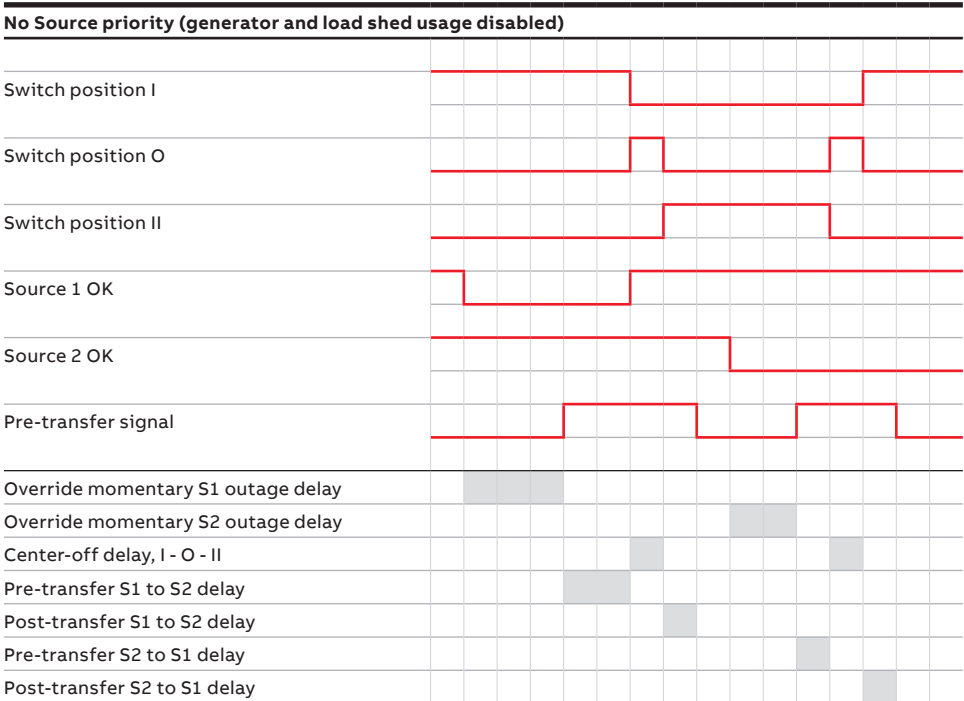

Note: The functionality and sequence of 'Elevator pre- and post-signals' is equivalent to 'Pre- and Post-transfer' features.

Table 2.4 Automatic Switching Sequences, No Source Priority (Generator and load shed usage disabled)

### 2.5.2 Automatic configuration

Automatic configuration sequence can be initiated by an HMI command. This function is able to detect basic system parameters:

- Rated voltage
- Rated frequency
- Source 1 power distribution system
- Source 2 power distribution system
- Neutral Pole Location
- Phase rotation

It is enough to have one source powered. Power distribution system is considered to be the same for both sources in this case.

User must finish the sequence manually with DIP HMI when fast blinking AUTO LED indicates that parameter detection is ready. Sequence ends automatically with other types.

### 2.5.3 In-phase monitor

In-phase monitor can be set On/Off by using HMI (controller levels 2, 3 and 4) or Ekip Connect tool (levels 3 and 4).

Function calculates the phase difference of voltage sources and enables the automatic transfer sequence I -> II or II -> I only when sources are synchronized. Frequency difference of the sources must be less than 0.2 Hz. Otherwise in-phase monitor activates the 'Frequency Difference' alarm and disables transfer operations.

### 2.5.4 Powering supply scenarios

Device can be powered:

- Direct from source 1 or source 2: Whole device is powered and ATS can be operated electrically.
- Auxiliary power supply module, OXEA1: Powering the whole device (including HMI), but load transfer cannot be performed.
- Programming port on HMI (USB port): Powering only the main board. Allows software update to main device and connection of Ekip Connect commissioning tool.

### 3. Operating

ATS Controller OXCO\_ TruCONTROL is operated and configured by control interface (HMI).

ATS Controller OXCO\_ TruCONTROL is operated by control interface (HMI). HMI is available in three levels: DIP (Level 2), LCD (Level 3) or Touch (Level 4) control interface (HMI). Configuration is also done by HMI.

The control interfaces (HMI) for ATS Controller OXCO\_ are available for different automatic transfer switch applications:

- Delayed transition: I - O - II
- Open transition: I - II
- Closed transition: I - II



Fig. 3.1 ATS Controller OXCO\_ is operated and configured by control interface (HMI)

### 3.1 LED functionality in HMI

LED functionality is common to every HMI-type.


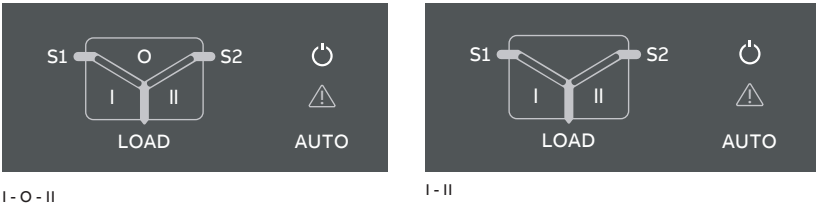




Fig. 3.2 On left: LEDs in delayed transition, I - O - II. On right: LEDs in Open/Closed transition I - II.

LED	Indication	Description
<b>Power led</b>		
	ON, fixed light	Power supply and communication present
	2 quick flashes/1 s	Power supply present, communication absent between switch and the HMI
	OFF	No power available for HMI.
<b>S1 and S2 leds</b>		
	ON, fixed light	S1 or / and S2 is present and within user defined limits
	2 quick flashes/1 s	Undervoltage
	Flash/1 s, 90 %/10 %	Invalid frequency
	Flash/1 s, 10 %/90 %	Unbalance
	5 flashes/1 s, 50 %/50 %	Overvoltage
	Flash/2 s, 50 %/50 %	Incorrect phase sequence
	Flash/4 s, 50 %/50 %	Phase missing
	Flash/1 s, 50 %/50 %	Generator stop delay ongoing
	3 quick flashes/1 s	Neutral disconnected
	OFF	No voltage

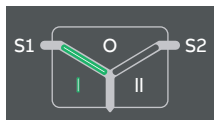


**I, II and 0 leds**ON, fixed light 

Switch position is indicated with fixed light in I, O or II led. Only one can be illuminated

Flash/1 s, 50 %/50 % 

Indicating running time delay

**Load led**ON 


Supply ok and connected to load

OFF 

Connected supply to load not ok or load disconnected (switch in O position)

**Auto led**ON, fixed light 


Switch is in automatic mode

Flash/1 s, 50 %/50 % 


Test on load

Flash/1 s, 90 %/10 % 

Test off load

Flash/1 s, 10 %/90 % 

If blinks simultaneously with Alarm led then 'Remote control to S1', 'Remote control to S2', 'Remote control to OFF' or 'Inhibit transfer' digital input is activated.

5 flashes/1 s, 50 %/50 % 

Autoconfig completed

**Alarm led**OFF 

No alarms

ON, fixed light 

Handle attached, locked, other alarm

2 quick flashes/1 s 


Control Alarm

5 flashes/1 s, 50 %/50 % 


Auto configuration ongoing

Flash/1 s, 50 %/50 % 

Control Retry

Flash/1 s, 10 %/90 % 

Auto mode off


Flash/1 s, 10 %/90 % 

If blinks simultaneously with Alarm led then 'Remote control to S1', 'Remote control to S2', 'Remote control to OFF' or 'Inhibit transfer' digital input is activated. If Auto led is fixed light then manual retransfer is required.


Table 3.1 LED functionality, common to every HMI-type

## 3.2 Using Level 2 (DIP) control interface HMI

### 3.2.1 Keypad

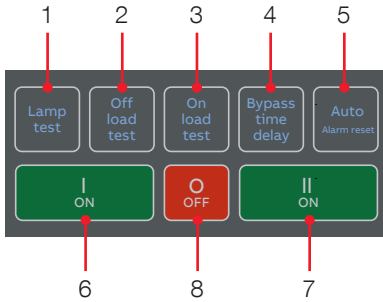

Delayed transition, I - O - II

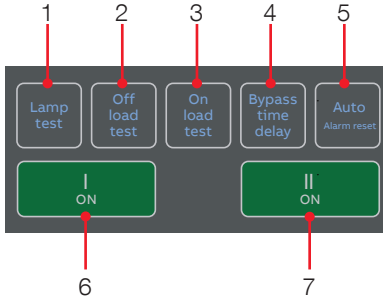

Open/Closed transition, I - II

Fig. 3.3 Keypad in Level 2 HMI with DIP-switches

**1+2 Lamp test + Off load test:** Hold for 3 seconds to automatically program a repeating off load weekly test at current time, 20 minutes run time

**3 On load test:** Initiates on load test (Starts the generator and transfers the load to the generator)

**1+3 Lamp test + On load test:** Hold for 3 seconds to automatically program a repeating on load weekly test at current time, 20 minutes run time

**4 Bypass time delay:** Bypass any currently running time delay

**5 Auto (Alarm reset):** In the event of active switch control alarm (open I failure, close I failure, open II failure, close II failure), resets to no alarm state. If no active alarms, toggle between Automatic operation mode and Momentary manual operation mode. If the Manual Retransfer DIP-switch is set to "On", toggle between Manual retransfer and Momentary manual operation modes.

**Note:** When automatic mode is switched by this button, there is 3 second delay before entering automatic mode.

**6 I ON:** Operate switch to I position

**7 II ON:** Operate switch to II position

**8 O OFF:** Operate switch to O position and disable automatic control mode (only in delayed transition I-O-II type)

### 3.2.2 Configuration by DIP-switches

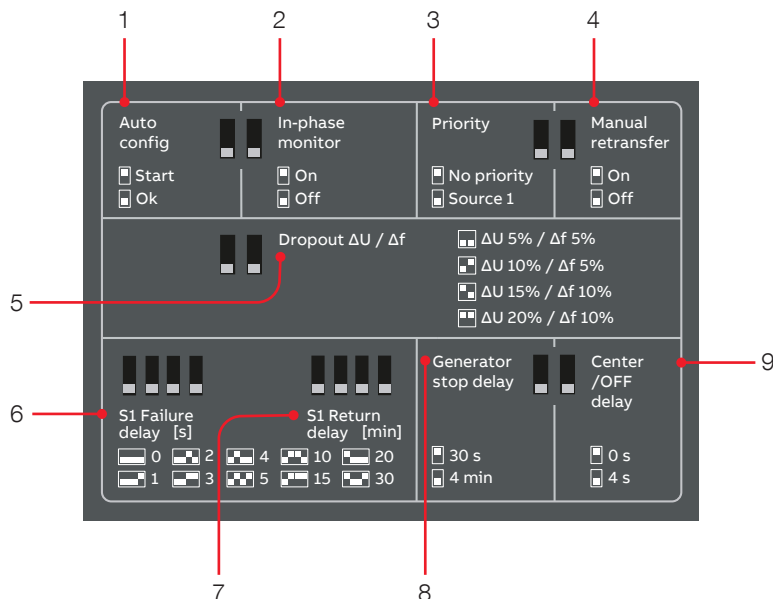


Fig. 3.4 DIP-switches for configuration in Level 2 HMI

- 1 **Auto config:** Automatically detecting Source 1 and Source 2 parameters. Automatic configuration sequence is started by setting DIP to 'Start' position. Parameter detection is ready when AUTO LED flashes at 5 Hz. After this the DIP must be set to 'Ok' position to resume normal operation. Check power supply of the voltage source in case the Alarm LED keeps flashing instead of AUTO LED. This indicates that system parameters cannot be detected from the supplied voltage.
- 2 **In-phase monitor:**  
On: Enable in-phase monitor  
Off: Disable in-phase monitor
- 3 **Priority:**  
No priority: Application 'Two Transformers / No Priority' selected  
Source 1: Application 'S1-Transformer / S2-Generator' selected.

**4 Manual retransfer:**

On: Manual retransfer to priority source enabled (automatic retransfer disabled)

Off: Manual retransfer to priority source disabled (automatic retransfer enabled)

**5 Dropout  $\Delta U$  /  $\Delta F$ :**

Dropout voltage/frequency limit.

For example 5 % / 5 %:



Voltage source is considered acceptable when measured voltage is in range  $0.95 * U_n \dots 1.05 * U_n$  and measured frequency is in range  $0.95 * f_n \dots 1.05 * f_n$ .

**6 S1 Failure delay:** The time (0/1/2/3/4/5/10/15/20/30 s) device waits after priority source failure before starting automatic transfer sequence from priority source to non-priority source.**7 S1 Return delay:** The time (0/1/2/3/4/5/10/15/20/30 min) device waits after priority source return before starting automatic retransfer sequence from non-priority source to priority source.**8 Generator stop delay:** The time (30 s or 4 min) device waits after transferring back to priority source before stopping the generator.**9 Center-Off delay:** The time (0 s or 4 s) device waits in O position during automatic transfer sequence I -> II or II -> I (only delayed transition I-O-II type). This delay is always 0 s in case all phases are missing in the original source.

### 3.3 Using Level 3 (LCD) control interface HMI

#### 3.3.1 Keypad

- 1 **Esc:** Go back in menu. When pressed in root page, the alarm list is shown.
- 2 **Up, Down:** Move in menu or choose parameter values.
- 3 **Enter:** Opens menu in root page. Enter a new menu page and accept function.
- 4 **Auto (Alarm reset):** In the event of active switch control alarm (open I failure, close I failure, open II failure, close II failure), resets to no alarm state. If no active alarms, toggle between momentary manual mode and the original operation mode. Note: When automatic mode is switched by this button there is 3 second delay before entering automatic mode.
- 6 **II ON:** Operate switch to II position.
- 7 **O OFF:** Operate switch to O position and disable automatic control mode (only in delayed transition I-O-II type).

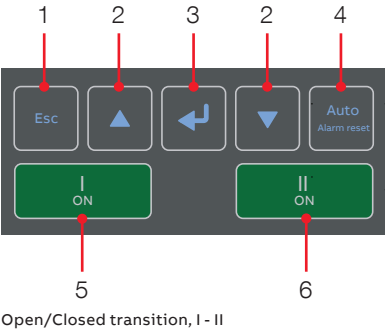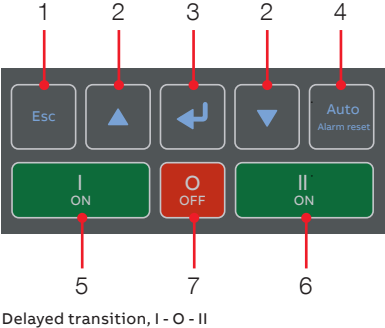

#### 3.3.2 Navigating in menu

See the menu tree in Chapter 4.

Fig. 3.5 Keypad in Level 3 HMI with LCD screen

## 3.4 Using Level 4 (touch) control interface HMI

### 3.4.1 Keypad

- 1 **Home Button:** Opens up the root menu or brings user to the homepage if defined. While viewing a specific page, it can be defined as the home page by pressing the home button for 3 seconds. All pages, except for the menus, can be set as home page. Home page is automatically shown after inactivity.
- 2 **I ON:** Operate switch to I position.
- 3 **II ON:** Operate switch to II position.
- 4 **O OFF:** Operate switch to O position and disable automatic control mode (only in delayed transition I-O-II type).

### 3.4.2 Navigating in menu

See the menu tree in Chapter 4.

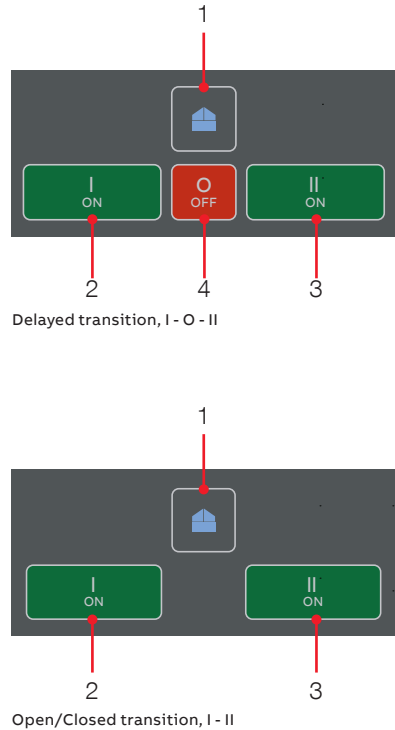


Fig. 3.6 Keypad in Level 4 HMI with touch screen

## 4. Navigating menu

### 4.1 Level 3 (LCD) control interface, menu tree

The default password is 00001, enter the password when prompted (see Fig. 4.1). The default password is highly recommended to be changed.

The keypad is described In Chapter 3.3, see Fig. 3.5 where the key numberings in parentheses are shown.

By pressing the Enter-key (3) you can:

- open the menu in root page
- enter a new menu page
- accept the function

By pressing Up and Down -keys (2) you can:

- move in the menu
- choose the parameter value

By pressing Esc-key (1) you can:

- go back in the menu

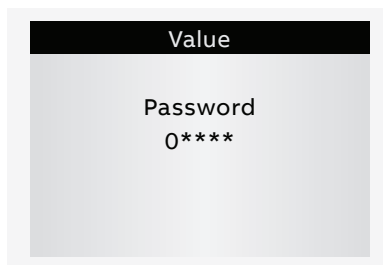


Fig. 4.1 Enter the password when asked, choose the right number by Up and Down -keys (2) and confirm by Enter-key (3), go forward setting number after number

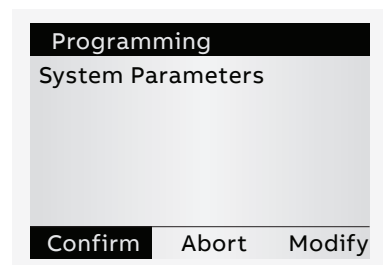


Fig. 4.2 After you have changed the parameter, always go back in the menu by pressing Esc-key and when prompted confirm changes with Enter-key

## Description of the icons

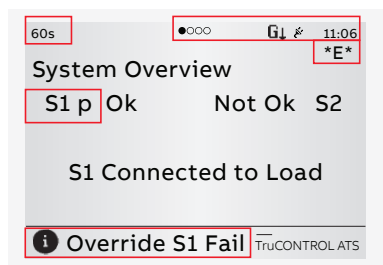


Fig. 4.3 Location of the small icons and the alarms

The small icons in System Overview -pages are:

### On upper left corner

**60s** Time delay, in Alarm list you can see the name of delay at the same time, e.g. Override S1 Fail

### On upper right

**●○○○○** Indicates the amount of pages and the page where you are at the moment



Application set up as Transformer-Generator. Generator start-up signal deactivated



Application set up as Transformer-Generator. Generator start-up signal activated

## Alarm List

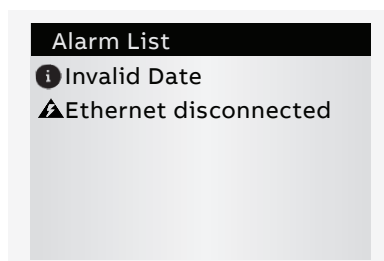


Fig. 4.4 When pressed Esc-key (1) in System Overview -pages, the alarm list is shown, see Fig. 3.5 where the key numberings in parentheses are shown



Auxiliary voltage connected

11:06

Time

\*E\*

Indicates that generator exerciser is programmed

### On middle

**S1 p** Letter "p" after S1 indicates that S1 is a priority source

**On the lower edge** of the screen you can see the Alarms. When pressed Esc-key (1) in System Overview -pages, the alarm list is shown



#### Notice

The default values are marked in the menu tree by \*-marking.



4.1.1 Start screens

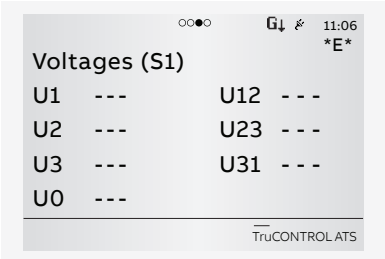
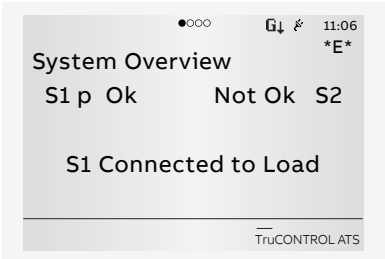


Fig. 4.5 From System Overview screen you will find Switch status and Supply info views, and by pressing Up and Down -keys (2), you can go forward to see Voltages and Synchronization view, see the table below. See Fig. 3.5 where the key numberings in parentheses are shown

Start screens

System Overview (Switch status)

Shows voltages and frequencies of both supplies and the switch position.

Supply info view

Shows Phase to Phase voltages of both supplies and the frequencies.

Voltages (S1)

S1 phase voltages

S1 line voltage

Voltages (S2)

S2 phase voltages

S2 line voltage

Synchronization view

Enabled only when In-phase monitor is on.

Show the time to next sync, sync period

Current view

Enabled only when current measurement module is connected.

Phase currents

Neutral current

Residual current

Start screens (continued)

Active Power view

Enabled only when current measurement module is connected.

Active power by phase

Total active power

Reactive Power view

Enabled only when current measurement module is connected.

Reactive power by phase

Total reactive power

Apparent Power view

Enabled only when current measurement module is connected.

Apparent power by phase

Total apparent power

Energy Counters view

Enabled only when current measurement module is connected.

Active energy by source

Reactive energy by source

Apparent energy by phase

Total active energy

Total reactive energy

Total apparent energy

4.1.2 Enter key, main menu

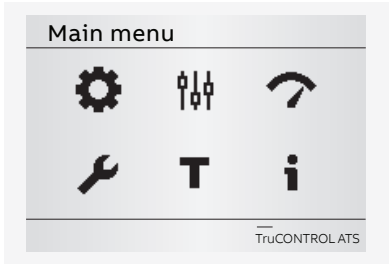



Fig. 4.6


By pressing Enter-key (3) you will move to the main menu page of Operation, Parameters, Measurements, Settings, Test and About, see the table below for the selections. You can move in menu or choose parameter values by Up and Down -keys (2) and by Enter-key (3) you can accept function and enter a new menu page. By Esc-key (1) you can go back in menu. See Fig. 3.5 where the key numberings in parentheses are shown




**Notice**  
When you have changed the parameter, always go back in the menu by pressing Esc-key and when prompted confirm changes with Enter-key.

Operation		*Default
	Bypass Time Delay	
	Bypass any currently running time delay.	
	HMI Control Keys <sup>1)</sup>	
	Enabled*	
	Disabled	
	Energy Counters	Reset
	Operation mode	
	AUTO*	Automatic switch control mode. <sup>2)</sup>
	MAN momentary	Manual operation mode but warning that device is in manual mode <b>will be shown</b> by HMI. ATS will automatically <b>send</b> the generator start signal in case of a total power outage but user intervention is required to initiate transfer and retransfer.
	MAN permanent	Manual operation mode but warning that device is in manual mode <b>will not be shown</b> by HMI. ATS will automatically <b>send and remove</b> the generator start signal but user intervention is required to initiate transfer and retransfer.
	MAN retransfer	Same as AUTO but automatic retransfer sequence is disabled. Load will be kept on non-priority source until operator manually (by HMI or manual handle) or remotely operates the load back to priority source.

<sup>1)</sup> Note: Disables also 0-key in OXB models!  
<sup>2)</sup> Note: When automatic mode parameter is confirmed there is 3 second delay before entering it.

Parameters		*Default
	System parameters	
	Start Automatic Configuration	
	Power distribution systems (see Fig. 2.6)	
	Source 1	1 Phase, 2 Wire
		1 Phase, 3 Wire (Split-Phase)
		3 Phases, no Neutral (3ph3w)
		3 Phase with Neutral (3ph4w)*
		3 Phase, High-Leg Delta
	Source 2	1 Phase, 2 Wire
		1 Phase, 3 Wire (Split-Phase)
		3 Phases, no Neutral (3ph3w)
		3 Phase with Neutral (3ph4w)*
		3 Phase, High-Leg Delta
	Rated Voltage	
	200 V (3ph), 208 V (3ph), 220 V (3ph), 230 V (3ph), 240 V (3ph), 277 V (3ph), 347 V (3ph), 380 V (3ph), <b>400 V (3ph)*</b> , 415 V (3ph), 440 V (3ph), 460 V (3ph), 480 V (3ph), 200 V (1ph), 220 V (1ph), 230 V (1ph), 240 V (1ph)	
	Rated Frequency	
	50 Hz*	
	60 Hz	
	Neutral Pole Location	
	Pole 4* <sup>1)</sup>	
	Pole 1	
	Phase Sequence	
	ABC*	
	ACB	
	Not Enabled	


<sup>1)</sup> Overlapping neutral always on Pole 4, this cannot be changed.

Parameters (continued)		*Default
	Device Parameters	
	In-phase Monitor	
	Enable	Off*
		On
	Synchronization Window	$\pm 1...10\%$ ( $\pm 5^* \%$ )
		A phase angle difference limits to restrict live to live source transfers unless both sources are within this certain window of electrical degrees.
	Time Delays	
	Override S1 Failure	0...60 s when $V_{aux}$ off (2* s)
		S1 priority: How long the device is waiting S1 recovery before starting transfer sequence to S2. S2 priority: How long the device is keeping the load on failed S1 although S2 is already available.
		0...10 min when $V_{aux}$ on
		0...10 min range enabled only when auxiliary power supply is connected.
	Transfer from S1 to S2	0...60 min (2* s)
		S1 priority: How long the device is keeping the load on failed S1 after S2 becomes available. S2 priority: How long the device waits before transfer sequence back to available S2 begins. This delay is bypassed by 'Override S1 Failure' in case of S1 failure.
	Pre-transfer signal 1 / 2 / 3 / 4	
	Pre-transfer S1 to S2 Post-transfer S1 to S2 Pre-transfer S2 to S1 Post-transfer S2 to S1	0*...300 s
		Enabled only when any digital outputs is configured as 'Pre-transfer Signal'.
		Pre-transfer: How long the device is keeping pre-transfer signal activated before transferring from S1 to S2 or S2 to S1.
		Post-transfer: How long the device is keeping pre-transfer signal activated after transferring from S1 to S2 or S2 to S1.
	Center-off	0*...300 s
		Only delayed transition I-O-II type. How long the switch is stopped at position O while transferring from S1 to S2 or from S2 to S1 and the original source is not completely down. Center-OFF delay is bypassed in case all phases are missing from the original source which we are leaving.


Continued on the next page

Parameters (continued)			*Default
	Device Parameters (continued)		
	Time Delays (continued)		
	Override S2 Failure	0...60 min (2* s)	S1 priority: How long the device is keeping the load on failed S1 after S2 becomes available. S2 priority: How long the device waits before transfer sequence back to available S2 begins. This delay is bypassed by 'Override S1 Failure' in case of S1 failure
	Transfer from S2 to S1	0...120 min (2* s)	S1 priority: How long the device is keeping the load on failed S1 after S2 becomes available. S2 priority: How long the device waits before transfer sequence back to available S2 begins. This delay is bypassed by 'Override S1 Failure' in case of S1 failure.
	Elevator Pre-transfer signal 1 / 2 / 3 / 4		
	Elevator Pre-signal S1-S2	0*...60 s	Enabled only when any digital output is configured as 'Elevator pre-signal'.
	Elevator Post-signal S1-S2		Pre-transfer: How long the device is keeping pre-signal activated before transferring from S1 to S2 or from S2 to S1.
	Elevator Pre-signal S2-S1		
	Elevator Post-signal S2-S1		Post-transfer: How long the device is keeping pre-signal activated after transferring from S1 to S2 or from S2 to S1.
	Generator Stop	0...60 min (5* min)	Enabled only when generator is in use. Generator cooling time, how long the device is keeping the generator running without load after returning to priority source.
	Load Shed	0*...60 s	Enabled only when any digital output is configured as 'Load Shed'. How long before the transfer from priority to non-priority source the device activates load shed signal.


Continued on the next page

Parameters (continued)		*Default		
	Device Parameters (continued)			
	Voltage & Frequency Setpoints	Defines the voltage and frequency limits for source being acceptable. Source has an anomaly when measured voltage/frequency goes out of range drop-out lower/drop-out Upper. Source becomes acceptable when measured voltage/frequency goes back in range pick-up lower/pick-up higher.		
	S1 Setpoints			
		S1 Drop-out Voltage	Upper Threshold	102...120 % Un (115* % Un)
			Lower Threshold	75...97 % Un (85* % Un)
		S1 Pick-up Voltage	Upper Threshold	101...119 % Un (114* % Un)
			Lower Threshold	85...99 % Un (90* % Un)
		S1 Drop-out Frequency	Upper Threshold	101...120 % fn (115* % fn)
			Lower Threshold	80...99 % fn (85* % fn)
		S1 Pick-up Frequency	Upper Threshold	100.5...119.5 % fn (114* % fn)
			Lower Threshold	80.5...99.5 % fn (86* % fn)
	S2 Setpoints			
		S2 Drop-out Voltage	Upper Threshold	102...120 % Un (115* % Un)
			Lower Threshold	75...97 % Un (85* % Un)
		S2 Pick-up Voltage	Upper Threshold	101...119 % Un (114* % Un)
			Lower Threshold	85...99 % Un (90* % Un)
		S2 Drop-out Frequency	Upper Threshold	101...120 % fn (115* % fn)
			Lower Threshold	80...99 % fn (85* % fn)
		S2 Pick-up Frequency	Upper Threshold	100.5...119.5 % fn (114* % fn)
			Lower Threshold	80.5...99.5 % fn (86* % fn)
	Voltage Unbalance Setpoints		Options to change voltage unbalance measurement limits or disable unbalance measurement completely.	
			Unbalance Drop-Out	±5...30 % Un (±10* % Un)
			Unbalance Pick-Up	±3...28 % Un (±8* % Un)
			Unbalance Measuring	Off*
			On	

Continued on the next page

Parameters (continued)		*Default
	Device Parameters (continued)	
	Generator Exercisers	Switch and generator functioning can be tested automatically and also periodically by using four independent exerciser events. Test on load function starts the generator and transfers the load to it. Test off load function only starts the generator for the duration of the event. Overlapping events are prioritized, event 1 has the highest priority.
	Exerciser 1 / 2 / 3 / 4	
	Status	Disabled*
		Non-periodic
		Daily
		Weekly
		Bi-weekly
		Monthly
		Yearly
	Function	No Function*
		Test on Load
		Test off Load
	Duration (hh:mm:ss)	00:00:00...24:00:59 (00:01:00*)
	Time (hh:mm)	Starting time of the event: 00:00*...23:59
	Date (month day, year)	Starting date of the event Jan 01, 2020... (---*)
	Application	
	S1-Transformer/S2-Generator*	
	S2-Transformer/S1-Generator	
	2 Transformers/S1 Priority	
	2 Transformers/S2 Priority	
	2 Transformers/No Priority	
	Commit Transfer	
	Off*	If priority source fails, device cancels the transfer sequence to non-priority source (generator) if priority source returns before non-priority source becomes acceptable.
	On	If priority source fails, device continues transfer sequence to non-priority source (generator) even if priority returns before non-priority source becomes acceptable. Retransfer sequence according to time delays.

Continued on the next page

Parameters (continued)		*Default
	Device Parameters (continued)	
	High current alarm	
	Status	
	Enabled	If measured current is higher than ten times the nominal value device will prevent all operations and show high current alarm on-screen. After high current status is over, device will start operating normally.
	Disabled*	
	Alarm reset required	
	Yes	User confirmation is required before re-entering normal operation after high current status.
	No*	Normal operation is started automatically after high current status.
	Transfer to Dead Source	
	On*	User can transfer to an unavailable source by using HMI keys I/II or by a remote command.
	Off	Transfer to an unavailable source is disabled.
	Source Loss Center-Off Delay	
	On*	User can select whether to always run the 'center-off' timer or skip it if there is no voltage on any of the phases on the source from where the ATS is transferring from.
	Off	
	Source Loss Pre-Signal Delay	
	On*	User can select whether to always run the pre-signal delays 'elevator pre-signal S1-S2', 'elevator pre-signal S2-S1', 'pre-transfer S1 to S2', 'pre-transfer S2 to S1' timers or skip these if there is no voltage on any of the phases on the source from where the ATS is transferring from.
	Off	
	Gen Start in Manual Mode	User may choose if device sends generator start signal when slide switch is not in AUTO mode.
	Yes*	Send the generator start signal regardless of slide switch position.
	No	If slide switch is in lock or MAN mode device won't send the generator start signal.
	MAN Retransfer w/ Override	Affects only MAN retransfer mode. Select whether to stay in failed non-priority or transfer automatically back to priority if it is healthy.
	Off*	Stay at failed non-priority.
	On	Transfer to priority if non-priority is not ok.



## Measurements



### Switch Diagnostics

Total operations	I-O-II switches: Total number of transfers I-O, O-II, II-O and O-I. I-II switches: Total number of transfers I-II and II-I.
Manual operations	Total transfers operated by the handle.
Number of load transfers	Total number of transfers I-II and II-I.
Transfer time	Time it took to transfer the load between sources (ms).
Source fail transfers	Total number of automatic transfers due to source failures.
Days energized	
Total time on S1	Hours
Total time on S2	Hours
Time S1 available	Minutes
Time S2 available	Minutes
Last generator start	MMM DD, YYYY hh:mm:ss
Generator starting time	How long it took for the generator to become acceptable after latest start (s).
In-phase time	How long it took for the in-phase monitor to achieve synchronized transfer (s).

### Event Log


View Log	250 time stamped events, latest first.
Clear Log	Delete all log entries.

### Harmonics

ics		Harmonic components up to 15th are calculated for the selected phase.
Measured Phase	Disabled*	
	Phase 1	
	Phase 2	
	Phase 3	
Voltage	Total distortion	THD for each phase of both voltage sources.
	S1 Components	Each harmonic component of the selected S1 phase.
	S2 Components	Each harmonic component of the selected S2 phase.

### Power Factor

Enabled only when current measurement module is connected.

Settings		*Default
	Standard I/O Settings	
	I 01 / I 02 / I 03	
	Function	No function      Input disabled.
	Emergency Stop* (default in I 01)	Transfers to O position in delayed transition I-O-II type switches. Disables automatic control mode in both delayed and Open/Closed transition types.
	Remote Test On Load* (default in I 02)	Start/stop test on load sequence in rising (NO) or falling (NC) edge of the input signal.
	Remote Test Off Load* (default in I 03)	Start/stop test off load sequence in rising (NO) or falling (NC) edge of the input signal.
	Inhibit ATS	Prevent switch control operations, configuration, test sequences and generator start in case of priority source failure.
	Manual Retransfer	Disables automatic transfer back to priority source.
	Source Priority S1	Sets priority for source 1 in transformer-transformer application.
	Source Priority S2	Sets priority for source 2 in transformer-transformer application.
	Inhibit Transfer	Disables automatic transfer from priority source to non-priority source. When input is activated, transfer to non-priority can be initiated by pressing HMI control button and entering the device password.
	Bypass Running Time Delays	Bypass any currently running time delay.
	Remote Control to S1	Transfer to S1 when active. Overridden by activated 'Remote Control to OFF' signal.
	Remote Control to OFF	Transfer to O position when active.
	Remote Control to S2	Transfer to S2 when active. Overridden by activated 'Remote Control to OFF' or 'Remote Control to S1' signals.
	Reset Alarm	Reset any active switch control alarms (open I failure, close I failure, open II failure, close II failure).
	Inhibit Transfer w/ Override	Prevent transfer from an acceptable power source.
	Load Shed Input Signal	Transfer to priority source in 2-position switches. Transfer to Off position in 3-position switches in case the priority source is not acceptable.
	Manual-Auto Mode	Toggle automatic/HMI control mode, input is active only in rising/falling edge according to contact type.
	Contact type	NC      Active open. NO*      Active closed.


Continued on the next page

1  
  
LCD

**Settings (continued)****\*Default****Standard I/O Settings (continued)****O 01**

Function	No Function	Output disabled.
Alarm / Product availability*		Signals any active alarms or ATS being disabled for automatic transfer operations.
Load Connected to S1		Switch in position I.
Load Disconnected		Switch in position O.
Load Connected to S2		Switch in position II.
Pre-transfer Signal 1		Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
Pre-transfer Signal 2		Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
Pre-transfer Signal 3		Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
Pre-transfer Signal 4		Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
Source 1 Available		No anomalies in S1 voltage supply.
Source 2 Available		No anomalies in S2 voltage supply.
Load Shed Output Signal		Used for shedding non-essential loads before transferring to non-priority source. Signal is activated before transferring to non-priority source according to load shed delay and kept activated until load is transferred back to priority source.
Elevator pre-transfer Signal 1		Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
Elevator pre-transfer Signal 2		Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
Elevator pre-transfer Signal 3		Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
Elevator pre-transfer Signal 4		Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
Transfer Alarm		Activate output after ATS has transferred to non-priority source.
Contact type	NC	Active open.
	NO*	Active closed.

Continued on the next page

Settings (continued)		*Default
 Standard I/O Settings (continued)		
Modules (See Chapter 5, Electronic accessories)		
System		
RESET to Factory Setting		Restore default parameter values.
Date <sup>1)</sup>		Month day, year
Time <sup>1)</sup>		Hours:Minutes
Language	English*	
	Italian	
	French	
	German	
	Spanish	
	Russian	
	Chinese	
New Password		Five digits
Temperature Unit	Celsius*	
	Fahrenheit	
Clock Format	24 h*	
	12 h	
Display Contrast	10...100 % (30 %*)	

<sup>1)</sup> Clock capacitor must be charged before inserting Date/Time. Clock capacitor is charged from source voltage (not AUX) and takes about 10 minutes. Clock capacitor keeps the date/time saved for 48 h in case of no source voltage available.

Test	*Default
T	On-Load Test Settings
	Bypass Local Test
	Bypass if Generator fails*
	Stay on Generator
	Bypass Remote Test
	Bypass if Generator fails*
	Stay on Generator
	Bypass Generator Exerciser
	Bypass if Generator fails*
	Stay on Generator
	Test On Load
	Test generator with transferring the load. Test with switch transfer.
	Test Off Load
	Test generator without transferring the load. Test without switch transfer.
	HMI Test
	Initiate display test screen and turn all LEDs on. This function is not available when time delay is ongoing.
Optional modules (See Chapter 5, Electronic accessories)	

About

i	HMI	HMI serial number
		Software version
		Software subversion
		HMI Type code
	Controller Unit	Time
		Date
		Serial number
		Normative
		Controller software version
		Controller software subversion
	Automatic Transfer Switch	TAG name
		ATS Type Code
		ATS serial number
		Rated current
		Number of poles
		ATS Type
Modules (See Chapter 5, Electronic accessories)		

4.1.3 Esc key

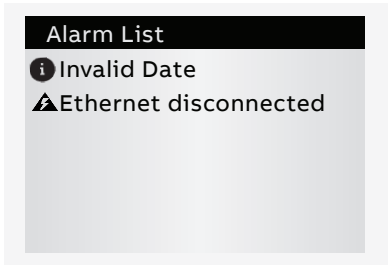


Fig. 4.7  
By pressing Esc-key (1) in System Overview -pages,  
the alarm list is shown. See Fig. 3.5 where the key  
numberings in parentheses are shown

---

**Alarm list**

---

More information, see chapter 6, Troubleshooting

---

## 4.2 Level 4 (touch) control interface, menu tree

### Password

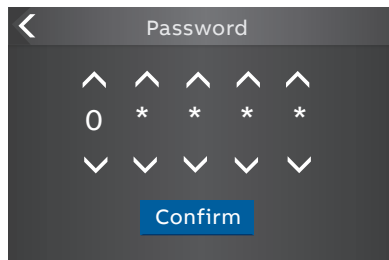


Fig. 4.8 Enter the password when asked, choose the right number by arrowheads and confirm, go forward entering number after number

The default password is 00001, enter the password when prompted (see Fig. 4.8). The default password is highly recommended to be changed.

### Description of the icons

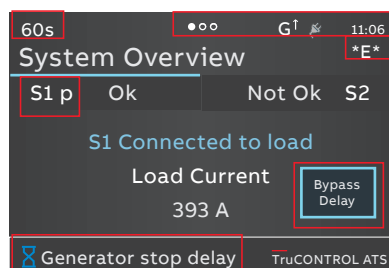


Fig. 4.9 The location of the small icons and the alarms

The small icons in System Overview -pages are, see Fig. 4.9:

#### On upper left corner

60s Time delay, in Alarm list you can see the name of delay at the same time, e.g. Generator stop delay

#### On upper right corner

●○○ Indicates the amount of pages and the page where you are at the moment



Application set up as Transformer-Generator. Generator start-up signal deactivated



Application set up as Transformer-Generator. Generator start-up signal activated



Auxiliary voltage connected

11:06 Time

\*E\* Indicates that generator exerciser is programmed.

#### On middle area

S1 p Letter "p" after S1 indicates that S1 is a priority source



Software button which allows skipping ongoing time delay. Visible when any skippable delay is ongoing

Alarm List

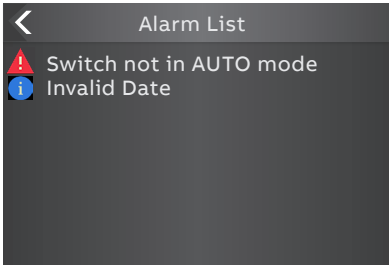


Fig. 4.10 By touching on the alarm indication on the lower edge of the screen you will get the Alarm List

**On the lower edge** of the screen you can see the Alarms, see Fig. 4.9 on previous page. Touching the alarm name in bottom bar will open alarm list. It lists all active informations, warnings and alarms.

To define the home page



Fig. 4.12 Home page definition, acceptance of the function

While viewing a specific page, it can be defined as the home page by pressing the home button for 3 seconds. All pages, except for the menus, can be set as home page. Home page is automatically shown after inactivity.

To confirm the change

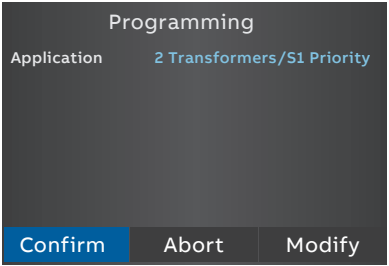


Fig. 4.11 After you have changed the parameter, go back in the menu by pressing the "<" on the top left corner or Home key and when prompted confirm changes by "Confirm" option



4.2.1 Start Menu

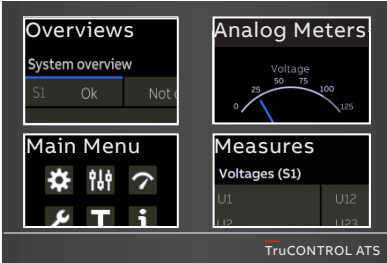


Fig. 4.13

4.2.1.1 Overviews

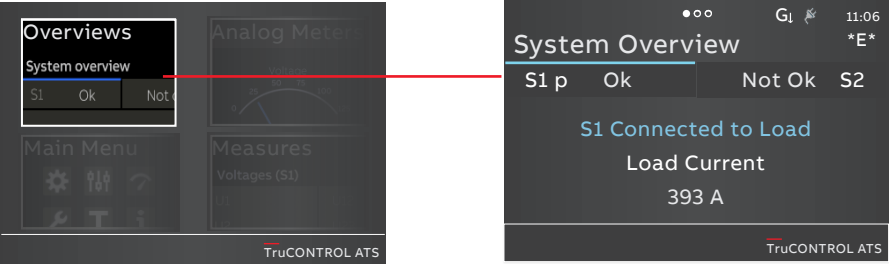


Fig. 4.14

<b>System Overview (Switch status)</b>
Shows voltages and frequencies of both supplies and the switch position.
<b>Supply info view</b>
Shows voltages and frequencies of both supplies.
<b>Temperature view</b>
Shows the HMI, device and pole temperatures. HMI temperature indicates ambient temperature where the ATS power panel is installed, when HMI is mounted to door. Device temperature indicates the temperature inside the ATS power panel. Pole temperature indicates the temperature on the load side terminals.
<b>Synchronization view</b> (Enabled only when In-phase monitor is on)
Show the time to next sync, sync period.

4.2.1.2 Main Menu

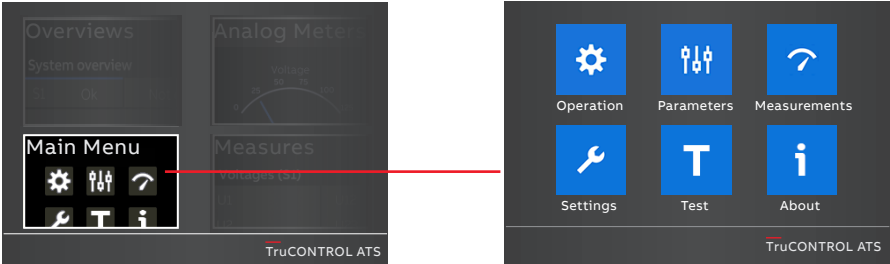



Fig. 4.15 By touching on Start Menu lower left corner -image you can move to the Main Menu page of Operation, Parameters, Measurements, Settings, Test and About, see the table below for the selections



**Notice**  
When you have changed the parameter, go always back in the menu and confirm the change always when asked.




**Notice**  
The default values are marked in the menu tree by \*-marking.

Operation		*Default
	Alarm Reset	Reset any active switch control alarms (open I failure, close I failure, open II failure, close II failure)
	Bypass Time Delay	Bypass any currently running time delay
	HMI Control Keys <sup>1)</sup>	
		Enabled*
		Disabled
	Energy Counters	Reset energy values
	Operation mode	
	AUTO*	Automatic switch control mode. <sup>2)</sup>
	MAN momentary	Manual operation mode but warning that device is in manual mode <b>will be shown</b> by HMI. ATS will automatically send the generator start signal in case of a total power outage but user intervention is required to initiate transfer and retransfer.
	MAN permanent	Manual operation mode but warning that device is in manual mode <b>will not be shown</b> by HMI. ATS will automatically send and remove the generator start signal but user intervention is required to initiate transfer and retransfer.
	MAN retransfer	Same as AUTO but automatic retransfer sequence is disabled. Load will be kept on non-priority source until operator manually (by HMI or manual handle) or remotely operates the load back to priority source.

<sup>1)</sup> Note: Disables also 0-key in OXB models!

<sup>2)</sup> Note: When automatic mode parameter is confirmed there is 3 second delay before entering it.

Parameters		*Default
	System parameters	
	Start Automatic Configuration	
	Power distribution systems (see Fig. 2.6)	
	Source 1	1 Phase, 2 Wire
		1 Phase, 3 Wire (Split-Phase)
		3 Phases, no Neutral (3ph3w)
		3 Phase with Neutral (3ph4w)*
		3 Phase, High-Leg Delta
	Source 2	1 Phase, 2 Wire
		1 Phase, 3 Wire (Split-Phase)
		3 Phases, no Neutral (3ph3w)
		3 Phase with Neutral (3ph4w)*
		3 Phase, High-Leg Delta
	Rated Voltage	
		200 V (3ph), 208 V (3ph), 220 V (3ph), 230 V (3ph), 240 V (3ph), 277 V (3ph), 347 V (3ph), 380 V (3ph), <b>400 V (3ph)*</b> , 415 V (3ph), 440 V (3ph), 460 V (3ph), 480 V (3ph), 200 V (1ph), 220 V (1ph), 230 V (1ph), 240 V (1ph)
	Rated Frequency	
		50 Hz*
		60 Hz
	Neutral Pole Location	
		Pole 4* <sup>1)</sup>
		Pole 1
	Phase Sequence	
		ABC*
		ACB
		Not Enabled

<sup>1)</sup> Overlapping neutral always on Pole 4, this cannot be changed.

Continued on the next page

## Parameters (continued)

\*Default



## Device Parameters

## In-phase Monitor

Enable

Off\*

On

Synchronization Window

 $\pm 1 \dots 10 \%$   
 $(\pm 5^* \%)$ 

A phase angle difference limits to restrict live to live source transfers unless both sources are within this certain window of electrical degrees.

## Time Delays

Override S1 Failure

 $0 \dots 60 \text{ s}$   
 when  
 $V_{aux} \text{ off}$   
 $(2^* \text{ s})$ 

S1 priority: How long the device is waiting S1 recovery before starting transfer sequence to S2.  
 S2 priority: How long the device is keeping the load on failed S1 although S2 is already available.

 $0 \dots 10 \text{ min}$   
 when  
 $V_{aux} \text{ on}$ 

$0 \dots 10 \text{ min}$  range enabled only when auxiliary power supply is connected.

Transfer from  
S1 to S2
 $0 \dots 60 \text{ min}$   
 $(2^* \text{ s})$ 

S1 priority: How long the device is keeping the load on failed S1 after S2 becomes available.  
 S2 priority: How long the device waits before transfer sequence back to available S2 begins. This delay is bypassed by 'Override S1 Failure' in case of S1 failure.

## Pre-transfer signal 1 / 2 / 3 / 4

 Pre-transfer S1 to S2  
 Post-transfer S1 to S2  
 Pre-transfer S2 to S1  
 Post-transfer S2 to S1

 $0^* \dots 300 \text{ s}$ 

Enabled only when any digital outputs is configured as 'Pre-transfer Signal'.

**Pre-transfer:** How long the device is keeping pre-transfer signal activated before transferring from S1 to S2 or S2 to S1.  
**Post-transfer:** How long the device is keeping pre-transfer signal activated after transferring from S1 to S2 or S2 to S1.

Center-Off

 $0^* \dots 300 \text{ s}$ 

Only delayed transition I-O-II type. How long the switch is stopped at position O while transferring from S1 to S2 or from S2 to S1 and the original source is not completely down.  
 Center-OFF delay is bypassed in case all phases are missing from the original source which we are leaving.

Continued on the next page

## Parameters (continued)

\*Default




## Device Parameters (continued)


## Time Delays (continued)

Override S2 Failure	0...60 s (2* s)	S1 priority: How long the device is keeping the load on failed S2 although S1 is already available. S2 priority: How long the device is waiting S2 recovery before starting transfer sequence to S1.
Transfer from S2 to S1	0...120 min (2* s)	S1 priority: How long the device waits before transfer sequence back to available S1 begins. This delay is overridden by 'Override S2 Failure' in case of S2 failure. S2 priority: How long the device is keeping the load on failed S2 although S1 is already available.
Elevator Pre-transfer signal 1 / 2 / 3 / 4		
Elevator Pre-signal S1-S2 Elevator Post-signal S1-S2 Elevator Pre-signal S2-S1 Elevator Post-signal S2-S1	0*...60 s	Enabled only when any digital output is configured as 'Elevator pre-signal'.  Pre-transfer: How long the device is keeping pre-signal activated before transferring from S1 to S2 or from S2 to S1.  Post-transfer: How long the device is keeping pre-signal activated after transferring from S1 to S2 or from S2 to S1.
Generator Stop	0...60 min (5* min)	Enabled only when generator is in use. Generator cooling time, how long the device is keeping the generator running without load after returning to priority source.
Load Shed	0*...60 s	Enabled only when any digital output is configured as 'Load Shed'. How long before the transfer from priority to non-priority source the device activates load shed signal.

Continued on the next page

Parameters (continued)		*Default
	Device Parameters (continued)	
	Voltage & Frequency Setpoints	Defines the voltage and frequency limits for source being acceptable. Source has an anomaly when measured voltage/frequency goes out of range drop-out lower/drop-out Upper. Source becomes acceptable when measured voltage/frequency goes back in range pick-up lower/pick-up higher.
	S1 Setpoints	
	S1 Drop-out Voltage	Upper Threshold 102...120 % Un (115* % Un)
		Lower Threshold 75...97 % Un (85* % Un)
	S1 Pick-up Voltage	Upper Threshold 101...119 % Un (114* % Un)
		Lower Threshold 85...99 % Un (90* % Un)
	S1 Drop-out Frequency	Upper Threshold 101...120 % fn (115* % fn)
		Lower Threshold 80...99 % fn (85* % fn)
	S1 Pick-up Frequency	Upper Threshold 100.5...119.5 % fn (114* % fn)
		Lower Threshold 80.5...99.5 % fn (86* % fn)
	S2 Setpoints	
	S2 Drop-out Voltage	Upper Threshold 102...120 % Un (115* % Un)
		Lower Threshold 75...97 % Un (85* % Un)
	S2 Pick-up Voltage	Upper Threshold 101...119 % Un (114* % Un)
		Lower Threshold 85...99 % Un (90* % Un)
	S2 Drop-out Frequency	Upper Threshold 101...120 % fn (115* % fn)
		Lower Threshold 80...99 % fn (85* % fn)
	S2 Pick-up Frequency	Upper Threshold 100.5...119.5 % fn (114* % fn)
		Lower Threshold 80.5...99.5 % fn (86* % fn)
	Voltage Unbalance Setpoints	Options to change voltage unbalance measurement limits or disable unbalance measurement completely.
	Unbalance Drop-Out	±5...30 % Un (±10* % Un)
	Unbalance Pick-Up	±3...28 % Un (±8* % Un)
	Unbalance Measuring	Off*
		On

Continued on the next page

Parameters (continued)		*Default
	Device Parameters (continued)	
	Generator Exercisers	Switch and generator functioning can be tested automatically and also periodically by using four independent exerciser events. Test on load function starts the generator and transfers the load to it. Test off load function only starts the generator for the duration of the event. Overlapping events are prioritized, event 1 has the highest priority.
	Exerciser 1 / 2 / 3 / 4	
	Status	Disabled*
		Non-periodic
		Daily
		Weekly
		Bi-weekly
		Monthly
		Yearly
	Function	No Function*
		Test on Load
		Test off load
	Duration (hh:mm:ss)	00:00:00...24:00:59 (00:01:00*)
	Time (hh:mm)	Starting time of the event. 00:00*...23:59
	Date (month day, year)	Starting date of the event Jan 01, 2020... (---*)
	Application	
	S1-Transformer/S2-Generator*	
	S2-Transformer/S1-Generator	
	2 Transformers/S1 Priority	
	2 Transformers/S2 Priority	
	2 Transformers/No Priority	
	Commit Transfer	
	Off*	If priority source fails, device cancels the transfer sequence to non-priority source (generator) if priority source returns before non-priority source becomes acceptable.
	On	If priority source fails, device continues transfer sequence to non-priority source (generator) even if priority returns before non-priority source becomes acceptable. Retransfer sequence according to time delays.

Continued on the next page



## Parameters (continued)

\*Default



## Device Parameters (continued)

## High current alarm

## Status

Enabled

If measured current is higher than ten times the nominal value device will prevent all operations and show high current alarm on-screen. After high current status is over, device will start operating normally.

Disabled\*

## Alarm reset required

Yes

User confirmation is required before re-entering normal operation after high current status.

No\*

Normal operation is started automatically after high current status.

## Transfer to Dead Source

On\*

User can transfer to an unavailable source by using HMI keys I/II or by a remote command.

Off

Transfer to an unavailable source is disabled.

## Source Loss Center-Off Delay

On\*

User can select whether to always run the 'center-off' timer or skip it if there is no voltage on any of the phases on the source from where the ATS is transferring from.

Off

## Source Loss Pre-Signal Delay

On\*

User can select whether to always run the pre-signal delays 'elevator pre-signal S1-S2', 'elevator pre-signal S2-S1', 'pre-transfer S1 to S2', 'pre-transfer S2 to S1' timers or skip these if there is no voltage on any of the phases on the source from where the ATS is transferring from.

Off

## Gen Start in Manual Mode

User may choose if device sends generator start signal when slide switch is not in AUTO mode.

Yes\*

Send the generator start signal regardless of slide switch position.

No

If slide switch is in lock or MAN mode device won't send the generator start signal.

## MAN Retransfer w/ Override

Affects only MAN retransfer mode. Select whether to stay in failed non-priority or transfer automatically back to priority if it is healthy.

Off\*

Stay at failed non-priority.

On

Transfer to priority if non-priority is not ok.

Measurements



Switch Diagnostic		
Total operations		I-O-II switches: Total number of transfers I-O, O-II, II-O and O-I. I-II switches: Total number of transfers I-II and II-I
Manual operations		Total transfers operated by the handle.
Number of load transfers		Total number of transfers I-II and II-I
Transfer time		Time it took to transfer the load between sources (ms)
Source fail transfers		Total number of automatic transfers due to source failures.
Days energized		
Total time on S1		Hours
Total time on S2		Hours
Time S1 available		Minutes
Time S2 available		Minutes
Last generator start		MMM DD, YYYY hh:mm:ss
Generator starting time		How long it took for the generator to become acceptable after latest start (s).
In-phase time		How long it took for the in-phase monitor to achieve synchronized transfer (s).
Event Log		
View Log		250 time stamped events, latest first.
Clear Log		Delete all log entries.
Harmonics		Harmonic components up to 15th are calculated for the selected phase.
Measured Phase	Disabled*	
	Phase 1	
	Phase 2	
	Phase 3	
Voltage	Total distortion	THD for each phase of both voltage sources.
	S1 Components	Each harmonic component of the selected S1 phase.
	S2 Components	Each harmonic component of the selected S2 phase.
Power Factor		Enabled only when current measurement module is connected.
Metering Pages		Allows to show/hide current, power and energy related analog meters and measurement pages.
Enabled*		
Disabled		

## Settings

\*Default



## Standard I/O settings

I 01 / I 02 / I 03

Function	No function	Input disabled.
Emergency Stop* (default in I 01)		Transfers to O position in delayed transition I-O-II type switches. Disables automatic control mode in both delayed and Open/Closed transition types.
Remote Test On Load* (default in I 02)		Start/stop test on load sequence in rising (NO) or falling (NC) edge of the input signal.
Remote Test Off Load* (default in I 03)		Start/stop test off load sequence in rising (NO) or falling (NC) edge of the input signal.
Inhibit ATS		Prevent switch control operations, configuration, test sequences and generator start in case of priority source failure.
Manual Retransfer		Disables automatic retransfer back to priority source.
Source Priority S1		Sets priority for source 1 in transformer-transformer application.
Source Priority S2		Sets priority for source 2 in transformer-transformer application.
Inhibit Transfer		Disables automatic transfer from priority source to non-priority source. When input is activated, transfer to non-priority can be initiated by pressing HMI control button and entering the device password.
Bypass Running Time Delays		Bypass any currently running time delay.
Remote Control to S1		Transfer to S1 when active. Overridden by activated 'Remote Control to OFF' signal.
Remote Control to OFF		Transfer to O position when active.
Remote Control to S2		Transfer to S2 when active. Overridden by activated 'Remote Control to OFF' or 'Remote Control to S1' signals.
Reset Alarm		Reset any active switch control alarms (open I failure, close I failure, open II failure, close II failure).
Inhibit Transfer w/ Override		Prevent transfer from an acceptable power source.
Load Shed Input Signal		Transfer to priority source in 2-position switches. Transfer to Off position in 3-position switches in case the priority source is not acceptable.
Manual-Auto Mode		Toggle automatic/HMI control mode, input is active only in rising/falling edge according to contact type.
Contact Type	NC	Active open
	NO*	Active closed

Continued on the next page

## Settings (continued)

\*Default




## Standard I/O settings (continued)

O 01

Function	No function	Output disabled.
	Alarm / Product availability*	Signals any active alarms or ATS being disabled for automatic transfer operations.
	Load Connected to S1	Switch in position I.
	Load Disconnected	Switch in position O.
	Load Connected to S2	Switch in position II.
	Pre-transfer Signal 1	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 2	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 3	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 4	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Source 1 available	No anomalies in S1 voltage supply.
	Source 2 available	No anomalies in S2 voltage supply.
	Load Shed Output Signal	Used for shedding non-essential loads before transferring to non-priority source. Signal is activated before transferring to non-priority source according to load shed delay and kept activated until load is transferred back to priority source.
	Elevator pre-signal 1	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 2	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 3	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 4	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Transfer Alarm	Activate output after ATS has transferred to non-priority source.

Continued on the next page

Settings (continued)		*Default
	Standard I/O settings (continued)	
	O 01 (continued)	
	Contact Type	NC Active open.
		NO* Active closed.
	Modules (See Chapter 5, Electronic accessories)	
	System	
	RESET to Factory Setting	Restore default parameter values
	Date <sup>1)</sup>	Month day, year
	Time <sup>1)</sup>	Hours:Minutes
	Language	English*
		Italian
		French
		German
		Spanish
		Russian
		Chinese
	New Password	Five digits
	Temperature Unit	Celcius*
		Fahrenheit
	Clock Format	24 h*
		12 h
View		
Ammeter Phase		
I Max*		
L1		
L2		
L3		
Ne		
S1 Voltmeter Phase		
V Max*		
U12		
U23		
U31		
S2 Voltmeter Phase		
V Max*		
U12		
U23		
U31		

<sup>1)</sup> Clock capacitor must be charged before inserting Date/Time. Clock capacitor is charged from source voltage (not AUX) and takes about 10 minutes. Clock capacitor keeps the date/time saved for 48 h in case of no source voltage available.

Test	*Default
<div>T</div>	On-Load Test Settings
	Bypass Local Test
	Bypass if Generator Fails*
	Stay on Generator
	Bypass Remote Test
	Bypass if Generator Fails*
	Stay on Generator
	Bypass Generator Exerciser
	Bypass if Generator Fails*
	Stay on Generator
	Test On Load
	Test generator with transferring the load. Test with switch transfer.
	Test Off Load
	Test generator without transferring the load. Test without switch transfer.
	HMI Test
	Initiate display test screen and turn all LED's on. This function is not available when time delay is ongoing.
Optional modules (See Chapter 5, Electronic accessories)	

About



HMI	HMI serial number
	Software version
	Software subversion
	HMI Type code
Controller Unit	Time
	Date
	Serial number
	Normative
	Controller software version
	Controller software subversion
Automatic Transfer Switch	TAG name
	ATS Type Code
	ATS serial number
	Rated current
	Number of Poles
	ATS Type
	Modules (See Chapter 5, Electronic accessories)

4.2.1.3 Analog meters

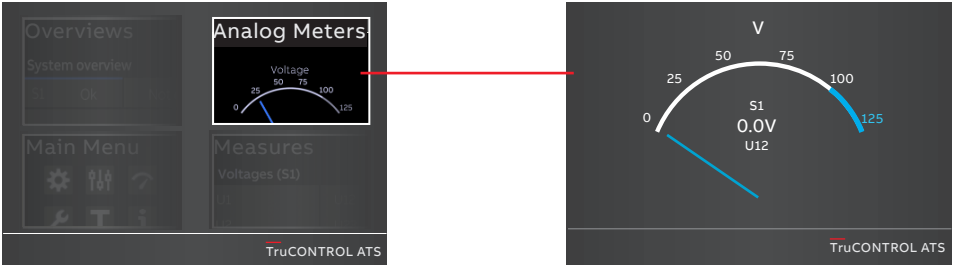


Fig. 4.16 By touching on Start Menu upper right corner -image you can find the analog meters information, see the table below

S1 Voltage meter
S2 Voltage meter
Current meter
Power meter
VAR meter
VA meter



4.2.1.4 Measures

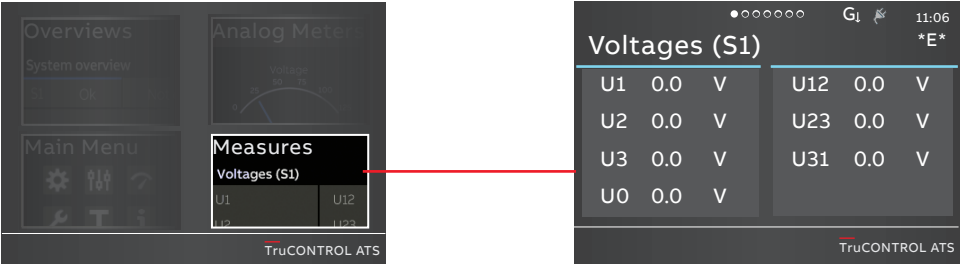


Fig. 4.17 By touching on Start Menu lower right corner -image you can find the measured data, see the table below

Voltages (S1)
Voltages (S2)
Current
Active power
Reactive power
Apparent power
Energy counters

## 5. Electronic accessories



### Warning

Hazardous voltage may be present within the panel when connecting electronic accessories. Remove all sources of power before connecting Ekip modules.

Ekip Connect Software and Ekip Programming-modules are suitable for ATS Controller TruCONTROL, see chapters 5.1 and 5.2.

- Ekip Connect -software
- Ekip Programming -module

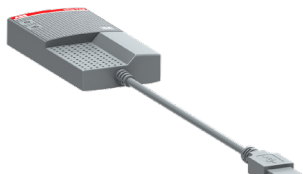


Fig. 5.1 Ekip Programming-module

Also Ekip Signalling and Com -modules are available for ATS Controller TruCONTROL (see chapters 5.4 and 5.6).

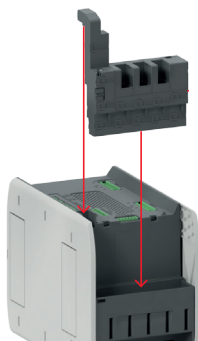


Fig. 5.2 Ekip Signalling 2K\_ and Ekip Com -modules are mounted to ATS Controller TruCONTROL with auxiliary power supply module, OXEA1

These modules (except Ekip Signalling 10K, see Chapter 5.5) are mounted with auxiliary power supply module, OXEA1 (see the mounting in section 2, Chapter 9, Mounting of accessories).

- Ekip signalling modules;
  - Ekip signalling 2K-1-OX
  - Ekip signalling 2K-2-OX
  - Ekip signalling 2K-3-OX
  - Ekip Signalling 10K (mounting separate on DIN-rail)
- Ekip Com modules;
  - Ekip Com Modbus RTU-OX
  - Ekip Com Modbus TCP-OX
  - Ekip Com Profibus DP
  - Ekip Com DeviceNet
  - Ekip Com Profinet
  - Ekip Com EtherNet/IP
  - Ekip Com Hub

Current and temperature measurement are available for ATS Controller TruCONTROL (see chapters 5.7...5.8):

- Current measurement
  - Rated plug
  - Current sensor
- Temperature measurement
  - External Probe PT1000 3mt or PT100




Fig. 5.3 Current measurement -accessories on left and Temperature measurement -accessory on right

## 5.1 Using Ekip Connect -software

Ekip Connect is a free software for communication and testing of automatic transfer switches operated by ATS Controller TruCONTROL (type OXCO\_). It can be installed on PCs equipped with the Microsoft Windows® operating system. Download it from the site, see the address: <http://www.abb.com/abblibrary/DownloadCenter/>

With the communication function of Ekip Connect software and when ATS Controller TruCONTROL is used to operate the automatic transfer switch, the software allows you to:

- Monitor the state of the connected automatic transfer switches and record information.
- Configure automatic transfer switches with customized parameters.
- Configure electronic accessories, connected to automatic transfer switch via Local Bus.
- Download information from automatic transfer switches.
- Create communication reports.
- Reset configurations.

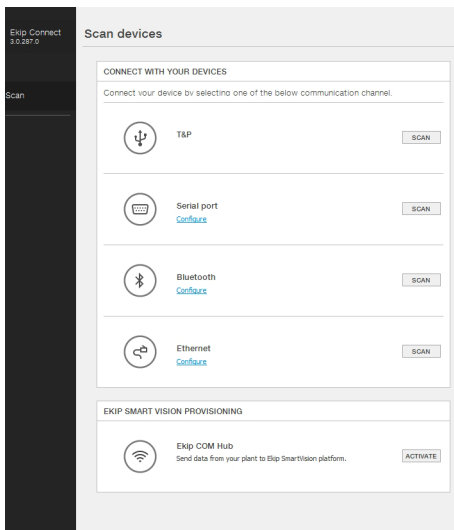

Further information on the Ekip Connect application is available from the web site, see the address below, in particular in the manual 1SDH000891R0002.

Fig. 5.4 Ekip Connect -software

## 5.2 Using Ekip Programming -module

Ekip Programming -module is suitable to use with all automatic transfer switches operated by ATS Controller TruCONTROL (type OXCO\_). You can connect the module via the programming port, see Fig. 5.7. The programming port can only be used with Ekip Programming -module.

Ekip Programming -module allows you to:

- With Ekip Connect software update the softwares and load, set and read the parameters
- If the firmware is updated while the device is powered via either voltage source the slide switch must be in MANUAL position.

Ekip Programming -module draws its power from the PC and connects one side

directly to the programming port (see Fig. 5.7) and on the other to the USB ports of the PC with the cable supplied.

### Note

Ekip Programming only powers the main switch (HMI and modules excluded). Therefore, in order to recognize all connected modules with Ekip Connect, the auxiliary power supply module, type OXE1, must be used (see chapter 5.3).

### 5.2.1 Signallings

Ekip Programming -module turns on after connecting to the PC, and is equipped with two LEDs, a green one indicating that the module is on, and a yellow one indicating active communication.



#### Notice

The Ekip Programming module can be used without powering the mains. (Local Bus Accessories, including HMI, are not operative).



#### Notice

Programming port (USB port) for service use only.

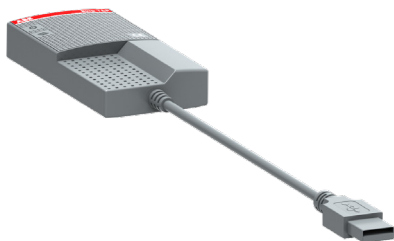


Fig. 5.5 Ekip Programming -module



Fig. 5.6 Programming port (USB port) is situated in the front of the HMI, on left side

### 5.3 Auxiliary power supply module

The auxiliary power supply module, type OXEA1, supplies non-insulated power to the external Ekip Signalling 2K and Com -modules, HMI and ATS Controller Tru-CONTROL (type OXCO\_). It is supplied by external supply, for example from generator battery or from isolated transformer connected to the main circuit. Powering product only with Auxiliary power supply module (OXEA1) limits some operation functions of the ATS Controller Tru-CONTROL.

Connections are push-in spring terminals, no tool is required. For external wiring cable cross sections:

- K1+ / K2-; AWG 22-16 / 0,5-1,5 mm<sup>2</sup>
- W3 / W4; For the Local Bus, Belden type 3105A or equivalent cables must be used, that is with a pair of twisted and shielded cables, with a characteristic impedance equal to 120 Ω.

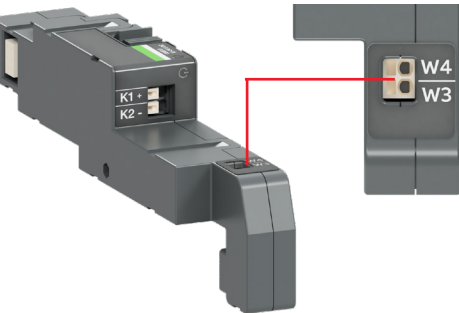


Fig. 5.7 Auxiliary power supply module, type OXEA1, is needed when Ekip Signalling 2K and Com -modules are mounted to ATS Controller TruCONTROL

#### 5.3.1 Electrical characteristics

The following table lists the electrical characteristics:

Module	OXEA1
Power supply input voltage (K1+, K2-)	12 - 24 V DC ± 10% SELV
Nominal power consumption	5 - 12 W
Inrush current	Maximum 2 A
Local Bus (A)	W3
Local Bus (B)	W4

Table 5.1 Electrical characteristics of auxiliary power supply module OXEA1

#### 5.3.2 Signallings

LED	Indication	Description
Power LED, green	On, fixed	Power is connected to the input of the module.
	Off	Power is not connected.

Table 5.2 Indication / auxiliary power supply module OXEA1



Fig. 5.8 Signals of auxiliary power supply module OXEA1

# 5.4 Using Ekip Signalling 2K-\_-module

The Ekip Signalling 2K-\_- is a signalling accessory module. It is suitable for ATS Controller TruCONTROL. The module has:

- Two digital inputs, and two contacts for output signals.
- A power status LED, and four signalling LEDs (one LED for every input/output).



**Notice**  
On each ATS, a maximum of three Ekip Signalling 2K modules can be installed: one 2K-1, one 2K-2, and one 2K-3. These modules differ by their name and label, and have distinct wiring, but they are identical in terms of their characteristics and manner of installation.

## 5.4.1 Electrical characteristics of Ekip Signalling 2K-\_-module

The following table lists the electrical characteristics of the module:



Fig. 5.9 Ekip Signalling 2K -module

Component	Characteristics
Output contacts	Maximum switching voltage*: 150 V DC / 250 V AC
	Breaking power*: 2 A @ 30 V DC, 0.8 A @ 50 V DC, 0.2 A @ 150 V DC, 4A @ 250 V AC
	Dielectric strength between each contact and coil: 1000 V AC (1 minute @ 50 Hz)
	Dielectric strength between open contacts: 1000 V AC (1 minute @ 50 Hz)
Input contacts	5V@2.5mA
	Do not connect to any power supply

\*Data relating to a resistive load

Table 5.3 Electrical characteristics of Ekip Signalling 2K-\_-module

## 5.4.2 Access from the display / Ekip Signalling 2K-\_-module

With modules energized, and Local Bus enabled, the presence of the modules on the module slot activates additional menus on the display:

- In order to configure the inputs and output contacts.
- To display information on the modules and the state of inputs and outputs.

The following table illustrates the path for accessing the configuration parameters of the module from the display:

Settings (*Default)		Description
Modules (Optional modules)		
Ekip Signalling 2K-1 / -2 / -3		
I 11/12, I 21/22, I 31/32		
Function	No Function*	Input disabled
	Emergency Stop	Transfers to O position in delayed transition I-O-II type switches. Disables automatic control mode in both delayed and Open/Closed transition types.
	Remote Test on Load	Start/stop test on load sequence in rising (NO) or falling (NC) edge of the input signal.
	Remote Test off Load	Start/stop test off load sequence in rising (NO) or falling (NC) edge of the input signal.
	Inhibit ATS	Prevent switch control operations, configuration, test sequences and generator start in case of priority source failure.
	Manual Retransfer	Disables automatic transfer back to priority source.
	Source Priority S1	Sets priority for source 1 in transformer-transformer application.
	Source Priority S2	Sets priority for source 2 in transformer-transformer application.
	Inhibit Transfer	Disables automatic transfer from priority source to non-priority source. When input is activated, transfer to non-priority can be initiated by pressing HMI control button and entering the device password.
	Bypass Running Time Delays	Bypass any currently running time delay.
	Remote Control to S1	Transfer to S1 when active. Overridden by activated 'Remote Control to OFF' signal.
	Remote Control to OFF	Transfer to position O when active.
	Remote Control to S2	Transfer to S2 when active. Overridden by activated 'Remote Control to OFF' or 'Remote Control to S1' signals.
	Reset Alarm	Reset any active switch control alarms (open I failure, close I failure, open II failure, close II failure).
	Inhibit Transfer w/ Override	Prevent transfer from an acceptable power source.
	Load Shed Input Signal	Transfer to priority source in 2-position switches. Transfer to Off position in 3-position switches in case the priority source is not acceptable.
	Manual-Auto Mode	Toggle automatic/HMI control mode, input is active only in rising/falling edge according to contact type.
Contact Type	NC	Active open
	NO*	Active closed

Continued on the next page

Settings (*Default)		Description
Modules (Optional modules) (continued)		
O 11/12, O 21/22, O 31/32		
Function*	Function No	Output disabled
	Alarm/Product Availabilit	Signals any active alarms or ATS being disabled for automatic transfer operations.
	Load Connected to S1	Switch in position I.
	Load Disconnected	Switch in position O.
	Load Connected to S2	Switch in position II
	Pre-transfer Signal 1	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 2	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 3	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Pre-transfer Signal 4	Signal is activated and transfer is delayed according to pre-transfer delay. Signal is kept activated according to post-transfer delay after transfer.
	Source 1 Available	No anomalies in S1 voltage supply.
	Source 2 Available	No anomalies in S2 voltage supply.
	Load Shed Output Signal	Used for shedding non-essential loads before transferring to non-priority source. Signal is activated before transferring to non-priority source according to load shed delay and kept activated until load is transferred back to priority source.
	Elevator pre-signal 1	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 2	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 3	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Elevator pre-signal 4	Signal is activated and transfer is delayed according to Elevator pre-signal delay. Signal is kept activated according to Elevator post-signal delay after transfer.
	Transfer Alarm <sup>1)</sup>	Activate output after ATS has transferred to non-priority source.
Contact Type	NC	Active open
	NO*	Active closed

<sup>1)</sup> Only available with Level 4 controls.



Test	
:	
Modules (Optional modules)	
Ekip Signalling 2K-1 / -2 / -3	Auto Test
:	
—	

Table 5.5 Configuration and test parameters of Ekip Signalling 2K\_-module in HMI

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Signalling 2K-1 / -2 / -3	
SN	Serial number
Version	Software version
Input 1	The logical state of the inputs: “Off” if not active, “On” if active
Input 2	
Output 1	The state of the output contacts: “Open” if open, “Closed” if closed
Output 2	
:	
—	

Table 5.4 Information of Ekip Signalling 2K\_-module in HMI

### 5.4.3 Signals and inputs/outputs of Ekip Signalling 2K\_-module

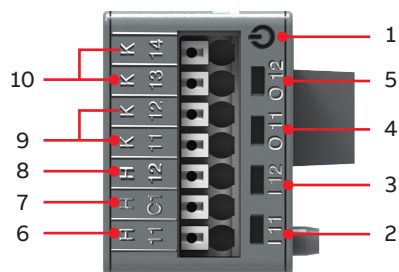


Fig. 5.10 Signals and inputs/outputs of Ekip Signalling 2K\_-module

- 1 Power LED, green. The possible states are:
  - Off: power supply absent.
  - On fixed: power supply and communication with the device present (with a device with the Alive LED option disabled).
  - On, with one flash per second (synchronized with that of the green LED on the device): power supply and communication with device present (with a device with the Alive LED option enabled)
  - On, with two quick flashes per second (not synchronized with those of the green LED on the device): power supply present, and communication with device absent (for example: for Local Bus disabled)<sup>1)</sup>
- 2 Green<sup>3)</sup> LED for signalling the physical state of the input H x1<sup>2)</sup>. The possible states are:
  - Off: floating input
  - On fixed: input short-circuited on H Cx<sup>2)</sup>
- 3 Green<sup>3)</sup> LED for signalling the physical state of the input H x2<sup>2)</sup>. The possible states are:
  - Off: floating input
  - On fixed: input short-circuited on H Cx
- 4 Green<sup>3)</sup> LED for signalling contact K x1 - K x2<sup>2)</sup>. The possible states are:
  - Off: contact open
  - On fixed: contact closed
- 5 Green<sup>3)</sup> LED for signalling the state of the contact K x3 - K x4<sup>2)</sup>. The possible states are:
  - Off: contact open
  - On fixed: contact closed
- 6 Input I x1
- 7 Conductive part of the inputs H x1 and H x2<sup>2)</sup>
- 8 Input I x2<sup>2)</sup>
- 9 Output contact pin O x1<sup>2)</sup>
- 10 Output contact pin O x2<sup>2)</sup>

1) The absence of communication is signalled immediately by the power LED, unlike the outputs which (apart from those programmed to be activated in the case of disconnection) are deactivated if the condition persists for at least 8 s

2) With x = 1, 2, or 3

3) The LED turns on and off according to the physical state of the input, without taking any account of how the Delay parameter is set.

Connections are push-in spring terminals, no tool is required.

For external wiring, cable cross section; AWG 22-16 / 0,5-1,5 mm<sup>2</sup>.

## 5.5 Ekip Signalling 10K

The Ekip Signalling 10K is an external signalling accessory module that can be installed on a DIN rail. It is suitable Level 3 and Level 4 controllers (LCD and touch control interfaces). This Ekip signalling module provides:

- 10 contacts for output signals.
- 10 digital inputs. Input I S11 (HS21, HS22) is not supported.
- A power LED, and 20 signalling LEDs (one for each output/input).

The module can communicate with the outside in two **alternative** ways:

- Via Local Bus, with a single Control Unit communication through connector T13 or trough the power supply module OXE1.
- Via Link Bus, with a maximum of four Control Units each equipped with an Ekip Link module.



Fig. 5.11 Ekip Signalling 10K module is installed on a DIN-rail

Further information on Ekip Signalling 10K is available from the web site <http://www.abb.com/abblibrary/DownloadCenter/>, in particular in the manual 1SDH001318R0002.



### Notice

The module can be connected only to internal Ethernet networks with one or more switchboards, to which the switch or the accessories are connected. It is the installer's responsibility to ensure that all the necessary safety measures are adopted for all the connected devices (for example, the necessary access authorisations, and so on). The module cannot be connected to other Ethernet networks (for example, with the purpose of monitoring the system, or the office), or to the Internet.

**With communication via Local Bus**, unless the Control Unit is disconnected, then module contacts closing/opening is controlled by the Control Unit and the information on the input status is transmitted by the module to the Control Unit. In particular, the Control Unit can be programmed so that:

- The closing/opening of a contact corresponds to a desired event or combination of events detected by the Control Unit.
- The activation of an input corresponds to an action by the Control Unit.

**NOTE!** The Ekip Signalling 10K-1 module is equipped with ten inputs (with as many LEDs, giving a total of twenty LEDs). Ekip Signalling 10K-2 and 10K-3 modules are not supported.

**With communication via Link Bus:**

- The module is connected to a network on which the Control Units equipped with an Ekip Link module share data packets containing information on their own state.
- The IP addresses of the Control Units to which you wish to connect the module must be inserted into the module, and each contact can be programmed to be closed/opened in response to an event or combination of events regarding a Control Unit connected.
- If the module receives a packet sent from a Control Unit connected, the module reads the content of the packet and triggers any action that may have been programmed.

More information of Ekip Link module, see <https://new.abb.com/low-voltage/products/circuit-breakers/emax2/benefits/ekip-link>

With Link Bus communication, the ports used by the module are:

Port	Service	Notes
502/tcp	Modbus	TCP When the module is used as a communication module.
18/udp	ABB proprietary	In case of exchange of fast information between ABB devices.

Table 5.6 Ports used with Link Bus communication

The module must be powered independently from the Control Units to which it's connected, and can be powered in AC or DC.



**Notice**  
AC and DC power supplies cannot be present at the same time.

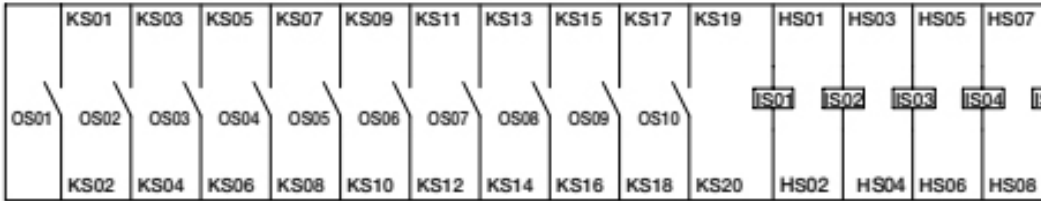


Fig. 5.12 Ekip Signalling 10K module, connection diagram

### 5.5.1 Connections

The module must be mounted on a DIN rail, and connected by wiring the connectors on the module. With communication via Local Bus, the communication lines on the module must be connected corresponding lines on the connector T13 or on the power supply module of the switch. On the contrary, with communication via Link Bus, the Link Bus connector on the module must be connected to an Ethernet switch.

### 5.5.2 Wiring

For the wirings:


- For the Local Bus, Belden type 3105A or equivalent cables must be used, that is with a pair of twisted and shielded ca-

bles, with a characteristic impedance equal to 120  $\Omega$ . The screen of the cables must be connected to earth on one side of the connection, on the Control Unit side. The maximum recommended length for the connection is 10 m.

- For communication via Link Bus, a cable of type Cat.6 S/FTP must be used (Cat.6 with S/FTP double shielding).


### 5.5.3 Outputs inputs and signals

The outputs and the inputs are accessible on the connectors positioned on the front of the module. Tables on next pages illustrates the pins of these connectors, the signals related to the outputs and the signals related to the inputs, and their meanings.

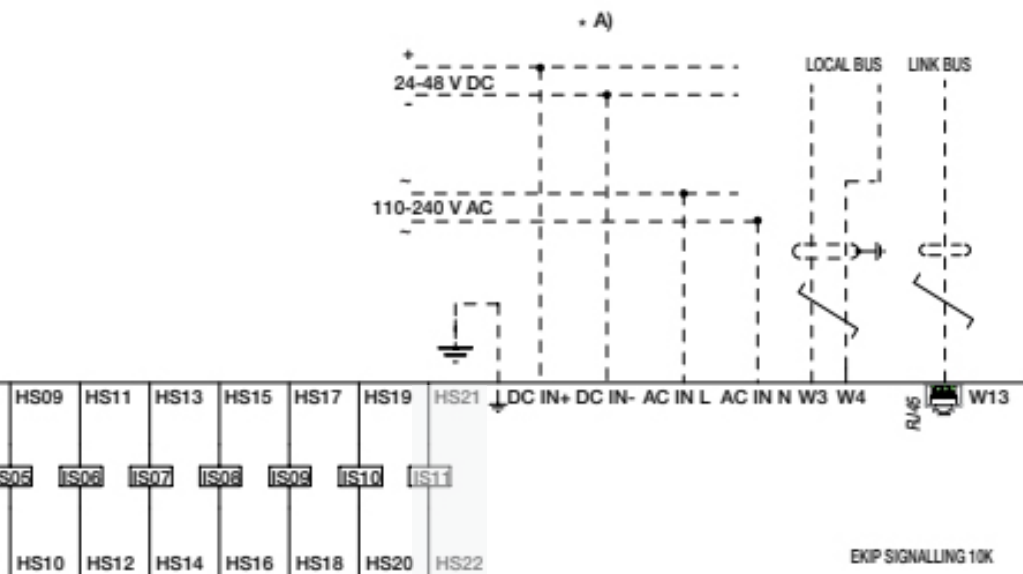

	Position	Pin	Description
	A	KS01, KS02	Pins of the output contact O S01.
		KS03, KS04	Pins of the output contact O S02.
		KS05, KS06	Pins of the output contact O S03.
		KS07, KS08	Pins of the output contact O S04.
		KS09, KS10	Pins of the output contact O S05.
	B	KS11, KS12	Pins of the output contact O S06.
		KS13, KS14	Pins of the output contact O S07.
		KS15, KS16	Pins of the output contact O S08.
		KS17, KS18	Pins of the output contact O S09.
		KS19, KS20	Pins of the output contact O S10.
C	C	HS01, HS02	Input I S01 and its reference.
		HS03, HS04	Input I S02 and its reference.
		HS05, HS06	Input I S03 and its reference.
		HS07, HS08	Input I S04 and its reference.
		HS09, HS10	Input I S05 and its reference.
		HS11, HS12	Input I S06 and its reference.
D	D	HS13, HS14	Input I S07 and its reference.
		HS15, HS16	Input I S08 and its reference.
		HS17, HS18	Input I S09 and its reference.
		HS19, HS20	Input I S10 and its reference.
		HS21, HS22	Input I S11, not supported.

Table 5.7 Outputs and inputs

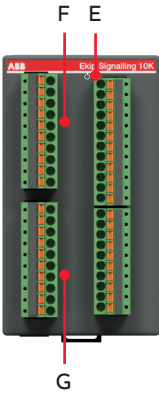	Position	Pin	Description
	E	-	<p>Power LED, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: power supply absent.</li> <li>• On, fixed: power supply present, and communication via Local Bus/Link Bus active (with LED Alive option disabled <sup>(1)</sup>).</li> <li>• On, flashing once per second: power supply present, and communication via Local Bus/Link Bus active (with LED Alive option enabled <sup>(1)</sup>).</li> <li>• On, with two quick flashes per second: power supply present, and communication via Local Bus/Link Bus absent (e.g. because of Local Bus deactivation, or Control Unit disconnection <sup>(2)</sup>, or physical disconnection) <sup>(3)</sup>.</li> </ul>
	F	O S01	<p>Signalling LED of the contact O S01 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S02	<p>Signalling LED of the contact O S02 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S03	<p>Signalling LED of the contact O S03 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed</li> </ul>
		O S04	<p>Signalling LED of the contact O S04 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S05	<p>Signalling LED of the contact O S05 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
	G	O S06	<p>Signalling LED of the contact O S06 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S07	<p>Signalling LED of the contact O S07 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S08	<p>Signalling LED of the contact O S08 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S09	<p>Signalling LED of the contact O S09 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>
		O S10	<p>Signalling LED of the contact O S10 status, green. The possible states are:</p> <ul style="list-style-type: none"> <li>• Off: contact open.</li> <li>• On, fixed: contact closed.</li> </ul>

<sup>(1)</sup> The LED Alive option with communication via Local Bus is the one set on the Control Unit, with communication via Link Bus it's the one set on the module.

<sup>(2)</sup> With communication via Link Bus, absence of communication is signalled if any Control Unit associated to the module is disconnected.

<sup>(3)</sup> The absence of communication is signalled if it persists for at least 8 s.

Table 5.8 Output signals

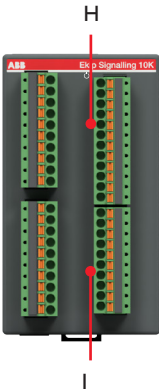
	Position	Pin	Description
	H	I S01	Signalling LED of the input I S01 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS01 and HS02
		I S02	Signalling LED of the input I S02 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS03 and HS04.
		I S03	Signalling LED of the input I S03 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS05 and HS06.
		I S04	Signalling LED of the input I S04 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS07 and HS08.
		I S05	Signalling LED of the input I S05 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS09 and HS10.
		I S06	Signalling LED of the input I S06 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS11 and HS12.
	I	I S07	Signalling LED of the input I S07 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS13 and HS14.
		I S08	Signalling LED of the input I S08 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS15 and HS16.
		I S09	Signalling LED of the input I S09 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS17 and HS18.
		I S10	Signalling LED of the input I S10 physical status, green. The possible states are: • Off: input floating. • On, fixed: short-circuit between pins HS19 and HS20.
		I S11	Not supported

Table 5.9 Input signals



5.5.4 Communication connectors

The communication connectors are positioned on the upper side of the module. The following table illustrates the communication connectors:

Position	Name	Description
A	Local Bus W3	Line H of the Local Bus
	Local Bus W4	Line L of the Local Bus
B	Link Bus W13	Link Bus Connector

Table 5.10 Communication connectors

The following table illustrates the possible signals on connector W13, and their meaning:

Position	Description
C	Link LED, green. The possible states are: <ul style="list-style-type: none"><li>• Off: connection error (signal absent).</li><li>• On, fixed: correct connection.</li></ul>
D	Activity LED, yellow. The possible states are: <ul style="list-style-type: none"><li>• Off: absence of activity on the line.</li><li>• On, fixed or flashing: activity present on the line (reception and/or transmission).</li></ul>

Table 5.11 Signals on connector W13

5.5.5 Power supply connectors

The power supply connectors are positioned on the lower side of the module. The following table illustrates the power supply inputs:

Position	Name	Description
E	AC IN N	AC power input
	AC IN L	AC power input
	⏏	Earth connection
F	DC IN +	DC + power input
	DC IN -	DC - power input

Table 5.12 Power supply connectors

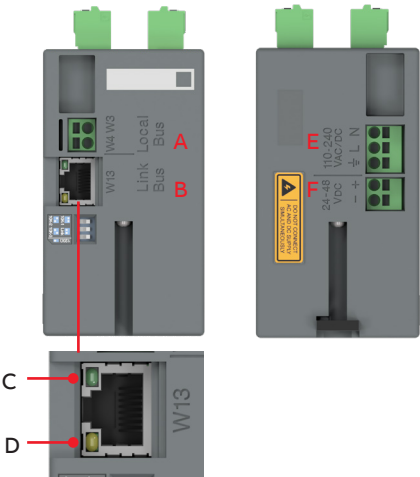


Fig. 5.13 Ekip Signalling 10K module, Communication connectors on left, Power supply connectors on right

When used external power source, make sure that supply voltage complies with the recommendations below:

Component	Characteristics
AC power supply	<ul style="list-style-type: none"><li>• Voltage: 105...265 V AC.</li><li>• Frequency: 45...66 Hz.</li><li>• Power absorbed with 10 contacts closed: 10 VA.</li></ul>
DC power supply	<ul style="list-style-type: none"><li>• Voltage: 21.5...53 V DC.</li><li>• Power absorbed with 10 contacts closed: 10W.</li></ul>
Output contacts	<ul style="list-style-type: none"><li>• Maximum switching power <sup>(1)</sup>: 1250 VA.</li><li>• Maximum switching voltage <sup>(1)</sup>: 150 V DC / 250 V AC.</li><li>• Breaking capacity <sup>(1)</sup>: 2 A @ 30V DC, 0.8 A @ 50V DC, 0.2 A @ 150V DC, 4 A @250V AC.</li><li>• Dielectric strength between open contacts and between every contact and coil: 1000 V AC (1 minute @ 50 Hz).</li></ul>

<sup>(1)</sup> Data related to a resistive load.

Table 5.13 The electrical specifications of the module power supplies and outputs

5.5.6 DIP switch configuration

At installation, the module must be configured to communicate via Local Bus or Link Bus.

With communication via Local Bus, a 120 Ω termination resistor must be inserted on the communication lines. This 120 Ω termination resistor is switched to the ON-position by the DIP switch 1 positioned on the upper side of the module:

DIP Switch	Termination resistor	
	No	Yes
1	OFF	ON

Table 5.14 Inserting the termination resistor ON

The Ekip Signalling 10K module configured for a basic module 10K-1 is already done in the factory; configuration is done with the DIP switches 2 and 3, both are in OFF-position, see the Fig.5.15. The DIP switches are positioned on the upper side of the module. The following tables describe the possible configurations, 10K-2 and 10K-3 configurations are not supported in automatic transfer switches:

DIP Switch	Ekip Signalling			LinkBus
	10K-1	10K-2	10K-3	
2	OFF	ON	OFF	ON
3	OFF	OFF	ON	ON

Table 5.15 Configurations

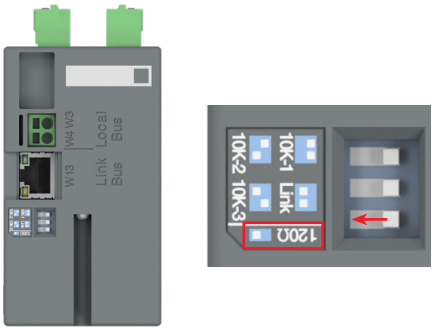


Fig. 5.14 Ekip Signaling 10K module; When using a local bus, the 120 Ω termination resistor **must be switched** to the ON position with DIP switch 1. By default, the Ekip Signaling 10K module type is already 10K-1 position (= DIP switches 2 and 3 are on OFF-position)

**NOTE!** The operational configuration is read only at power on. Therefore, if the module is on, it must be turned OFF and ON in order for it to recognise a new configuration.

5.5.7 Access via Local Bus

Access via Local Bus allows the module to be shown on the display of the Control Unit to which the module is connected.

In order to show the module on the display of the Control Unit, the module must be powered, configured through switches as a 10K-1 (10K-2 or 10K-3 are not supported) (see the paragraph 5.5.6 DIP switch configuration), and connected correctly to the Control Unit, and the Local Bus must be enabled on the Control Unit.

Then the presence of the module activates on display additional menus, that allow information on the module and the inputs and outputs status to be displayed. For operation with communication via Local Bus, the module can be configured only with the Ekip Connect software connected to the Control Unit.

The following table illustrates the path to access information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Signalling 10K-1	
SN	Serial number
Version	Software version
Input 1	The logical state of the inputs: "Off" if not active, "On" if active
Input 2	
Output 1	The state of the output contacts: "Open" if open, "Closed" if closed
Output 2	
:	

Table 5.16 Information of Ekip Signalling 10K-1\_-module in HMI



**Notice**  
If the Control Unit is disconnected for at least 8 s, the outputs are deactivated, except those programmed to be activated in case of disconnection. Normal operation is restored at reconnection. See next page the Settings.

The following table illustrates the configuration parameters of the inputs, and their possible values:

Settings (*Default)		Description
Modules (Optional modules)		
Ekip Signalling 10K-1		
Polarity	Active Closed*	To be considered active, the input must be short-circuited to its reference.
	Active Open	To be considered active, the input must be floating.
Delay	0.00...100.00 s (0.10s*) in steps of 0.01 s	Delay time after the input has changed state, before the change of state is validated (if the input is reset before this time has elapsed, the change of state is invalidated). If 0.00 s is selected, the value assigned to the parameter is 300 µs.
Contact Type	Normally Open*	Normally open contact.
	Normally Closed	Normally closed contact.
Latched	Off*	Self-latching disabled: the output is deactivated when the event disappears.
	On	Self-latching enabled: when the event disappears, the output is kept active for at least the selected time.
Signal Source	None* Any allarm Local Bus Not Active <sup>1)</sup> Custom <sup>2)</sup>	Event in response to which the output must be activated, that is the contact must be: • Closed, if set as normally open. • Open, if set as normally closed.
Delay	0.00...100.00 s (0,00 s*) in steps of 0.01 s	Delay time after the selected event has taken place, before the output is activated (if the event disappears before this time has elapsed, the output is not activated). If 0.00 s is selected, the value assigned to the parameter is 300 µs.
min Activation Time	0 ms* 100 ms 200 ms	With self-latching enabled, the minimum time in which the output is kept active (when the selected time is exceeded, the output is kept active as long as the event that activated it persists).  In case of disconnection, the min Activation Time is ignored, and the outputs programmed to be activated in the event of disconnection are kept active for at least 200 ms.

<sup>1)</sup> With communication via Local Bus, the Local Bus Not Active event corresponds to the communication absent condition (e.g. because of Local Bus deactivation, or physical disconnection).

<sup>2)</sup> The Custom event is a combination of default events, which can be modified using the Ekip Connect application to match the closing/opening of the contact to a wide range of combinations of the Control Unit status bits.

Table 5.17 The configuration parameters of the inputs, and their possible values

5.5.8 Access via Link Bus

Via Link Bus, the module can be configured only with the Ekip Connect application, by running the Ethernet scan and selecting the module from the devices found. From Ekip Connect, at most three accesses to the module are possible.

With the Ekip Connect application and the Ethernet scan, various pages are available, in which you can:

- Display information on the module.
- Insert the TAG Name, in order to facilitate the module recognition in subsequent Ethernet scans.
- Connect the module to up to four devices (actors) connected to the network.
- Protect the configuration of the module.
- Configure the inputs and the outputs.

- Enable/disable the LED Alive option (see the paragraph “Outputs inputs and signals”).

Information

The information on the module that can be displayed is:

- The serial number and the software version.
- The IP address, the Network Mask, and the Gateway address.
- The MAC address.
- The logical state of the inputs (“Off” if not active, “On” if active).
- The state of the output contacts (“Open” if open, “Closed” if closed).

The following table illustrates the information on the module:

Information	Description
IP address	It's the address assigned to the module at the moment of connection to the network. It consists of four bytes (for a total of 32 bits), each of which can have value from 0 to 255. By default, allocation is dynamic. With dynamic allocation, the module waits to receive the IP address from a DHCP server. Without a DHCP server, the module adopts an Autoconfiguration IP address in the range 169.254.xxx.xxx, calculated in a pseudo-random way so that it's the same at every power on. Alternatively, it's possible to enable the Static IP address option, that allows the IP address to be forced. Then it's necessary to make sure that the inserted IP address is different from the ones of the other devices connected to the same network.
Network Mask	It's the subnet mask, and it identifies the method to recognize the subnet to which the module belongs, with the possibility to search for the module within a defined set of recipients. If the Static IP address option is enabled, the correct Network Mask must also be inserted.
Gateway address	It's the IP address of the node to which the module is connected, in the presence of multiple subnets. If the Static IP address option is enabled, the correct Gateway address must also be inserted.
MAC address	It's the address assigned by ABB, having an OUI equal to ac:d3:64.

Table 5.18 The information on the Ekip Signalling 10K-1 module

## Connection

In order to connect the module to devices (actors) connected to the network, four positions are available with values from 0 to 3. In each position it's possible to insert the IP address of a Control Unit equipped with an Ekip Link module, the IP address of the module, or a null value (meaning no IP address inserted).



### Notice

Except for the null value, it's not possible to insert the same IP address in more than one position.

If a Control Unit of which the IP address is inserted results disconnected for at least 8 s, this is signalled both by Ekip Connect, and by the module through the power LED with two quick flashes and a pause.

## Protection

The module can be protected in two ways:

- By changing access from remote to local.
- By password.

With local access:

- All further modifications performed from Ekip Connect are prevented.
- In order to restore remote access, the switches of the module must be positioned to OFF for at least 1 s, and repositioned to ON (see the paragraph 5.5.6 DIP switch configuration").

### NOTE:

To restore remote access, after the commutation of the switches, it's not necessary to turn the module off and on.

In order to protect the module by password, access must be remote, and the "Password Required" operating mode must be selected instead of the "Standard mode" one: then, any modification from Ekip Connect can be performed only after the password insertion.

The password:

- Has a default value equal to 1.
- Can be modified only in "Password Required" mode, by selecting the "Change Password" command and filling the "Insert new password" field.
- Can have only a numerical value between 0 and 99999.
- Can be reset (with restoration of the default value), by positioning the switches to OFF for at least 1 s, and repositioning them to ON (see the paragraph "Configuration using switches").

### NOTE:

If any zero is inserted before the numerical value of the password, it's ignored.

To reset the password, after the commutation of the switches, it's not necessary to turn the module off and on.

## Inputs and outputs

The configuration of inputs and outputs is identical to that via Local Bus (see the paragraph "Access via Local Bus").

Precisely:

- The setting of the Polarity and Delay parameters for the inputs, and of the Contact Type, Latched, Signal Source, Delay, and min Activation Time parameters for the outputs.
- The possibility to match the activation of an output to a wide range of combinations of a Control Unit status bits, or to its disconnection.

In addition:

- For each output, an actor - that is, one of the four available positions for the insertion of the IP addresses
  - must be selected (by default, the position 0 is selected).
- Each output can be programmed to be activated at the disconnection of any combination of the Control Units selected and of the Ethernet cable (physical disconnection).
- By selecting the actor corresponding to the IP address of the module, the output can be programmed to be activated on the basis of the module status bits (e.g. the state of inputs and/or outputs).

#### NOTE:

To program the activation of an output in case of disconnection, the actor to which the output has to be associated must not be selected by setting the Actor Number parameter. Instead, the Control Units and the module must be selected via the Signal Source menu, setting to 1 the bits associated to the actor disconnection events (to select the Control Units for which disconnection must be signalled) and to the physical disconnection event (to signal the disconnection of the module). If the output is programmed to be activated in case of disconnection (of one or more Control Units and/or the module), the value assigned to the Actor. Number parameter is ignored.

#### NOTE:

If a Control Unit results disconnected from the network, only the outputs associated to the Control Unit are deactivated (except those programmed to be activated in case of disconnection of the Control Unit, that are activated). On the contrary, if it's the module that disconnects from the network, all the outputs are deactivated (except all those programmed to be activated in case of disconnection, of the module and/or of the Control Units). In both cases, normal operation is restored on reconnection (of the Control Unit in the first case, of the module in the second).



#### Notice

The outputs programmed to be activated in case of disconnection are activated if the disconnection persists for at least 8 s.

## 5.6 Using Ekip Com \_-modules

Suitable Ekip Com \_-modules are:

- Ekip Com Modbus RTU-OX
- Ekip Com Modbus TCP-OX
- Ekip Com Profibus DP
- Ekip Com DeviceNet
- Ekip Com Profinet
- Ekip Com EtherNet/IP
- Ekip Com IEC 61850
- Ekip Com Hub

### 5.6.1 Ekip Com Modbus RTU -module

The Ekip Com Modbus RTU is a communication accessory module, that integrates the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network.

It can be connected to a RS-485 network with a Modbus RTU communication protocol, and allows you to:

- Connect the automatic transfer switch to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).

For the communication lines W1 and W2, Belden type 3105A or equivalent cables must be used.



Fig. 5.15 Ekip Com Modbus RTU -module



5.6.1.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
RX and TX LEDs, green	Off	Modbus RTU communication not active.
	On, flashing rapidly	Modbus RTU communication active.

Table 5.19 Indication / Ekip Com Modbus RTU -module

5.6.1.2 Termination resistor

On the Ekip Com Modbus RTU module it is possible to activate the terminating resistance  $R_{term} = 120\ \Omega$ . To enable the  $R_{term}$ , the corresponding dip-switches 1 and 2 (on the side of the module) must be positioned to ON. This option must be selected before the installation of the module. With the Ekip Com Modbus RTU modules, the dip-switches 3 and 4 of the  $R_{pol}$  (polarization resistance), are not used.

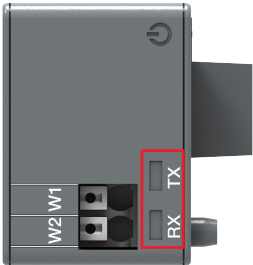


Fig. 5.16 Signals of Ekip Com Modbus RTU -module

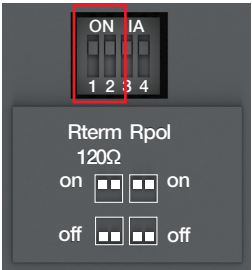


Fig. 5.17 Termination resistor; To enable the  $R_{term}$ , the dip-switches 1 and 2 must be positioned to ON. This option must be selected before the installation of the module

5.6.1.3 Access from the display /  
Ekip Com Modbus RTU –module

With modules energized the presence of the modules on the module slot activates additional menus on the display. The following table illustrates the path for accessing the configuration parameters of the modules from the display:

Settings (*Default value)			Description
:			
Modules (Optional modules)			
Ekip Com Modbus RTU			
Serial address	1... 247, default 247*	Address to be assigned to the modules. NOTE: devices connected to the same network must have different addresses	
Baudrate	9600 bit/s, 19200 bit/s*, 38400 bit/s	Data transmission speed	
Physical protocol	8.E,1*, 8.O,1, 8.N,2, 8.N,1	8.E,1 = 8 data bits, 1 EVEN parity bit, 1 STOP bit	
		8.O,1 = 8 data bits, 1 ODD parity bit, 1 STOP bit	
		8.N,2 = 8 data bits, no parity bit, 2 STOP bits	
		8.N,1 = 8 data bits, no parity bit, 1 STOP bit	
:			

Table 5.20 The path for accessing the configuration parameters of the Ekip Com Modbus RTU -module from the display

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com Modbus RTU	
SN	Serial number
Version	Software version
:	

Table 5.21 Information of Ekip Com Modbus RTU -module in HMI

### 5.6.2 Ekip Com Profibus DP -module

The Ekip Com Profibus DP is a communication accessory module, that integrates the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network.

It can be connected to a network RS-485 with protocol of Profibus communication, and allows of:

- Connect the automatic transfer switch as slaves to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).

For the communication lines W5 and W6, Belden type 3079A or equivalent cables must be used.

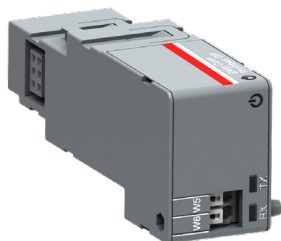


Fig. 5.18 Ekip Com Profibus DP -module

5.6.2.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication		Description
Power LED, green	Off		Power supply absent.
	On fixed	Power supply and communication with the device present.	
	On, with two quick flashes per second	Power supply present, and communication with device absent.	
RX LED, green	Off		Communication not active.
	On, fixed		Communication active.
TX LED, green	Off		Communication not active.
	On, flashing		Communication active.

Table 5.22 Indication / Ekip Com Profibus DP-module



Fig. 5.19 Signals of Ekip Com Profibus DP -module

### 5.6.2.2 Termination resistor

The Ekip Com Profibus DP modules provide the possibility to insert a 220  $\Omega$  termination resistor on the RS-485 bus, by setting the DIP-switches Rterm (1 and 2) on the side of the modules, in position ON.

In the event of termination of the bus, a 390  $\Omega$  pull-up or pull-down resistor must also be inserted on the lines, by setting the DIP-switches Rpol (3 and 4), in position ON.

These options must be selected before installation of the modules.

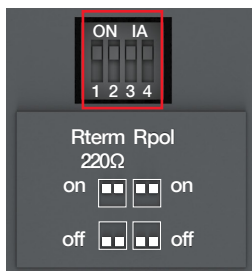


Fig. 5.20 Termination resistor; To enable the Rterm, the dip-switches 1 and 2 must be positioned to ON. When Rterm is activated, the Rpol must also be activated by turning dip-switches 3 and 4 to ON-position. These options must be selected before the installation of the modules

5.6.2.3 Access from the display  
/ Ekip Com Profibus DP -module

With modules energized the presence of the modules on the module slot activates additional menus on the display.

The following table illustrates the path for accessing the configuration parameters of the modules from the display:

Settings (*Default value)		Description
:		
Modules (Optional modules)		
Ekip Com Profibus DP		
Serial address	1...125, default 125*	Address to be assigned to the modules. IMPORTANT: devices connected to the same network must have different addresses
:		

Table 5.23 Configuration of Ekip Com Profibus DP -module in HMI

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com Profibus DP -module	
SN	Serial number
Version	Software version
:	

Table 5.24 Information of Ekip Com Profibus DP -module in HMI

### 5.6.3 Ekip Com DeviceNet -module

The Ekip Com DeviceNet –module is a communication accessory module, that integrates the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network.

It can be connected to a CAN network with a DeviceNet™ communication protocol, and allows you to:

- Connect the automatic transfer switch as slaves to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).

For the communication lines, Belden type 3084A or equivalent cables must be used.

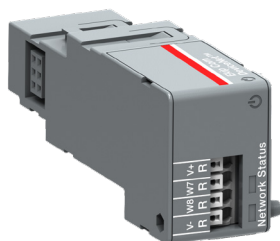


Fig. 5.21 Ekip Com DeviceNet -module

5.6.3.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
Network LED, red	Off	Device off line (with red LED off) <sup>1)</sup> , or in error conditions (with red LED on).
	On, fixed	Device on line, and allocated on a master (operating condition).
	On, flashing	Device on line, but not allocated on a master (device ready for communication).
Status LED, green	Off	No error.
	On, fixed	Device in bus off, or Network Power absent condition.
	On, flashing	I/O connection (cyclic data) in timeout.

<sup>1)</sup> The device has not yet sent Duplicate ID sequence on line.

Table 5.25 Indication / Ekip Com DeviceNet -module in HMI

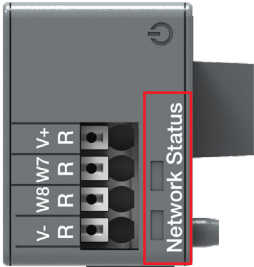


Fig. 5.22 Signals of Ekip Com DeviceNet -module



### 5.6.3.2 Termination resistor

The modules provide the possibility to insert a  $120\ \Omega$  termination resistor on the CAN bus, by setting the DIP-switches Rterm (1 and 2) on the side of the modules, in position ON. This option must be selected before the installation of the modules. With the Ekip Com DeviceNet - modules, the dip-switches 3 and 4 of the Rpol (polarization resistance), are not used.



#### Notice

The termination resistors must never be included in the nodes. The inclusion of this capability could easily lead to a network with improper termination (impedance too high or too low), potentially causing a failure. For example the removal of a node, which includes a termination resistor, could result in a network failure.

The termination resistors must not be installed at the end of a branch (drop line), only at the two ends of the main backbone (trunk line).

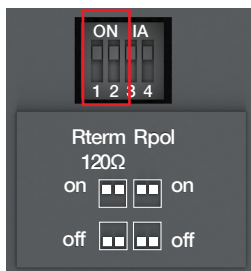


Fig. 5.23 Termination resistor; To enable the Rterm, the dip-switches 1 and 2 must be positioned to ON. This option must be selected before the installation of the module.

5.6.3.3 Access from the display /  
Ekip Com DeviceNet –module

With modules energized the presence of the modules on the module slot activates additional menus on the display.

The following table illustrates the path for accessing the configuration parameters of the modules from the display:

Settings (*Default value)		Description
:		
Modules (Optional modules)		
Ekip Com DeviceNet		
MAC address	1... 63, default 63*	Address to be assigned to the modules. IMPORTANT: devices connected to the same network must have different addresses
Baudrate	125 kbit/s, 250 kbit/s*, 500 kbit/s	Data transmission speed
:		
—		

Table 5.26 The path for accessing the configuration parameters of the Ekip Com DeviceNet -module from the display

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com DeviceNet	
SN	Serial number
Version	Software version
:	
—	

Table 5.27 Information of Ekip Com DeviceNet -module in HMI

### 5.6.4 Ekip Com Modbus TCP -module

Ekip Com Modbus TCP is an accessory module that can function as a communication module integrating the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network.

As a communication module, it can be connected to an Ethernet network with the Modbus TCP communication, and allows:

- Connect the automatic transfer switch to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).



#### Notice

Since the module allows access to the data contained in the automatic transfer switch, it can only be connected to networks that meet all the necessary requirements for safety and prevention of unauthorized access (for example, the network of the control system of an installation). It is the installer's responsibility to ensure that all the necessary safety measures are adopted (for example, firewalls, and so on). The module cannot be connected directly to the Internet. It is recommended to connect it only to dedicated Ethernet networks, with the Modbus TCP communication protocol.

For the communication bus, a cable of type Cat.6 S/FTP must be used (Cat.6 with S/FTP double shielding).



Fig. 5.24 Ekip Com Modbus TCP -module

The following table illustrates the ports used by the module:

Port	Service	Notes
502/tcp	Modbus TCP	When the module is used as a Modbus TCP/IP communication module.
80/tcp	Server HTTP	When the module is used as a Server HTTP.
319/udp	IEEE 1588	When IEEE protocol 1588 is enabled
320/udp		

Table 5.28 Ports of Ekip Com Modbus TCP -module

5.6.4.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
Link LED, green	Off	Connection error (signal absent).
	On, fixed	Correct connection.
Activity LED, yellow	Off	No activity on the line.
	On, flashing	Activity present on the line (in reception and/or transmission).

Table 5.29 Indication / Ekip Com Modbus TCP -module

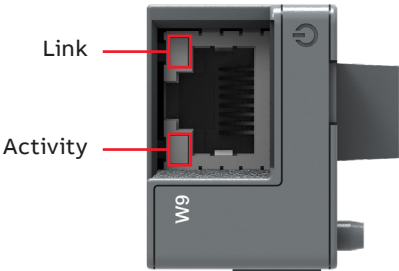


Fig. 5.25 Signals of Ekip Com Modbus TCP -module

**5.6.4.2 Access from the display**  
**/ Ekip Com Modbus TCP –module**

With modules energized the presence of the modules on the module slot activates additional menus on the display:

- For setting the function and addressing of the modules.
- In order to display information on the modules.

The following table illustrates the path from the display, for setting the function and addressing of the modules:

Settings (* Default value)		Description
:		
Modules (Optional modules)		
Ekip Com Modbus TCP		
Force Static IP address	Off*	Dynamic IP address.
	On	Static IP address.
Static IP Address		Displayed with static IP Address enabled, it must be selected in order to insert the IP Address of the modules.
Static Network Mask		Displayed with static IP Address enabled, it must be selected in order to insert the subnet mask of the modules.
Static Gateway addr		Displayed with static IP Address enabled, it must be selected in the presence of multiple subnets, in order to insert the IP Address of the node to which the modules are connected.
:		

Table 5.30 The path for setting the function and addressing of the modules of the Ekip Com Modbus TCP -module from the display

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com Modbus TCP	
SN	Serial number
Version	Software version
IP Address	This is the address assigned to the modules at the moment of connection to the network. It consists of four bytes (for a total of 32 bits), each of which can have value from 0 to 255. By default, allocation is dynamic. With dynamic allocation, the modules wait to receive the IP address from a DHCP server. Without a DHCP server, the modules adopt an Autoconfiguration IP Address in the range 169.254.xxx.xxx, calculated in a pseudo random manner so as to be the same at every switch-on. Alternatively, you can enable the static IP address option, which allows the IP address to be forced. In this case, you must make sure that the IP Address inserted is different to that of the other devices connected to the same network.
Network Mask	This is the subnet mask, and identifies the method to recognize the subnet to which the modules belong, with the possibility of searching for the modules within a defined set of recipients. If you enabled the option Static IP Address, you must also enter the correct Network Mask.
Gateway Address	The IP address of the node to which the module it is connected, in the presence of multiple subnets. If you enabled the Static IP Address option, you must also enter the correct Gateway Address.
TCP Client	There are three IP Addresses of the client devices connected to the modules.
MAC Address	It is the address assigned by ABB, having a OUI equal to ac:d3:64 <sup>1)</sup> .
:	

<sup>1)</sup> Organizationally Unique Identifier, formed from the first three bytes of a MAC address, and which uniquely identifies the manufacturer of an Ethernet device.

Table 5.31 Information of Ekip Com Modbus TCP -module in HMI

### 5.6.5 Ekip Com Profinet -module

The Ekip Com Profinet is a communication accessory module, that integrates the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network. The module is suitable for Level 3 and Level 4 controllers (LCD and touch control interfaces) .

It can be connected to an Ethernet network with a Profinet communication protocol, and allows you to:

- Connect the automatic transfer switch to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).



#### Notice

The module can only be connected to networks that meet all the necessary requirements for safety and prevention of unauthorized access (for example, the network of the control system of an installation). It is the installer's responsibility to ensure that all the necessary safety measures are adopted (for example, firewalls, and so on). It is recommended to connect it only to dedicated Ethernet networks, with the Profinet communication protocol. The module cannot be connected to the Internet.

For the communication bus, a cable of type Cat.6 S/FTP must be used (Cat.6 with S/FTP double shielding).



Fig. 5.26 Ekip Com Profinet -module

The following table illustrates the ports used by the module:

Ethertype	Port	Service	Notes
0x88CC	-	LLDP	Link Layer Discovery Protocol
0x8892 (Profinet)	-	Profinet IO	Specific for real time communications (RT)
0x0800	34964/udp	Profinet-cm (Context Manager)	DCE/RP

Table 5.32 Ports of Ekip Com Profinet –module

5.6.5.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
Link LED, green	Off	Connection error (signal absent).
	On, fixed	Correct connection.
Activity LED, yellow	Off	No activity on the line.
	On, flashing	Activity present on the line (in reception and/or transmission).

Table 5.33 Indication / Ekip Com Profinet -module

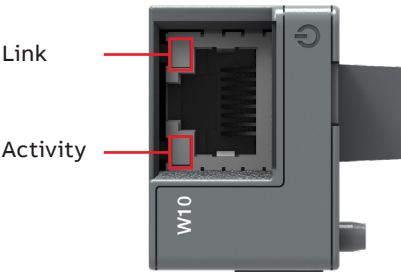


Fig. 5.27 Signals of Ekip Com Profinet -module



5.6.5.2 Access from the display  
/ Ekip Com Profinet -module

The following table illustrates the path from the display for accessing information on the module:

About	
:	
Modules (Optional modules)	
Ekip Com Profinet -module	
SN	Serial number
Version	Software version
MAC Address	It is the address assigned by ABB and with an OUI (Organizationally Unique Identifier, formed of the first three bytes of a MAC address, and which uniquely identifies the manufacturer of an Ethernet device) equal to ac:d3:64.
:	

Table 5.34 Information of Ekip Com Profinet -module

5.6.6 Ekip Com EtherNet/IP -module

The Ekip Com EtherNet/IP is an accessory module that can act as a communication module integrating the automatic transfer switch operated by ATS Controller TruCONTROL in an industrial remote supervision and control network. The module is suitable for Level 3 and Level 4 controllers (LCD and touch control interfaces) .

It can be connected to an Ethernet network with a EtherNet/IP™ -communication protocol, and allows you to:

- Connect the automatic transfer switch to the network, with dialog functionality.
- Provide the status information of the automatic transfer switch (open, closed).



**Notice**  
Since this module allows the access to the data contained in the automatic transfer switch operated by ATS Controller TruCONTROL, it can only be connected to networks possessing all the necessary requirements for security and prevention of unauthorized access (for example, the network of the control system of an installation). It is responsibility of the installer to make sure that all the necessary security measures are adopted (for example firewalls and so on). The module cannot be connected directly to the Internet. It is recommended to connect it only to dedicated Ethernet networks using the EtherNet/IP™ -communication protocol.

For the communication bus, a cable of type Cat.6 S/FTP must be used (Cat.6 with S/FTP double shielding).

The following table illustrates the ports used by the module:

Port	Protocol	Notes
44818	TCP	Encapsulation Protocol (example: ListIdentity, UCMM, CIP Transport Class 3)
44818	UDP	Encapsulation Protocol (example: ListIdentity)
2222	UDP	CIP Transport Class 0 or 1

Table 5.35 Ports of Ekip Com EtherNet/IP -module

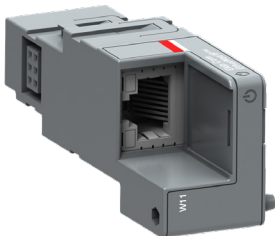


Fig. 5.28 Ekip Com EtherNet/IP -module

5.6.6.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
Link LED, green	Off	Connection error (signal absent).
	On, fixed	Correct connection.
Activity LED, yellow	Off	No activity on the line.
	On, flashing	Activity present on the line (in reception and/or transmission).

Table 5.36 Indication / Ekip Com EtherNet/IP -module

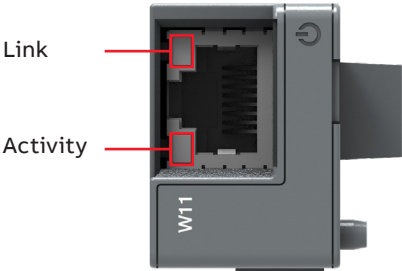


Fig. 5.29 Signals of Ekip Com EtherNet/IP -module

5.6.6.2 Access from the display /  
Ekip Com EtherNet/IP

With modules energized the presence of the modules on the module slot activates additional menus on the display:

- To set the addressing of the modules.
- In order to display information on the modules.

The following table illustrates the path from the display, for setting the function and addressing of the modules:

Settings (*Default value)			Description
:			
Modules (Optional modules)			
Ekip Com EtherNet/IP			
Force Static IP address	Off*	Dynamic IP address.	
	On	Static IP address.	
Static IP Address			Displayed with static IP Address enabled, it must be selected in order to insert the IP Address of the modules.
Static Network Mask			Displayed with static IP Address enabled, it must be selected in order to insert the subnet mask of the modules.
Static Gateway addr			Displayed with static IP Address enabled, it must be selected in the presence of multiple subnets, in order to insert the IP Address of the node to which the modules are connected.
:			

Table 5.37 The path for setting the function and addressing of the modules of the Ekip Com EtherNet/IP -module from the display

The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com EtherNet/IP	
SN	Serial number
Version	Software version
IP Address	This is the address assigned to the modules at the moment of connection to the network. It consists of four bytes (for a total of 32 bits), each of which can have value from 0 to 255. By default, allocation is dynamic. With dynamic allocation, the modules wait to receive the IP address from a DHCP server. Without a DHCP server, the modules adopt an Autoconfiguration IP Address in the range 169.254.xxx.xxx, calculated in a pseudo random manner so as to be the same at every switch-on. Alternatively, you can enable the static IP address option, which allows the IP address to be forced. In this case, you must make sure that the IP Address inserted is different to that of the other devices connected to the same network.
Network Mask	This is the subnet mask, and identifies the method to recognize the subnet to which the modules belong, with the possibility of searching for the modules within a defined set of recipients. If you enabled the option Static IP Address, you must also enter the correct Network Mask.
Gateway Address	The IP address of the node to which the module it is connected, in the presence of multiple subnets. If you enabled the Static IP Address option, you must also enter the correct Gateway Address.
TCP Client	There are three IP Addresses of the client devices connected to the modules.
MAC Address	It is the address assigned by ABB, having a OUI equal to ac:d3:64 <sup>1)</sup> .
:	

<sup>1)</sup> Organizationally Unique Identifier, formed from the first three bytes of a MAC address, and which uniquely identifies the manufacturer of an Ethernet device.

Table 5.38 Information of Ekip Com EtherNet/IP -module in HMI

### 5.6.7 Ekip Com Hub -module

Ekip Com Hub is a communication module for cloud-based connectivity through the ABB Ability™ Energy and Asset Manager (EAM).

Automatic transfer switch operated by ATS Controller TruCONTROL equipped with Ekip Com Hub can establish the connection to ABB Ability for the whole low-voltage power distribution panel. This dedicated cartridge-type communication module just needs to be inserted into the ATS Controller TruCONTROL and connected to the internet.

The Ekip Com Modbus RTU and Ekip Com Modbus TCP modules can be configured to support Ekip Com Hub in the collection of data to send to cloud.



#### Notice

It is the customer's sole responsibility to provide and continuously ensure a secure connection between Ekip Com Hub and customer network or any other network (as the case may be). The plant manager must establish and maintain appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of antivirus programs, etc.) to protect the product, the network, the customer system and interface against any kind of security breaches, unauthorized access, interference, intrusion, loss and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorized accesses, interference, intrusion, loss and/or theft of data or information.

For the communication bus, a cable of type Cat.6 S/FTP must be used (Cat.6 with S/FTP double shielding).

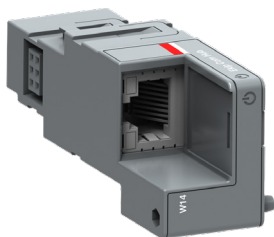


Fig. 5.30 Ekip Com Hub -module

The following table illustrates the ports used by the module:

Port	Service	Notes
67/udp 68/udp	DHCP client	Client DHCP enabled as an alternative to Static address = On
443/tcp	HTTPS	Always active when module is enabled
123/udp	SNTP	Active with SNTP client enabled
53/udp	DNS	Always active

Table 5.39 Ports of Ekip Com Hub -module

5.6.7.1 Signallings

The following table illustrates the possible signals, and their meaning:

LED	Indication	Description
Power LED, green	Off	Power supply absent.
	On fixed	Power supply and communication with the device present.
	On, with two quick flashes per second	Power supply present, and communication with device absent.
Link LED, green	Off	Connection error (signal absent).
	On, fixed	Correct connection.
Activity LED, yellow	Off	No activity on the line.
	On, flashing	Activity present on the line (in reception and/or transmission).

Table 5.40 Indication / Ekip Com Hub -module

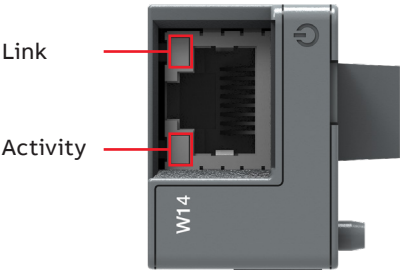


Fig. 5.31 Signals of Ekip Com Hub -module

5.6.7.2 Access from the display  
/ Ekip Com Hub

With modules energized the presence of the modules on the module slot activates additional menus on the display:

- To set the addressing of the modules.
- In order to display information on the modules.

The following table illustrates the path from the display, for setting the function and addressing of the modules:

Settings (*Default value)		Description
:		
Modules (Optional modules)		
Ekip Com Hub		
Enable	Off*	Switch communication between module and server
	On	
Force Static IP address	Off*	Dynamic IP address.
	On	Static IP address.
	Se	On all the associated parameters are enabled.
Static IP Address	0.0.0.0*	Enables the static IP to be selected.
Network Mask Static	0.0.0.0*	Enables the subnet mask to be selected.
Static Gateway addr	0.0.0.0*	When there are several subnets, enables the IP address of the node to which the module is connected to be selected.
SNTP Client Enabled	Off*	Enables the SNTP protocol for distribution of the clock and synchronization signal to be enabled.
	On	
SNTP Server Address	0.0.0.0*	Enables the network server that supplies the SNTP to be set.
Password	---	Code required to register module on cloud.
Remote firmware update		Enables the firmware of the module to be updated.
	OFF Automatic*	
	Enable	To configure firmware download.
	Automatic	To automate module update.
:		

Table 5.41 The path for setting the function and addressing of the modules of the Ekip Com Hub -module from the display



The following table illustrates the path from the display for accessing information on the module:

About	Description
:	
Modules (Optional modules)	
Ekip Com Hub	
SN	Serial number
Version	Software version
IP Address	Address of the module, assigned to the module by a DHCP server at the time of connection to the network in the case of configuration with a dynamic IP, or can be set via the menu in the event of a static IP. NOTE: without a DHCP server, the module automatically adopts a random IP address within the 169.254.xxx.xxx range.
Network Mask	Subnet mask; identifies the method for recognizing the subnet to which the modules belong and enables modules to be searched for within a defined set of recipients.
Gateway Address	IP address of the node to which the module is connected, in the presence of several subnets.
MAC Address	Address assigned by ABB, with OUI (Organizationally Unique Identifier) equal to ac:d3:64, which uniquely identifies the manufacturer of an Ethernet device.
:	
—	

Table 5.42 Information of Ekip Com Hub -module in HMI

## 5.7 Current measurement -modules

### 5.7.1 Rating Plug

The rating plugs are field interchangeable from the front on all the Control Units and the protection thresholds can be adjusted according to the actual rated current of the system. This function is particularly advantageous in installations that may require future expansion or when the power supplied needs to be limited temporarily (e.g. mobile Gen Set).

Rating plugs for currents 100A-4000A

- 1SDA112840R1 100A
- 1SDA112841R1 200A
- 1SDA112842R1 250A
- 1SDA112843R1 400A
- 1SDA112844R1 600A
- 1SDA112845R1 630A
- 1SDA112846R1 800A
- 1SDA112847R1 1000A
- 1SDA112848R1 1200A
- 1SDA112849R1 1250A
- 1SDA112850R1 1600A
- 1SDA112851R1 2000A
- 1SDA112852R1 2500A
- 1SDA112854R1 3200A
- 1SDA112856R1 4000A

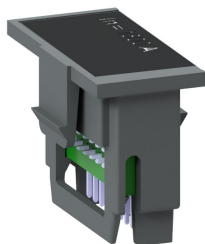


Fig. 5.32 Rating plug

### 5.7.2 Current Sensors

Sensors type C are openable sensors without bushing bar. Current sensors are installed on each phase; the rated unit current can be configured with the interchangeable rating plug module. Sensors type C guarantee an insulation resistance of 1000 Vrms CAT III / 600 Vrms CAT IV and an IP67 protection degree.

In sensor type code includes three or four sensors of the same type and size, depending on the automatic transfer switch (3P or 4P) operated by ATS Controller TruCONTROL.

Available sizes / internal diameter of the sensor:

- 4000 A / 100 mm
- 4000 A / 120 mm
- 4000 A / 200 mm

Sensor type codes:

- |                        |              |
|------------------------|--------------|
| • Open CS 3P type C100 | 1SDA085566R1 |
| • Open CS 4P type C100 | 1SDA085564R1 |
| • Open CS 3P type C120 | 1SDA083372R1 |
| • Open CS 4P type C120 | 1SDA083373R1 |
| • Open CS 3P type C200 | 1SDA085565R1 |
| • Open CS 4P type C200 | 1SDA085563R1 |



Fig. 5.33 Current sensor

## 5.8 Temperature measurement

For temperature measurement purposes the external probe PT1000 3mt, type code 1SDA085695R1, is used. The code includes one single probe, length 3 m. Also the external probe type PT100 is supported.



Fig. 5.34 Temperature measurement

# 6. Troubleshooting

## 6.1 Alarms



Message	Fault	Action
Locked, Alarm LED on	Lock input activated	Unlock
Switch not in AUTO mode, Alarm LED on	Slide switch is in handle or lock position	Turn slide switch into the AUTO position
Phases crossed	Phase rotation of sources 1 and 2 are different	Connect the phases of both sources in the same order
S1 undervoltage	Voltage of source 1 is under the threshold level set in parameter "Drop-out voltage, lower threshold"	Check the correlation between power source and device configuration
S1 overvoltage	Voltage of source 1 is over the threshold level set in parameter "Drop-out voltage, upper threshold"	Check the correlation between power source and device configuration
S1 phase missing	One or two phases of source 1 are missing	Check the power source and connections
S1 unbalance	Phases of source 1 are not symmetric	Check the power source
S1 phase rotation	Phase rotation of source 1 is different from the value of parameter "Phase sequence"	Connect the phases according to the configuration
S1 invalid frequency	Frequency of source 1 is out of range set in parameters "Drop-out frequency, upper threshold" and "Drop-out frequency, lower threshold"	Check the correlation between power source and device configuration
S1 neutral disconnected	Neutral is disconnected from source 1. <b>Note:</b> The loss of neutral will be detected in 3 phase distribution systems with unbalanced loads	Check connection of neutral in source 1 and that the corresponding power distribution system parameter is set correctly
S2 undervoltage	Voltage of source 2 is under the threshold level set in parameter "Drop-out voltage, lower threshold"	Check the correlation between power source and device configuration
S2 overvoltage	Voltage of source 2 is over the threshold level set in parameter "Drop-out voltage, upper threshold"	Check the correlation between power source and device configuration
S2 phase missing	One or two phases of source 2 are missing	Check the power source and connections
S2 unbalance	Phases of source 2 are not symmetric	Check the power source

Continued on the next page

LCD, TOUCH

Message	Fault	Action
S2 phase rotation	Phase rotation of source 2 is different from the value of parameter "Phase sequence"	Connect the phases according to the configuration
S2 invalid frequency	Frequency of source 2 is out of range set in parameters "Drop-out frequency, upper threshold" and "Drop-out frequency, lower threshold"	Check the correlation between power source and device configuration
S2 neutral disconnected	Neutral is disconnected from source 2. <b>Note:</b> The loss of neutral will be detected in 3 phase distribution systems with unbalanced loads	Check connection of neutral in source 2 and that the corresponding power distribution system parameter is set correctly
Frequency Difference	Frequency difference of voltage sources is greater than 0.2 Hz while in-phase monitor is on	Alarm is active and transfer operations disabled as long as the frequency difference is above the accepted level
High current alarm	Measured current is higher than ten times the nominal value	Alarm is active and transfer operations disabled as long as the high current status remains
Open I failure, Alarm LED blinking	Switch transfer from position I to O or II failed	Reset alarm by pressing Auto button or via menu page Operation / Alarm Reset
Close I failure, Alarm LED blinking	Switch transfer to position I failed	Reset alarm by pressing Auto button or via menu page Operation / Alarm Reset
Open II failure, Alarm LED blinking	Switch transfer from position II to O or I failed	Reset alarm by pressing Auto button or via menu page Operation / Alarm Reset
Close II failure, Alarm LED blinking	Switch transfer to position II failed	Reset alarm by pressing Auto button or via menu page Operation / Alarm Reset
Switch position alarm, Alarm LED on	More than one switch position indication inputs are activated	Switch service needed
Pole temperature alarm	Measured pole temperature is too high	Switch service needed
Local bus	Communication between HMI and switch controller is off	Check connection
Ethernet disconnected	Ethernet module not connected	Check connection
Fire Fighting	Fire fighting input activated	Alarm is active and disables transfer operations as long as the input is active
Control Voltage Failure	Control voltage dropped during switch control	Check power source
Control Voltage Low	Switch control voltage is below the minimum	Check power source
Configuration Error	Invalid configuration	Check parameter values
Ekip Com Hub Alarm	Ekip Com Hub failure	Check configuration
HMI Not Compatible	Firmware versions of HMI and device are not compatible to be used together	Check current versions and update compatible versions

Table 6.1 Alarms-list in level 3 and 4, LCD and touch control interfaces

6.2 Warnings



Message		Reason
S1 and S2 not in sync		Voltage sources are not synchronized
Voltage Not Calibrated		Calibration data in power module is invalid or unavailable
Current Not Calibrated	Calibration data in current measurement module is invalid or unavailable	
Pole temperature warning		Measured pole temperature is near the alarm level
Control Retry		Failed transfer sequence retry activated
Auto Control Disabled		Device is in manual operating mode
Local Bus		Module heartbeat error. Check connection. Can be cleared using "Alarm Reset".
Configuration		Configuration session ports are open
Clock capacitor charging	Real time clock is not yet operational, date & time setting is disabled as long as this warning is active. Clock capacitor is charged from source voltage (not AUX) and takes about 10 minutes	
Generator failed to start	Generator has not been started within 1 minute after sending start signal or it has failed during any test sequence	

Table 6.2 Warnings-list in level 3 and 4, LCD and touch control interfaces

1  
LCD, TOUCH

6.3 Information

 LCD

 Touch

Message	Description
Invalid Date	Date not set
Test on Load	Test on load sequence active
Test off Load	Test off load sequence active
Alarm/Product Availability	Digital output function activated
In Position I	Digital output function activated
In Position O	Digital output function activated
In Position II	Digital output function activated
Pre-transfer Signal 1	Digital output function activated
Pre-transfer Signal 2	Digital output function activated
Pre-transfer Signal 3	Digital output function activated
Pre-transfer Signal 4	Digital output function activated
Source 1 Available	Digital output function activated
Source 2 Available	Digital output function activated
Transfer Alarm	Digital output function activated
Load Shed Output Signal	Digital output function activated
Emergency Stop	Digital input function activated
Remote Test on Load	Digital input function activated
Remote Test off Load	Digital input function activated
Inhibit ATS	Digital input function activated
Manual Retransfer	Digital input function activated
Priority S1	Digital input function activated
Priority S2	Digital input function activated
Inhibit Transfer	Digital input function activated
Bypass Running Delays	Digital input function activated
Remote Control to S1	Digital input function activated
Remote Control to Off	Digital input function activated
Remote Control to S2	Digital input function activated
Alarm Reset	Digital input function activated
Manual-Auto Mode	Digital input function activated
Inhibt Transfer /w Override	Digital input function activated
Load Shed Input Signal	Digital input function activated

Table 6.3 Info statements in level 3 and 4, LCD and touch control interfaces

# 7. Technical data

ATS Controller OXCO_, control circuit	Value	Remark
Rated operational voltage U, three phase	200...480 Vac	
Rated operational voltage U, single phase	200...240 Vac	
Operating voltage range	±20 %	
Voltage measurement accuracy	1 %	
Rated frequency f	50 / 60 Hz	
Operating frequency range, Level 2	±10 %	Level 2 = HMI with DIP-switches
Operating frequency range, Level 3 and 4	±20 %	Level 3 = HMI with LCD screen, Level 4 = HMI with touch screen
Frequency measurement accuracy	0.5 %	
Rated impulse withstand voltage $U_{imp}$ for mains	6 kV	Connectors T1 and T2
Rated impulse withstand voltage $U_{imp}$ for digital outputs and generator control	4 kV	Connectors T7 and T8
<b>Environmental</b>		
Environments category	E	
EMC environment	A	
Operating temperature (without derating)	-20... +40 °C	
Operating temperature (with derating)	-25... +70 °C	
Transportation and storage temperature	-40... +70 °C	
Altitude (without derating)	Up to 2000 m	

Table 7.1 General technical data of ATS Controller OXCO\_



# 7.1 Connectors

The table 7.2 shows the connectors located on the top of the ATS Controller OXCO\_. The table 7.3 shows the connectors on the front of the product.

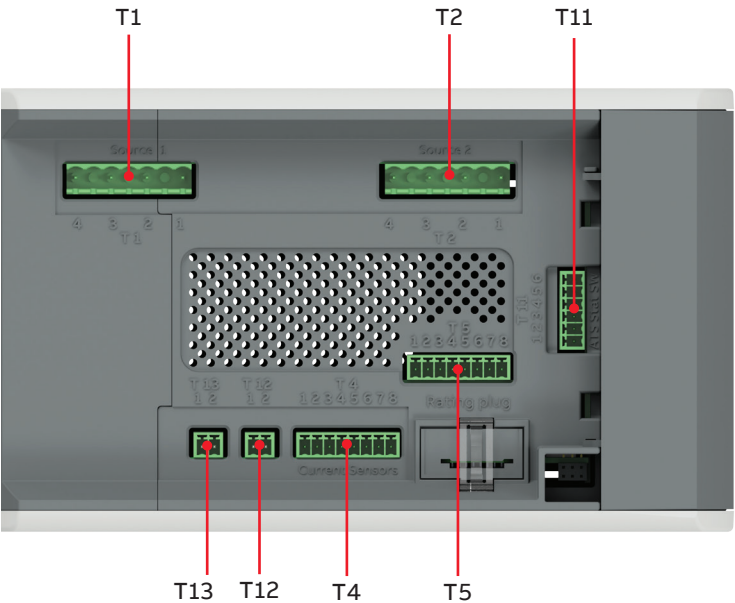


Fig. 7.1 Connectors located on the top of ATS Controller OXCO\_

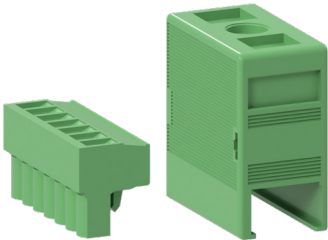


Fig. 7.2 Connectors T1 and T2, and cable housing



Fig. 7.3 Connectors T4 and T5



Fig. 7.4 Connector T11



Fig. 7.5 Connectors T12 and T13

Connector/				
pin nr	Function	Cable	Type	Voltage
<b>T1</b>	Normal/Source 1	2.5mm <sup>2</sup> /AWG14 max		200..480Vac +/-20%
1	L1		Line power supply	
2	L2		Line power supply	
3	L3		Line power supply	
4	N		Line power supply	
<b>T2</b>	Emergency/Source 2	2.5mm <sup>2</sup> /AWG14 max		200..480Vac +/-20%
1	L1		Line power supply	
2	L2		Line power supply	
3	L3		Line power supply	
4	Ne		Line power supply	
<b>T5</b>	ATS Control, Zenith	1.5mm <sup>2</sup> /AWG16 max		0...24 Vdc
1	Emergency (open), CCEO		Output	
2	Emergency on(closed), CCE		Output	
3	+24Vdc		Output	
4	Normal off (open), CCNO		Output	
5	Normal on (closed), CCN		Output	
6	+24Vdc		Output	
7	Common, COM (+24Vdc)		Output	
8	Common, COM (+24Vdc)		Output	
<b>T4</b>	Current sensor	1.5mm <sup>2</sup> /AWG16 max		SELV
1	IL1+		Input	
2	IL1-		Input	
3	IL2+		Input	
4	IL2-		Input	
5	IL3+		Input	
6	IL3-		Input	
7	Ine+		Input	
8	Ine-		Input	
<b>T11</b>	ATS Status	1.5mm <sup>2</sup> /AWG16 max		0...24 Vdc
1	Normal on (closed), SN		Input	
2	Normal off (open), SNO		Input	
3	Emergency on (closed), SE		Input	
4	Emergency off (open), SEO		Input	
5	Automatic Transfer, ATR		Input	
6	Common, COM		Input	
<b>T12</b>		1.5mm <sup>2</sup> /AWG16 max		SELV
1	Temperature sensor (PT100/PT1000)		Input	
2	Temperature sensor (PT100/PT1000)		Input	
<b>T13</b>	CAN BUS	1.5mm <sup>2</sup> /AWG16 max		SELV
1	CAN BUS-H, Local bus W3		Input/Output	
2	CAN BUS-L, Local bus W4		Input/Output	

Table 7.2 Connectors located on the top of ATS Controller OXCO\_




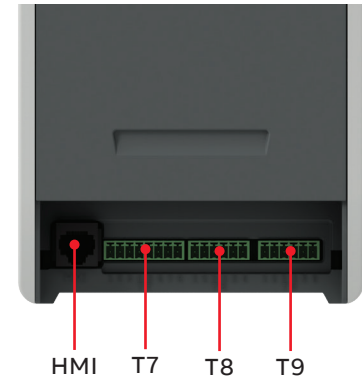


Fig. 7.6 Connectors located on the front of ATS Controller OXCO\_. Connector label is situated on the back side of the front cover

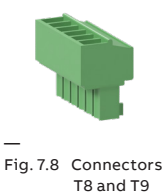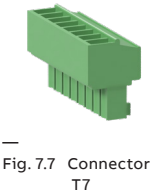

Connector/ pin nr	Function	Cable	Type	Voltage
<b>T7</b>	Digital outputs	1.5mm <sup>2</sup> /AWG16 max		250Vac / 5 A max
1	DO1 COM		Output	
2	DO1 NO		Output	
3	DO2 COM		Output	
4	DO2 NO		Output	
5	DO3 COM		Output	
6	DO3 NO		Output	
7	DO4 COM		Output	
8	DO4 NO		Output	
<b>T8</b>	Generator 1&2 control	1.5mm <sup>2</sup> /AWG16 max		250Vac / 5 A max
1	GEN1 NC		Output	
2	GEN1 COM		Output	
3	GEN1 NO		Output	
4	GEN2 NC		Output	
5	GEN2 COM		Output	
6	GEN2 NO		Output	
<b>T9</b>	Digital Inputs	1.5mm <sup>2</sup> /AWG16 max		0...24Vdc
1	Fire Fighting Input (+)		Input	
2	Fire Fighting Input (-)		Input	
3	COM		Input	
4	DI1		Input	
5	DI2		Input	
6	DI3		Input	
<b>HMI</b>	HMI interface	RJ-45	Input/output	SELV

Table 7.3 Connectors located on the front of ATS Controller OXCO\_

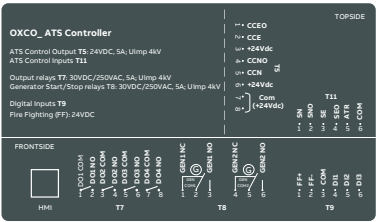

---

# Installation instruction

## ATS Controller OXCO\_, TruCONTROL

<b>8. Installation</b>	<b>131</b>
8.1 DIN-rail mounting, ATS Controller OXCO_	132
8.2 Connectors	136
8.2.1 Connectors / number of poles	136
8.3 Mounting of the HMI	137
<b>9. Mounting of accessories</b>	<b>138</b>
9.1 Auxiliary power supply and Ekip -modules	139
9.2 HMI protective cover type OXEC21	142
9.3 Rating Plug	144
9.4 Current sensor	145
<b>10. Dimension drawings</b>	<b>146</b>



## 8. Installation

Before mounting the product, please, check the product identification label, which is located behind the front cover. This label indicates the product model (type number), some important technical data information, etc.

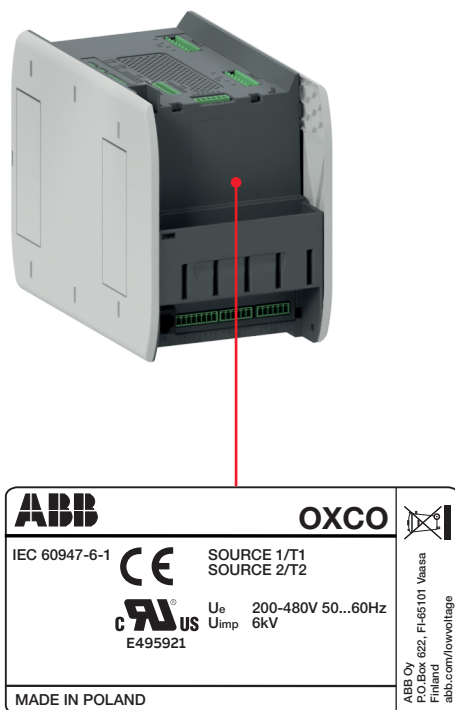


Fig. 8.1 Identification label behind the front cover

## 8.1 DIN-rail mounting, ATS Controller OXCO\_



OXCO1D

For DIN-rail installation, the DIN-rail adapters (type OXCO1D, includes 2 pcs) must be installed on the product. They can alternatively be installed either back of the product or on the right or left side of the product.

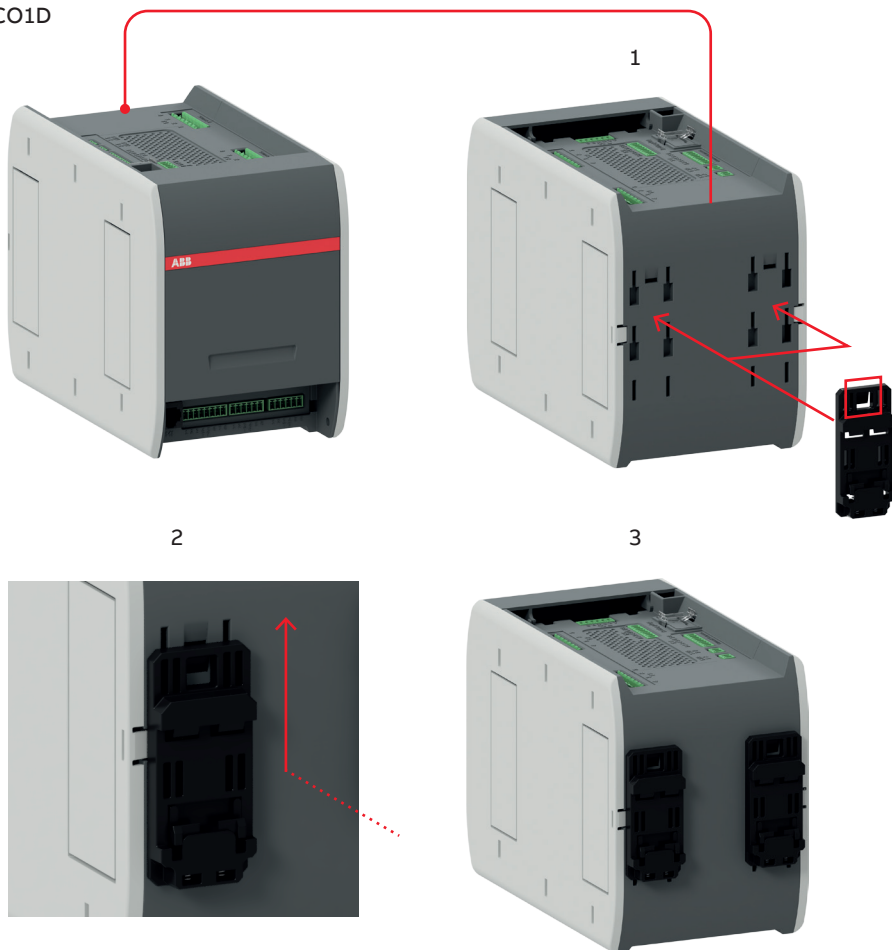


Fig. 8.2 Mounting the DIN-rail mounting adapter OXCO1D on the back of ATS Controller OXCO\_.



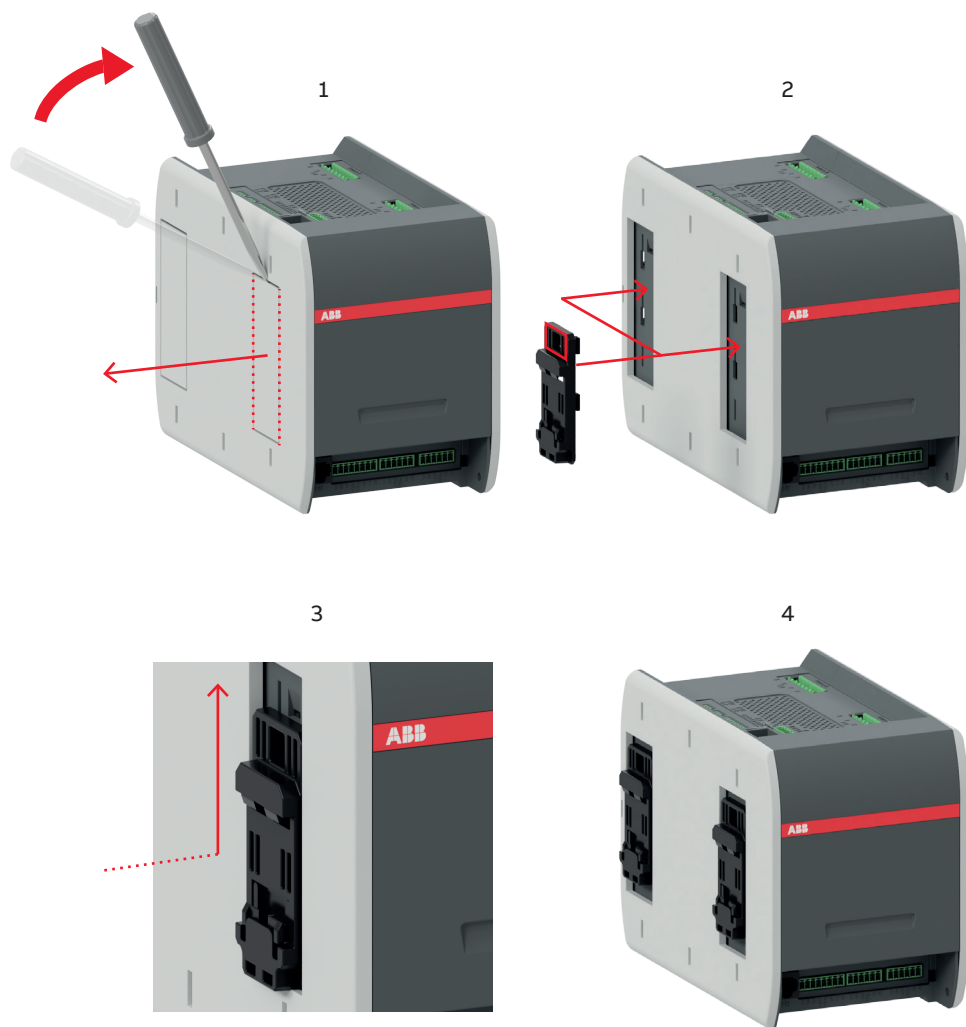


Fig. 8.3 Mounting the DIN-rail mounting adapter OXCO1D on the side of ATS Controller OXCO\_, suitable for installation on either the right or left side.

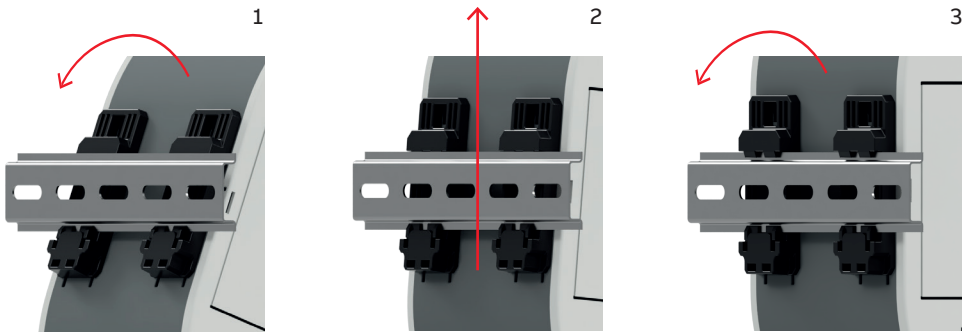


Fig. 8.4 Mounting ATS Controller OXCO\_ on the DIN rail.

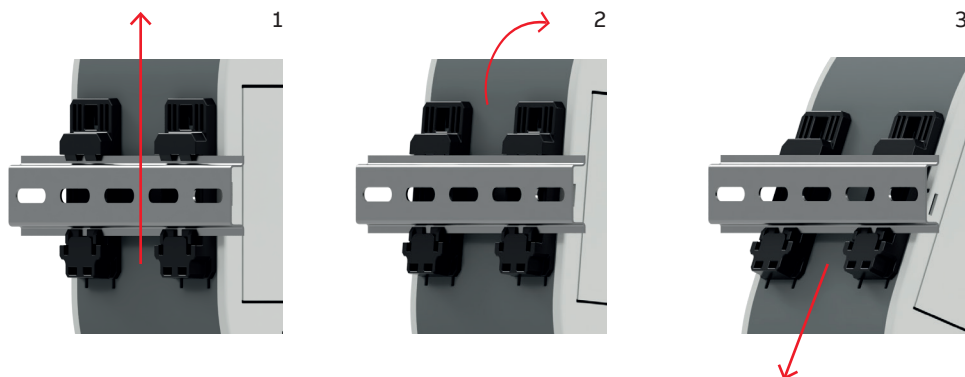


Fig. 8.5 Remove ATS Controller OXCO\_ from the DIN rail.

## 8.2 Connectors

### 8.2.1 Connectors / number of poles

- T1 and T2, for power supply / 4 poles + cable housing
- T4, T5 and T7 / 8-poles
- T11, T8 and T9 / 6-poles
- T12 and T13 / 2 poles

See more information of connections from Chapter 7, Technical data.


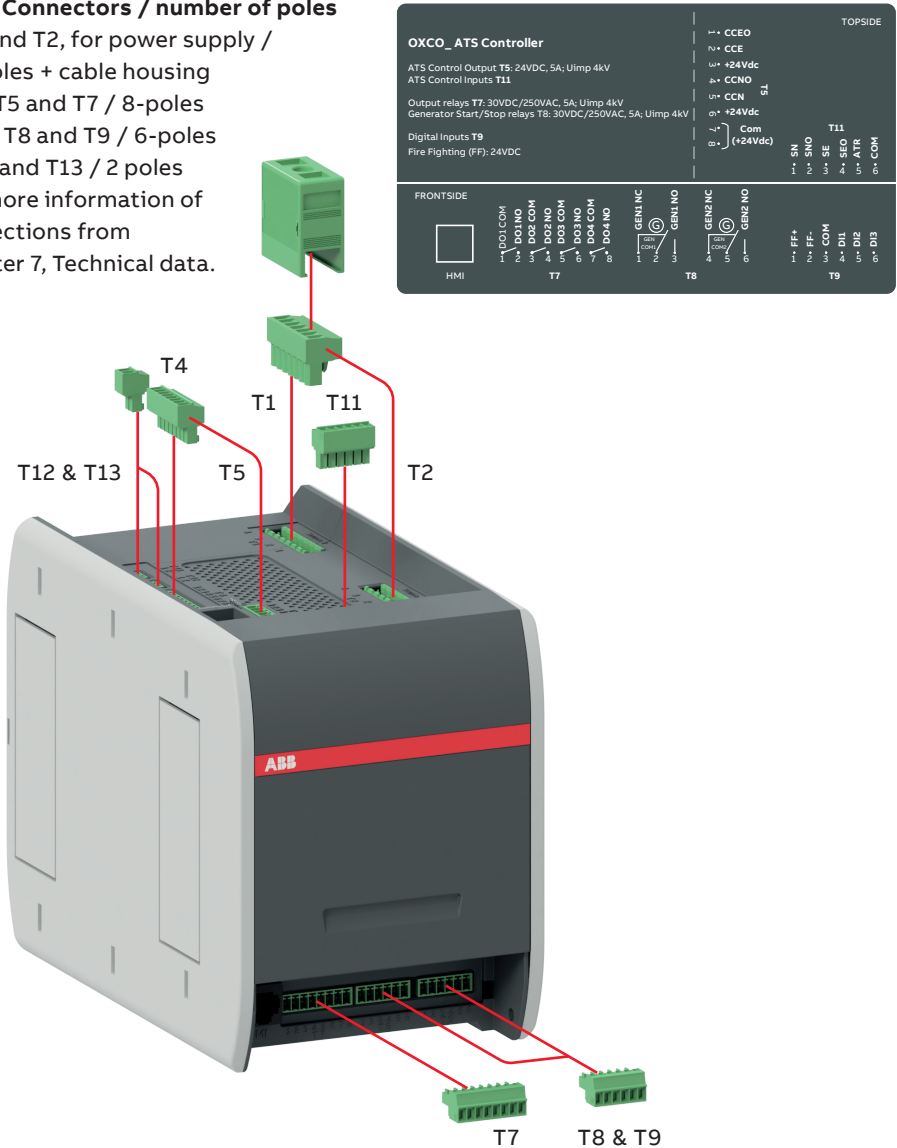


Fig. 8.6 Mounting the connectors on ATS Controller OXCO\_-. The Connector label is situated on the back side of front cover

## 8.3 Mounting of the HMI



Max. 3 m,  
HMI (RJ45) cable

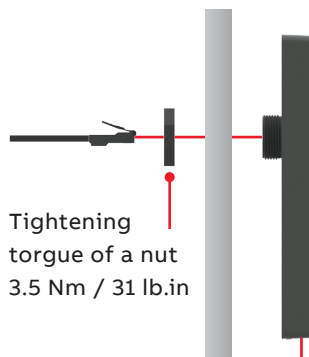

Tightening  
torque of a nut  
3.5 Nm / 31 lb.in

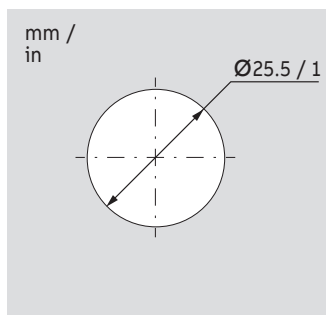


Fig. 8.7 HMI is mounted on the door, see the door drilling. HMI protective cover available as accessory, type OXEC21, provides protection against accidental contact, see Chapter 9, Mounting of accessories

## 9. Mounting of accessories

ATS Controller OXCO\_ can be equipped with electronic accessories such as Ekip-modules, rating plug and current sensor. For more information, see Chapter 5, Electronic accessories.

For HMI, the protective cover is available as accessory, it provides protection against accidental contact. More information of HMI, see Chapter 3, Operating, and Chapter 4, Navigating menu.

## 9.1 Auxiliary power supply and Ekip -modules

ATS Controller OXCO\_ can be equipped with Ekip-modules. Ekip-modules are mounted with a auxiliary power supply module, OXEA1. Suitable Ekip-modules are: Signalling and connectivity modules.

For more information, see Chapter 5, Electronic accessories.

Max. Ekip-modules: OXCO\_: 4pcs



OXEA1



Ekip

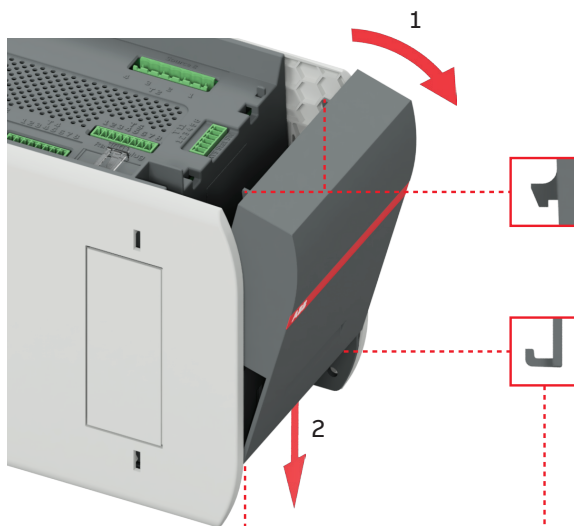


Fig. 9.1 Before installation the auxiliary power supply module OXEA1 and Ekip -modules, the front panel of the product must be temporarily removed.

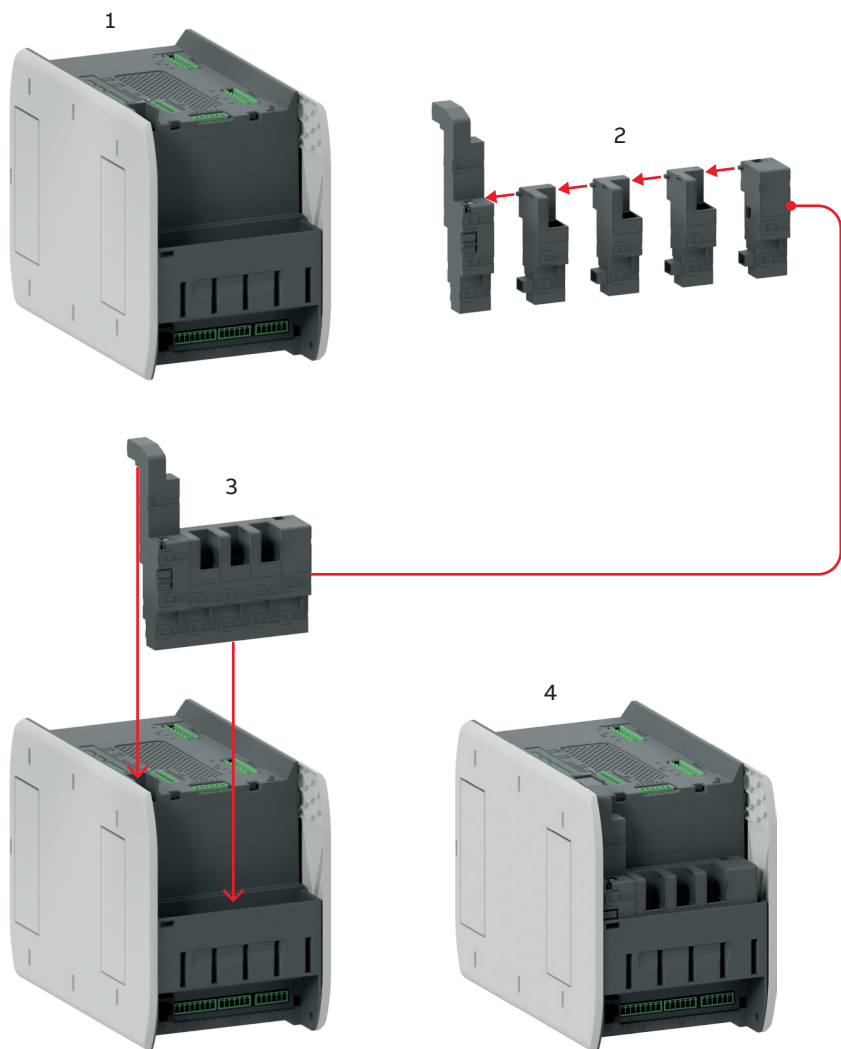


Fig. 9.2 Installation of the auxiliary power supply module OXEA1 and Ekip –modules on the ATS Controller OXCO\_. To remove the modules, lift the modules straight up accordingly.



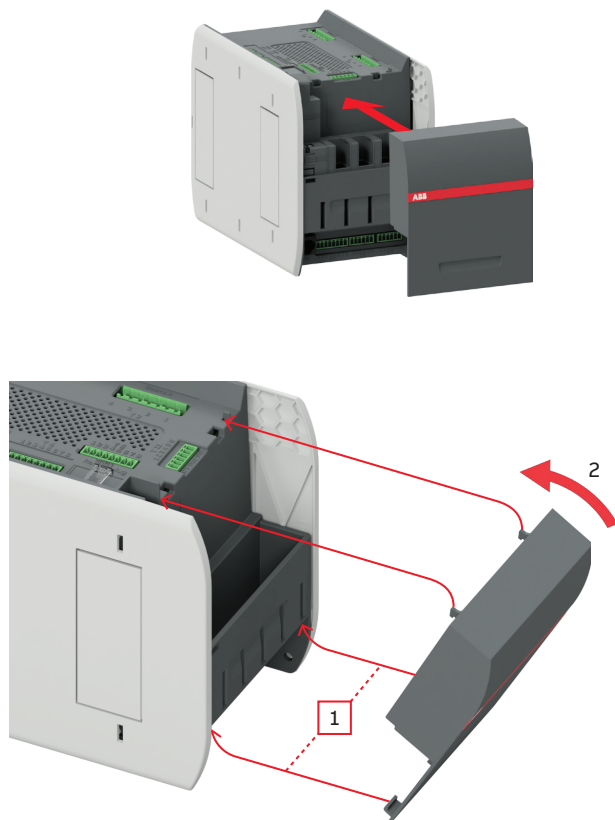


Fig. 9.3 After installation the auxiliary power supply module OXEA1 and Ekip –modules, the front panel of the product is reinstalled .


## 9.2 HMI protective cover type OXEC21

HMI protective cover is available as accessory, type OXEC21, provides protection against accidental contact.



OXEC21

IP54

 Torx TX, 6 pcs  
0.8 Nm / 7.1 lb.in



Ø 4 mm  
0.16 in



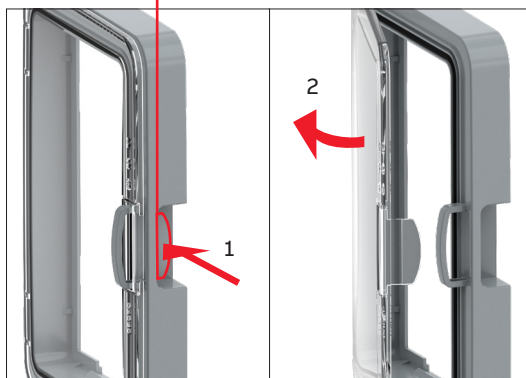


Fig. 9.4 Mounting of HMI protective cover, type OXEC21, door drilling, see next page

mm / in

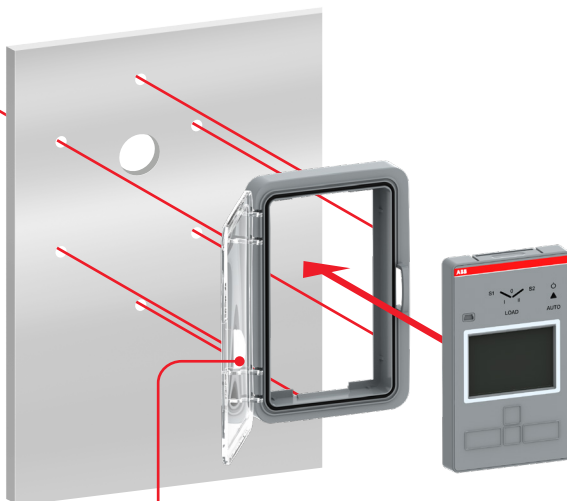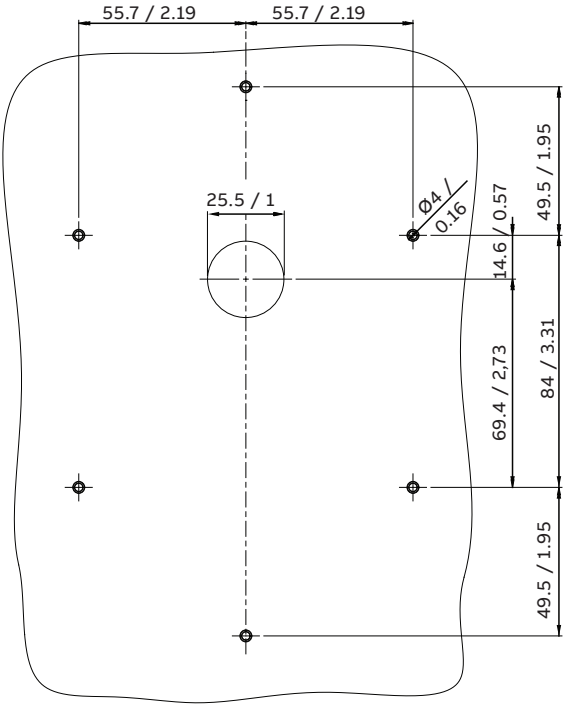

A07493B

Fig. 9.5 Door drilling of the HMI protective cover

9.3 Rating Plug


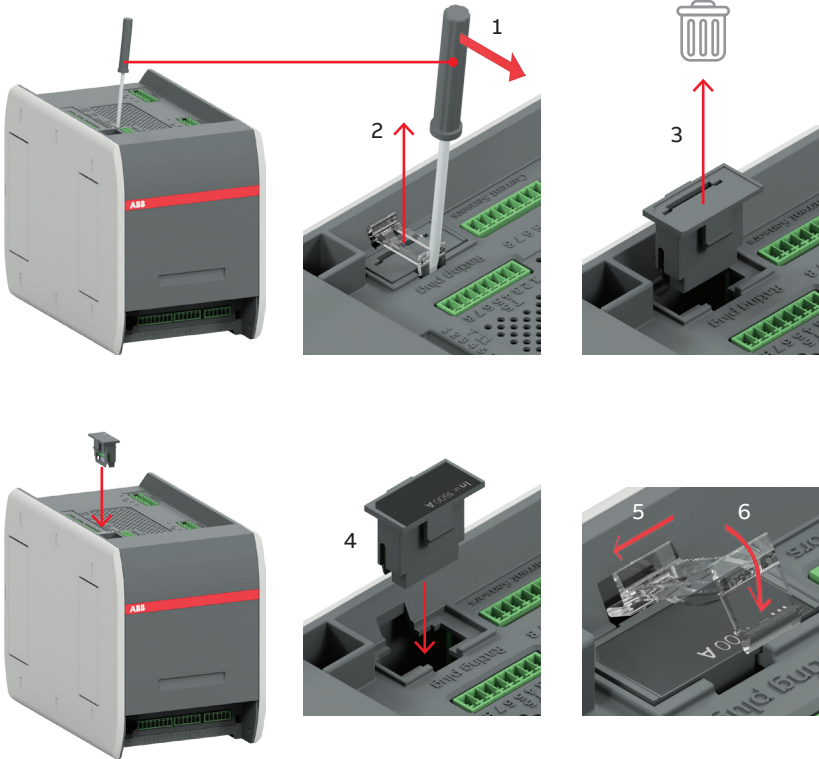


Fig. 9.6 Rating plug is installed on the top of the ATS Controller, OXCO\_.

## 9.4 Current sensor

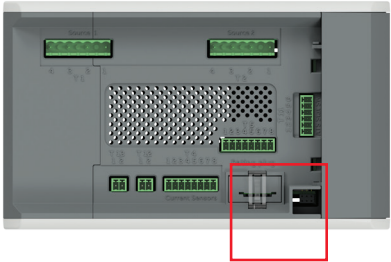

Current sensor, type: Open CS 3P type C\_;  
installation with mounting accessory.

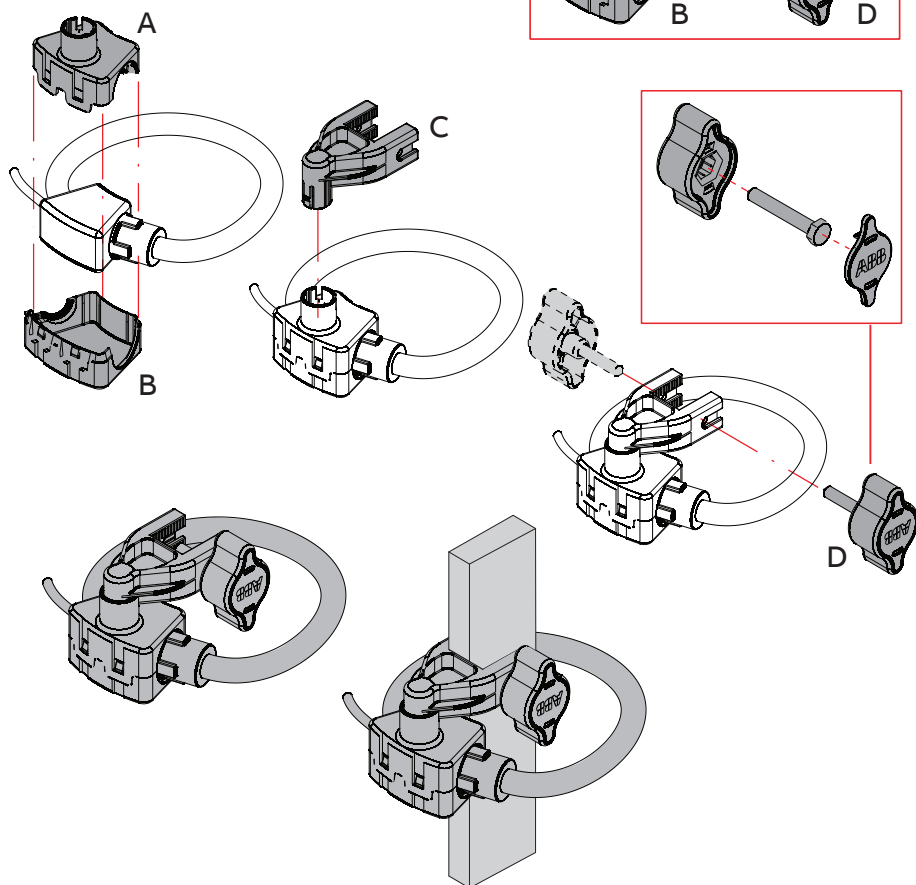


Fig. 9.7 Installation of current sensor with the mounting accessory.

# 10. Dimension drawings

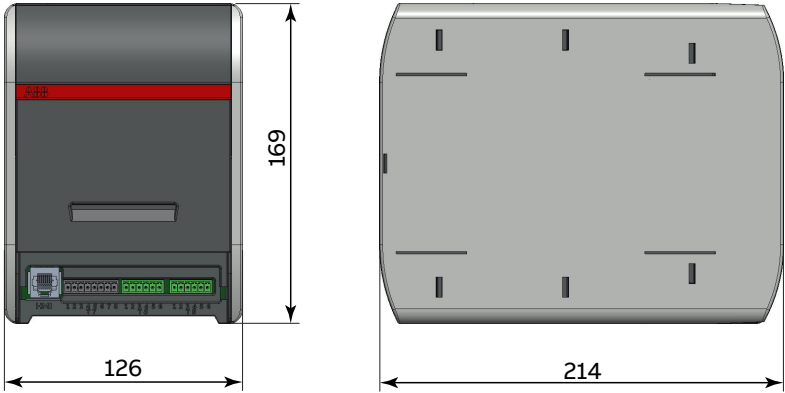


Fig. 10.1 Overall dimensions, OXCO\_









**Additional information**

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.



<b>BG</b>	Внимание! Опасно напряжение! Да се монтира само от лице с електротехническа квалификация.
<b>CN</b>	警告！电压危险！只能由专业电工进行安装。
<b>CZ</b>	Varování! Nebezpečné napětí! Montáž smí provádět výhradně elektrotechnik!
<b>DA</b>	Advarsel!! Farlig elektrisk spænding! Installation må kun foretages af personer med elektroteknisk ekspertise.
<b>DE</b>	Warnung! Gefährliche Spannung! Installation nur durch elektrotechnische Fachkraft.
<b>EL</b>	Προειδοποίηση! Υψηλή τάση! Η εγκατάσταση πρέπει να γίνεται μόνο από εξειδικευμένους ηλεκτροτεχνικούς.
<b>EN</b>	Warning! Hazardous voltage! Installation by person with electrotechnical expertise only.
<b>ES</b>	¡Advertencia! ¡Tensión peligrosa! La instalación deberá ser realizada únicamente por electricistas especializados.
<b>ET</b>	Hoiatus! Ohtlik pinge. Paigaldada võib ainult elektrotehnika-alane ekspert.
<b>FI</b>	Varoitus! Vaarallinen jännite! Asennuksen voi tehdä vain sähköalan ammattihenkilö.
<b>FR</b>	Avertissement! Tension électrique dangereuse! Installation uniquement par des personnes qualifiées en électrotechnique.
<b>HR</b>	Upozorenje! Opasan napon! Postavlja ti smije samo elektrotehnički stručnjak.
<b>HU</b>	Figyelmeztetés! Veszélyes feszültség! Csak elektrotechnikai tapasztalattal rendelkező szakember helyezheti üzembe.
<b>IE</b>	Rabhadh! Voltas guaiseach! Ba chóir do dhuine ag a bhfuil saineolas leictreicniúil, agus an té sin amháin, é seo a shuiteáil.
<b>IT</b>	Avvertenza! Tensione pericolosa! Fare installare solo da un elettricista qualificato.
<b>LT</b>	Dėmesio! Pavojinga įtampa! Dirbti leidžiama tik elektrotechniko patirties turintiems asmenims.
<b>LV</b>	Uzmanību! Bīstami - elektrība! Montāžas darbus drīkst veikt tikai personas, kurām ir atbilstošas elektrotehnikās zināšanas.
<b>MT</b>	Twissija! Vultaġġ perikoluż! Għandu jiġi installat biss minn persuna b'kompetenza elettroteknika.
<b>NL</b>	Waarschuwing! Gevaarlijke spanning! Mag alleen geïnstalleerd worden door een deskundige elektrotechnicus.
<b>NO</b>	Advarsel! Farlig spenning! Montering skal kun utføres av kvalifiserte personer med elektrokompetanse.
<b>PL</b>	Ostrzeżenie! Niebezpieczne napięcie! Instalacji może dokonać wyłącznie osoba z fachową wiedzą w dziedzinie elektrotechniki.
<b>PT</b>	Aviso! Tensão perigosa! A instalação só deve ser realizada por um electricista especializado.
<b>RO</b>	Avertizare! Tensiune periculoasă! Instalarea trebuie efectuată numai de către o persoană cu experiență în electrotehnică.
<b>RU</b>	Осторожно! Опасное напряжение! Монтаж должен выполняться только специалистом-электриком.
<b>SE</b>	Varning! Farlig spänning! Installation får endast utföras av en elektriker.
<b>SK</b>	Varovanie! Nebezpečné napätie! Montáž môže vykonávať iba skúsený elektrotechnik.
<b>SL</b>	Opozorilo! Nevarna napetost! Vgradnjo lahko opravi le oseba z elektrotehničnim strokovnim znanjem.



---

## Contact us

### **ABB Oy**

P.O. Box 622  
FI-65101 Vaasa  
Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**



**UK  
CA** UK importer: ABB Limited  
Tower Court  
Coventry CV6 5NX  
United Kingdom



**[www.abb.com/truone](http://www.abb.com/truone)**

© Copyright 2022 ABB. All rights reserved.  
Specifications subject to change without notice.