


DEH40380 User's Guide

# Power Break® II Switches 800–4000 A Frames, 240–600 Vac

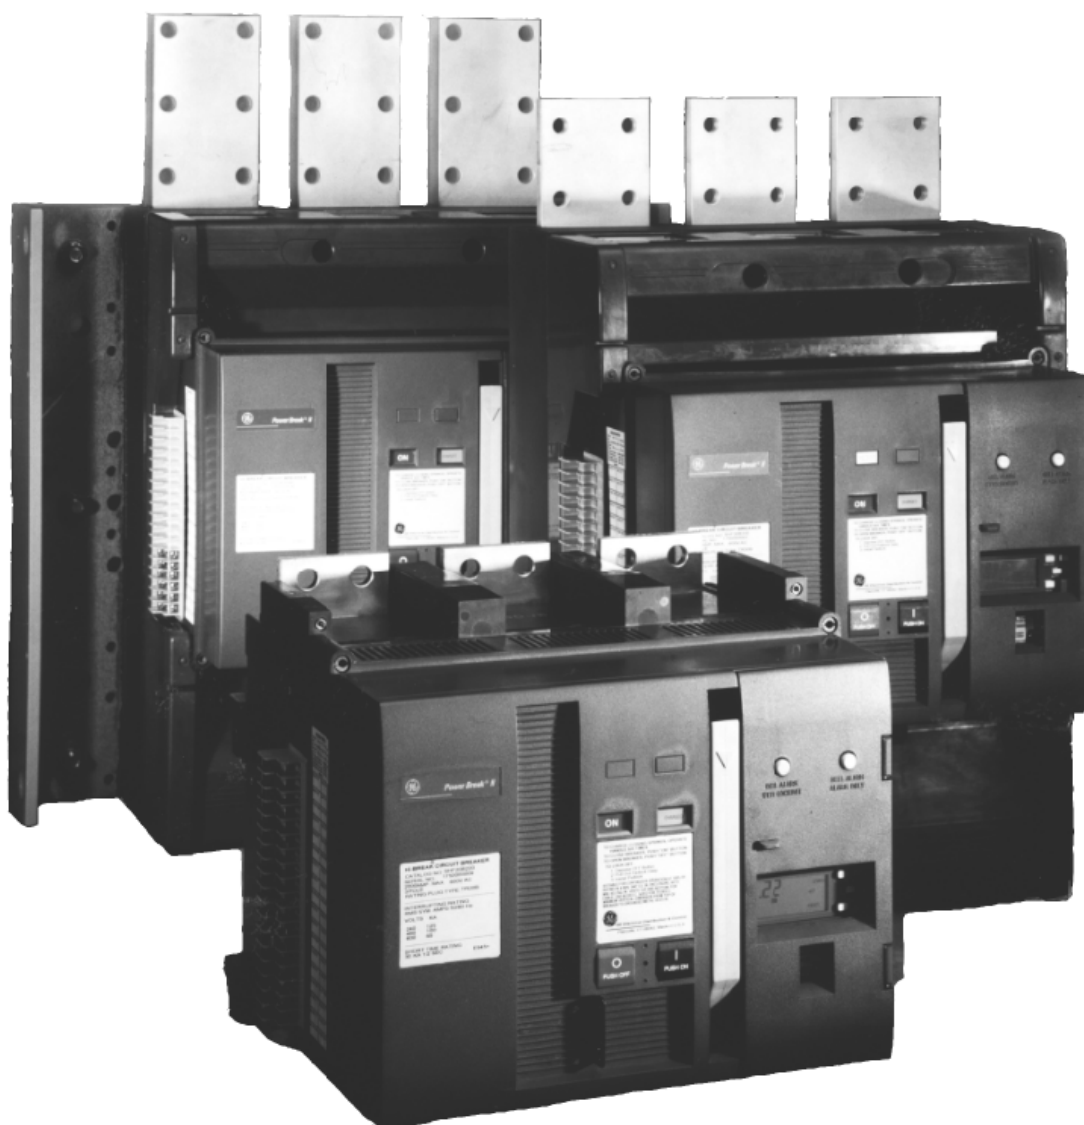

Since this switch is available in a variety of configurations, please take a moment to compare the catalog number of your purchased switch with the catalog number key below. Installation of an incorrect switch could result in misapplication, lack of system coordination, or reduced system selectivity. If you have any questions, call the Customer Support Center at 800-843-3742.

			Code	Description	Function
S S D 20 W2 20	→	S	S	Power Break® II	Switch Family
			S	Standard-Break	Frame Type
	→	D	B	Back-connected	Connection Type
			D	Draw-out	
			F	Front-connected	
	→	20	08	800 A	Frame Rating
			16	1600 A	
			20	2000 A	
			25	2500 A	
			30	3000 A	
			40	4000 A	
	→	W2	W2	up to 2000 A CTs	EntelliGuard® - Switch Control Unit
			W3	2500–3000 A CTs	
			W4	4000 A CTs	
	→	20	08	800 A	Maximum CT Current Rating
			16	1600 A	
			20	2000 A	
			25	2500 A	
			30	3000 A	
			40	4000 A	

*Power Break® II insulated-case switch catalog numbering system.*

Example – a switch with catalog number SSD20W220 has the following features:

- Power Break® II (S)
- Draw-out (D)
- 2000 A frame rating (20)
- Control Unit with 2000 A CT (W2)
- 2000 A CT rating (20)

## DEH40380

### **WARNINGS, CAUTIONS, AND NOTES AS USED IN THIS PUBLICATION**

#### ***WARNINGS***

Warning notices are used in this publication to emphasize that hazardous voltages, currents, or other conditions that could cause personal injury are present in this equipment or may be associated with its use.

Warning notices are also used for situations in which inattention or lack of equipment knowledge could cause either personal injury or damage to equipment.

#### ***CAUTIONS***

Caution notices are used for situations in which equipment might be damaged if care is not taken.

#### ***NOTES***

Notes call attention to information that is especially significant to understanding and operating the equipment.

This document is based on information available at the time of its publication. While efforts have been made to ensure accuracy, the information contained herein does not cover all details or variations in hardware and software, nor does it provide for every possible contingency in connection with installation, operation, and maintenance. Features may be described herein that are not present in all hardware and software systems. ABB assumes no obligation of notice to holders of this document with respect to changes subsequently made.

ABB makes no representation or warranty, expressed, implied, or statutory, with respect to, and assumes no responsibility for the accuracy, completeness, sufficiency, or usefulness of the information contained herein. No warranties of merchantability or fitness for purpose shall apply.

The following are trademarks of ABB Company:

Power Break®, EntelliGuard®

**Chapter 1. Introduction**

1-1 Overview.....	1
1-2 Receiving the Switch.....	1
Storage.....	1
1-3 Preparation for Installation.....	1
Bolted Electrical Connections.....	1
Panel Cutouts and Clearances.....	1
Accessory Installation.....	2
1-4 Switch Installation.....	3

**Chapter 2. Operation**

2-1 Standard Features.....	4
2-2 Operating Instructions.....	4
Sequence of Operations.....	4
Operating Instructions for Manually Operated Switches.....	4
Additional Instructions for Motor-Operated Switches.....	6
Padlock Operation.....	6
Periodic Operational Checks.....	6
Wiring Notes.....	6
2-3 Trip Unit Setup.....	7

**Chapter 3. Accessory Operation**

3-1 Lug and Adapter Kits.....	8
Lug Kits (800–2000 A Frames).....	8
Lug Kits with Straps (2500–4000 A Frames).....	8
T-Studs.....	9
Adapter Kits.....	9
3-2 Plug-In Accessory Compartment.....	10
3-3 Bell Alarm—Alarm Only.....	10
Operation.....	10
3-4 Bell Alarm with Lockout.....	10
Operation.....	11
3-5 Shunt Trip.....	12
Operation.....	12
3-6 Shunt Trip with Lockout.....	12
Operation.....	13
0-6 Undervoltage Release.....	13
Operation.....	13
0-8 Motor Operator Mechanism.....	14
Remote Operation.....	14
Automatic Operation.....	14
0-9 Remote Close.....	14
Remote Operation.....	14

---

3-10 Key Interlock Mounting Provision.....	15
Operation.....	15
3-11 Mechanical Counter.....	16
3-12 Auxiliary Switch Module.....	16
Operation.....	16
3-13 Door Interlock.....	17
Operation.....	17
3-14 Push Button Cover.....	17
Operation.....	17
<b>Chapter 4. Trouble-Shooting Guide .....</b>	<b>18</b>

## List of Figures

---

1. Locations of the front-panel escutcheon cutout and mounting holes, 800–2000 A frames.....	2
2. Locations of the front-panel escutcheon cutout and mounting plate, 2500–4000 A frames.....	3
3. Locations of the 1/4–20 x 3/8-inch deep screw inserts for mounting the switch in equipment, 800–2000 A frames.....	3
4. Locations of the 3/8–16 x 7/16-inch deep screw inserts for mounting the switch in equipment, 2500–3000 A back-connected frames.....	3
5. Locations of the 3/4-inch diameter through holes for mounting the switch in equipment, 4000 A front-connected frame.....	3
6. Front of the switch, showing the locations of standard features.....	4
7. Front of the switch, with the Trip Unit and top cover removed.....	4
8. Side view of the switch, showing the padlock hasp extended.....	6
9. Terminal block mounted on the right side of the switch.....	7
10. Locations of the plug-in accessory modules in the compartment on the front of the switch.....	10
11. Bell Alarm–Alarm Only module.....	10
12. Bell Alarm–Alarm Only connections on the right terminal block.....	10
13. Bell Alarm with Lockout module.....	11
14. Bell Alarm with Lockout connections on the right terminal block.....	11
15. Shunt Trip module.....	12
16. Shunt Trip with Lockout module.....	12
17. Undervoltage Release module.....	13
18. Motor Operator Mechanism.....	14
19. Remote Close accessory.....	14
20. Side view of the switch, showing the padlock tab extended with the Key Interlock installed.....	15
21. Mechanical Counter.....	16
22. Auxiliary Switch Module with 12 switches.....	16
23. Auxiliary switch wiring diagram.....	16
24. Door Interlock accessory installed on the switch.....	17
25. Push Button Cover.....	17

1. Weights of the various switch frame sizes, with and without a motor operator..	1
2. Bolt sizes and mounting torques for bus connections.....	1
3. Sequence of operations that may be performed with Power Break II circuit switches.....	5
4. Accessory connections to the right terminal block B.....	7
5. Catalog numbers and wire sizes of Lug Kits for 800–2000 A frames.....	8
6. Catalog numbers and specifications of Lug Kits with Straps for 2500–4000 A frames.....	8
7. Catalog numbers and ratings of T-Studs.....	9
8. Catalog numbers and ratings of Adapter Kits.....	9
9. Bell Alarm–Alarm Only catalog numbers.....	10
10. Bell Alarm with Lockout catalog numbers.....	11
11. Catalog numbers and voltages for the Shunt Trip.....	12
12. Catalog numbers and voltages for the Shunt Trip with Lockout.....	13
13. Catalog numbers and voltages for the Undervoltage Release.....	13
14. Catalog numbers and operating voltages for the Motor Operator Mechanism.....	14
15. Catalog numbers and operating voltages for the Remote Close accessory.....	15
16. Catalog numbers of Key Interlock models.....	15
17. Auxiliary Switch Module catalog numbers.....	16
18. Auxiliary switch positions on the terminal board on the left side of the switch, Block A.....	17

## 1-1 Overview

Power Break® II insulated-case switches are designed to serve low-voltage power circuits and equipment. They are available with and EntelliGuard® Control Units for operation of accessories and optional ground-fault detection.

## 1-2 Receiving the Switch

Unpack the switch and inspect it for shipping damage. Ensure that the switch has the proper current, voltage, and interruption ratings for the application by comparing the catalog number with the table in the Getting Started section on the inside front page.

The weights of the various frame sizes are listed in Table 1, for reference.

Frame Rating	Operation Type	Weight (lb)
800 A	Manual Electrical	71 80
1600 A or 2000 A	Manual Electrical	79 88
2500 A Front Connect	Manual Electrical	178 187
2500 A Back Connect	Manual Electrical	167 176
3000 A Front Connect	Manual Electrical	179 188
3000 A Back Connect	Manual Electrical	216 225
4000 A	Manual Electrical	320 329

Table 1. Weights of the various switch frame sizes, with and without a motor operator.

## Storage

The switch should be placed in service immediately in its permanent location. However, if it must be stored for an indefinite period, it should be carefully protected against condensation, preferably by storage in a warm dry room. Switches for outdoor equipment should be stored in that equipment only when power is available and heaters are in operation, to prevent condensation.

The switch should be stored in a clean location, free from corrosive gases or fumes. In particular, protect the switch from moisture and cement dust, as that combination may be corrosive.

If the switch is stored for any length of time, it should be inspected periodically to ensure good mechanical condition.

## 1-3 Preparation for Installation

### Bolted Electrical Connections

Using an industry-accepted solvent, remove any foreign material from the line and load strap surfaces and the corresponding surfaces of the connecting bus. Ensure that the mating surfaces are smooth and free of burrs and nicks.

Place the bus connections in position and align the mounting holes. Insert and fasten the mounting bolts and washers according to specifications in Table 2.

Switch Frame	Bus Connection	
	Bolt Diam.	Torque (in-lb)
800A	(1) 1/2 in.	300
1600-2000A	(2) 1/2 in.	300
2500 A	(4) 3/8 in.	225
3000 A	(4) 3/8 in.	225
4000 A	(6) 1/2 in.	300

Table 2. Bolt sizes and mounting torques for bus connections.

## Panel Cutouts and Clearances

Use the following information to prepare the equipment and assure proper clearances for installation and operation of the switch.

Figures 1 and 2 show the front-panel escutcheon cutout patterns and the locations of the switch mounting bolts. The standard door cutout dimensions require a trim plate on the switch. The optional dimensions are for flush front or non-hinged door construction and the trim plate may be omitted. Ventilation cutouts are required for stationary-mounted switches rated 1600 A and larger and for draw-out switches rated 2000 A and larger. Ventilation cutouts are **not** required for draw-out-mounted 800 A or 1600 A frame switches or for stationary-mounted 800 A frame switches.



Because of arc chamber venting, the minimum through-air distance from the top of the switch’s molded case to grounded metal for 800–2000 A switches is 4.50 inches [114 mm] in an area 5.31 inches x 16.00 inches [135 mm x 406 mm], centered over the vent screens. (Refer to outline drawings 10054370, Sheets 1–5, for details.)

For 2500–4000 A switches, the minimum through-air distance from the top of the switch’s molded case to grounded metal is 8.00 inches [203 mm] in an area 9.00 inches x 16.00 inches [227 mm x 406 mm], over the vent screens. (Refer to outline drawings GEM-3025 for details.)

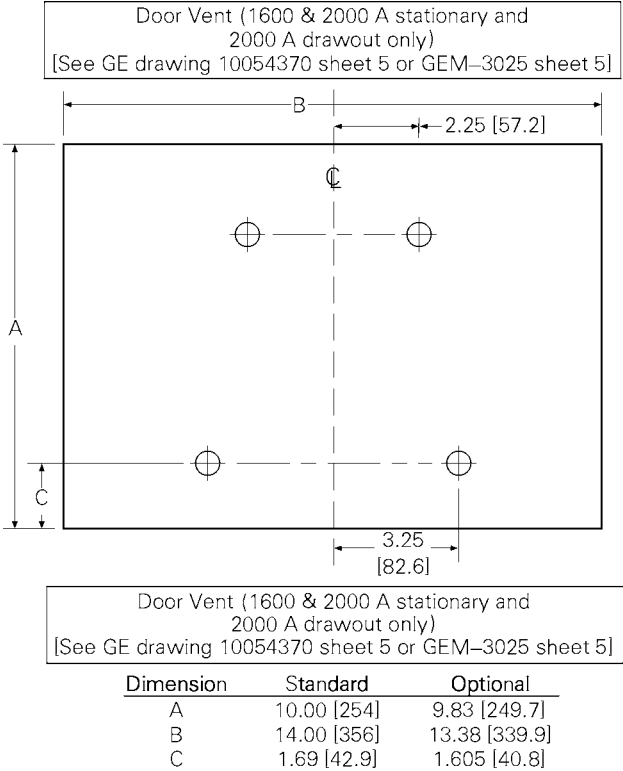


Figure 1. Locations of the front-panel cutout and mounting holes, 800–2000 A frames.

Accessory Installation

The following accessories may be installed in the switch. Refer to Chapter 3 of this publication for catalog numbers and to the instruction sheet supplied with each accessory for installation instructions.

- Lugs and Adapters
- Motor Operator Mechanism
- Remote Close
- Undervoltage Release
- Shunt Trip
- Shunt Trip with Lockout
- Bell Alarm–Alarm Only
- Bell Alarm with Lockout
- Auxiliary Switch Module
- Mechanical Counter
- Key Interlock Mounting Provision
- Push Button Cover
- Door Interlock
- Mechanical Interlock

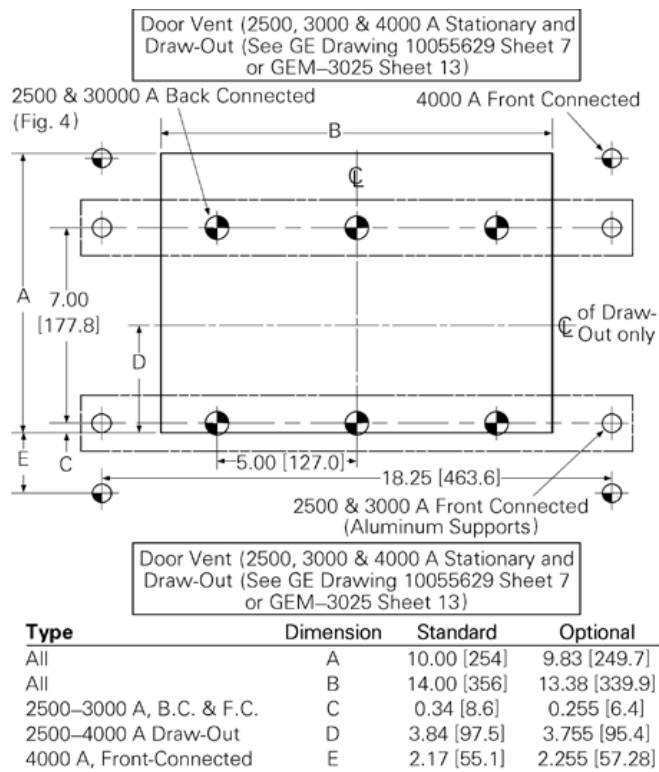


Figure 2. Locations of the front-panel escutcheon cutout and mounting plate, 2500–4000 A frames.

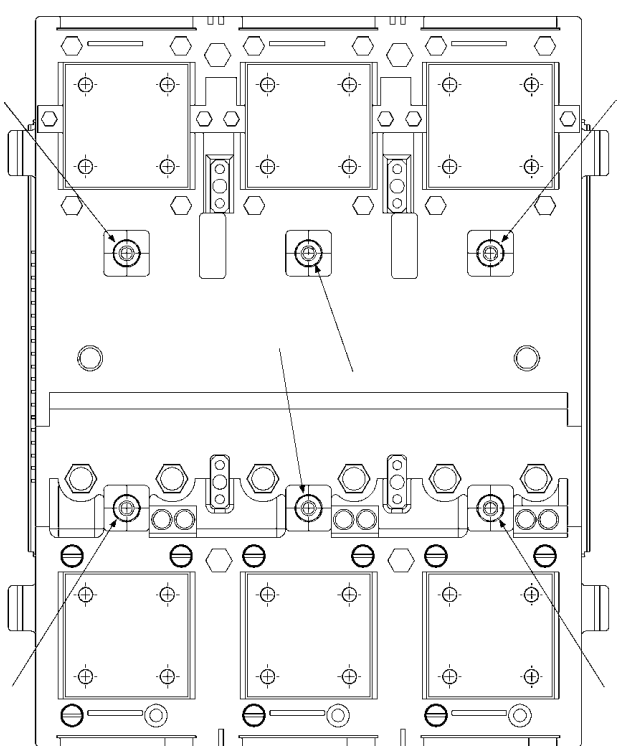


Figure 4. Locations of the 3/8-16 x 7/16-inch deep screw inserts for mounting the switch in equipment, 2500–3000 A back-connected frames

### 1-4Switch Installation

Ensure that all accessory connections are secure. Line up the bolt holes in the enclosure with the attachment points on the switch, illustrated in Figures 3, 4 and 5, insert the bolts and tighten. Use **nonmagnetic** material in the area between the line and load terminals to support the switch.

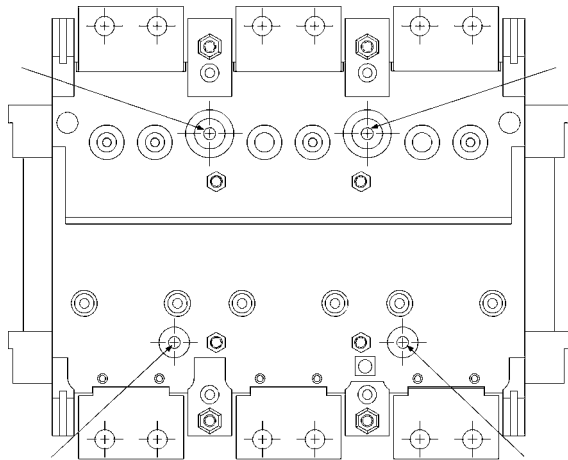


Figure 3. Locations of the 1/4-20 x 3/8-inch deep screw inserts for mounting the switch in equipment, 800–2000 A frames

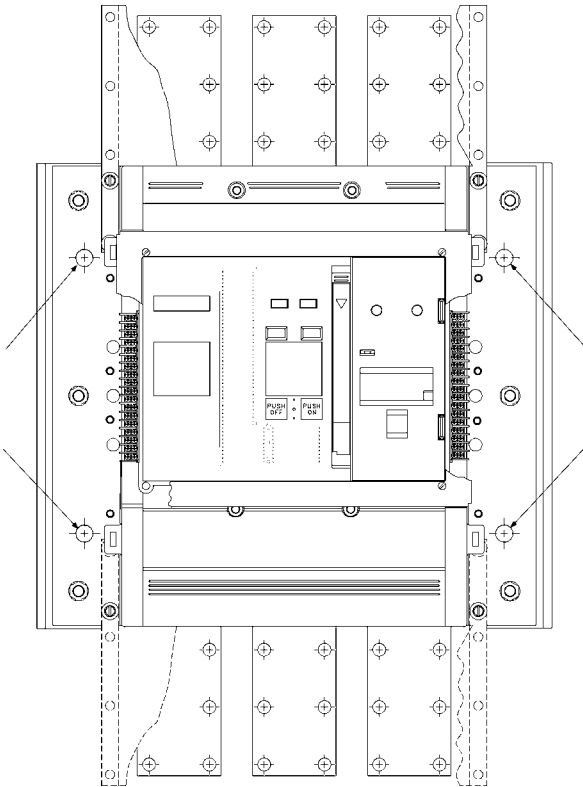


Figure 5. Locations of the 3/4-inch diameter through holes for mounting the switch in equipment, 4000 A front-connected frame.

## 2-1 Standard Features

Power Break II switches are equipped with the following standard features. The letters are keyed to the switch photographs in Figures 6 and 7.

- A** Indicator: ON – Red  
OFF – Green
- B** Indicator: CHARGED – Yellow  
DISCHARGED – White
- C** ON button
- D** OFF button
- E** Manual charging handle
- F** Integral 36-point terminal block (12 auxiliary switches, A-B type), Block “A”
- G** Integral 36-point terminal block (all other connections), Block “B”
- H** Sealable hinged cover
- I** Cover mounting screws (4)
- K** Control Unit interchangeable plug rating
- L** Test set connection port
- M** Standard padlock provision
- N** Dust-resistant ventilation slots

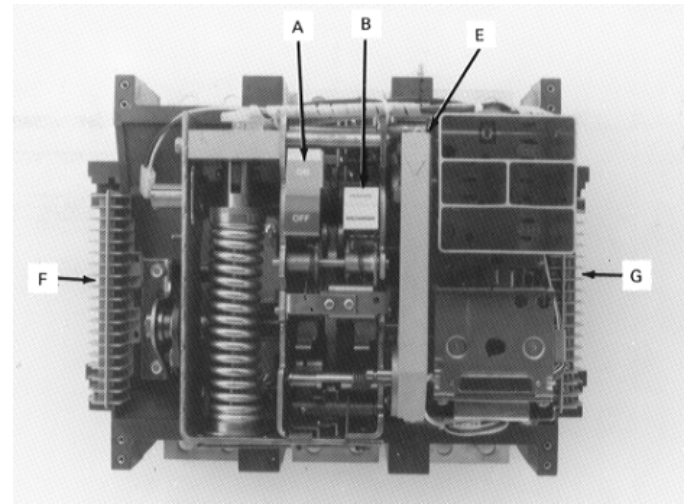


Figure 7. Front of the switch, with the Control unit and top cover removed.

## 2-2 Operating Instructions

### Sequence of Operations

The sequences of operations that may be performed on the switch are listed in Table 3. Refer to Chapter 3 for information about accessory operation.

### Operating Instructions for Manually Operated Switch

#### Charging the Mechanism Springs

Pull the operating handle down about 90° (until it stops). Repeat five more times to fully charge the springs. *This will not close the switch contacts.* The charge indicator will show CHARGED on a yellow background. When the springs are fully charged, the handle locks in the stored position.

**NOTE:** The switch cannot be closed unless the springs are fully charged and the handle is stored fully in.

**NOTE:** La fermeture de l'interrupteurne peut être réalisée à moins que les ressorts soient réarmés tout à fait, et le levier est complètement remis à la position d'emmagasinage.

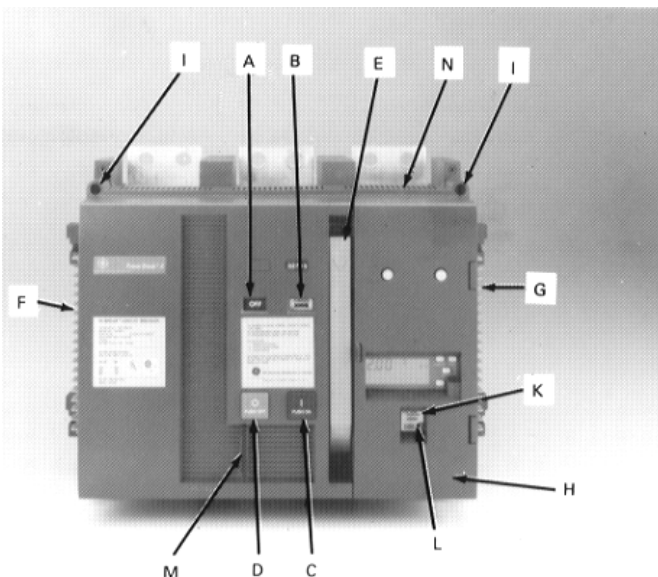


Figure 6. Front of the switch, showing the locations of standard features.

On/Off Indicator	Charge Indicator	Main Switch Contacts	Condition of Charging Springs	Next Permissible Operating Function
OFF	DISCHARGED	Open	Discharged	Mechanism may be charged
OFF	CHARGED	Open	Charged	Contacts may be closed
ON	DISCHARGED	Closed	Discharged	Mechanism may be recharged or Contacts may be opened
ON	CHARGED	Closed	Charged	Contacts may be opened

Table 3. Sequence of operations that may be performed with Power Break II switches.

## Closing the Switch

Close the switch contacts with either of the following methods:

- Depress the ON button on the front of the switch.
- Energize the (optional) Remote Close accessory by applying rated voltage to terminals 16 and 34 on terminal block B.

**CAUTION:** The main switch contacts cannot be closed if the switch latch is held in the tripped position by any of the following conditions:

- The Bell Alarm with Lockout was not reset after a ground fault lockout.
- The Undervoltage Release is not energized.
- The Shunt Trip with Lockout is energized.

These conditions must be corrected before the switch can be closed.

**ATTENTION:** Les contacts de l'interrupteur principal peuvent être fermés où le loquet de l'interrupteur est maintenu en position déclenchée à cause de toute des conditions suivantes:

- Si la réarmature du déclencheur n'est pas réalisée après le verrouillage en position "ouvert" provenant du courant de surcharge.
- Si le minimum de tension (UVR) n'est pas sous tension.
- Le déclenchement shunt avec blocage est actionné.

Ces conditions doivent être corrigées avant l'interrupteur peut être fermé.

**CAUTION:** If the switch latch is held in the tripped position by any of the following conditions and an attempt is made to close the main switch contacts, the mechanism will "crash" (the closing springs discharge with no motion of the switch contact arms). The switch has been designed and tested to withstand more than 100 crash operations, but repeated attempts to close a locked-out switch will damage the switch mechanism.

- The Key interlock or padlock is in the locked OFF condition.
- The draw-out interlock is engaged with the carriage between the TEST and CONNECTED positions.
- The walking interlock beam interlock or mechanical is activated.

**ATTENTION:** Si le cliquet de l'interrupteur est tenu en position de déclenchement dans n'importe quelle des conditions suivantes et que l'on tente de fermer les contacts de l'interrupteur principal, le mécanisme subira un "crash" (les ressorts de fermeture se détendent sans que les bras des contacts du disjoncteur ne bougent). L'interrupteur a été conçu et testé pour résister à plus de 100 opérations de type "crash," cependant des tentatives répétées ayant pour but de fermer un interrupteur bloqué endommageront le mécanisme de l'interrupteur.

- Si le verrou de clé ou le cadenas est verrouillé en position OFF.
- Si le chariot du verrou débrochable est localisé entre les positions TEST et CONNECTED.
- L'enclenchement par support mobile ou enclenchement mécanique est activé.

## Opening the Switch

Open the switch contacts with either of the following methods:

- Depress the OFF button on the front of the switch.
- Energize the (optional) Shunt Trip or Shunt Trip with Lockout accessory or de-energize the (optional) Undervoltage Release accessory.

## Additional Instructions for Motor-Operated Switches

### Charging the Mechanism Springs

The mechanism closing springs may also be charged by the following method:

- Short terminals 17 and 35 on the right terminal block, with a push button or similar device, for a minimum of five seconds.
- If power is lost during the charge cycle, finish charging the springs by cycling the charging handle until the indicator shows CHARGED on a yellow background. When the springs are fully charged, the handle locks in the stored position.

## Automatic Operation

Connect terminals 17 and 35 on the terminal block on the right side of the switch with a jumper wire. The Motor Operator will automatically recharge the switch closing springs whenever the switch closes.

**CAUTION:** Do not wire switches for automatic close.

**ATTENTION:** Ne pas câbler les interrupteurs pour la fermeture automatique.

## Padlock Operation

The padlock prevents the switch from closing by holding the trip latch in the tripped position. To install the padlock, use the following procedure:

1. Trip the switch (press the OFF button).
2. Grasp the padlock tab (see Figure 6) and pull it out until it is fully extended, as illustrated in Figure 8. Note that if the switch contacts are closed, the padlock tab will not extend.
3. Insert the padlock; the switch will not close.

As many as three  $\frac{1}{4}$ " to  $\frac{3}{8}$ " padlocks may be attached at one time.

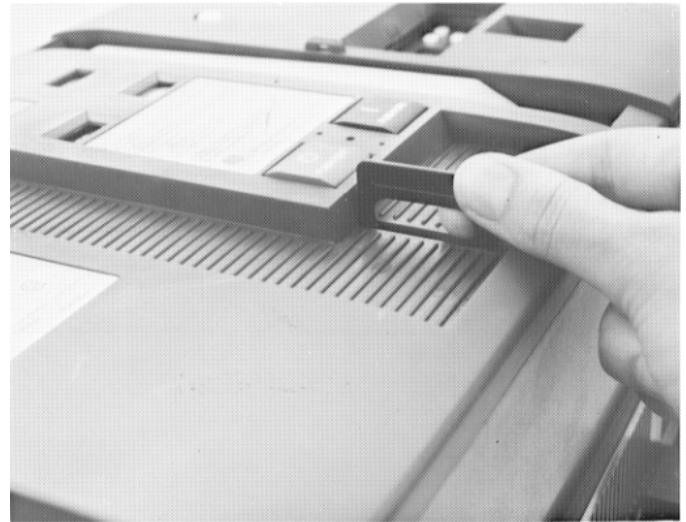


Figure 8. Side view of the switch, showing the padlock tab extended.

## Periodic Operational Checks

Approximately once a year, verify that the switch is operating correctly by opening and closing the mechanism.

## Wiring Notes

Figure 9 illustrates the terminal block installed on the right side of the switch. Table 4 lists the device connections to the terminal block. Each terminal point will accept the following connections:

- Bare stripped wire – one #12 AWG or two #14 AWG.
- Ring or spade connectors – two per terminal.

The terminal screws should be tightened to 7–9 in-lb torque.

The left terminal block is blank unless the optional Auxiliary Switch Module accessory is ordered. See Table 16 for the device connections to the Auxiliary Switch Module terminal block.



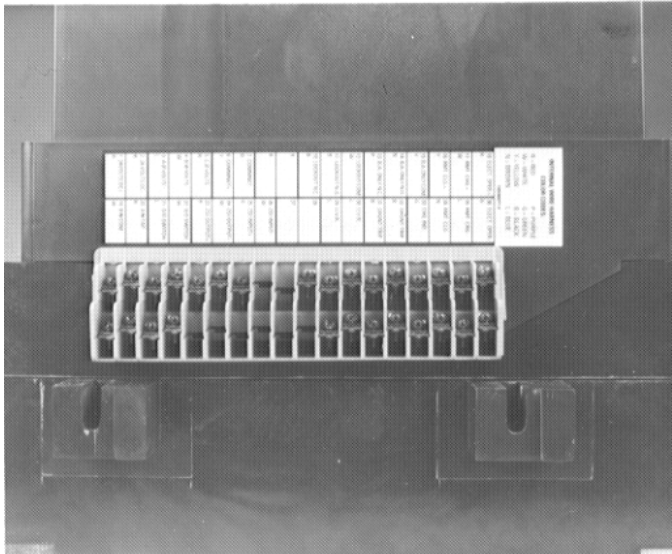


Figure 9. Terminal block mounted on the right side of the switch.

## 2-3 Control Unit Setup

See DEH4567 for detailed instructions on setting up EntelliGuard® Control Units.

Terminal	Terminal
18 Motor Operator +	36 Motor Operator –
17 Remote Charge ①	35 Remote Charge ①
16 Remote Close +	34 Remote Close –
15 Bell Alarm only Com	33 Charge Indicator
14 Bell Alarm only NO	32 Shunt Trip
13 Bell Alarm only NC	31 Shunt Trip
12 Lockout Common	30 Undervoltage Release
11 Lockout NO	29 Undervoltage Release
10 Lockout NC	28 Reserved
9 Reserved	27 Reserved
8 Reserved	26 Zone-Select Input –
7 commnet –	25 Zone-Select Input +
6 commnet +	24 Zone-Select Output –
5 C Phase Volts	23 Zone-Select Output +
4 B Phase Volts	22 Draw-Out Switch ②
3 A Phase volts	21 Draw-Out Switch ②
2 24 Vdc –	20 $\overline{N}$ Tap
1 24 Vdc +	19 $\overline{N}$ Common

① Do not apply voltage; see wiring diagram.

② Not a user connection.

Table 4. Accessory connections to the right-side terminal block B.

Following are the operation procedures for each of the available switch accessories. See the user guides supplied with the accessories for installation and removal.

3-1 Lug and Adapter Kits

Lug Kits (800–2000 A Frames)

Direct-mounting lugs bolt directly to the line or load strap of the switch. Order one Lug Kit per line or load pole. Lug Kit catalog numbers and wire sizes are listed in Table 5.

Cat. No.	Wires	Wire Sizes	Amps
TPLUG106	1	#2–600 kcmil CU/AL	400
	2	1/0–250 kcmil CU/AL	
TPLUG206	2	#2–600 kcmil CU/AL	600
TPLUG308	3	300–750 kcmil CU/AL	800
TPLUG408	4	500–800 kcmil CU/AL	1600

Table 5. Catalog numbers and wire sizes of Lug Kits for 800–2000 A frames.

Lug Kits with Straps (2500–4000 A Frames)

Lug Kits with Straps include copper straps that connect directly to switch T-studs (must be ordered separately) to provide proper phase clearances for mounting lugs. Order one Lug Kit with Straps per line or load side. Catalog numbers are listed in Table 6.

Cat. No.	Lugs per Kit	Max. Wires per Pole	Wire Range	Frame Size (A)	Max. Amps
TSLUG08	9	3	3/0–800 kcmil Cu/Al	2500 or 3000	800
TSLUG12	12	4			1200
TSLUG16	15	5			1600
TSLUG20	18	6			2000
TSLUG25	21	7			2500
TSLUG30	27	9		3000	3000
TSLUG40	33	11		4000	4000

Table 6. Catalog numbers and specifications of Lug Kits with Straps for 2500–4000 A frames.

## T-Studs

T-Studs bolt directly to the line or load terminals of the switch. Order one T-Stud per line or load pole. T-Stud catalog numbers and ratings are listed in Table 7.

Cat. No.	Material	Frame (A)	Max. Amps	Switch Connect
SP08FCA	Al	800	800	Front
SP08FCC	Cu	800	800	Front
SP20FCA	Al	1600 – 2000	2000	Front
SP20FCC	Cu	1600 – 2000	2000	Front
SPS20FCA	Al	2500	2000	Front
SPS20BCA	Al	2500	2000	Back
SPS25FCC	Cu	2500	2500	Front
SPS25BCC	Cu	2500	2500	Back
SPS30FCC	Cu	3000	3000	Front
N/A ①	Cu	3000	3000	Back
SPS40FCC	Cu	4000	4000	Front
SPS40LFCC ②	Cu	4000	4000	Front

① Integral T-Studs are not removable on 3000 A back-connected switches.

② Long studs may be used in place of or alternated with SPS40FCC if desired.

Table 7. Catalog numbers and ratings of T-Studs.

## Adapter Kits

Adapter Kits bolt directly to the line or load terminals on the rear of the switch. They provide proper phase-to-phase clearances for mounting lugs or bus bars. Order one Adapter Kit per three-phase line or load side. Lugs must be ordered separately. Adapter Kit catalog numbers and ratings are listed in Table 8.

Cat. No.	Frame (A)	Lug Ordering Information (Per Line or Load Side)
TPLUGA08	800	9 TPLUG108 Lugs ② or 9 Crimp Lugs ③
TPLUGA16 ①	1600	18 TPLUG108 Lugs ② or 18 Crimp Lugs ③
TPLUGA20 ①	1600–2000	18 TPLUG108 Lugs ② or 18 Crimp Lugs ③

① Premounts in equipment, allowing cabling or bussing to be completed before switch mounting.

② 3/0–800 kcmil Cu/Al wire range.

③ Anderson No. VCEL-075-12H1 or equivalent.

Table 8. Catalog numbers and ratings of Adapter Kits.



3-2 Plug-In Accessory Compartment

Several of the accessories are installed in the accessory compartment on the front of the switch. Figure 10 illustrates this compartment and the locations of each of the plug-in accessory modules.

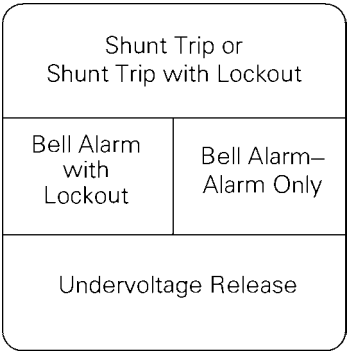


Figure 10. Locations of the plug-in accessory modules in the compartment on the front of the switch.

3-3 Bell Alarm–Alarm Only

The Bell Alarm–Alarm Only module, shown in Figure 11, provides a switch to remotely indicate that the switch has tripped. It is reset either automatically when the switch is reclosed or manually when the reset button on the front of the Bell Alarm–Alarm Only module is pressed.



Figure 11. Bell Alarm–Alarm Only module.

The EntelliGuard Control unit activates the Bell Alarm- Alarm Only for protection trips only

The catalog numbers for the Bell Alarm–Alarm Only are listed in Table 9. For installation instructions see GEH6275.

Catalog No.	Contact Rating
SPBAA240	6 A at 240 Vac 0.25 A at 250 Vdc 0.50 A at 125 Vdc
SPBAA600 ①	6 A at 600 Vac 0.25 A at 250 Vdc 0.50 A at 125 Vdc

① 600 V version is not UL listed.

Table 9. Bell Alarm–Alarm Only catalog numbers.

Operation

The Bell Alarm–Alarm Only provides normally open (NO) and normally closed (NC) outputs available at the terminal block on the right side of the switch, as illustrated in Figure 12. The outputs change state whenever a switch ground fault trip occurs. This trip can be caused by a ground fault condition detected by the Control Unit.

The Bell Alarm–Alarm Only accessory resets automatically, returning the outputs to their normal configuration, when the switch is reclosed. The Bell Alarm–Alarm Only can also be reset manually, before the switch is reclosed, by pressing the reset button on the front of the module.

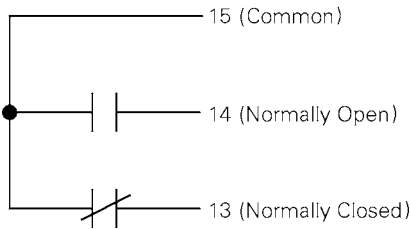


Figure 12. Bell Alarm–Alarm Only connections on the right terminal block. The contacts are shown in the reset state.

3-4 Bell Alarm with Lockout

The Bell Alarm with Lockout module, shown in Figure 13, prevents reclosing of the switch after a ground fault trip until the Bell Alarm with Lockout is reset. It can only be reset by pressing the button on the top of the module. This module also provides a switch to remotely indicate that the switch has tripped.

The EntelliGuard® Control Unit activates the Bell Alarm with Lockout for ground fault protection trips only.

The catalog numbers for the Bell Alarm with Lockout are listed in Table 10. For installation instructions see GEH6278.



Figure 13. Bell Alarm with Lockout module.

Catalog No.	Contact Rating
SPBAL240	6 A at 240 Vac
	0.25 A at 250 Vdc
	0.50 A at 125 Vdc
SPBAL600 ①	6 A at 600 Vac
	0.25 A at 250 Vdc
	0.50 A at 125 Vdc

① The 600 V version is not UL listed.

Table 10. Bell Alarm with Lockout catalog numbers.

Operation

The Bell Alarm with Lockout prevents reclosing of the switch after a ground fault trip until the reset button on the front of the module is pressed. This trip can be caused by a ground fault condition detected by the Control Unit.

In addition, the Bell Alarm with Lockout provides normally open (NO) and normally closed (NC) alarm outputs available at the terminal block on the right side of the switch, as illustrated in Figure 14. These outputs are returned to their normal state

when the Bell Alarm with Lockout reset button is firmly pressed.

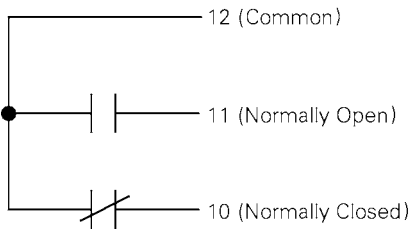


Figure 14. Bell Alarm with Lockout connections on the right terminal block. The contacts are shown in the reset state.

3-5 Shunt Trip

The Shunt Trip module, shown in Figure 15, allows the switch to be tripped electrically from a remote location.



Figure 15. Shunt Trip module.

If the switch® is equipped with a EntelliGuard Control Unit, it is configured so that only ground fault trips will activate a Bell Alarm–Alarm Only or Bell Alarm with Lockout. The catalog numbers for the Shunt Trip for various voltage applications are listed in Table 11. For installation see instructions GEH6284 or GEH6519.

Catalog Number	Voltage Rating ①	Peak Inrush Current, A ②	Nominal RMS Current, mA
SPST012	12 Vdc	3.0	200
SPST024	24 Vac 24 Vdc	1.5	140
SPST048	48 Vac 48 Vdc	1.5	110
SPST120	120 Vac 125 Vdc	1.5	85
SPST208	208 Vac	1.5	50
SPST240	240 Vac 250 Vdc	1.5	40
SPST480 ③	480 Vac	0.375	21
SPST600 ③	600 Vac	0.3	17

- ① 24–600 Vac devices are rated for 50/60 Hz.
- ② Peak inrush current is present for 2–6 ms after activation. This number is provided so that fuses and supplies can be chosen appropriately.
- ③ Ratings for 480 Vac and 600 Vac devices are at the input of the upstream transformer, included with the accessory and specified in GEH6519, which powers the device. For voltage and current ratings at the switch terminal block, see SPST120.

Table 11. Catalog numbers and voltages for the Shunt Trip.

Operation

Apply control voltage to terminals 31 and 32 of the terminal strip on the right side of the switch to open the switch. The Shunt Trip will cause the switch to open when the control voltage is greater than 75% of the dc-rated value or 55% of the ac-rated value.

3-6 Shunt Trip with Lockout

The Shunt Trip with Lockout module, shown in Figure 16, allows the switch to be opened electrically from a remote location and prevents the switch from closing while the accessory is energized.



Figure 16. Shunt Trip with Lockout module.

If the switch® is equipped with a EntelliGuard Control Unit, it is configured so that only ground fault trips will activate a Bell Alarm–Alarm Only or Bell Alarm with Lockout.

The catalog numbers for the Shunt Trip for various voltage applications are listed in Table 12. For installation instructions see GEH6284 or GEH6519.

Catalog Number	Voltage Rating <sup>①</sup>	Peak Inrush Current, A <sup>②</sup>	Nominal RMS Current, mA
SPSTL012	12 Vdc	19	300
SPSTL024	24 Vac 24 Vdc	15	300
SPSTL048	48 Vac 48 Vdc	7.5	200
SPSTL120	120 Vac 125 Vdc	3.0	80
SPSTL208	208 Vac	1.9	60
SPSTL240	240 Vac 250 Vdc	1.5	45
SPSTL48 <sup>③</sup>	480 Vac	0.75	20
SPSTL60 <sup>③</sup>	600 Vac	0.60	16

① 24–600 Vac devices are rated for 50/60 Hz.

② Peak inrush current is present for 2–6 ms after activation. This number is provided so that fuses and supplies can be chosen appropriately.

③ Ratings for 480 Vac and 600 Vac devices are at the input of the upstream transformer, included with the accessory and specified in GEH6519, which powers the device. For voltage and current ratings at the switch terminal block, see SPSTL120.

Table 12. Catalog numbers and voltages for the Shunt Trip with Lockout.

## Operation

Apply control voltages to terminals 31 and 32 of the terminal strip on the right side of the switch to open the switch. The Shunt Trip with Lockout will cause the switch to open when the control voltage is greater than 75% of the dc-rated value or 55% of the ac-rated value.

## 3-7 Undervoltage Release

The Undervoltage Release (UVR) module, shown in Figure 17, opens the switch when the input control voltage drops to 35–60% of its rated value and prevents an open switch from closing until the input control voltage is greater than 80% of the rated value.

If the switch is equipped with a EntelliGuard® Control Unit, it is configured so that only ground fault trips will activate a bell alarm only or bell alarm with lockout



Figure 17. Undervoltage Release module.

The catalog numbers for the UVR for various voltage applications are listed in Table 13. For installation instructions see GEH6285 or GEH6520.

## Operation

Apply control voltage to terminals 29 and 30 of the terminal strip on the right side of the switch. When the applied control voltage is above 80% of the UVR's rated value, the switch can be closed. When the voltage drops to 35–60% of the rated value, the UVR will open the switch.

Catalog Number	Voltage Rating <sup>①</sup>	Peak Inrush Current, <sup>②</sup>	Nominal RMS Current, mA
SPUV012DC	12 Vdc	19	300
SPUV024DC	24 Vdc	15	140
SPUV048DC	48 Vdc	7.5	70
SPUV125DC	125 Vdc	3	30
SPUV250DC	250 Vdc	1.5	15
SPUV024AC	24 Vac	15	370
SPUV048AC	48 Vac	7.5	210
SPUV120AC	120 Vac	3	80
SPUV208AC	208 Vac	1.9	60
SPUV240AC	240 Vac	1.5	45
SPUV480AC <sup>③</sup>	480 Vac	0.75	20
SPUV600AC <sup>③</sup>	600 Vac	0.60	16

① 24–600 Vac devices are rated for 50/60 Hz.

② Peak inrush current is present for 2–6 ms after activation. This number is provided so that fuses and supplies can be chosen appropriately.

③ Ratings for 480 Vac and 600 Vac devices are at the input of the upstream transformer, included with the accessory and specified in GEH6520, which powers the device. For voltage and current ratings at the switch terminal block, see SPUV120AC.

Table 13. Catalog numbers and voltages for the Undervoltage Release.

3-8 Motor Operator Mechanism

The Motor Operator Mechanism, shown in Figure 18, provides a means of remotely or automatically charging the springs that close the switch. Table 14 lists the catalog numbers for the available Motor Operator Mechanism models. For installation instructions see GEH6281.



Figure 18. Motor Operator Mechanism.

Catalog No.	Voltage Rating
SPE024	24 Vdc
SPE048	48 Vdc
SPE072	72 Vdc
SPE120	120 Vac
SPE125	125 Vdc
SPE240	240 Vac

Table 14. Catalog numbers and operating voltages for the Motor Operator Mechanism.

Remote Operation

The switch closing springs can be charged remotely by shorting terminals 17 and 35 on the terminal block on the right side of the switch, with a push button or similar device, for a minimum of five seconds.

Automatic Operation

Connect terminals 17 and 35 on the terminal block on the right side of the switch with a jumper wire. The Motor Operator will automatically recharge the switch closing springs whenever the switch closes.

**CAUTION:** Do not wire switches for both automatic charge and automatic close.

**ATTENTION:** Ne pas câbler les interrupteurs pour lestous deux l'armement automatique et la fermeture automatique.

3-9 Remote Close

The Remote Close accessory, shown in Figure 19, provides a means of remotely closing the switch after the springs have been charged. Table 15 lists the catalog numbers for the available models. For installation instructions see GEH6283.

Remote Operation

The switch can be closed remotely, provided that the springs are charged, by applying the rated voltage to terminals 16 and 34 on the terminal block on the right side of the switch.

The Remote Close accessory is continuously rated and has an anti-pump feature that prevents a motor-operated switch from repeatedly closing into a fault. Closing control voltage must be removed and reapplied for each switch closure.

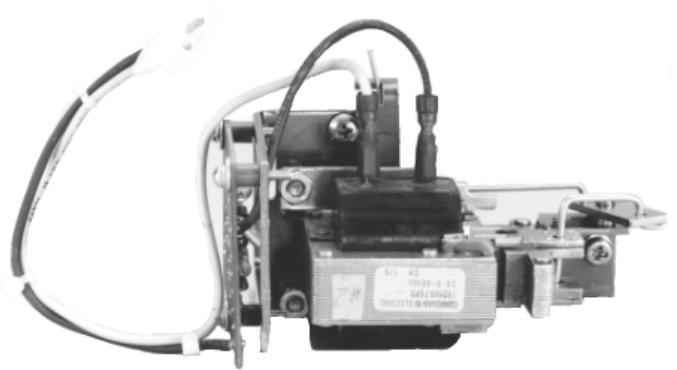


Figure 19. Remote Close accessory.

Catalog No.	Voltage Rating
SPRCS024	24 Vdc
SPRCS048	48 Vdc
SPRCS072	72 Vdc
SPRCS120	120 Vac
SPRCS125	125 Vdc
SPRCS240	240 Vac

Table 15. Catalog numbers and operating voltages for the Remote Close accessory.

### 3-10 Key Interlock Mounting Provision

The Key Interlock Mounting Provision provides mounting for one to four key locks. The ABB catalog number is SPK4.

The key locks must have a zero extension when the bolt is withdrawn with 0.75-inch extension when the bolt is extended. The lock may be up to 1.50 inch wide. Catalog numbers for suitable locks from ABB-Kirk® and Superior Interlock are listed in Table 17. For installation instructions see GEH6279.

# Locks	ABB-Kirk® Cat. No.	Superior Cat. No.	Approx. Lock Length
1	KFN00001 <sup>①</sup>	S105827Y	2.38"
2	KFN00002 <sup>①</sup>	S105828Y	3.38"
3	KFN00003 <sup>①</sup>	S105829Y	4.38"
4	KFN00004 <sup>①</sup>	S105827-4Y	5.48"

<sup>①</sup> Final digit may be 0, 1, 2, or 3 depending on key removable positions.

Table 16. Catalog numbers of Key Interlock models.

### Operation

The Key Interlock prevents the switch from closing by holding the padlock tab extended, thus keeping the trip latch in the tripped position. A secondary padlock lever is included with the Key Interlock, since the Key Interlock blocks easy access to the standard padlock hasp. To operate, use the following procedure:

1. Open the switch (press the OFF button).
2. Grasp the padlock tab and pull it out, as illustrated in Figure 20. Note that if the switch contacts are closed, the padlock tab will not pull out.

3. Turn the key, securing the padlock tab in the extended position. The switch cannot be closed until the Key Interlock is disengaged.
4. Rotate the secondary padlock lever out and assemble padlocks as desired.



Figure 20. Side view of the switch, showing the padlock tab extended with the Key Interlock installed.

**CAUTION:** Repeated Repeated attempts to close a locked-out switch will damage the switch mechanism.

**ATTENTION:** Les tentative s à maintes fermer un interrupteur verrouillé en position "ouvert" endommageront mécanisme de l'interrupteur.



3-11 Mechanical Counter

The Mechanical Counter, shown in Figure 21, counts the number of times the switch is closed. The catalog number of the Mechanical Counter is SPCOUNTER. For installation instructions see GEH6280.



Figure 21. Mechanical Counter.

3-12 Auxiliary Switch Module

The Auxiliary Switch Module, shown in Figure 22, provides remote indication of the switch main contact position through the terminals on the terminal block on the left side of the switch.

Auxiliary Switch Modules are available with 4, 8, and 12 switches with ratings of 6 A at 240 Vac or 600 Vac. Additional ratings of 0.5 A at 125 Vdc and 0.25 A at 250 Vdc apply to all models. Catalog numbers are listed in Table 17. For installation instructions see GEH6274.

Operation

Each auxiliary switch provides two outputs that can be used to indicate switch main contact position. The A output is open or closed the same as the switch, while the B output is the opposite to the switch contacts. Figure 23 is a wiring diagram of each auxiliary switch.

The connections for the auxiliary switch outputs are found on the terminal block on the left side of the switch and are listed in Table 18.



Figure 22. Auxiliary Switch Module with 12 switches.

# Switches	240 Vac	600 Vac ①
4	SPAS240AB4	SPAS600AB4
8	SPAS240AB8	SPAS600AB8
12	SPAS240AB12	SPAS600AB12

① 600 Vac devices are not UL listed.

Table 17. Auxiliary Switch Module catalog numbers.

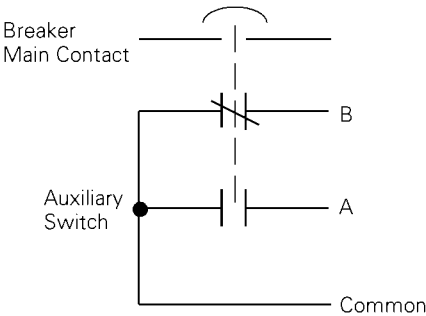


Figure 23. Auxiliary switch wiring diagram.

Terminal (upper)	Terminal (lower)
1 Auxiliary 12 A	19 Auxiliary 11 A
2 Auxiliary 12 B	20 Auxiliary 11 B
3 Auxiliary 12 common	21 Auxiliary 11 common
4 Auxiliary 10 A	22 Auxiliary 9 A
5 Auxiliary 10 B	23 Auxiliary 9 B
6 Auxiliary 10 common	24 Auxiliary 9 common
7 Auxiliary 8 A	25 Auxiliary 7 A
8 Auxiliary 8 B	26 Auxiliary 7 B
9 Auxiliary 8 common	27 Auxiliary 7 common
10 Auxiliary 6 A	28 Auxiliary 5 A
11 Auxiliary 6 B	29 Auxiliary 5 B
12 Auxiliary 6 common	30 Auxiliary 5 common
13 Auxiliary 4 A	31 Auxiliary 3 A
14 Auxiliary 4 B	32 Auxiliary 3 B
15 Auxiliary 4 common	33 Auxiliary 3 common
16 Auxiliary 2 A	34 Auxiliary 1 A
17 Auxiliary 2 B	35 Auxiliary 1 B
18 Auxiliary 2 common	36 Auxiliary 1 common

Table 18. Auxiliary switch positions on the terminal board on the left side of the switch, Block A.

### 3-13 Door Interlock

The Door Interlock, shown in Figure 24, prevents the casual opening of the enclosure door, particularly while the switch is ON. The catalog number of the Door Interlock is SPDIL. For installation instructions see GEH6276.

#### Operation

The Door Interlock prevents the opening of the enclosure door unless the locking lever is disengaged. The lever can be disengaged easily with the switch OFF or with somewhat greater difficulty with the switch ON, as described below.

#### Opening Door with Switch Off

To open the enclosure door when the switch is OFF, pull up on the padlock tab and slide the Door Interlock lever counter-clockwise until it no longer obstructs the door. When the door is reclosed, simply slide the lever back into the locking position.



Figure 24. Door Interlock accessory installed on the switch.

#### Opening Door with Switch On

The Door Interlock can be defeated, to allow opening the enclosure door with the switch ON, even though the padlock tab cannot be lifted. Depress the interlock spring with a screwdriver in the slot on the top of the locking lever and push the lever counter-clockwise to disengage it from the spring. Remove the screwdriver, then continue rotating the locking lever until it clears the door.

### 3-14 Push Button Cover

The Push Button Cover, shown in Figure 25, prevents accidental or unauthorized closing or opening of the switch with the local push buttons. It consists of two unbreakable, individually sealable Lexan® shields, one over the PUSH ON button and one over the PUSH OFF button. The catalog number is SPPBCOVER. For installation instructions see GEH6282.

#### Operation

Close the cover and put a sealing wire or wire tie in the slot. Each of the covers may be sealed independently.

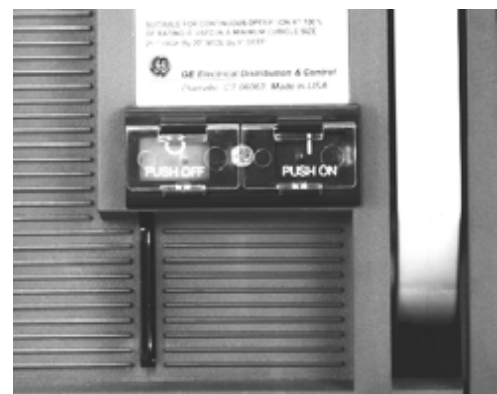


Figure 25. Push Button Cover.



The following guide is provided for trouble-shooting and isolating common problems. It does not cover every possible situation. Contact the Customer Support Center at 800-843-3742 if any problem is not resolved by these procedures.

Symptom	Possible Cause	Corrective Action
1. The switch does not close when the ON button is pressed and there is no sound of the closing spring releasing.	The closing spring is not fully charged.	On a manually operated switch, operate the handle until the indicator shows CHARGED.
	The Bell Alarm with Lockout is deployed.	On an electrically operated switch, check that the voltage to the motor operator is at least 85% of nominal. See GEH6281, <i>Motor Operator Mechanism</i> .
	The Undervoltage Release is not energized.	Correct the condition that initiated the bell alarm, then depress the yellow plunger on the Bell Alarm with Lockout module to reset the lockout. See GEH6278, <i>Bell Alarm with Lockout</i> .
	The Control Unit is not properly installed.	See GEH6285, <i>Undervoltage Release</i> , for details on energizing the UVR. See DEH40381, <i>EntelliGuard® Control Units</i> , for the Control Unit installation procedure.
2. The switch does not close when the ON button is pressed, but the closing spring is heard to release.	The Control Unit detected a fault and immediately tripped the switch.	Clear the fault, then recharge the closing spring and close the switch. For fault diagnostics see DEH40381, <i>EntelliGuard® Control Units</i> .
	The Shunt Trip is energized. The switch is locked in the OFF position by a padlock or key interlock.	See GEH6284, <i>Shunt Trip</i> , for instructions on de-energizing the unit.
	The switch is interlocked with another switch with a walking beam.	After ensuring that the safety reason for locking the switch no longer applies, remove the padlock or key <i>interlock</i> . See GEH6279, <i>Key Interlock Mounting Provision</i> .
	If a draw-out switch, it is not fully inserted in the substructure (between the TEST and CONNECTED positions).	See GEH6286, <i>Walking-Beam Interlock</i> , for the removal procedure. Ensure that the switch is fully racked in to the substructure. See GEH6272, <i>Draw-Out Substructure, 800–4000 Amperes</i> .
3. The switch can be opened locally, but not remotely.	There is a problem with the Shunt Trip.	See the trouble-shooting instructions in GEH6284, <i>Shunt Trip</i> .
	There is a problem with the Undervoltage Release.	See the trouble-shooting instructions in GEH6285, <i>Undervoltage Release</i> .

For any other problems related to Power Break II accessories, consult the corresponding User's Guide:

- GEH6271, Draw-Out 800–4000 Ampere Frames
- GEH6272, Draw-Out Substructure, 800–4000 Ampere
- GEH6274, Auxiliary Switch Module
- GEH6275, Bell Alarm – Alarm Only
- GEH6276, Door Interlock
- GEH4546, Lugs & Adapters for 800–2000 A Frames
- GEH6278, Bell Alarm with Lockout
- GEH6279, Key Interlock Mounting Provision
- GEH6280, Mechanical Counter
- GEH6281, Motor Operator Mechanism
- GEH6282, Push Button Cover
- GEH6283, Remote Close
- GEH6284, Shunt Trip and Shunt Trip with Lockout (except 480 and 600 Vac)
- GEH6519, Shunt Trip and Shunt Trip with Lockout, 480 & 600 Vac
- GEH6285, Under voltage Release (except 480 and 600 Vac)
- GEH6520, Under voltage Release, 480 & 600 Vac
- GEH6286, Mechanical Interlock
- GEH6440, Draw-Out Substructure Rail Kit
- GEH6460, Secondary Disconnect
- DEH4567C, EntelliGuard® Control Units
- DES093, Time Current Curves for EntelliGuard® G with Ground Fault